








SEAT/ SKODA

Toledo 06/15 -> Rapid 06/15 -> Rapid Spaceback 06/15 ->

Part No: VW-204-07MU

Electric wiring kit for towbars / 7-pin / 12N / 12 Volt / ISO 1724

Fitting instructions

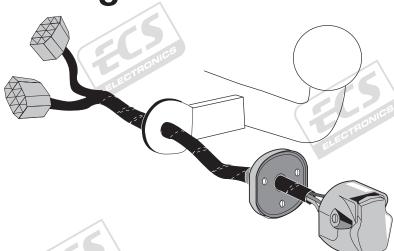





IMPORTANT!

This electric kit has to be installed by a professional workshop or a suitable qualified person.

The installation instructions must have been read and fully understood before the start of any installation. Please contact your wiring kit provider or the hotline shown in the footer

Make sure the vehicle is approved/homologated by the manufacturer to tow a trailer!

Also please check that there is a definite compatibility between this vehicle and the electric kit!

Following the installation of the electric kit, the fitting instructions should be kept together with the vehicle service document and vehicle handbook. The fitting instructions contain important information relating to the use and function of the towing kit as well as for any diagnostic or activation process, that might have to be repeated in the future (e.g. after the performance of a vehicle software update).

All warranty claims will be forfeited if the electric kit or components contained therein are used incorrectly or modified. If a towing socket adaptor has been used to connect to the trailer or bike rack, this must be removed from the trailer socket once the trailer or bike rack has been disconnected

If the trailer or bike rack is not equipped with a rear fog lamp, depending on the towing vehicle type, the correct function of the towing kit cannot be guaranteed. In such cases, a rear fog lamp should be retro fitted.

This towing electric kit will not be covered under warranty if any technical or electrical modifications or software updates have been performed by the vehicle manufacturer after the initial commissioning of the kit. That applies especially to modifications or updates which may cause malfunctions in the trailer socket or any other part of the trailer electrical equipment!

Depending on the type of trailer module used in this electric kit, diagnostic interrogation with the vehicle's electrical system may be limited or will not function. The error memory inside the trailer module may not be able to be accessed by vehicle manufacturers diagnostic system.

Error logs relating to the trailer electrical equipment, that may be generated in the vehicle manufacturers diagnostic system as a result of a test procedure, may be due to the incorrect installation of the towing electric kit or the false activation of the trailer module.

We always recommend whenever possible, the following troubleshooting process:

- An analysis of the vehicle's error memory and possibly clearing of all faults before the start of the installation!
- Try disconnecting the trailer module from the towing harness and re-start the fault clearing process!
 If in doubt, limit the time for troubleshooting to a max of 0,5 hours and call our Technical Support Team!

Please follow our instructions carefully and always test the towing electrics using a true lighting board or a specifically designed bulb tester. If an LED tester is used, ensure it is equipped with correct load resistors or malfunctions will occur!


This instruction is subject to changes and we reserve the right to make changes to design, colour etc.

All of the data and illustrations may not be an exact representation but the text contained in this instruction must be observed!

1/19

Right Connections UK Ltd Unit 503 Queensway Business Park TELFORD TF1 7UL UK

+44 (0)1952 608750 - Option 1 TECHNICAL: +44 (0)1952 608750 - Option 2 Web: www.rightconnections.co.uk Email: sales@rightconnections.co.uk Revision: 1/16.11.2018 VW-204-07MU

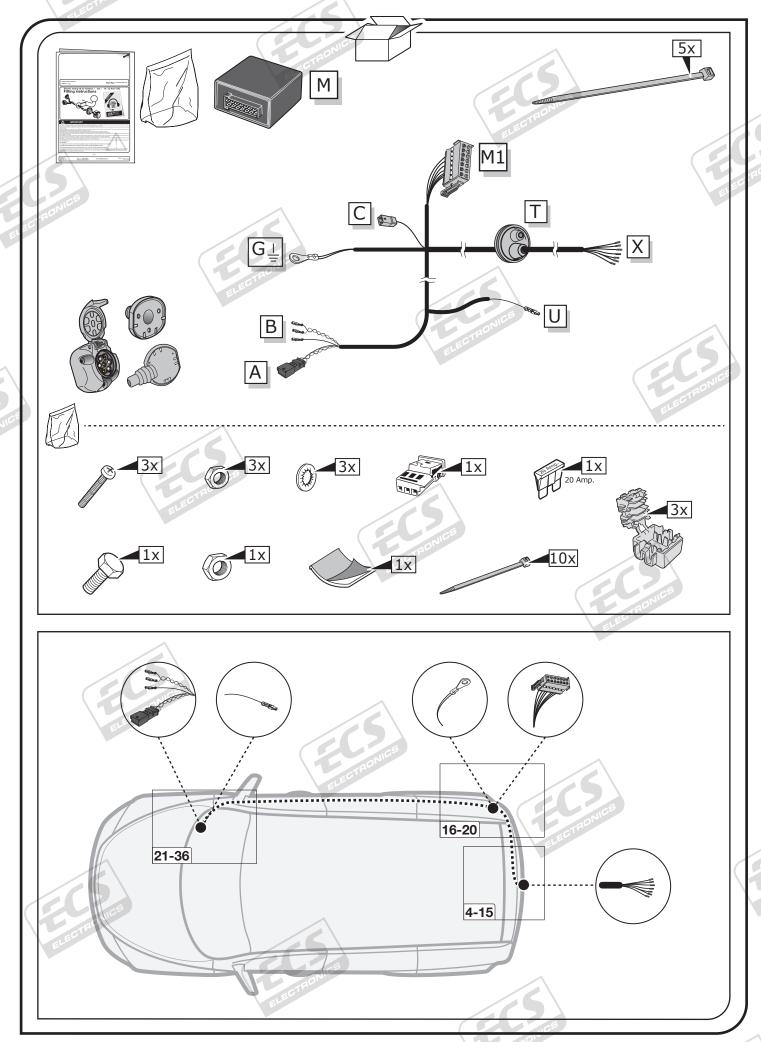



SYMBOL EXPLANATION

Left (58-L) respectively Right (58-R) tail light Stop light (54) / high mounted, third stop light (54) Turn signal indicator left Turn signal indicator right Rear fog light(s) Reverse 6 Reversing light(s) Permanent power supply / 13pin socket, chamber 9 Charging wire for trailer battery / 13pin socket, chamber 10 Trailer / trailer recognition B+/30 Permanent current power supply Ground or Earth (31) Ground connection battery terminal lug Positive connection battery terminal lug						
high mounted, third stop light (54) Turn signal indicator left Turn signal indicator right Rear fog light(s) Reverse 0 Reversing light(s) Permanent power supply / 13pin socket, chamber 9 Charging wire for trailer battery / 13pin socket, chamber 10 Trailer / trailer recognition B+/30 Permanent current power supply Ground or Earth (31) Ground connection battery terminal lug	-\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\					
Turn signal indicator right Rear fog light(s) Reverse 1 Reversing light(s) Permanent power supply / 13pin socket, chamber 9 Charging wire for trailer battery / 13pin socket, chamber 10 Trailer / trailer recognition B+/30 Permanent current power supply Ground or Earth (31) Ground connection battery terminal lug	54 (STOP)					
Reverse 0 Reversing light(s) Reversing light(s) Permanent power supply / 13pin socket, chamber 9 Charging wire for trailer battery / 13pin socket, chamber 10 Trailer / trailer recognition B+/30 Permanent current power supply Ground or Earth (31) Ground connection battery terminal lug	⟨ - \ - \ - \ -	Turn signal indicator left				
Reverse 0 - Reversing light(s) 30+ 13pin socket, chamber 9 15+ 13pin socket, chamber 10 Charging wire for trailer battery / 13pin socket, chamber 10 Trailer / trailer recognition B+/30 Permanent current power supply Ground or Earth (31) Ground connection battery terminal lug	R☐	Turn signal indicator right				
Reversing light(s) Permanent power supply / 13pin socket, chamber 9 Charging wire for trailer battery / 13pin socket, chamber 10 Trailer / trailer recognition B+/30 Permanent current power supply Ground or Earth (31) Ground connection battery terminal lug	10° () ‡	Rear fog light(s)				
13pin socket, chamber 9 13pin socket, chamber 9 Charging wire for trailer battery / 13pin socket, chamber 10 Trailer / trailer recognition B+/30 Permanent current power supply Ground or Earth (31) Ground connection battery terminal lug	Reverse 0=	Reversing light(s)				
Trailer / trailer recognition B+/30 Permanent current power supply Ground or Earth (31) Ground connection battery terminal lug	30+					
B+/30 Permanent current power supply Ground or Earth (31) Ground connection battery terminal lug	15+ •					
Ground or Earth (31) Ground connection battery terminal lug		Trailer / trailer recognition				
Ground connection battery terminal lug	B+/30	Permanent current power supply				
	<u></u>	Ground or Earth (31)				
Positive connection battery terminal lug	$\overline{\bullet}$	Ground connection battery terminal lug				
	+	Positive connection battery terminal lug				

(12V)	Cigarette lighter / accessory socket				
	Loudspeaker / buzzer				
	Park Distance Control				
-/	Switch / source of function				
→	Connect together				
+	Disconnect				
4	Look at / See further information				
	Look carefully at selected area				
	Present / Occupied / OK				
Xelec	Not present / Not occupied / Not OK				
D ((((Acoustic indication				
	Attention / important advice				
20 Amp.	Fuse / fuse capacity 20 Ampère				


TOOLS

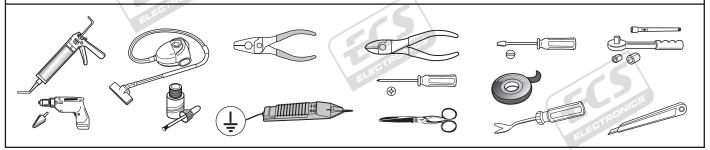



ATTENTION!

The vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling! You must observe the manufacturer's instructions!!



Note: It may be necessary to check if this vehicle has a stored radio code before disconnecting the battery!



ATTENTION!


In order to avoid mal-functions and damage to the vehicle's electrical system the earth terminal **must be disconnected** from the vehicle's battery **before starting work!**


Both the trailer module and the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected!


1


Please pay attention to the manufacturer's instructions when disconnecting and reconnecting the vehicle's battery!


Revision: 1 /16.11.2018 VW-204-07MU

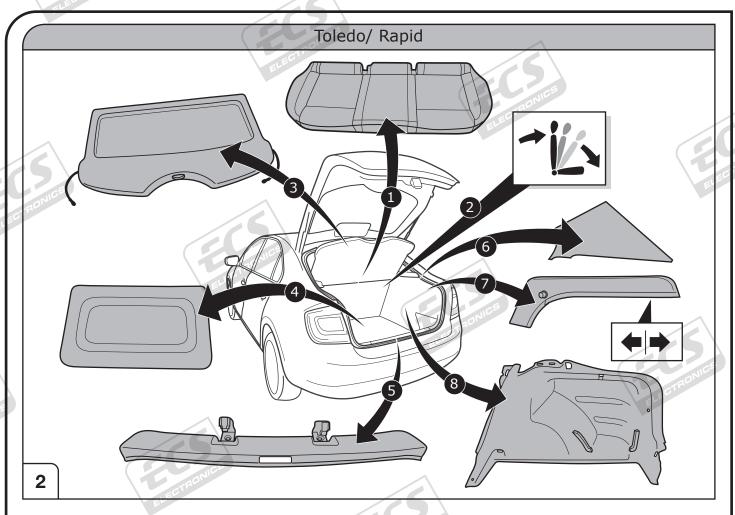


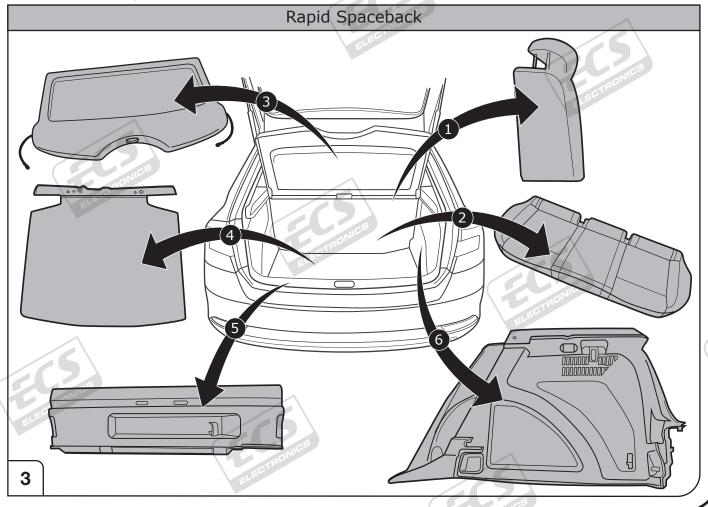


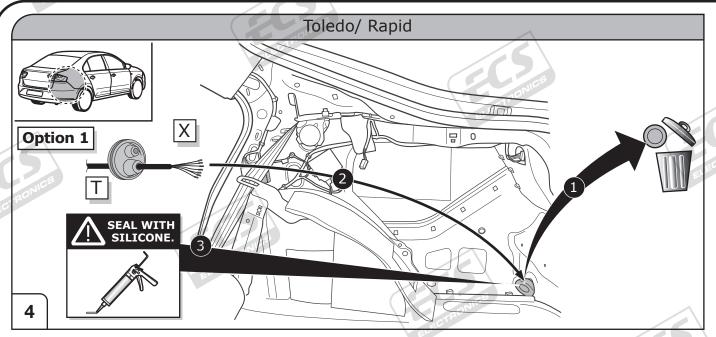


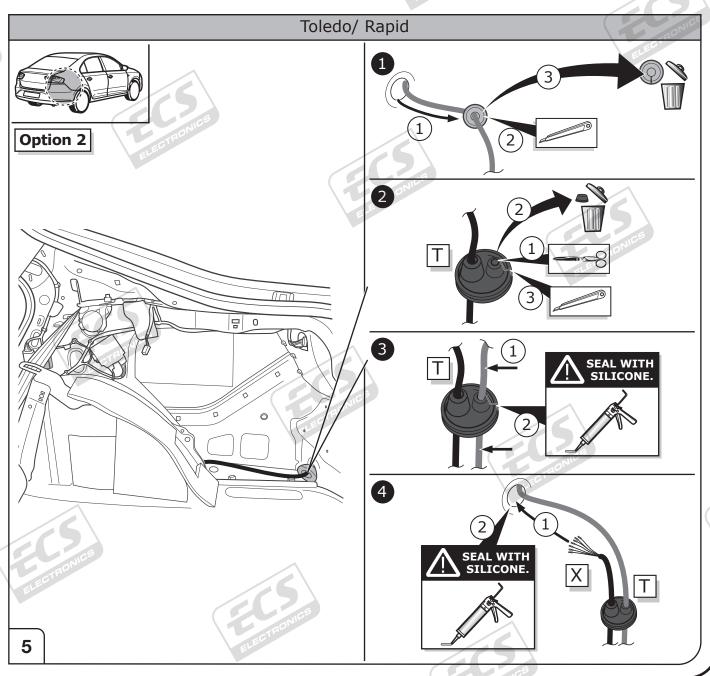


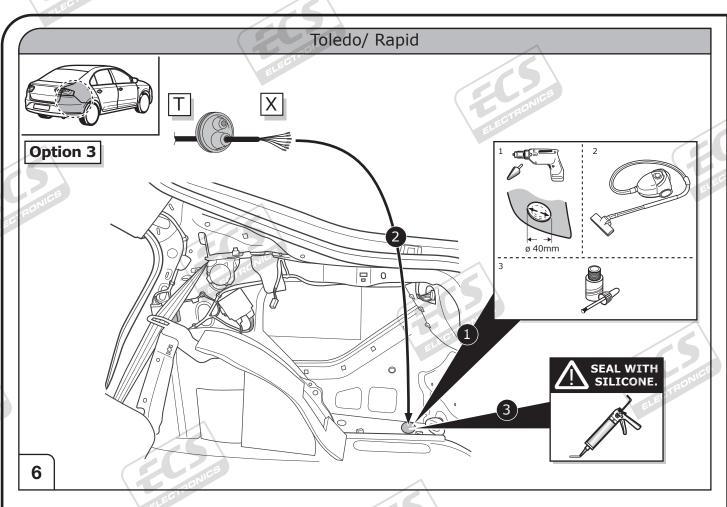


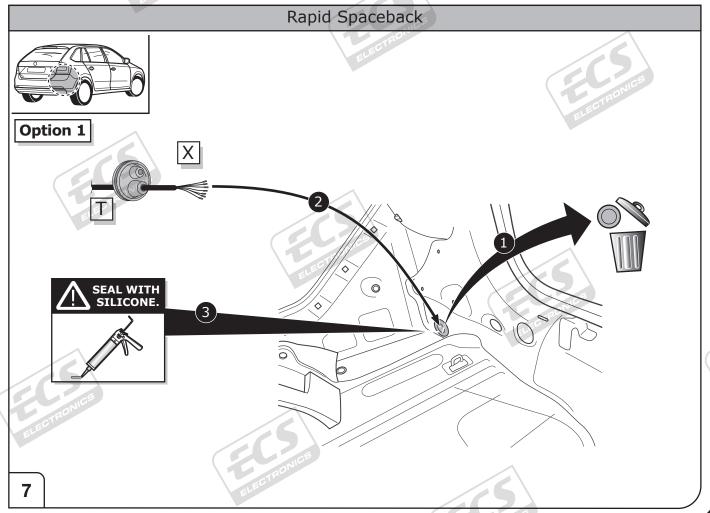

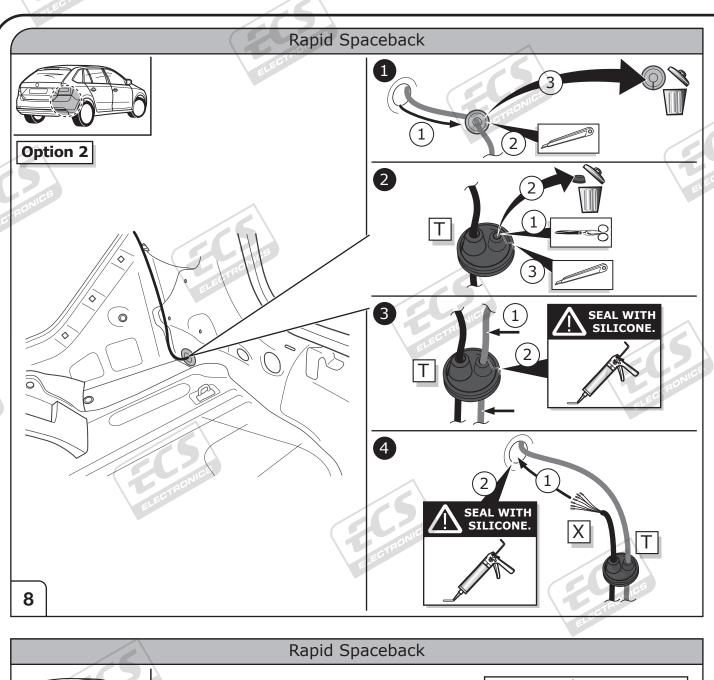

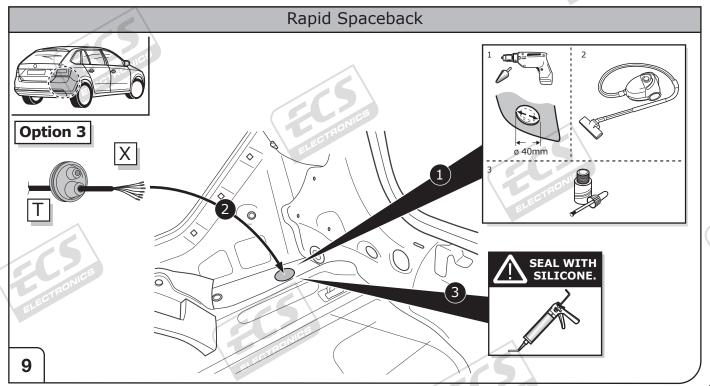

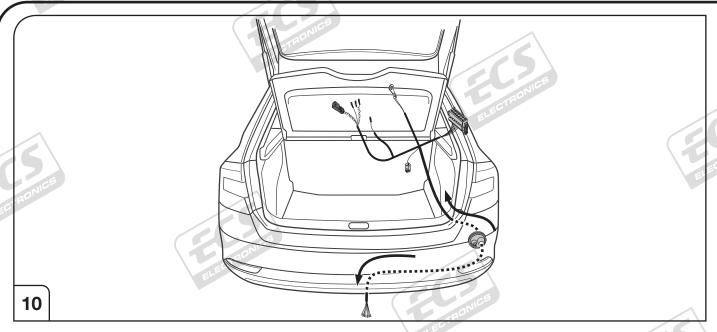


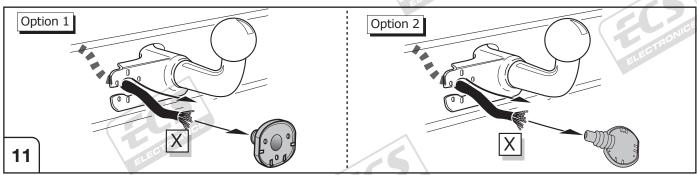



SOCKET CONNECTION


DIN/ISO	Ģ L	0#	_ 1-7	R➪	-\\\\-	STOP	TRON-Ö-
1724	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	21W		21W	42W	3x21W	42W
	Yellow	Blue	White	Green	Brown	Red	Black


12

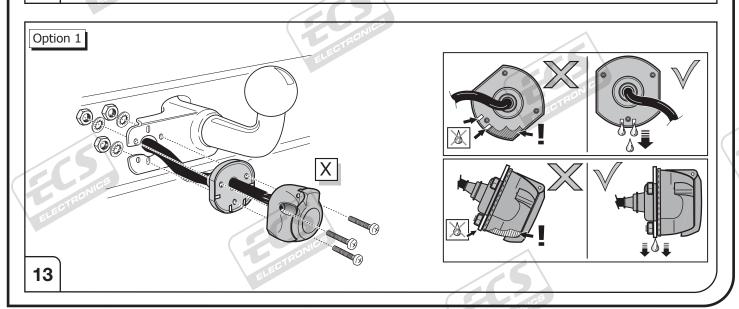


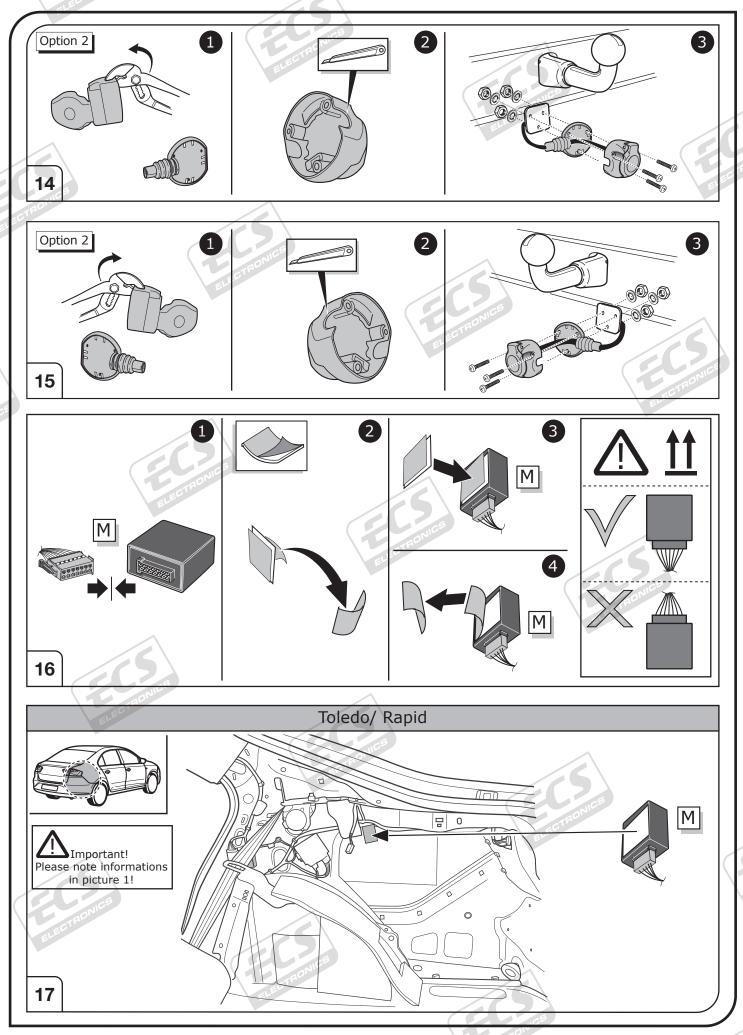


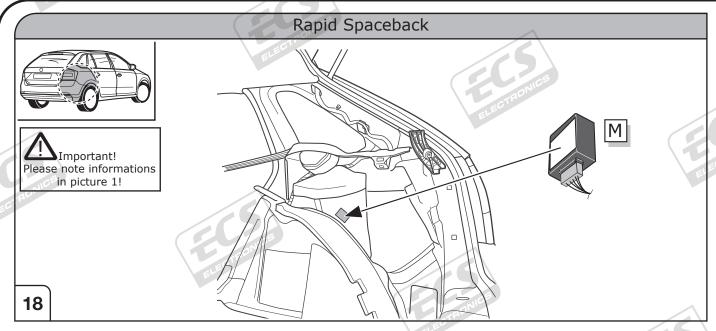


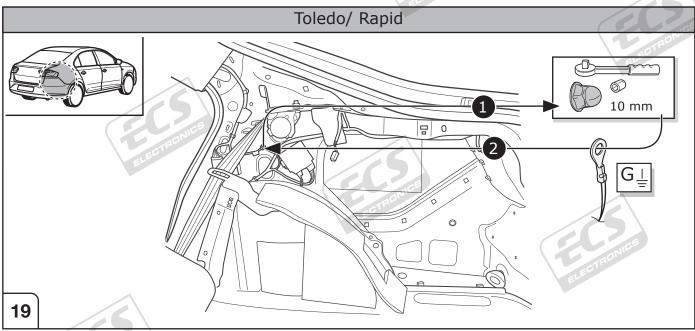


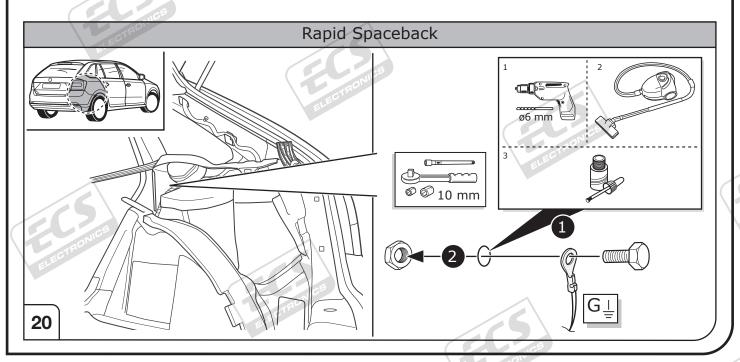


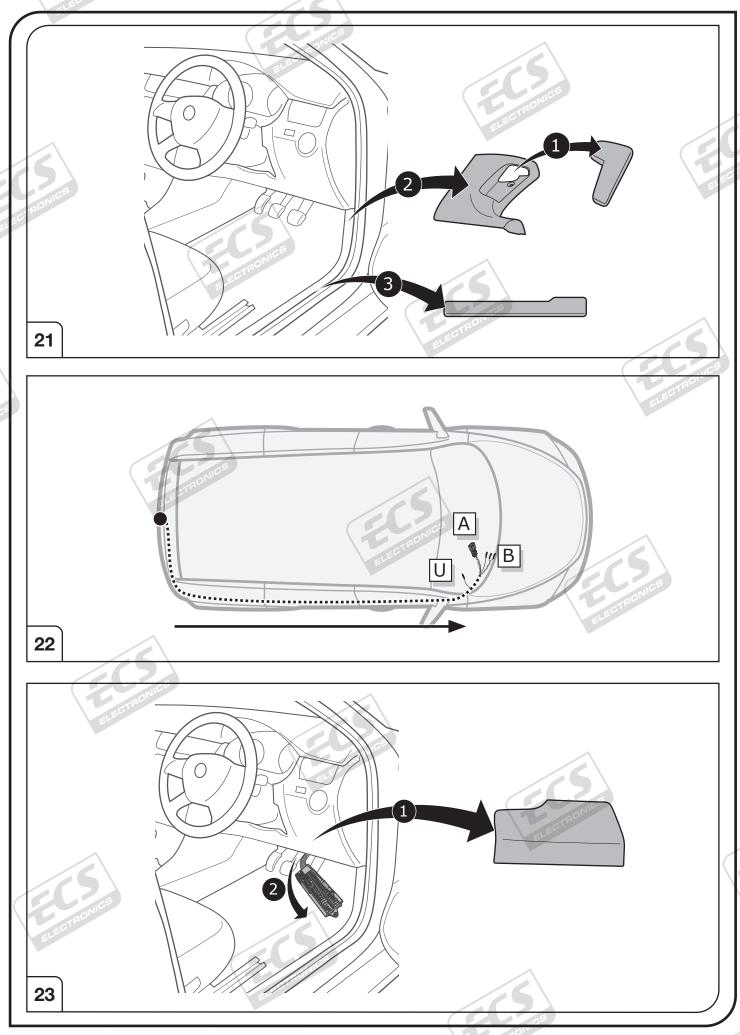


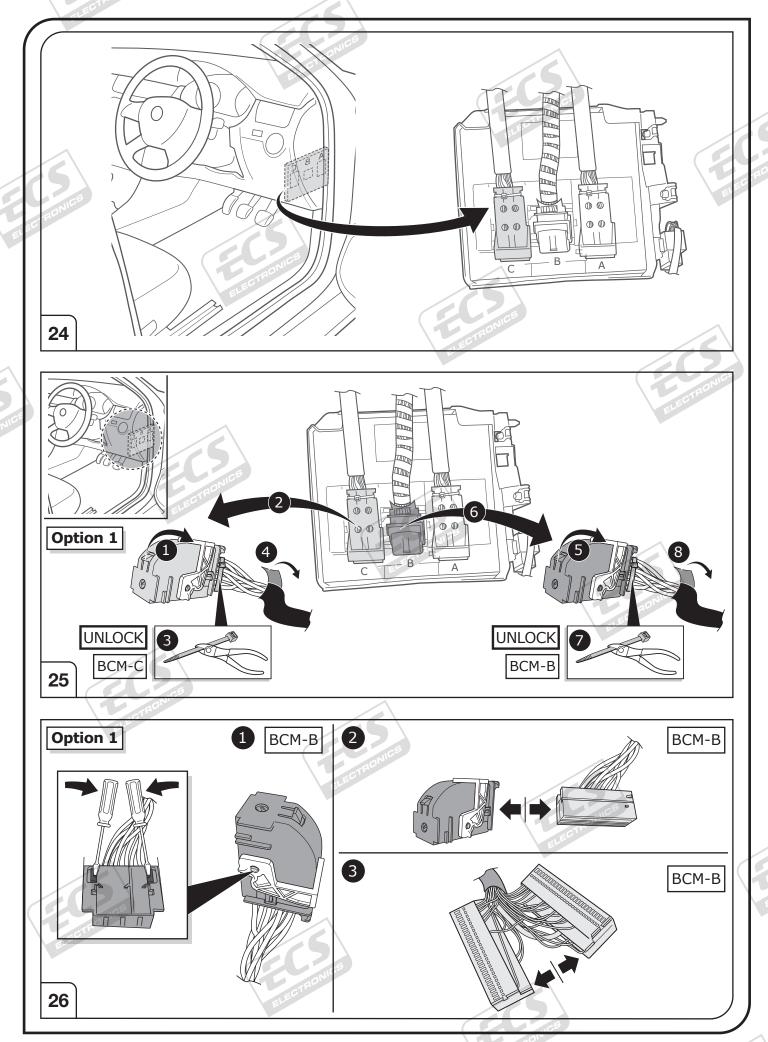


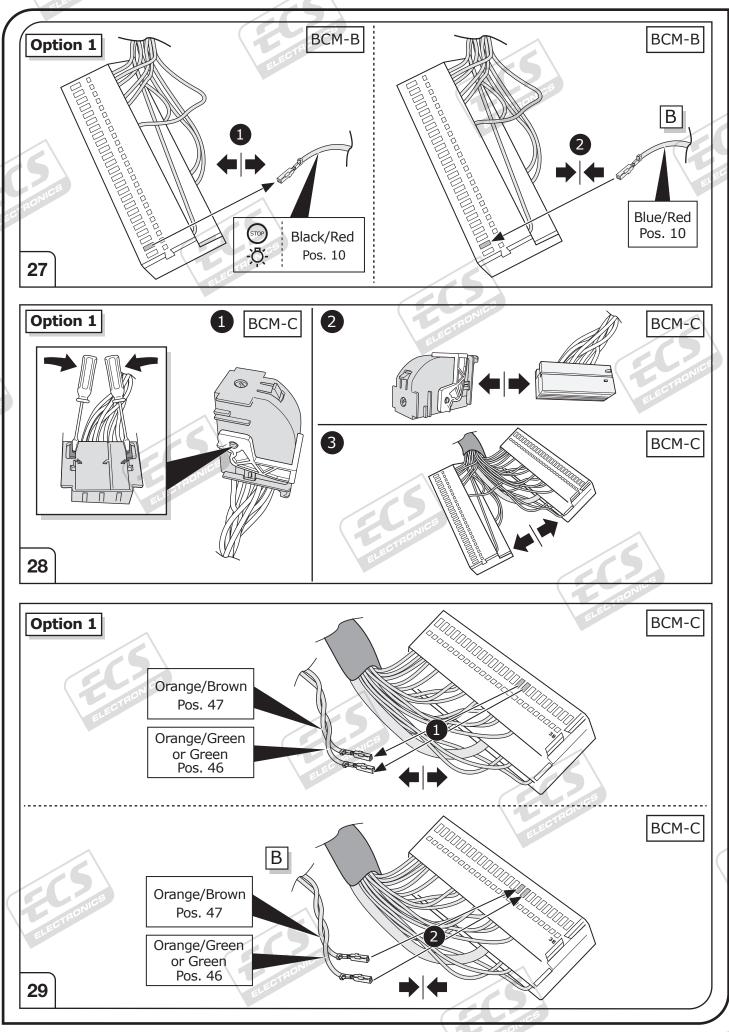


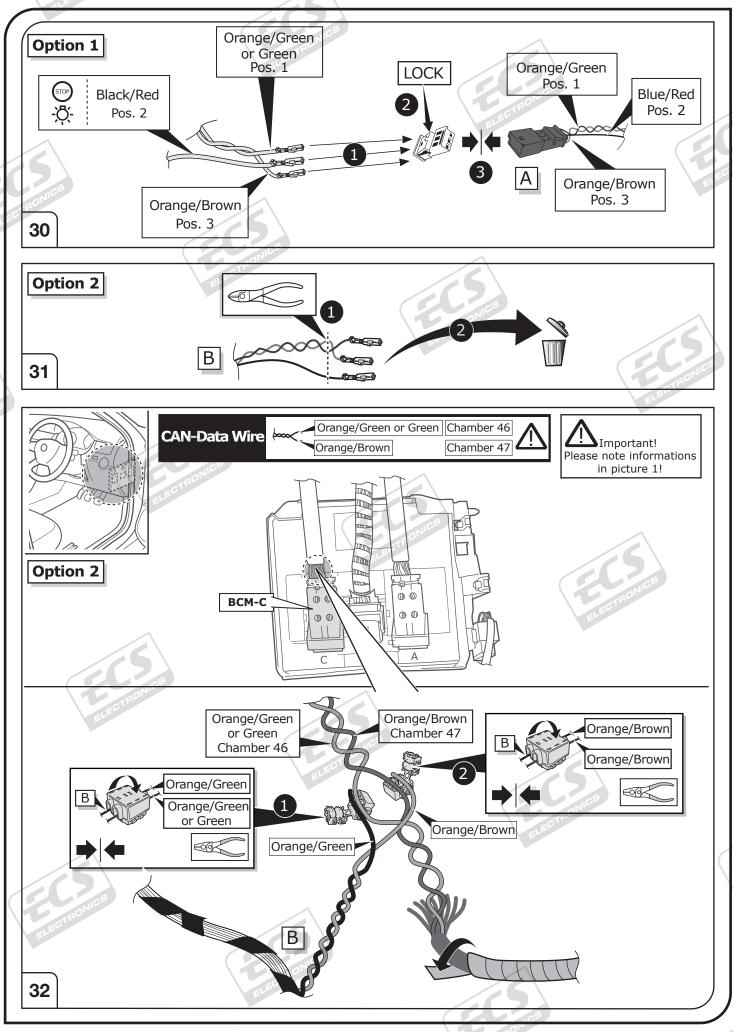


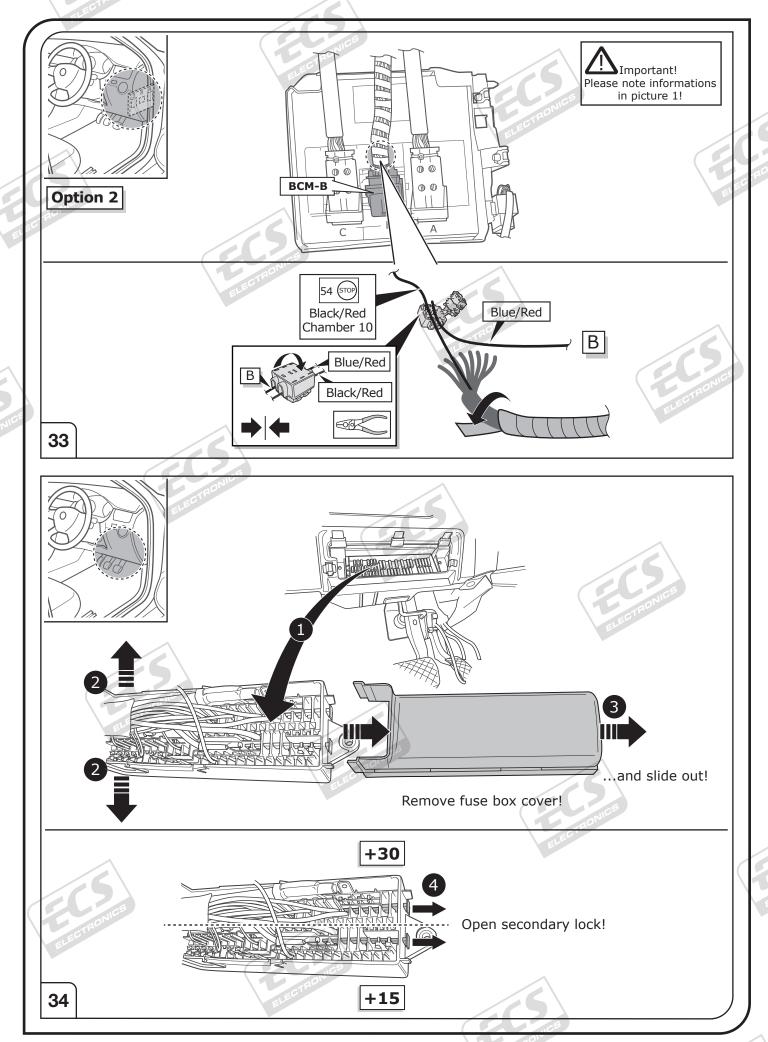

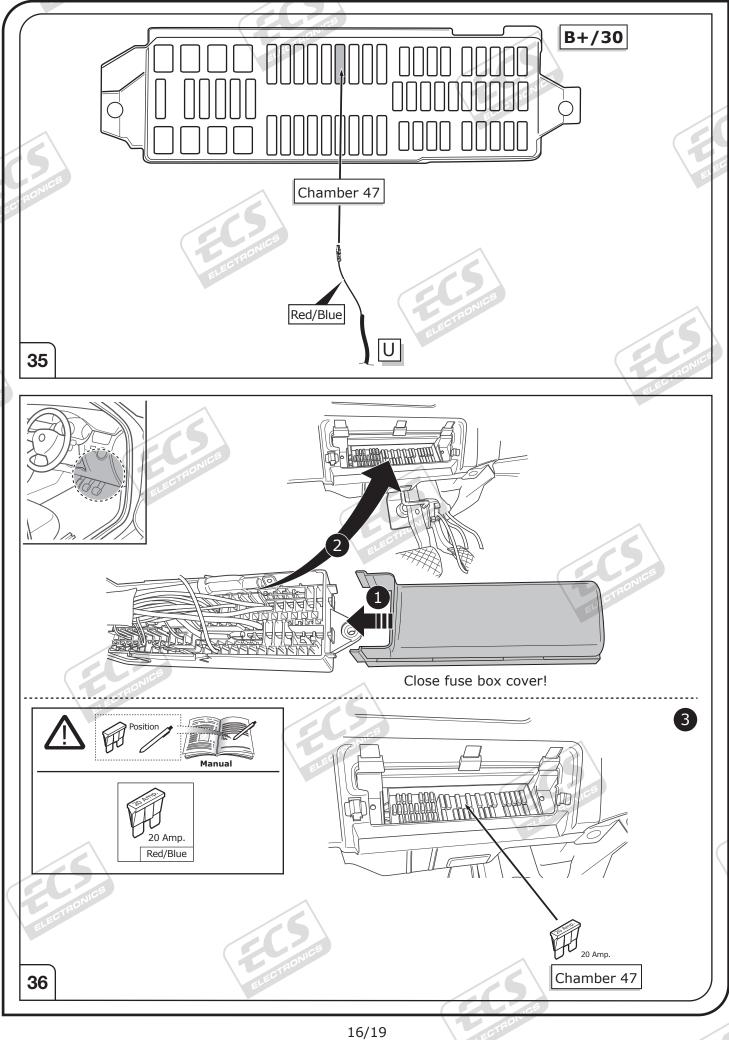

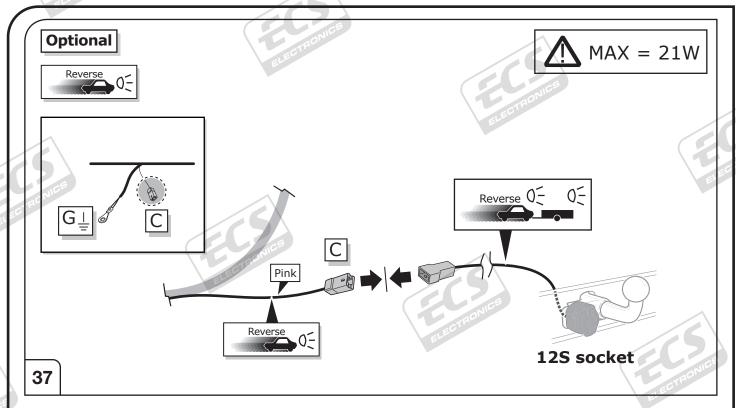

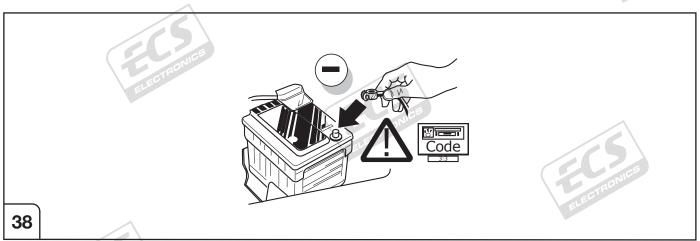

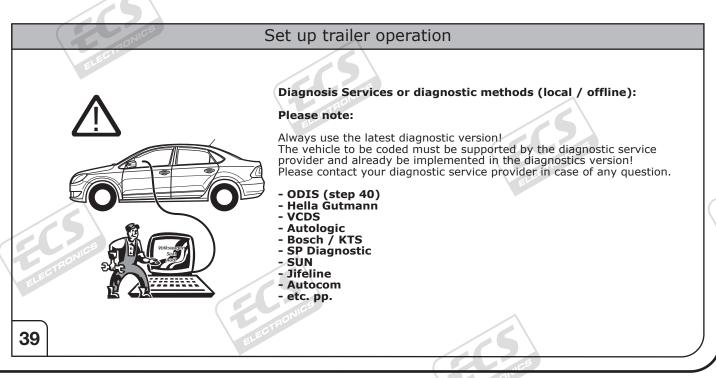

Set up trailer operation

CODING WITH ODIS

Please note:

The procedure described below for encoding and enabling the trailer mode only serves for a general orientation and can vary greatly depending on the model (motorisation / equipment). If necessary less or further control units will have to be adapted.

After connecting to ODIS, the "69 trailer function" controller has to be set to encoded in the target installation list.

The following may be necessary in the further course

EZE_09 (electronic central electric controller):

Diagnosis

(possible login code: 31347) Networking plan Controller self-diagnosis Encode

Trailer connection device or: hitch_ecu

Alternative encoding EZE_09 as follows (MY 2017 >>):

Self diagnose control unit Access authorization >31347 Adjustment Trailer control unit > installed

ZKS 46 (Central module convenience system)

>put on active trailer control unit >installed

SWA_3C (Lane Change Assist)

ECU for draw bar >with ECU for draw bar

SW2_CF (Lane Change Assist2)

>with ECU for draw bar ECU for draw bar

SCH_17 (Dash panel insert)

RFK_6C (reverse camera system)

equipment ahk >installed

STF_74 (chassis control system)

EPH_76 (PDC controller)
Trailer >trai

>trailer device can be removed

manually

DIS_13 (controller distance control (possible login code: 20103)

Control module for towing sens >installed

Alternative encoding DIS_13 as follows: Self diagnose control unit

Access authorization Encoding >20103

Binary encoding

Byte 3

Binary or Hex >xxxx1xxx

FFF_A5 (front sensor system controller) >coded

HDE_6D (boot lid electronics controller)

Important note on encoding and activating in **trailer mode**The aforementioned settings are carried out in the

vehicle's electrical system and saved locally. During general updates for the vehicle software (for example, within the scope of service or repair work), the settings may be overwritten and deleted under certain circumstances. In this case, the trailer mode activation has to be updated again locally after the update. Diagnostic information relating to the trailer mode that may appear during variance comparisons with the data saved in the manufacturer's works, may form the basis of the local activation.

Optional




Consult your supplier.

Trailer Simulator for 7- and 13-pin Sockets

41

40

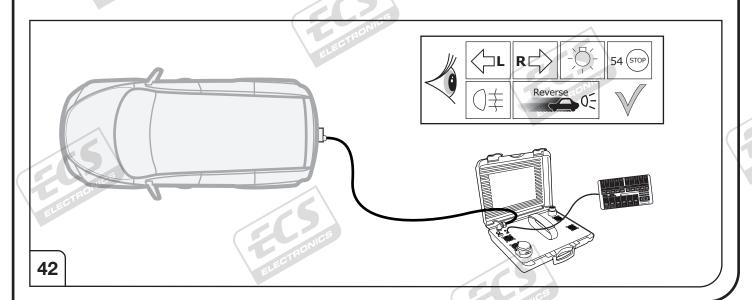

18/19

Right Connections UK Ltd Unit 503 Queensway Business Park TELFORD TF1 7UL UK

+44 (0)1952 608750 - Option 1 TECHNICAL: +44 (0)1952 608750 - Option 2

Web: www.rightconnections.co.uk Email: sales@rightconnections.co.uk Revision: 1/16.11.2018 VW-204-07MU

