EVENT LIGHTING

PRO PAR

Model No. PAR5x12, PAR12x12

USER MANUAL





For safety, please read this user manual carefully before initial use.

Event Lighting reserves the right to revise the manual at any time. Information and specifications within this manual are subject to change without notice. Event Lighting assumes no liability or responsibility for any errors or omissions. Please consult Event Lighting for any clarification or information regarding this item. www.event-lighting.com.au

Ver 2.0

CONTENTS

Safety Instructions

- Power input & power Linking

Product Installation

- Fuse replacement

Diagrams

- Lux chart
- Dimensions

Control Board Operation

- DMX address setting
- DMX modes setting
- Dimmer Speed Setting
- Static colour setting
- Manual colour setting
- Auto run and sound active setting
- Master/slave setting

DMX chart

Technical specifications

Warranty

Safety Instructions

WARNING

- Do not open this device, there is no user-serviceable parts inside. Risk of electric shock.
- Do not look at the light source when the device is on.
- CAUTION: This unit's housing may be hot during and after operation.
- Install this device in a location with adequate ventilation, at least 20 inch (50 cm) from adjacent surfaces.
- Do not leave any flammable material within 50 cm of this unit while operating or connected to power.
- Use a safety chain when mounting this device overhead.
- Do not operate this device outdoors or in any location where dust, excessive heat, water, or humidity may affect it.
- Do not operate this device if the housing, lenses, or cables appear damaged.
- Do not connect this device to a dimmer or rheostat.
- ONLY connect this device to a grounded and protected circuit.
- ONLY use the hanging bracket to carry this device.
- In case of a serious operating problem, stop using immediately.
- The maximum ambient temperature is 104° F (40° C). Do not operate this device at higher temperatures.

Power Input & Power Linking

This device has an auto-switching power supply work with input voltage range of 100~240 VAC, 50/60 Hz. Link up to the maximum 8A. DO NOT exceed this number.

Product Installation

This device can be mounted in many orientations provided each individual device is secured by the use of correct mounting bracket.

Use a safety chain when mounting this device overhead.

Fuse Replacement

If the fine-wire fuse of the device fuses, only replace the fuse by a fuse of same type and rating.

Before replacing the fuse, unplug mains lead.

Procedure:

Step 1: Unscrew the fuse holder on the rear panel with a fitting screwdriver from the housing (anticlockwise).


Step 2: Remove the old fuse from the fuse holder.


- Step 3: Install the new fuse in the fuse holder.
- Step 4: Replace the fuse holder in the housing and fix it.

PAR12X12


Lux Chart




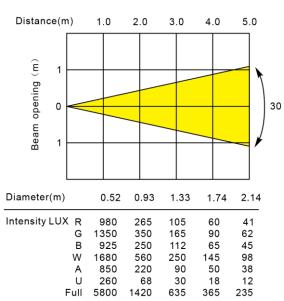

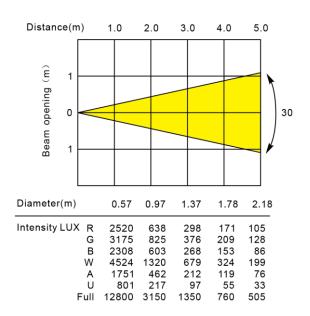

Dimensions

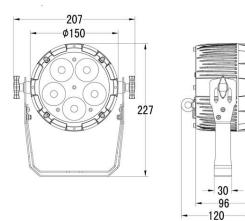

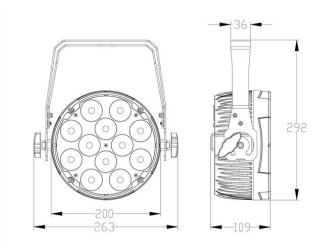

CONTROL BOARD OPERATION

Display	Function	
DMX Add	To set DMX address	
DMX Cha	To set DMX channel modes	
DIMA Cha	Ch12, CH08, CH06, CH03, CH02	
Dimmer	To set dimmer curve: 01, 02, 03, 04, 05	
Sound	To set sound active mode and the sensitivity (Sen000 ~ Sen100)	
	To set static colors: Static Color	
Static C	R,G,B,W,A,U,GB,RB,RG,RGB,RW,GW,BW,WA,,RA,GA,BA,RGW, RBW, GBW,	
	RGBW,GBA,BWA,RGA,GWA,RWA,RGBA,GBWA,RBWA,RGWA,RGBQA,RU,GU,AU,RAU,RGBWAU	
Manual C	To set user mode intensity of each colour separately for color mixing and strobe rate	
	To set built-in automatic programs (Pr 01 ~ Pr 05) and speed from Sp000 to Sp100	
Auto Pro	To set sound active mode (Pr 06) and sound sensitivity from Sen000 to Sen100	
	To set multi fixture chases (Pr 07)	
Mas/Sla	To set Master/Slave modes	
Reset	To reset factory default setting	

DMX Addressing:

After select the "DMX Add" and press "Enter", use "Up" and "Down" button to select the desired DMX address press "Enter" to save new setting

DMX Modes

After select the "DMX Cha" and press "Enter", use "Up" and "Down" button to select the desired DMX mode, press "Enter" to save new setting

Dimmer Speed Setting:

After select the "Dimmer" and press "Enter", use "Up" and "Down" button to select the desired dimmer curves,

Sound Mode

Entered "sound" mode, use "Up" and "Down" button to select the sensitivity Sen000-Sen100, press "Enter" to save new setting

Manual Color Mode

Set intensity of each colour separately to get endless color mixing from the control panel with strobe function.

Entered "Manual C" mode, use "Up" and "Down" button to select the each color (RGBW or RGBWAUV) intensity from 000 to 255 and strobe (S) speed from S000 to S100. (S000 is freeze and S001 to 100 is from slow to fast) press "Enter" to save new setting

Setting Static Colour

Entered "Static C" mode, you can select the desired solid color via the "UP" or "DOWN" buttons, press "Enter" to save new setting

Value:	Function:	
R	Red	
G	Green	
В	Blue	
W	White	
А	Amber	
UV	UV	
GB	Green + Blue	
RG	Red + Green	
RB	Red + Blue	
RW	Red + White	
GW	Green + White	
BW	Blue + White	
WA	White + Amber	
RA	Red + Amber	
GA	Green + Amber	
BA	Blue + Amber	
RGB	Red +Green + Blue	
RGW	Red + Green + White	
RBW	Red + Blue + White	
GBW	Green + Blue + White	
GBA	Green + Blue + Amber	
BWA	Blue + White + Amber	
RGA	Red + Green + Amber	
GWA	Green + White + Amber	
RWA	Red + White + Amber	
RGBA	Red + Green + Blue + Amber	
GBWA	Green + Blue + White + Amber	
RGBW	Red + Green + Blue + White	
RBWA	Red + Blue + White + Amber	
RGWA	Red + Green + White + Amber	
EGBWA	Red + Green + Blue + White + Amber	
RU	Red + UV	
GU	Green + UV	
AU	Amber + UV	
RAU	Red + Amber + UV	
RGBWAU	Red + Green + Blue + White + Amber + UV	

Automatic & Sound Mode

This fixture has 7 built-in programs.

Entered "Auto Pro" mode, use "Up" and "Down" button to select the built-in programs "Pr 01 ~ Pr 07" then press the "Enter" to confirm.

Use "Up" and "Down" button to select the operating speed of the program (Value:S000 ~ S100, Freeze, Slow ~ Fast), press "Enter" to save new setting.

Mode:		
	Value:	Function:
	Pr 01	RGBWAU Model R G B W A UV colour switching
	Pr 02	RGBWAU Model 36 colour switching
Auto Drogram	Pr 03	RGBWAU Model R G B W A U colour fading
Auto Program	Pr 04	RGBWAU Model 36 colour fading
	Pr 05	Color Macros Fading
	Pr 06	Sound active mode
	Pr 07	Multi fixture chases

To setup sound active mode Pr 06

- 1. Entered "Auto Pro" mode, use "Up" and "Down" button to select the built-in program "Pr 06", press "Enter" to confirm.
- 2. Use "Up" and "Down" button to select the sensitivity Sen000 ~ Sen100, press "Enter" to save new setting

To setup multi fixture chases Pr 07

Before starting, go to each fixture and reset the menu to fixture defaults.

1. On the master unit, setup the DMX address to the total number of fixtures in the string. For example, you may have a total of 20 par cans including the master, so the DMX address should be set to "20".

- 2. On the master unit, go to master/slave menu setting and set the unit to master
- 3. On the master unit, set the unit to "Auto Mode" "Pr 07" which supports multi fixture chases.

4. On each slave unit, setup the DMX address to the fixture position in the string. For example, if this unit is the 2nd unit in the string including the master, then set the DMX address to 2. If this the last unit of 20, then the DMX address should be set to 20. It is possible to double up fixture positions as well as fixture 1.

5. On each slave, go to the master/slave menu setting and set it to slave.

Master/Slave Operation

- 1. Set the master fixture to one of the standalone operating modes: automatic, sound, static color or manual color modes
- 2. Set the slaves, entered "Mas/Sla" mode, set to "S", press "Enter"

DMX Chart

2 channels Mode

Channel	Value	Function	
1	000-255	Warm white to cool white	
2	000-255	dimmer 0% ~ 100%	

3 channels Mode

Channel	Value	Function
1	000-255	Red: 0% ~ 100%
2	000-255	Green: 0% ~ 100%
3	000-255	Blue: 0% ~ 100%

6 channels Mode

Channel	Value	Function	
1	000-255	Red: 0% ~ 100%	
2	000-255	000-255 Green: 0% ~ 100%	
3	000-255	Blue: 0% ~ 100%	
4	000-255	White: 0% ~ 100%	
5	000-255	Amber: 0% ~ 100%	
6	000-255	UV: 0% ~ 100%	

8 channels Mode

Channel	Value	Function	
1	000-255	Red: 0% ~ 100%	
2	000-255	Green: 0% ~ 100%	
3	000-255	Blue: 0% ~ 100%	
4	000-255	White: 0% ~ 100%	
5	000-255	Amber: 0% ~ 100%	
6	000-255	UV: 0% ~ 100%	
7	000-255	Master DIMMER 0% ~ 100%	
000-009 No function 8 010-019 Sound Active		No function	
		Sound Active	
	020-255	Strobe : Slow ~ Fast (1~30Hz)	

Channel Value Function					
1	000-255	Red: 0% ~ 100%	Red: 0% ~ 100%		
2	000-255	Green: 0% ~ 100%	Green: 0% ~ 100%		
3	000-255	Blue: 0% ~ 100%			
4	000-255	White: 0% ~ 100%			
5	000-255	Amber: 0% ~ 100%			
6	000-255	UV: 0% ~ 100%			
7	000-255	Master DIMMER 0% ~ 100%			
8	000-009	Strobe OFF			
	010-255	Strobe (slow-fast 1-30Hz)			
	000-019	No Function			
	020-039	RED 100% / GREEN 0% ~ 100% /	BLUE 0%		
	040-059	RED 100% ~ 0% / GREEN 100%	/ BLUE 0%		
	060-079	RED 0% / GREEN 100% / BLUE 09	% ~ 100%		
	080-099	RED 0% / GREEN 100% ~ 0% / E	BLUE 100%		
	100-119	RED 0% ~ 100% / GREEN 0% / E	BLUE 100%		
	120-139	RED 100% / GREEN 0% / BLUE 10	00% ~ 0%		
_	140-159	RED 100% / GREEN 0% ~100%	/ BLUE 0% ~ 100%		
	160-179	RED 100%~ 0% / GREEN 100%	~ 0% / BLUE 100%		
9	180-200	RED 100% / GREEN 100% / BLUE 100% /WHITE 100%			
	201-204	Color Temperature 1			
-	205-209	Color Temperature 2			
-	210-214	Color Temperature 3	Warm		
	215-219	Color Temperature 4			
	220-224	Color Temperature 5			
	225-229	Color Temperature 6			
	230-234	Color Temperature 7			
	235-239	Color Temperature 8	◆		
	240-244	Color Temperature 9	Cool		
	245-249	Color Temperature 10			
	250-255	Color Temperature 11			
	000-009	No Function	•		
	010-049	R G B W A UV colour switching			
	050-090	36 colour switching			
	091-131	R G B W A U colour fading			
	132-172	36 colour fading			
10	173-213	Color Macros Fading			
	214-255	Sound active mode			
11	000-255	Speed of auto programs (slow ~ fas	st) or sound sensitivity		
	000-009	Use dimmer curve from setting of c	ontrol board		
	010-057	16 bits Linear dimmer 1			
12	058-106	16 bits Non-linear dimmer 2			
	107-155	16 bits Non-linear dimmer 3			

_		
	156-204	16 bits Non-linear dimmer 4
	205-255	8 bits Linear dimmer 5

TECHNICAL SPECIFICATIONS

Model	PAR5x12	PAR12x12		
Dimensions and Weight				
Overall size LxWxH (mm)	207x227x120	263x293x98		
Weight (kg)	1.9	3.2		
Power				
Power Supply	100~240V AC, 50/60 Hz			
Power Consumption (w)	50	120		
Fuse	T 1 A, 250 V	T 2 A, 250 V		
LED	5pcs 12W RGBWA+UV 6 in 1 LED	12pcs 12W RGBWA+UV 6 in 1 LED		
Operation Modes DMX, auto run, sound active, master/slave, manual colour cor		slave, manual colour control, static		
	colour control			
Beam Angle	30°	30°		
Refresh Rate	2940Hz			
DMX Channel mode	2, 3, 6, 8,12			
Power Input	Neutrik® Powercon			
Power Output	Neutrik® Powercon			

WARRANTY

Please refer to your local dealer or please contact Event Lighting Pty Ltd Website: www.event-lighting.com.au.