

# LMP-0601G-SFP-24-V2 Series

6-Port Industrial PoE+ Managed Ethernet Switch, w/4\*10/100/1000Tx (30W/Port), 1\*10/100/1000Tx, and 1\*100/1000 SFP Slot, 12~48VDC Power Input; Version 2

Hardware



# **Hardware Manual**

Version 1.0 (October 2019)



#### © Copyright 2019 Antaira Technologies, LLC.

All Rights Reserved

This document contains information, which is protected by copyright. Reproduction, adaptation or translation without prior permission is prohibited, except as allowed under the copyright laws.

#### **Trademark Information**

Antaira is a registered trademark of Antaira Technologies, LLC., Microsoft Windows and the Windows logo are the trademarks of Microsoft Corp. NetWare is the registered trademark of Novell Inc. WMM and WPA are the registered trademarks of Wi-Fi Alliance. All other brand and product names are trademarks or registered trademarks of their respective owners.

**Notice:** Copyrights © 2019 by Antaira Technologies, LLC. All rights reserved. Reproduction, adaptation, or translation without prior permission of Antaira Technologies, LLC. is prohibited, except as allowed under the copyright laws.

#### **Disclaimer**

Antaira Technologies, LLC. provides this manual without warranty of any kind, expressed or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Antaira Technologies, LLC. may make improvements and/or changes to the product and/or specifications of the product described in this manual, without prior notice. Antaira Technologies, LLC. will not be liable for any technical inaccuracies or typographical errors found in this guide. Changes are periodically made to the information contained herein and will be incorporated into later versions of the manual. The information contained is subject to change without prior notice.

#### **FCC Warning**

This equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution**: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

#### **CE Mark Warning**

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

#### **Industrial Ethernet Switches**

Industrial Grade Gigabit PoE Managed Ethernet Switches

Hardware Manual Version 1.0 (October 2019)

This manual supports the following models:

- LMP-0601G-SFP-24-V2
- LMP-0601G-SFP-24-T-V2

# **Table of Contents**

1. Introduction	1
1.1 Product Overview	1
1.2 Product Software Features	1
1.3 Product Hardware Features	2
1.4 Package Contents	3
1.5 Safety Precaution	3
2. Hardware Description	
2.1 Physical Dimensions	4
2.2 Front Panel	5
2.3 Top View	5
2.4 LED Indicators	6
2.5 Reset Button	7
2.6 Ethernet Ports	7
2.7 Cabling	8
2.8 Wiring the Power Inputs	8
2.9 Wiring the Fault Alarm Contact	9
2.10 Grounding Note	9
3. Mounting Installation	10
3.1 DIN-Rail Mounting	10
3.2 Wall Mounting	11
4. Hardware Installation	12
<ul><li>4.1 Installation Steps</li><li>4.2 Maintenance and Service</li></ul>	12 13
5. Technical Specifications	13

## 1. Introduction

All Antaira industrial managed switches come with a pre-installed "user-friendly" web console interface, which allows users to easily configure and manage the units, whether one is using a serial console and Command Line Interface (CLI) commands like Telnet, SSH, HTTP (Web GUI) or Simple Network Management Protocols (SNMP).

#### 1.1 Product Overview

Antaira Technologies' LMP-0601G-SFP-24-V2 series is a 6-port industrial Gigabit PoE+ managed Ethernet switch embedded with 4\*10/100Tx Ethernet ports that support IEEE802.3at/af for a maximum of 30W/port and 1\*100/1000 SFP port. The LMP-0601G-SFP-24-V2 is a fully manageable Layer 2 Ethernet switch that is pre-loaded with a user-friendly web management console design. It supports the ring network redundancy function using the market's open standard ITU-T G.8032 ERPS (Ethernet Ring Protection Switch) protocol that has a <50ms network recovery time. The advanced network filtering and security functions, such as IGMP, VLAN, QoS, SNMP, RMON, Modbus TCP, and 802.1X/HTTPS/SSH/SSL increase determinism and improve network management for remote SCADA systems or control networks.

The LMP-0601G-SFP-24-V2 series is IP30 rated and DIN-rail mountable. There are also two wide operating temperature models for either a standard temperature range (STD: -10°C to 70°C) or an extended temperature range (EOT: -40°C to 75°C). It also provides high EFT and ESD protection for industrial networking applications, such as, power/utility, water wastewater, oil/gas/mining, factory automation, security surveillance, ITS and any other outdoor or harsh environment.

#### 1.2 Product Software Features

- □ Network Redundancy
  - STP, RSTP, MSTP, ITU-T G.8032 Ethernet Ring Protection Switch (ERPS) for network redundancy
- □ Network Management
  - ➤ Web UI based management, SNMP v1/v2/v3, Serial Console
  - Qos, traffic classification QoS, Cos, bandwidth control for Ingress and Egress, broadcast storm control, Diffserv
  - ➤ IEEE802.1q VLAN tagging, port-based VLAN support

- ➤ IGMP snooping v1/v2, IGMP filtering / throttling, IGMP query up to 256 group
- Supports IPv4/IPv6, RMON, MIB II, port mirroring, event syslog, DNS, NTP/SNTP, HTTPS, SSH/SSL, TFTP
- MODBUS TCP for SCADA system integration
- □ Port Configuration
  - > Status, statistics, mirroring, rate limiting, event syslog
- Event Handling
  - Event notification by Email: Cold/Warm Start, Power Failure, Authentication, SNMP trap and Fault Alarm Relay Output
- □ Software Upgrade via TFTP and HTTP
- □ Configuration Backup USB Port

#### 1.3 Product Hardware Features

- System Interface and Performance
  - All RJ45 ports support Auto MDI/MDI-X Function
  - Embedded 4\*10/100/1000Tx (PSE: 30W/Port) RJ45 ports, 1\*10/100/1000Tx RJ45 port, and 1\*100/1000 SFP slot
  - Store-and-forward switching architecture
  - 8K MAC address table
  - Power line EFT protection: 2,000VDC; Ethernet ESD protection: 6,000VDC
- □ Power Input
  - DC 12~48V redundant, with a 6-pin removal terminal block
  - It is recommended to use a UL listed industrial power supply
- Operating Temperature
  - Standard operating temperature model: -10°C to 70°C
  - Extended operating temperature model: -40°C to 75°C
- ☐ Case/Installation
  - IP30 protection
  - DIN-Rail and wall mount design

### 1.4 Package Contents

- ☐ 1 LMP-0601G-SFP-24(-T)-V2
- ☐ 1 Quick Installation Guide
- ☐ 1 Wall mounting bracket set with screws
- ☐ 1 DC cable 18 AWG & DC jack 5.5 x 2.1mm
- ☐ 1 RJ45 dust cover set
- ☐ 1 RJ45 to DB9 serial console cable

## 1.5 Safety Precaution

**Attention:** If the DC voltage is supplied by an external circuit, please use a protection

device on the power supply input. The industrial Ethernet switch's

hardware specs, ports, cabling information, and wiring installation will be

described within this user manual.

#### **Warning Labels**

The caution label means that you should check the certain information on user manual when working with the device. (Shown in Figure 1.1)



Figure 1.1 - Caution Label



Figure 1.2 - Hot Surface Warning Label

# 2. Hardware Description

## 2.1 Physical Dimensions

Figure 2.1, below, shows the physical dimensions of Antaira's LMP-0601G-SFP-24-V2 series:

(W x D x H) is **54mm x 99mm x 142mm** 

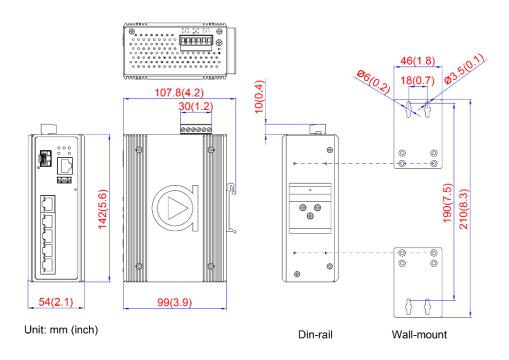


Figure 2.1

LMP-0601G-SFP-24-V2 Series Physical Dimensions

#### 2.2 Front Panel

The front panel of the LMP-0601G-SFP-24-V2 series industrial gigabit PoE+ managed Ethernet switch is shown below in *Figure 2.2*.

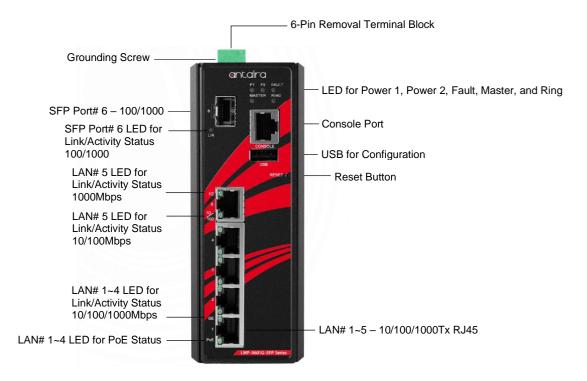


Figure 2.2
The Front Panel of LMP-0601G-SFP-24-V2 Series

### 2.3 Top View

Figure 2.3, below, shows the top panel of the LMP-0601G-SFP-24-V2 series is equipped with one 6-pin removal terminal block connector for dual DC power inputs (12~48VDC).

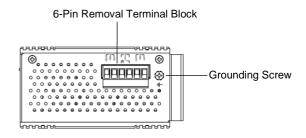


Figure2.3
Top Panel View of LMP-0601G-SFP-24-V2 Series

### 2.4 LED Indicators

There are LED light indicators located on the front panel of the industrial Ethernet switch that display the power status and network status. Each LED indicator has a different color and has its own specific meaning, see below in *Table 2.1*.

LED	Color	Description	
P1 G	Crash	On	Power input 1 is active
	Green	Off	Power input 1 is inactive
		On	Power input 2 is active
P2	Green	Off	Power input 2 is inactive
	0	On	System is ready
Fault	Green	Off	System is booting
	Red	On	Fault Alarm
	Neu	Off	System is in normal state
Owner	Green	On	ERPS Owner Mode (Ring Master) is ready
Owner	Oreen	Off	ERPS Owner Mode is not active
Ping	Green	On	Ring Network is active
Ring G	Green	Off	Ring Network is not active
LAN Port 1~4	Green	On	Connected to Network, 10/100/1000Mbps
(Upper LED)		Flashing	Network is active
		Off	Not connected to network
LAN Port 1~4	LAN Port 1~4 (Lower LED) PoE Indicators	On	The port is supplying power to the powered-device
` '		Off	No powered-device attached or power supplying fails
	Green	On	Connected to network, 1000Mbps
LAN Port 5		Flashing	Networking is active
(Upper LED)		Off	Not connected to network
LAN Port 5	Green	On	Connected to Network, 10/100Mbps
(Lower LED)		Flashing	Network is active
		Off	Not connected to network
	Green	On	Connected to network
SFP Port 6 LINK/ACT		Flashing	Networking is active
		Off	Not connected to network

Table 2.1 - LED Indicators for LMP-0601G-SFP-24-V2 Series

Caution: "P1" is the abbreviation for "Power ", "P2" is for "Power 2", "LNK" is for "Link", and "ACT" is for "Activity".

#### 2.5 Reset Button

There is a 'Reset' button located on the front panel of the industrial Ethernet switch that helps users to reboot, restore default, or save running configurations by pressing the button for different seconds. Please refer to *Table 2.2* for the timing and function.

Seconds	Function
1	Save running configuration to USB
4-6	Reboot the switch
7 or more	Restore factory default

Table 2.2 - Reset Button Functions

#### 2.6 Ethernet Ports

#### ☐ RJ-45 Ports

**RJ-45 Ports (Auto MDI/MDIX)**: The RJ-45 ports are auto-sensing for 10Base-T, 100Base-TX, or 1000Base-T connections. Auto MDI means that the switch can connect to another switch or workstation without changing the straight-through or crossover cabling. See the figures below for straight-through and crossover cabling schematics.

#### **RJ-45 Pin Assignments**

Pin Number	Assignment
1	Rx+
2	Rx-
3	Tx+
6	Tx-

Table 2.3 - RJ45 Pin Assignments


**Note:** The "+" and "-" signs represent the polarity of the wires that make up each wire pair.

All ports on this industrial Ethernet switch support automatic MDI operations. Users can use straight-through cables (see figure below) for all network connections to PCs, servers, and other switches or hubs. With straight-through cabling, pins 1, 2, 3, and 6 are at one end of the cable and are connected straight through to pins 1, 2, 3 and 6 at the other end of the cable. The table below (*Table 2.4*) shows the 10BASE-T/100BASE-TX/1000BASE-T MDI port pin outs.


Pin MDI-X	Signal Name	MDI Signal Name
1	Receive Data plus (RD+)	Transmit Data plus (TD+)
2	Receive Data minus (RD-)	Transmit Data minus (TD-)
3	Transmit Data plus (TD+)	Receive Data plus (RD+)
6	Transmit Data minus (TD-)	Receive Data minus (RD-)

Table 2.4 - Ethernet Signal Pin

The following figures show the cabling schematics for straight-through and crossover.

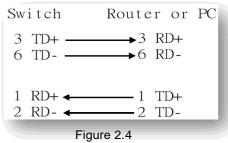

Straight-Through Cable Schematic

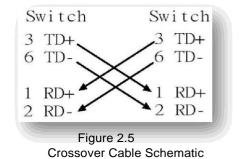

### 2.7 Cabling

Use the four twisted-pair, category 5e, or the above cabling for the RJ-45 port connections. The cable between the switch and the link partner (switch, hub, workstation, etc.) must be less than 100 meters (328 ft.) in length.

### 2.8 Wiring the Power Inputs

Please follow the steps below when inserting the power wire.

1. Insert the positive and negative wires into the PWR1 (V1+, V1-) and PWR2 (V2+, V2-) contacts on the terminal block connector as shown below in *Figure 2.6*.

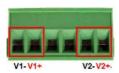


Figure 2.6 - Power Terminal Block

2. Tighten the wire-clamp screws to prevent the wires from loosening, as shown below in Figure 2.7.



Figure 2.7 - Power Terminal Block

Note:	☐ Only use copper conductors, 60/75° C, tighten to 5lbs.
	<ul> <li>The wire gauge for the terminal block should range between 18~20 AWG.</li> </ul>



• The wire gauge for the terminal block should range between 12 ~24AWG

### 2.10 Grounding Note

Grounding and wire routing help limit the effects of noise due to Electromagnetic Interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices. The grounding screw symbol is shown blow in Figure 2.15.



Figure 2.15 - Grounding screw




Caution: Using a shielded cable achieves better electromagnetic compatibility.

# 3. Mounting Installation

### 3.1 DIN-Rail Mounting

The DIN-Rail is pre-installed on the industrial Ethernet switch from the factory. If the DIN-Rail is not on the industrial Ethernet switch, please see Figure 3.1 to learn how to install the DIN-Rail on the switch.

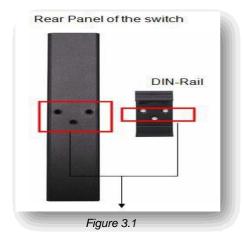


The Rear Side of the Switch and DIN-Rail Bracket

Follow the steps below to learn how to hang the industrial Ethernet switch.

1. Use the screws to install the DIN-Rail bracket on the rear side of the industrial Ethernet switch.



- 2. To remove the DIN-Rail bracket, do the opposite from step 1.
- 3. After the DIN-Rail bracket is installed on the rear side of the switch, insert the top of the DIN-Rail on to the track as shown below in *Figure 3.2*.
- 4. Lightly pull down the bracket on to the rail as shown below in Figure 3.3.
- 5. Check if the bracket is mounted tightly on the rail.
- 6. To remove the industrial Ethernet switch from the rail, do the opposite from the above steps.

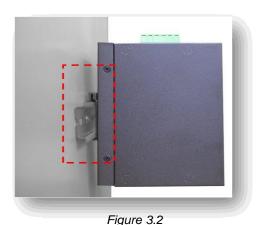

Insert the Switch on the DIN-Rail



Stable the Switch on DIN-Rail


### 3.2 Wall Mounting

Follow the steps below to mount the industrial Ethernet switch using the wall mounting bracket as shown below in *Figure 3.4*.



Caution: "Wall" means industrial control panel wall

- 1. Remove the DIN-Rail bracket from the industrial Ethernet switch by loosening the screws.
- 2. Place the wall mounting brackets on the top and bottom of the industrial Ethernet switch.
- 3. Use the screws to screw the wall mounting bracket on the industrial Ethernet switch.

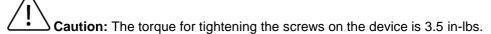

- 4. Use the hook holes at the corners of the wall mounting bracket to hang the industrial Ethernet switch on the wall.
- 5. To remove the wall mount bracket, do the opposite from the steps above.



Figure 3.4
Remove DIN-Rail Bracket from the Switch

Below, in Figure 3.5 are the dimensions of the wall mounting bracket.

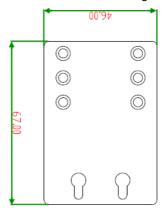


Figure 3.5
Wall Mounting Bracket Dimensions

# 4. Hardware Installation

### 4.1 Installation Steps

This section will explain how to install Antaira's LMP-0601G-SFP-24-V2 series:



Caution: This device is intended for use indoor and at altitudes up to 2000 meters.



Caution: The device is intended to be installed in an industrial control enclosure and panel.

#### **Installation Steps**

- 1. Unpack the industrial Ethernet switch from the original packing box.
- 2. Check if the DIN-Rail bracket is screwed on the industrial Ethernet switch.
  - If the DIN-Rail is not screwed on the industrial Ethernet switch, please refer to the **DIN-Rail Mounting** section for DIN-Rail installation.
  - If you want to wall mount the industrial Ethernet switch, please refer to the Wall
     Mounting section for wall mounting installation.
- 3. To hang the industrial Ethernet switch on a DIN-Rail or wall, please refer to the **Mounting** Installation section.
- 4. Power on the industrial Ethernet switch and then the power LED light will turn on.
  - If you need help on how to wire power, please refer to the Wiring the Power Inputs section.
  - Please refer to the LED Indicators section for LED light indication.
- 5. Prepare the twisted-pair, straight-through category 5 cable for Ethernet connection.
- 6. Insert one side of the RJ-45 cable into switch's Ethernet port and on the other side into the networking device's Ethernet port, e.g. switch PC or server. The Ethernet port's (RJ-45) LED on the industrial Ethernet switch will turn on when the cable is connected to the networking device.
  - Please refer to the **LED Indicators** section for LED light indication.
- 7. When all connections are set and the LED lights all show normal, the installation is complete.

#### 4.2 Maintenance and Service

- If the device requires servicing of any kind, the user is required to disconnect and remove it from its
  mounting. The initial installation should be done in a way that makes this as convenient as possible.
- Voltage/Power lines should be properly insulated as well as other cables. Be careful when handling them so as to not trip over.
- Do not under any circumstance insert foreign objects of any kind into the heat dissipation holes located in the different faces of the device. This may not only harm the internal layout, but might cause harm to user as well.
- Do not under any circumstance open the device for any reason. Please contact your dealer for any repair needed or follow the instructions within the manual.
- · Clean the device with dry soft cloth.

# 5. Technical Specifications

Table 5.1 has the technical specifications for Antaira's LMP-0601G-SFP-24-V2 series:

		,
	L2 Switching	Port/MAC/Protocol/IP Subnet-based VLAN, VLAN trunking, GARP/GVRP, Loop Guard, Link Aggregation static/LACP, BPDU guard, Error disable recovery, IGMPv2 snooping, MLD snooping, IGMP filtering, IPMC throttling / filtering leave proxy, DHCP snooping, ARP, MEP, G.8032 v1/v2
	L3 Switching	DHCP option82, static routes
Technology	QoS	802.1p Queueing, Input priority mapping, Storm control for Unicast/Multicast/Broadcast, Port/Queue/ACL policer, Port egress shaper, Queue egress shaper, DiffServ (DSCP), Tag remarking, Scheduler mode
	Power Saving	ActiPHY, PerfectReach, IEEE 802.3az EEE power management
	Network Redundancy	STP/RSTP/MSTP, port trunk with LACP, ERPS v1/v2 (<50ms)
	Configuration	Http, Https, Telnet, SSH, CLI, TFTP, SNMP v3
	System / Diagnostics	Dual Image Protection, PING, PING6
Switch Properties	Back-Plane (Switching Fabric)	Non-blocking
	Priority Queues	8
	Processing Type	Store and Forward
	Flow Control	IEEE 802.3x flow control, back pressure flow control
	Transfer Rate	14,880pps for Ethernet Port

### LMP-0601G-SFP-24-V2 Series Hardware Manual V1.0

		148,800pps for Fast Ethernet Port 1,488,000pps for Gigabit Ethernet Port
	Memory Buffer	4Mbits
	Jumbo Frame	9.6Kbytes
	MAC Table Size	8K
	VLAN Group	4095
	IGMP Group	1024
	Ethernet Port	5*10/100/1000Base-TX, auto negotiation speed, Full/Half duplex mode, and auto MDI/MDI-X connection
	SFP Port	1*10/100/1000 SFP Slot
Port Interface	RS232 Serial Console	1*RS232 in RJ45
		System: Power 1, Power 2, Master, Ring, Fault
	LED Indicators	Ethernet Ports: Speed/Link/Active
		Fixed Fiber: Link/Active
	Network Cable	10Base-T: 2-pair UTP/STP Cat. 3, 4, 5 cable EIA/TIA-568 100-ohm (100m)
Protection		100Base-TX: 2-pair UTP/STP Cat. 5 cable EIA/TIA-568 100-ohm (100m)
	Housing	Metal, IP30 protection
	Dimensions	54 x 142 x 99 mm (W x H x D)
Mechanical Characteristics	Weight	Unit: 1.9 lbs
Gilara di Gilara		Shipping: 2.7 lbs
	Mounting	DIN-Rail, Wall-mount (Optional)
	Input Voltage	12~48VDC Redundant Input
	Power Connection	1 removable 6-contact terminal block
	Relay Contact	24VDC, 1A resistive
Power Requirement	Overload Current Protection	Present
	Reverse Polarity Protection	Present
	PoE Pin Assignment	V+, V+, V-, V-, for pin 1, 2, 3, 6 (Endspan, MDI Alternative A)
	PoE Power Output	25W @ 48VDC (per PoE port)
		30W @ 51~55VDC (per PoE port)
	Power Consumption	Max. 10 Watts (no PoE/PD included)
Environment Limits	Operating	STD: -10°C to 70°C

#### LMP-0601G-SFP-24-V2 Series Hardware Manual V1.0

	Temperature	EOT: -40°C to 75°C
	Storage Temperature	-40°C to 85°C
	Ambient Relative Humidity	5% to 95%, (non-condensing)
Regulatory Approvals	EMI	FCC Part 15 Subpart B Class A, CE EN55022/EN61000-6-4 Class A
	EMS	CE EN55024/EN61000-6-2 Class A, IEC61000-4-2,3,4,5,6,8
	Free Fall / Shock / Vibration	IEC60068-2-32 / IEC60068-2-27 / IEC60068-2-6
	Green	RoHS Compliant
	Certifications	FCC, CE
	Warranty	5 Years

Table 5.1 - LMP-0601G-SFP-24-V2 Series Technical Specifications

#### **Antaira Customer Service and Support**

(Antaira US Headquarter) + 844-268-2472

(Antaira Europe Office) + 48-22-862-88-81

(Antaira Asia Office) + 886-2-2218-9733

Please report any problems to Antaira:

www.antaira.com / support@antaira.com

www.antaira.eu / info@antaira.eu

 $\underline{www.antaira.com.tw} \ / \ i\underline{nfo@antaira.com.tw}$ 

Any changes to this material will be announced on the Antaira website.