


# CORNAVIN

SWISS MADE

## CORNAVIN BIG DATE COLLECTION

### Description of the display and control buttons

Display elements Control buttons

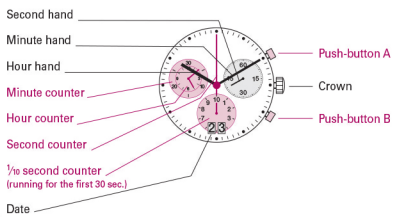

01

### Setting the time

- 1 Pull out the crown to position III (the watch stops).
- 2 Turn the crown until you reach the correct time 8:45.
- 3 Push the crown back into position I.

**Please note:**  
\* In order to set the time to the exact second, 1 must be pulled out when the second hand is in position «60». Once the hour and minute hands have been set, 2 must be pushed back into position I at the exact second.

02

### Setting the date (quick mode)

- 1 Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown until the correct date 1 appears.
- 3 Push the crown back into position I.

**Please note:**  
During the date changing phase between approx. 9 PM and 12 PM, the date must be set to the date of the following day.  
An extreme acceleration in setting the date with quick mode can induce a false date indication. The synchronization is re-established by setting the date from 01 till 31 (crown in position II).

03

### Setting the date/time

Example:  
– Date / time on the watch: 17 / 1:25 AM  
– Present date / time: 4 / 8:30 PM

- 1 Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown until yesterday's date appears 3.
- 3\* Pull out the crown to position III (the watch stops).
- 4 Turn the crown until the correct date 4 appears.
- 5\*\* Continue to turn the crown until the correct time 8:30 PM appears.
- 6 Push the crown back into position I.

**Please note:**  
\* To set your watch to the exact second, please refer to the chapter entitled «setting the time».  
\*\* Please observe the AM/PM clock rhythm.

04

### Chronograph: Basic function (Start / Stop / Reset)

Example:  
1 Start: Press push-button A.  
2 Stop: to stop the timing, press push-button A once more and read the chronograph counters: 4h / 20 min / 38 sec / 1/2 sec.  
3 Zero positioning: Press push-button B. (The chronograph hands will be reset to their zero positions.)

05

### Chronograph: Accumulated timing

Example:  
1 Start: (start timing)  
2 Stop: (e.g. 15 min 5 sec following 1)  
3 Restart: (timing is resumed)  
4 Stop: (e.g. 5 min 12 sec following 3) = 20 min 17 sec (The accumulated measured time is shown)  
5 Reset: The chronograph hands are returned to their zero positions.

**Please note:**  
\* Following 4, the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop, ...).

06

### Chronograph: Intermediate or interval timing

Example:  
1 Start: (start timing)  
2 Display interval: e.g. 20 minutes 17 seconds (timing continues in the background)  
3 Making up the measured time: (The chronograph hands are quickly advanced to the ongoing measured time.)  
4 Stop: (Final time is displayed)  
5 Reset: The chronograph hands are returned to their zero position.

**Please note:**  
\* Following 4, further intervals or intermediates can be displayed by pressing push-button B (display interval / make up measured time, ...).

07

### Adjusting the chronograph hands to zero position

Example:  
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- 1 Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).
- 2 Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated).

Adjusting the second counter hand  
Single step ↗ A 1 x short  
Continuous ↗ A long

Adjusting the next hand B ↗

Adjusting the 1/2 second counter hand (position 6h)  
Single step ↗ A 1 x short  
Continuous ↗ A long

Adjusting the next hand B ↗

Adjusting the minute counter hand and the hour counter hand (mechanical coupled)  
Single step ↗ A 1 x short  
Continuous ↗ A long

- 3 Returning the crown to position I  
Termination of the chronograph hands adjustment (can be carried out at any time).

08



Battery type: 395 / SR927SW  
Accuracy: +20 / -10 seconds per month

