

# XMT7100 Series Intelligent PID Temperature Controller


- Input type can be RTD input(Pt100、Cu50) or Thermocouple input(T、R、J、B、S、K、E、WRe3-WRe25)
- The instrument has automatic function to self adapt to different systems
- Instrument can be degrees Celsius, degrees Fahrenheit temperature
- Five control optional:
  - 0、One alarm relay
  - 1、Relay contact PID output
  - 2、One alarm relay output; SSR all the way non-contact level PID output
  - 3、One alarm relay output; SSR-level all the way back to poor control output
  - 4、Backlash relay control output



## 一、Specifications

- ◆ Power supply:AC/DC85~260V (50Hz/60Hz)
- ◆ Contact capacity:AC 250V/3A
- ◆ Contact life: $1 \times 10^5$
- ◆ SSR-level:8V(Open-circuit voltage);  
30mA(short-circuit current)
- ◆ Temperature precision:0.2%FS
- ◆ Environment: $0 \sim +50^{\circ}\text{C}$ ;  $\leq 85\% \text{RH}$
- ◆ Outline Dimension:48×24×75
- ◆ Panel Dimension:45×22

## 二、Panel description

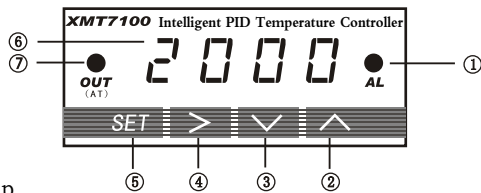

- ① Indication Lamp  
AL-Relay output lamp:Lights when output is turned on
- ② Up key:Used for selecting next parameter or increase numerals
- ③ Down key:Used for selecting previous parameter and used to increase numerals
- ④ Shift key:Used to shift the digital when the setting is changed and used to perform autotuning function
- ⑤ Set key:Used for parameter registration/calling up
- ⑥ Measured value (PV) display unit
- ⑦ Out-Contr ol output indicator  
AT-Autotuning lamp:Flashes during autotuning execution

## 三、Parameter setting guide

(一)Initiation function parameter(Log in by inputting password 0089 after pressing set key)

### 1.Details of parameters

Symbol	Description	Range	Factory value
Inty	inty Input type	Table —	P10.0
outy	outy Control output type	0、1、2、3、4	2
Hy	Hy Autotuning pV bias	0~9999	0.3
Psb	Psb pV bias	-1000~1000	0.0
rd	rd Control action type	0:heat;1:cool	0
CorF	CorF Engineering un selection	0:℃; 1:F	0
End	End		

## 2.Parameters of the initial functional description

### 1)inty: Temperature sensor type list


Table —

Symbol	Name	Sensor type	Temperature range℃	Mark
T	T	TTC	-200~400	Internal resistance 100KΩ
R	R	RTC	-50~1600	
J	J	JTC	-200~1200	
WRE	WRE	WRE TC	0~2300	
B	B	BTC	350~1800	
S	S	STC	-50~1600	
K	K	KTC	-200~1300	
E	E	ETC	-200~900	Constant current output 0.2mA
P10.0	P10.0	Pt100 RTD	-199.9~600.0	
P100	P100	Pt100 RTD	-199~600	
Cu50	Cu50	Cu50 RTD	-50.0~150.0	

### 2)outy: Control output type


0:Relay alarm output(see Figure —);

SSR output is invalid, SV value is not valid

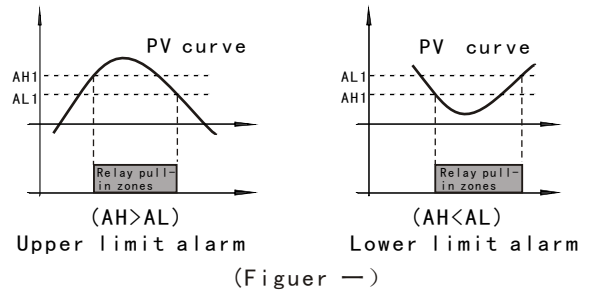

1:PID relay contact output all the way(see Figure 2); SSR output is invalid, used for Constant temperature control, the target value for the SV

2:One relay alarm output;One SSR all the way non-contact level PID output(see Figure 2),  
Used for temperature control, the target for the SV

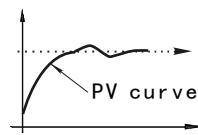


(Figure 二)

In this way, mainly for the constant temperature; Control mode, SV for the temperature settings

3:One relay alarm output;SSR-level all the way back to poor control output(Figure 三),SV is control value

4:All the way back to poor control of relay output(Figure 三), SV is control value

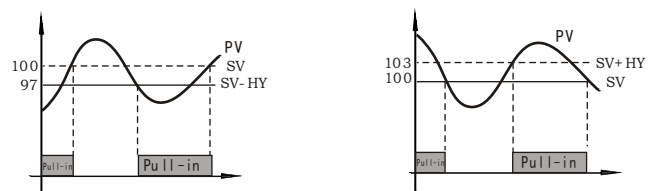

(Figure 三)

Rd=0                                      Rd=1  
 PV≤(SV-HY)                            PV≥(SV+HY)  
 Pull-in relay/SSR output            Pull-in relay/SSR output  
 PV≥SV                                    PV≤SV  
 Relay or SSR output to close        Relay or SSR output to close  
 to release                                to release

### 3)Hy: Digital control Backlash

When OUTY=0、1、2, HY is invalid, Specific reference to the Figure 三

### 4)Psb: Zero error correction

Amendments End value = amended before the value + PSB

### 5)rd: Heat、Cool selection


When inactive OUTY = 0, the specific reference on the Figure set 二、 三

### 6)Corf: Choice of temperature actions

F and C for the conversion relations:

$F = 9/5 \text{ } ^\circ\text{C} + 32 \text{ } (^{\circ}\text{C} : \text{degree Celsius}; F: \text{degree fahrenheit})$

### 3.Parameters settings procedure

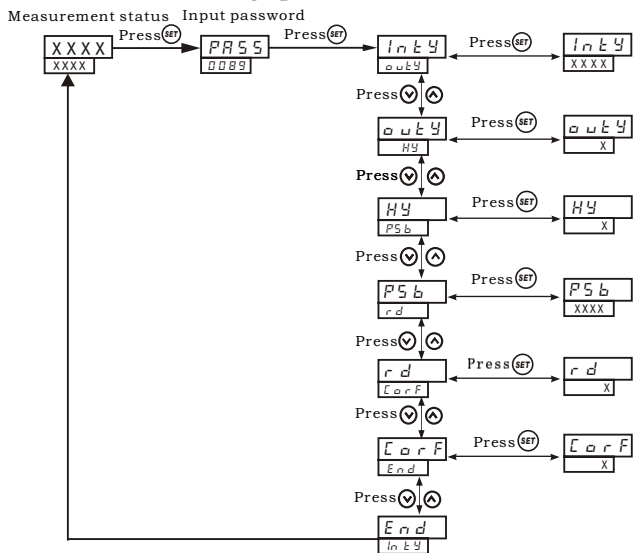

### (二)Initiation function parameter(Log in by inputting password 0036 after pressing set key)

#### 1.Detail of PID parameters

Symbol	Description	Range	Factory value	
P	p	Proportional band	0.1~99.9%	5.0
I	i	Integral time	2~1999(minute)	100
d	d	Derivative time	0~399(minute)	20
SouF	SouF	Overshoot suppression factor	0.0~1.0	0.2
ot	ot	Proportional cycle	2~199(minute)	2
FiLt	FiLt	Digital filter factor	0~3	0
End	End	End		

#### 2.PID parameter setting guide

- Note 1(P):the temperature oscillation is inverse proportion of P value and proportion of the response speed
- Note 2(i):Set the time of integral action which eliminate the offset occurring in proportional control
- Note 3(d):Set the time of derivative action which prevents ripples by predicting output change and thus improves control stability
- Note 4(Souf):Over shooting and under shooting are restricted by the Souf and increase of the parameter can suppress the overshooting
- Note 5(ot):In general,control cycle is 2 when output type is voltage pulse output,and is 5-15 when output type is relay

contact output.

Note 6(Filt):0 means the Pvdigital filter is turned off;1,2 and 3 are weak,medium and strong,respectively.

**Start AT function:** In the constant temperature control, constant or if they can not over-temperature phenomena, can activate the self-tuning instrument functions, more appropriate instrument calculates the PID parameters.Long press > keys, flashing lights until the AT, instrument to enter a state of self-tuning; AT lamp goes out, the end of self-tuning, instrument set by self-tuning PID parameter adjustment

**Ending AT function:** a long three seconds by the > key, AT light is off, the end of self-tuning, the parameters do not change

- Self-tuning from time to time, there will be a significant over-temperature, please lower SV values appropriate to prevent the accident
- Must be properly connected to the corresponding sensor, heater, otherwise self-tuning unable to complete
- Self-tuning system response time depends on speed, ranging from a few minutes to several hours
- Self-tuning is a function of time on the start line, do not need to start every time


### (三)SV and alarm parameters(Log in by inputting password"0001' after pressing set key)

#### 1.Detail of SV and alarm parameters

Symbol	Description	Range	Factory value	
Sv	Sv	set value	Arbitrary set	80.0
AH1	AH1	Relay J1 pull-in set value		80.0
AL1	AL1	Relay J1 release set value		90.0
End	End	End		

Note:In normal display mode,the SV is increased by using the Up and Down key.

### 四、Wiring diagram

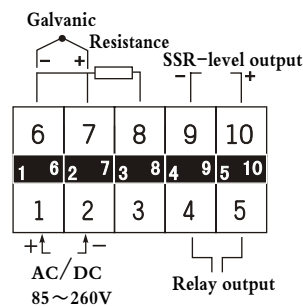

XMT7100