


Adding a Sensor Node to the HOBOnet® Wireless Sensor Network

Important: Keep the sensor node near the station while completing these steps.


If you are setting up a new station, follow the instructions in the station quick start guide before setting up this sensor node (go to www.onsetcomp.com/support/manuals/24380-man-rx2105-rx2106-qsg for RX2105 and RX2106 stations or www.onsetcomp.com/support/manuals/18254-MAN-QSG-RX3000 for RX3000 stations).

1

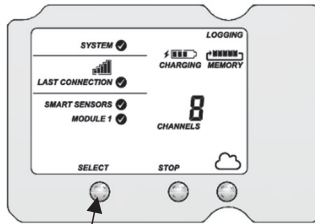


Press the Select button on the station to switch to the module with the manager (module 2 on RX2105 or RX2106 stations).

2

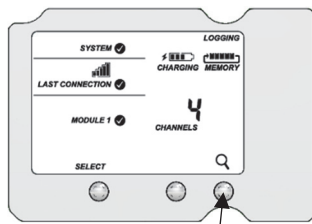

Press the Search button. The magnifying glass icon blinks while the station is in search mode waiting for sensor nodes to join the network.

3

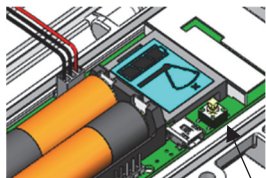

Open the sensor node door and install the rechargeable batteries. Press the button on the sensor node for 3 seconds.

4

Watch the sensor node LCD while it joins the network:



This signal strength icon blinks while searching for a network.



Once a network is found, the icon stops blinking and the bars cycle from left to right.




This network connection "x" icon blinks while the sensor node completes the registration process, which may take up to five minutes.



Once the sensor node has finished joining the network, the "x" icon is no longer displayed and the channel count on the station LCD increases by three (two for water potential and temperature, and one for the sensor node battery).

5

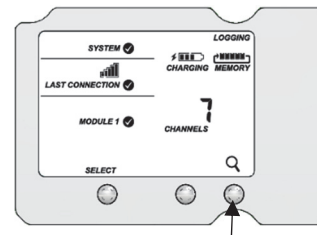

Press the Search button on the station again to stop the search for sensor nodes.

6




Go to www.hobolink.com to monitor sensor node status and health. See the HOBOLink Help for details.

Installing the Bracket and Sensor Node


1

Orient the bracket so the text TOP is facing upwards.

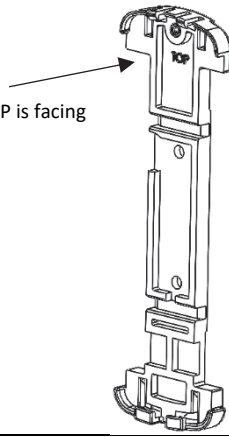


2

To install the bracket onto a wall, use the two long screws included in the package. Screw the bracket to a wall using the two holes on the mid-section of the bracket.

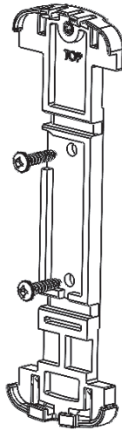


3

To install the bracket onto a pole, slip a cable tie through each of the channels on the bracket and fasten the tie around the pole.

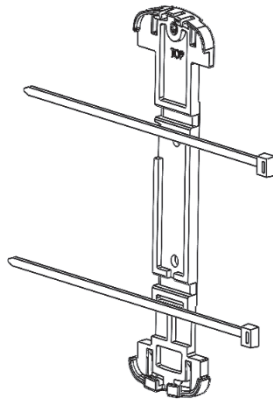


4

Insert the bottom of the sensor node into the retaining clips on the bottom of the bracket then press the top of the sensor node into the clips at the top of the bracket.

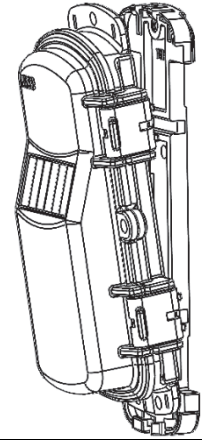

5

Use the short screw included in the package to fasten the sensor node to the bracket.

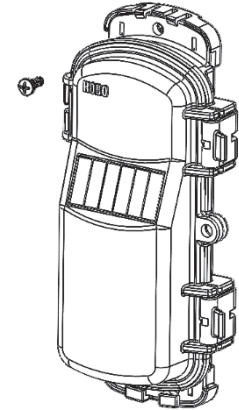

6

Close the sensor node and use a padlock to keep it secure.

Note: Ensure that the node seal is clean from foreign debris.

Mounting and Positioning the Sensor Node

- Position the sensor node towards the sun, making sure the solar panel is oriented so that it receives optimal sunlight throughout each season. It may be necessary to periodically adjust the sensor node position as the path of the sunlight changes throughout the year or if tree and leaf growth alters the amount of sunlight reaching the solar panel.
 - Make sure the sensor node is mounted a minimum of 1.8 m (6 feet) from the ground or vegetation to maximize distance and signal strength.
 - Consider using plastic poles such as PVC to mount the sensor node as certain types of metal could decrease the signal strength.
 - Place the sensor node so there is full line of sight with the next sensor node. Use a repeater if there is an obstruction between sensor nodes.
 - There should not be more than five sensor nodes in any direction from a repeater or the manager. Data from sensor nodes travels or “hops” across the network and may not reach the station if the sensor node is more than five hops away.
-

Sensor Mounting Guidelines

- Minimize exposure of the ceramic material on the sensor to skin oils, grease, synthetic oils, or other hydrophobic compounds.
 - When creating the hole to install the sensor, avoid interfering objects.
 - Make sure the sensor has good hydraulic contact with the soil. This is critical for the sensor to make accurate measurements.
 - Do not install the sensor with the body exposed above ground. Exposing the body drastically decreases the life of the sensor.
 - Note that soils with high shrink-swell potential may pull away from the sensor as they dry and disrupt measurements.
 - Secure the sensor cable to the mounting pole or tripod with cable ties.
 - Use conduit to protect the cable against damage from animals, lawn mowers, exposure to chemicals, etc.
-

Sensor Installation Instructions

To install the sensor, you'll need an auger or shovel, knife (if installing in shallow depth), and water (for packing soil or making slurry).

1. Auger or dig a hole to the desired sensor depth.
2. Moisten native soil and pack it firmly around the entire sensor discs as shown. Ensure the soil is in contact with all surfaces of the ceramic.



Note: Sandy soils may not adhere to the sensor even when wet. If so, place the sensor at the bottom of the hole and carefully pack the soil around the sensor. Be sure to pack the soil firmly around ceramic surfaces.

3. For shallow installations less than ~30 cm (~11.8 inches), use a knife to remove a small sliver of soil. Insert the packed sensor into the channel.
For deep installations greater than ~30 cm (11.8 inches), use the native soil to make a slurry with water. Lower the sensor into the hole and fill it with the slurry.
4. Secure the cable to the mounting pole or tripod and install flexible conduit before backfilling the hole. Leave at least 15 cm (6 inches) of sensor cable beneath the soil before bringing the cable to the surface. At least 10 cm (4 inches) of cable should exit the sensor body in a straight line before bending the cable.
5. Carefully return the soil to the hole, packing it back to its native bulk density.



For specifications, complete mounting guidelines, and other details about this sensor node, refer to the full product manual. Scan the code at left or go to www.onsetcomp.com/support/manuals/24850-rxw-t21-manual.