

SOLAR SCIENTIFIC CALCULATOR

830005

Instruction Manual 1



SPER
SCIENTIFIC Environmental Measurement Instruments

Removing and Replacing the Calculator's Cover

To remove the cover
Holding the cover as shown in the illustration, slide the unit out of the cover.

To replace the cover
Holding the cover as shown in the illustration, slide the unit into the cover, keyboard end first.

Always slide the keyboard end of the unit into the cover first. Never slide the display end of the unit into the cover.

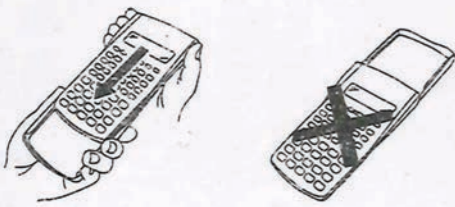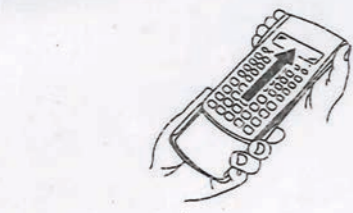

Safety Precautions

Be sure to read the following safety precautions before using this calculator. Keep this manual handy for later reference.

Caution

This symbol is used to indicate information that can result in personal injury or material damage if ignored.

Batteries

- After removing the battery from the calculator, put it in a safe place where it will not get into the hands of small children and accidentally swallowed.
- Keep batteries out of the reach of small children. If accidentally swallowed, consult with a physician immediately.
- Never charge batteries, try to take batteries apart, or allow batteries to become shorted. Never expose batteries to direct heat or dispose of them by incineration.
- Misuse of batteries can cause them to leak and damage nearby items, and can create the risk of fire and personal injury.
- Always make sure that the battery's positive (+) and negative (-) ends are facing correctly when you load it into the calculator.
- Remove the battery if you do not plan to use the calculator for a long time (ix-95MS/100MS/570MS).
- Use only the type of battery specified for this calculator in this manual.

Disposing of the Calculator

Never dispose of the calculator by burning it. Doing so can cause certain components to suddenly burst, creating the risk of fire and personal injury.


- The displays and illustrations (such as key markings) shown in this User's Guide are for illustrative purposes only, and may differ somewhat from the actual items they represent.
- The contents of this manual are subject to change without notice.

Handling Precautions

- Be sure to press the [ON] key before using the calculator for the first time.
- Even if the calculator is operating normally, replace the battery at least once every ONE.
- A dead battery can leak, causing damage to and malfunction of the calculator. Never leave a dead battery in the calculator.
- The battery that comes with this unit discharges slightly during shipment and storage. Because of this, it may require replacement sooner than the normal expected battery life.
- Low battery power can cause memory contents to become corrupted or lost completely. Always keep written records of all important data.
- Avoid use and storage in areas subjected to temperature extremes.
- Very low temperatures can cause slow display response, total failure of the display, and shortening of battery life. Also avoid leaving the calculator in direct sunlight, near a window, near a heater or anywhere else it might be exposed to very high temperatures. Heat can cause discoloration or deformation of the calculator's case, and

- damage to internal circuitry.
- Avoid use and storage in areas subjected to large amounts of humidity and dust.
- Take care never to leave the calculator where it might be splashed by water or exposed to large amounts of humidity or dust. Such conditions can damage internal circuitry.
- Never drop the calculator or otherwise subject it to strong impact.
- Never twist or bend the calculator.
- Avoid carrying the calculator in the pocket of your trousers or other tight fitting clothing where it might be subjected to twisting or bending.
- Never try to take the calculator apart.
- Never press the keys of the calculator with a ball-point pen or other pointed object.
- Use a soft, dry cloth to clean the exterior of the calculator.
- If the calculator becomes very dirty, wipe it off with a cloth moistened in a weak solution of water and a mild neutral household detergent. Wring out all excess moisture before wiping the calculator. Never use thinner, benzene or other volatile agents to clean the calculator. Doing so can remove printed markings and can damage the case.

Two-line Display

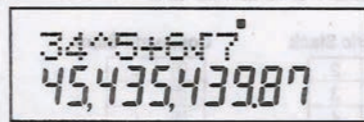

The two-line display makes it possible to view both the calculation formula and its result at the same time.

- The upper line shows the calculation formula.
- The lower line shows the result.

The integer part when the computational solution whenever just can have a delimiter at a distance from three when having more in three.

Before getting starting...

Modes

To perform this type of calculation:	Perform this key operation:	To enter this mode:
Basic arithmetic calculations	[MODE] [1]	COMP
Standard deviation	[MODE] [2]	SD
Regression calculations	[MODE] [3]	REG

- Pressing the [MODE] key more than once displays additional setup screens. Setup screens are described in the sections of this manual where they are actually used to change the calculator setup.

Example:

Statistical	SD
Calculations	REG

Note!

- To return the calculation mode and setup to the initial defaults shown below, press [SHIFT] [CLR] [2] (Mode) [EXE].

Calculation Mode:	COMP
Angle Unit:	Deg
Exponential Display Format:	Norm1
Fraction Display Format:	a/b/c
Decimal Point Character:	Dot

- Be sure to check the current calculation mode (SD, REG, COMP) and angle unit setting (Deg, Rad, Gra) before beginning a calculation.

Input Capacity

- The memory area used for calculation input can hold 79 "steps." One step is taken up each time you press a number key or arithmetic operator key ([+], [-], [x], [÷]). A [SHIFT] or [ALPHA] key operation does not take up a step, so inputting [SHIFT] [F], for example, takes up only one step.
- Pressing the [ANS] key recalls the last result obtained, which you can use in a subsequent calculation. See "Answer Memory" for more information about using the [ANS] key.

Making Corrections During Input

- Use [←] and [→] to move the cursor to the location you want.
- Press [DEL] to delete the number or function at the current cursor position.
- Press [SHIFT] [INS] to change to an insert cursor [I]. Inputting something while the insert cursor is on the display inserts the input at the insert cursor position.
- Pressing [SHIFT] [INS], or [EXE] returns to the normal cursor from the insert cursor.

Replay Function

- Every time you perform a calculation, the replay function stores the calculation formula and its result in replay memory. Pressing the [RE] key displays the formula and result of the calculation you last performed. Pressing [RE] again back steps sequentially (new-to-old) through past calculations.
- Pressing the [←] or [→] key while a replay memory calculation is on the display changes to the editing screen.
- Pressing the [AC] does not clear replay memory, so you can recall the last calculation even after you press [AC].

- Replay memory is cleared by any of the following actions. When you press the [ON] key.
- When you initialize modes and settings by pressing [SHIFT] [CLR] [2] (or [3]) [EXE].
- When you change from one calculation mode to another.
- When you turn off the calculator.

Error Locator

- Pressing [←] or [→] after an error occurs displays the calculation with the cursor positioned at the location where the error occurred.

Multi-statements

- A multi-statement is an expression that is made up of two or more smaller expressions, which are joined using a colon (:).

Example: To add 2+3 and then multiply the result by 4.

2 + 3	5
5 x 4	20

Exponential Display Formats

- This calculator can display up to 10 digits. Larger values are automatically displayed using exponential notation.
- To change the exponential display format, press the [MODE] key a number of times until you reach the exponential display format setup screen shown below.

Fix Sci Norm
1 2 3

- Press [3]. In the format selection screen that appears, press [1] to select Norm 1 or [2] for Norm 2.

Norm 1

With Norm 1, exponential notation is automatically used for integer values with more than 10 digits and decimal values with more than two decimal places.

Norm 2

With Norm 2, exponential notation is automatically used for integer values with more than 10 digits and decimal values with more than nine decimal places.

- All of the examples in this manual show calculation results using the Norm 1 format.

Decimal Point and Separator Symbols

You can use the display setup (Disp) screen to specify the symbols you want for the decimal point and 3-digit separator.

- To change the decimal point and separator symbol setting, press the [MODE] key a number of times until you reach the setup screen below.

Disp
1

Display the selection screen.

- Press the number key ([1] or [2]) that corresponds to the setting you want to use.
- [1] (Dot): Period decimal point, comma separator
- [2] (Comma): Comma decimal point, period separator

Initializing the Calculator

- Perform the following key operation when you want to initialize the calculation mode and setup, and clear replay memory and variables.

[SHIFT] [CLR] [3] (ALL) [EXE]

Basic Calculations

Arithmetic Calculations

Use the [MODE] key to enter the COMP Mode when you want to perform basic calculations.

COMP [MODE] [1]

- Negative values inside of calculations must be enclosed within parentheses.

Sin -1.23 → [Sin] [(] [1.] [2.] [3] [EXE]

- It is not necessary to enclose a negative exponent within parentheses.

Sin 2.34 x 10⁻⁵ → [Sin] [2.] [3.] [4] [EXP] [5] [EXE]

- Example 1: $3 \times (5 \times 10^3) = 1.5 \times 10^4$

3 [x] 5 [EXP] [3] [EXE]

- Example 2: $5 \times (9 + 7) = 80$

5 [x] ([9] [7] [2] [EXE]

- You can skip all [] operations before [EXE].

Fraction Operations

Fraction Calculations

- Values are displayed in decimal format automatically whenever the total number of digits of a fractional value (integer + numerator + denominator + separator marks) exceeds 10.

Example 1: $3\frac{1}{4} + 1\frac{2}{3} = 4\frac{11}{12}$

3 [Frac] [1] [Frac] [4] [2] [Frac] [3] [EXE]

Example 2: $\frac{2}{4} = \frac{1}{2}$

2 [Frac] [4] [EXE]

Example 2: $\frac{1}{2} + 1.6 = 2.1$

1 [Frac] [2] [2] [EXE]

- Results of calculations that mix fraction and decimal values are always decimal.

Decimal ↔ Fraction Conversion

Example 1: $2.75 = 2\frac{3}{4}$ (Decimal → Fraction)

2.75 [EXE]

2 [Frac] [3] [4] [EXE]

Example 2: $\frac{1}{2} \leftrightarrow 0.5$ (Fraction ↔ Decimal)

1 [Frac] [2] [EXE]

Example 2: $\frac{1}{2} \leftrightarrow 0.5$

1 [Frac] [2] [EXE]

Example 1: $1\frac{2}{3} \leftrightarrow \frac{5}{3}$

1 [Frac] [2] [3] [EXE]

Example 1: $1\frac{2}{3} \leftrightarrow \frac{5}{3}$

1 [Frac] [2] [3] [EXE]

Example 1: $1\frac{2}{3} \leftrightarrow \frac{5}{3}$

1 [Frac] [2] [3] [EXE]

Example 1: $1\frac{2}{3} \leftrightarrow \frac{5}{3}$

1 [Frac] [2] [3] [EXE]

Example 1: $1\frac{2}{3} \leftrightarrow \frac{5}{3}$

1 [Frac] [2] [3] [EXE]

Example 1: $1\frac{2}{3} \leftrightarrow \frac{5}{3}$

1 [Frac] [2] [3] [EXE]

Percentage Calculations

- Example 1: To calculate 12% of 1500 (180)
1500 [12] [SHIFT] [%] [EXE]
- Example 2: To calculate what percentage of 880 is 680 (77%)
680 [880] [SHIFT] [%] [EXE]
- Example 3: To add 15% onto 2500 (2875)
2500 [15] [SHIFT] [%] [EXE]
- Example 4: To discount 3500 by 25% (2625)
3500 [25] [SHIFT] [%] [EXE]
- Example 5: To discount the sum of 168, 98, and 734 by 20%
168 [98] [734] [EXE] [ANS] [SHIFT] [%] [EXE]

As shown here, if you want to use the current Answer Memory value in a mark up or discount calculation, you need to assign the Answer Memory value into a variable and then use the variable in the mark up/discount calculation. This is because the calculation performed when [%] is pressed stores a result to Answer Memory before the [EXE] key is pressed.

Example 6: If 300 grams are added to a test sample originally weighing 500 grams, what is the percentage increase in weight? (160%)

Example 7: What is the percentage change when a value is increased from 40 to 46? How about to 48? (15%, 20%)

Degrees, Minutes, Seconds Calculations

- You can perform sexagesimal calculations using degrees (hours), minutes, and seconds, and convert between sexagesimal and decimal values.

Example 1: To convert the decimal value 2.258 to a sexagesimal value and then back to a decimal value.

2.258 [EXE]

2°15'28.8"

[SHIFT] [2] [EXE]

2.258

Example 2: To perform the following calculation: $12^{\circ}34'56'' \times 3.45$

12 [34] [56] [2] [3.] [4.] [5.] [EXE]

FIX, SCI, RND

- To change the settings for the number of decimal places, the number of significant digits, or the exponential display format, press the [MODE] key a number of times until you reach the setup screen shown below.

Example 1: $200 + 7 \times 14 = 400$. Specifies three decimal places.

Example 2: $1 + 3$, displaying result with two significant digits (Sci 2)

Example 3: $2^4 = 16$

Example 4: $10^{1.5} = 31.6227766$

Example 5: $2^4 = 16$

The following performs the same calculation using the specified number of decimal places.

Example 6: $200 \div 7 = 28.571$

Example 7: $200 \div 7 = 28.571$

Example 8: $200 \div 7 = 28.571$

Example 9: $200 \div 7 = 28.571$

Example 10: $200 \div 7 = 28.571$

Example 11: $200 \div 7 = 28.571$

Example 12: $200 \div 7 = 28.571$

Example 13: $200 \div 7 = 28.571$

Example 14: $200 \div 7 = 28.571$

Example 15: $200 \div 7 = 28.571$

Example 16: $200 \div 7 = 28.571$

Example 17: $200 \div 7 = 28.571$

Example 18: $200 \div 7 = 28.571$

Example 19: $200 \div 7 = 28.571$

Example 20: $200 \div 7 = 28.571$

Example 21: $200 \div 7 = 28.571$

Example 22: $200 \div 7 = 28.571$

Example 23: $200 \div 7 = 28.571$

Example 24: $200 \div 7 = 28.571$

Example: $23 + 9 = 32$

Example: $53 - 6 = 47$

Example: $45 \times 2 = 90$

Example: $193.2 + 23 = 8.4$

Example: $193.2 + 28 = 6.9$

Scientific Function Calculations

Use the [MODE] key to enter the COMP Mode, when you want to perform basic arithmetic calculations.

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

Example: $\pi = 3.14159265359$

MODE 1 (Deg) 2.5 SHIFT DRG 2 (R) EXE 243.5070629

Lin Log Exp 1 2 3

Pwr Inv Quad 1 2 3

Coordinate Conversion (Pol (x, y), Rec (r, θ)) Calculation results are automatically assigned to variables E and F. Example 1: To convert polar coordinates (r = 2, θ = 60°) to rectangular coordinates (x, y) (Deg) x = 1 y = 1.732050808

Press RCL E to display the value of x, or RCL F to display the value of y.

Example 2: To convert rectangular coordinates (1, √3) to polar coordinates (r, θ) (Rad) r = 2 θ = 1.047197551

Press RCL E to display the value of r, or RCL F to display the value of θ.

Engineering Notation Calculations Example 1: To convert 56.088 meters to kilometers → 56.088x10³ (km) Example 2: To convert 0.08125 grams to milligrams → 81.25x10³ (mg)

Statistical Calculations

Standard Deviation (SD Mode)

Use the MODE key to enter the SD Mode, when you want to perform statistical calculations using standard deviation. SD MODE 2

Always start data input with SHIFT CLR 1 (Sci) EXE to clear statistical memory. Input data using the key sequence shown below. <x>-data> DT

Table with 2 columns: To recall this type of value: and Perform this key operation: for statistical calculations.

Example: To calculate σn-1, σn, x̄, n, Σx, and Σx² for the following data: 55, 54, 51, 55, 53, 53, 54, 52

In the SD Mode SHIFT CLR 1 (Sci) EXE (Stat clear) 55 DT n= 90 1.

Each time you press DT to register your input, the number of data input up to that point is indicated on the display (n value).

Table showing sample standard deviation, arithmetic mean, number of data, sum of values, and sum of squares of values.

Data Input Precautions

- DT DT inputs the same data twice. You can also input multiple entries of the same data using SHIFT F1. While inputting data or after inputting data is complete, you can use the up and down keys to scroll through data you have input.

Press 2 to exit data input without registering the value you just input.

Press 1 if you want to register the value you just input, without saving it in memory. If you do this, however, you will not be able to display or edit any of the data you have input.

To delete data you have just input, press SHIFT CL. After inputting statistical data in the SD Mode or REG Mode, you will be unable to display or edit individual data items any longer after perform either the following operations.

Regression Calculations (REG Mode)

Use the MODE key to enter the REG Mode when you want to perform statistical calculations using regression. REG MODE 3

Entering the REG Mode displays screens like the ones shown below.

Press the number key (1, 2, or 3) that corresponds to the type of regression you want to use. 1 (Lin): Linear regression 2 (Log): Logarithmic regression 3 (Exp): Exponential regression

Always start data input with SHIFT CLR 1 (Sci) EXE to clear statistical memory. Input data using the key sequence shown below. <x>-data> DT

Table with 2 columns: To recall this type of value: and Perform this key operation: for regression calculations.

The following table shows the key operations you should use to recall results in the case of quadratic regression.

Table with 2 columns: To recall this type of value: and Perform this key operation: for quadratic regression.

The values in the above tables can be used inside of expressions the same way you use variables.

Linear Regression The regression formula for linear regression is: y = A + Bx. Example: Atmospheric Pressure vs. Temperature

Table showing atmospheric pressure vs. temperature data points.

Formula for linear regression: (Σxy - n · x̄ · ȳ) / (Σx² - n · x̄²)

In the REG Mode: 1 (Lin) SHIFT CLR 1 (Sci) EXE (Stat clear) 10 1003 DT n= REG 1.

Each time you press DT to register your input, the number of data input up to that point is indicated on the display (n value).

(Regression Coefficient A) = 997.4 (Regression Coefficient B) = 0.56 (Correlation Coefficient r) = 0.982607368 (Atmospheric Pressure at 18°C) = 1007.48

(Temperature at 1000 hPa) = 4.642857143 (Coefficient of Determination) = 0.965517241 (Sample Covariance) = 35

Table with 2 columns: Regression type and formula: for Linear, Exponential, Power, and Inverse Regression.

Logarithmic, Exponential, Power, and Inverse Regression Use the same key operations as linear regression to recall results for these types of regression.

Table with 2 columns: Regression type and formula: for Quadratic Regression.

Quadratic Regression The regression formula for quadratic regression is: y = A + Bx + Cx². Example:

Table with 2 columns: xi yi and Perform quadratic regression to determine the regression formula terms for the data nearby.

In the REG Mode: 3 (Quad) SHIFT CLR 1 (Sci) EXE (Stat clear)

29 1.6 DT 50 23.5 DT 74 38.0 DT 103 46.4 DT 118 48.0 DT

(Regression Coefficient A) = -35.59858934 (Regression Coefficient B) = 1.495893413 (Regression Coefficient C) = -8.71629667 x 10³

y when xi is 16 = -13.38291067 xi when yi is 20 = 47.14556728 xi when yi is 20 = 175.5872105

Data Input Precautions DT DT inputs the same data twice. You can also input multiple entries of the same data using SHIFT F1. The above results can be obtained in any order, and not necessarily that shown above.

Technical Information

When you have a Problem If calculation results are not what you expect or if an error occurs, perform the following steps.

- 1. Press SHIFT CLR 2 (Mode) EXE to initialize all modes and settings. 2. Check the formula you are working with to confirm it is correct. 3. Enter the correct mode and try performing the calculation again.

Error Messages The calculator is locked up while an error message is on the display. Press AC to clear the error, or press left or right to display the calculation and correct the problem.

Math ERROR

- Cause Calculation result is outside the allowable calculation range. An attempt to perform a function calculation using a value that exceeds the allowable input range.

Action Check your input values and make sure they are all within the allowable ranges. Pay special attention to values in any memory areas you are using.

Stack ERROR

- Cause The capacity of the numeric stack or operator stack is exceeded. Action Simplify the calculation. The numeric stack has 10 levels and the operator stack has 24 levels.

Syntax ERROR

- Cause An attempt to perform an illegal mathematical operation. Action Press left or right to display the calculation with the cursor located at the location of the error and make required corrections.

Arg ERROR

- Cause Improper use of an argument. Action Press left or right to display the location of the cause of the error and make required corrections.

Order of Operations

- Calculations are performed in the following order of precedence. 1. Coordinate transformation: Pol (x,y), Rec (r,θ) 2. Type A functions: with these functions, the value is entered and then the function key is pressed.

Other operations are performed from left to right. Operations enclosed in parentheses are performed first. When a calculation contains an argument that is a negative number, the negative number must be enclosed within parentheses.

Stacks This calculator uses memory areas, called "stacks," to temporarily store values (numeric stack) and commands (command stack) according to their precedence during calculations.

Example: 2 x ((3 + 4 x (5 + 4) + 3) + 5) + 8

Tables showing Numeric Stack and Command Stack contents.

Calculations are performed in sequence according to "Order of Operations." Commands and values are deleted from the stack as the calculation is performed.

Input Ranges

Internal digits: 12 Accuracy: As a rule, accuracy is ±1 at the 10th digit.

Table with 2 columns: Functions and Input Range for various mathematical functions.

For a single calculation, calculation error is ±1 at the 10th digit. In the case of exponential display, calculation error is ±1 at the last significant digit.

Right side of the page containing a large advertisement for 'SOLAR SCIENTIFIC CALCULATOR' with various images and text.

SOLAR SCIENTIFIC CALCULATOR

830005

Instruction Manual 2

SPER SCIENTIFIC Environmental Measurement Instruments

See the Instruction Manual 1 for details about the following items.

Removing and Replacing the Calculator's Cover

Safety Precautions

Handling Precautions

Two-line Display

Before getting started... (except for "Modes")

Basic Calculations

Memory Calculations

Scientific Function Calculations

Equation Calculations

Statistical Calculations

Technical Information

Before getting started...

Modes

Before starting a calculation, you must first enter the correct mode as indicated in the table below.

The following table shows the modes and required operations

To perform this type of calculation:	Perform this key operation:	To enter this mode:
Basic arithmetic calculations	$\text{MODE} \rightarrow 1$	COMP
Complex number calculations	$\text{MODE} \rightarrow 2$	CMPLX
Standard deviation	$\text{MODE} \rightarrow \text{MODE} \rightarrow 1$	SD
Regression calculations	$\text{MODE} \rightarrow \text{MODE} \rightarrow 2$	REG
Base-n calculations	$\text{MODE} \rightarrow \text{MODE} \rightarrow 3$	BASE
Solution of equations	$\text{MODE} \rightarrow \text{MODE} \rightarrow \text{MODE} \rightarrow 1$	EQN
Matrix calculations	$\text{MODE} \rightarrow \text{MODE} \rightarrow \text{MODE} \rightarrow 2$	MAT
Vector calculations	$\text{MODE} \rightarrow \text{MODE} \rightarrow \text{MODE} \rightarrow 3$	VCT

Pressing the MODE key more than three times displays additional setup screens. Setup screens are described where they are actually used to change the calculator setup.

In this manual, the name of the mode you need to enter in order to perform the calculations being described is indicated in the main title of each section.

Example: Complex Number Calculations CMPLX

Note!

To return the calculation mode and setup to the initial defaults shown below, press $\text{SHIFT} \rightarrow \text{CLR} \rightarrow 2 \rightarrow \text{MODE} \rightarrow \text{MODE}$.

Calculation Mode:	COMP
Angle Unit:	Deg
Exponential Display Format:	Norm 1, Eng OFF
Complex Number Display Format:	$a+bi$
Fraction Display Format:	a/b%
Decimal Point Character:	Dot

Mode indicators appear in the upper part of the display, except for the BASE indicators, which appear in the exponent part of the display.

Engineering symbols are automatically turned off while the calculator is the BASE Mode.

You cannot make changes to the angle unit or other display format (Disp) settings while the calculator is in the BASE Mode.

The COMP, CMPLX, SD, and REG modes can be used in combination with the angle unit settings.

Be sure to check the current calculation mode (SD, REG, COMP, CMPLX) and angle unit setting (Deg, Rad, Gra) before beginning a calculation.

Mathematical Expression Calculations and Editing Functions COMP

Use the MODE key to enter the COMP Mode when you want to perform mathematical expression calculations or edit expressions.

COMP $\text{MODE} \rightarrow 1$

Replay Copy

Replay copy lets you recall multi-expressions from replay so they are connected as a multi-statement on the screen.

Example: Replay memory contents:

```
1 + 1
2 + 2
3 + 3
4 + 4
5 + 5
6 + 6
```

Multi-statement: 4 + 4:5 + 5:6 + 6

Use DEL and V to display the expression 4 + 4.

Press COPY COPY .

You can also edit expressions on the display and perform other multi-statement operations. For more details

about using multi-statements, see "Multi-statements" in the separate "User's Guide."

Only the expressions in replay memory starting from the currently displayed expression and continuing to the last expression are copied. Anything before the displayed expression is not copied.

CALC Memory COMP CMPLX

CALC memory lets you temporarily store a mathematical expression that you need to perform a number of times using different values. Once you store an expression, you can recall it, input values for its variables, and calculate a result quickly and easily.

You can store a single mathematical expression, with up to 79 steps. Note that CALC memory can be used in the COMP Mode and CMPLX Mode only.

The variable input screen shows the values currently assigned to the variables.

Example: Calculate the result for $Y = X^2 + 3X - 12$ when $X = 7$ (Result: **58**), and when $X = 8$ (Result: **76**).

(Input the function.)
 $\text{MODE} \rightarrow \text{Y} \text{ MODE} \rightarrow \text{X} \text{ MODE} \rightarrow \text{X} \text{ MODE} \rightarrow 3 \text{ MODE} \rightarrow \text{X} \text{ MODE} \rightarrow \text{C} \text{ MODE} \rightarrow 12$

(Store the expression.)
 $\text{MODE} \rightarrow 7 \text{ MODE} \rightarrow \text{X} \text{ MODE} \rightarrow 7$

(Input 7 for X? prompt.) $\text{MODE} \rightarrow 8 \text{ MODE} \rightarrow \text{X} \text{ MODE} \rightarrow 8$

Note that the expression you store is cleared whenever you start another operation, change to another mode, or turn off the calculator.

SOLVE Function

The SOLVE function lets you solve an expression using variable values you want, without the need to transform or simply the expression.

Example: C is the time it would take for an object thrown straight up with initial velocity A to reach height B.

Use the formula below to calculate initial velocity A for a height of $B = 14$ meters and a time of $C = 2$ seconds. Gravitational acceleration is $D = 9.8 \text{ m/s}^2$. (Result: $A = 16.8$)

$B = AC - \frac{1}{2} DC^2$

$\text{MODE} \rightarrow \text{B} \text{ MODE} \rightarrow \text{A} \text{ MODE} \rightarrow \text{X} \text{ MODE} \rightarrow \text{C} \text{ MODE} \rightarrow \text{C} \text{ MODE} \rightarrow \text{SOLVE}$

(B?) 14 $\text{MODE} \rightarrow \text{Y}$
 (A?) 2 $\text{MODE} \rightarrow \text{X}$
 (C?) 9 $\text{MODE} \rightarrow \text{X}$
 (D?) 8 $\text{MODE} \rightarrow \text{X}$

(A?) $\text{MODE} \rightarrow \text{SOLVE}$

Since the SOLVE function uses Newton's Method, certain initial values (assumed values) can make it impossible to obtain solutions. In this case, try inputting another value that you assume to be near the solution and perform the calculation again.

The SOLVE function may be unable to obtain a solution, even though a solution exists.

Due to certain idiosyncrasies of Newton's method, solutions for the following types of functions tend to be difficult to calculate.

Periodic functions (i.e. $y = \sin x$)
 Functions whose graph produce sharp slopes (i.e. $y = e^x$, $y = 1/x$)

Discontinuous functions (i.e. $y = \sqrt{x}$)

If an expression does not include an equals sign (=), the SOLVE function produces a solution for expression = 0.

Scientific Function Calculations COMP

Use the MODE key to enter the COMP Mode when you want to perform scientific function calculations.

COMP $\text{MODE} \rightarrow 1$

Inputting Engineering Symbols

COMP $\text{MODE} \rightarrow \text{EQN}$ $\text{MODE} \rightarrow \text{CMPLX}$

Turning on engineering symbols makes it possible for you to use engineering symbols inside your calculations.

To turn engineering symbols on and off, press the MODE key a number of times until you reach the setup screen shown below.

Disp
1

Press MODE . On the engineering symbol setting screen that appears, press the number key (1) or (2) that corresponds to the setting you want to use.

(1) (Eng ON): Engineering symbols on (indicated by "Eng" on the display)

(2) (Eng OFF): Engineering symbols off (no "Eng" indicator)

The following are the nine symbols that can be used when engineering symbols are turned on.

To input this symbol:	Perform this key operation:	Unit
k (kilo)	$\text{SHIFT} \rightarrow \text{K}$	10^3
M (Mega)	$\text{SHIFT} \rightarrow \text{M}$	10^6
G (Giga)	$\text{SHIFT} \rightarrow \text{G}$	10^9
T (Tera)	$\text{SHIFT} \rightarrow \text{T}$	10^{12}
m (milli)	$\text{SHIFT} \rightarrow \text{m}$	10^{-3}
μ (micro)	$\text{SHIFT} \rightarrow \mu$	10^{-6}
n (nano)	$\text{SHIFT} \rightarrow \text{n}$	10^{-9}
p (pico)	$\text{SHIFT} \rightarrow \text{p}$	10^{-12}
f (femto)	$\text{SHIFT} \rightarrow \text{f}$	10^{-15}

For displayed values, the calculator selects the engineering symbol that makes the numeric part of the value fall within the range of 1 to 1000.

Engineering symbols cannot be used when inputting fractions.

Example: $9 \div 10 = 0.9 \text{ m (milli)}$

$\text{MODE} \rightarrow \text{MODE} \rightarrow 1 \text{ (Disp)} \rightarrow 1 \text{ MODE} \rightarrow 9 \text{ MODE} \rightarrow 10 \text{ MODE} \rightarrow \text{=}$
 9 $\text{MODE} \rightarrow 10 \text{ MODE} \rightarrow \text{=}$ 9+10 m 900.

When engineering symbols are turned on, even standard (non-engineering) calculation results are displayed using engineering symbols.

$\text{MODE} \rightarrow \text{ENG} \text{ MODE} \rightarrow 1 \text{ MODE} \rightarrow 9 \text{ MODE} \rightarrow 10 \text{ MODE} \rightarrow \text{=}$
 0.9 m 900.

Complex Number Calculations CMPLX

Use the MODE key to enter the CMPLX Mode when you want to perform calculations that include complex numbers.

CMPLX $\text{MODE} \rightarrow 2$

The current angle unit setting (Deg, Rad, Gra) affects CMPLX Mode calculations. You can store an expression in CALC memory while in the CMPLX Mode.

Note that you can use variables A, B, C, and M only in the CMPLX Mode. Variables D, E, F, X, and Y are used by the calculator, which frequently changes their values. You should not use these variables in your expressions.

The indicator "R \rightarrow I" in the upper right corner of a calculation result display indicates a complex number result. Press $\text{SHIFT} \rightarrow \text{Re-Im}$ to toggle the display between the real part and imaginary part of the result.

You can use the replay function in the CMPLX Mode. Since complex numbers are stored in replay memory in the CMPLX Mode, however, more memory than normal is used up.


Example: $(2+3i) + (4+5i) = 6+8i$

(Real part 6) $2 \text{ MODE} \rightarrow 3 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow 4 \text{ MODE} \rightarrow 5 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow \text{=}$
 (Imaginary part 8i) $\text{SHIFT} \rightarrow \text{Re-Im}$

Absolute Value and Argument Calculation

Supposing the imaginary number expressed by the rectangular form $z = a + bi$ is represented as a point in the Gaussian plane, you can determine the absolute value (r) and argument (θ) of the complex number. The polar form is $r \angle \theta$.

Example 1: To determine the absolute value (r) and argument (θ) of $3+4i$ (Angle unit: Deg)
 $(r = 5, \theta = 53.13010235^\circ)$

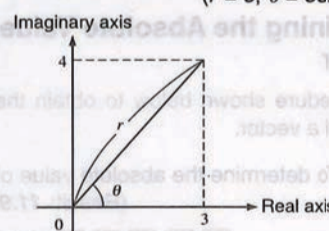

$(r = 5)$ $\text{SHIFT} \rightarrow \text{Abs} \text{ MODE} \rightarrow 3 \text{ MODE} \rightarrow 4 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow \text{=}$
 $(\theta = 53.13010235^\circ)$ $\text{SHIFT} \rightarrow \text{ARG} \text{ MODE} \rightarrow 3 \text{ MODE} \rightarrow 4 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow \text{=}$

The complex number can also be input using the polar form $r \angle \theta$.

Example 2: $\sqrt{2} \angle 45 = 1 + i$
 (Angle unit: Deg) $\sqrt{2} \text{ MODE} \rightarrow \text{MODE} \rightarrow \text{ANGLE} \text{ MODE} \rightarrow 45 \text{ MODE} \rightarrow \text{=}$

Rectangular Form \leftrightarrow Polar Form Display

You can use the operation described below to convert a rectangular form complex number to its polar form, and a polar form complex number to its rectangular form. Press $\text{SHIFT} \rightarrow \text{Re-Im}$ to toggle the display between the absolute value (r) and argument (θ).

Example: $1 + i \leftrightarrow 1.414213562 \angle 45$

(Angle unit: Deg) $1 \text{ MODE} \rightarrow 1 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow 1 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow \text{=}$ $\text{SHIFT} \rightarrow \text{Re-Im}$
 $\sqrt{2} \text{ MODE} \rightarrow \text{MODE} \rightarrow \text{ANGLE} \text{ MODE} \rightarrow 45 \text{ MODE} \rightarrow \text{=}$ $\text{SHIFT} \rightarrow \text{Re-Im}$

You select rectangular form ($a+bi$) or polar form ($r \angle \theta$) for display of complex number calculation results.

$\text{MODE} \rightarrow \text{MODE} \rightarrow 1 \text{ (Disp)} \rightarrow \text{MODE}$

(1) ($a+bi$): Rectangular form

(2) ($r \angle \theta$): Polar form (indicated by " $r \angle \theta$ " on the display)

Conjugate of a Complex Number

For any complex number z where $z = a+bi$, its conjugate (\bar{z}) is $\bar{z} = a-bi$.

Example: To determine the conjugate of the complex number $1.23 + 2.34i$ (Result: $1.23 - 2.34i$)

$\text{MODE} \rightarrow \text{CONJ} \text{ MODE} \rightarrow 1 \text{ MODE} \rightarrow 23 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow 2 \text{ MODE} \rightarrow 34 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow \text{=}$ $\text{SHIFT} \rightarrow \text{Re-Im}$

Base-n Calculations BASE

Use the MODE key to enter the BASE Mode when you want to perform calculations using Base-n values.

BASE $\text{MODE} \rightarrow \text{MODE} \rightarrow 3$

In addition to decimal values, calculations can be performed using binary, octal and hexadecimal values.

You can specify the default number system to be applied to all input and displayed values, and the number system for individual values as you input them.

You cannot use scientific functions in binary, octal, decimal, and hexadecimal calculations. You cannot input values that include decimal part and an exponent.

If you input a value that includes a decimal part, the unit automatically cuts off the decimal part.

Negative binary, octal, and hexadecimal values are produced by taking the two's complement.

You can use the following logical operators between values in Base-n calculations: and (logical product), or (logical sum), xor (exclusive or), xnor (exclusive nor), Not (bitwise complement), and Neg (negation).

The following are the allowable ranges for each of the available number systems.

Binary	$1000000000 \leq x \leq 1111111111$	$0 \leq x \leq 0111111111$
Octal	$4000000000 \leq x \leq 7777777777$	$0 \leq x \leq 3777777777$
Decimal	$-2147483648 \leq x \leq 2147483647$	
Hexadecimal	$80000000 \leq x \leq \text{FFFFFFFF}$	$0 \leq x \leq 7FFFFFFF$

Example 1: To perform the following calculation and produce a binary result:

$10111_2 + 11010_2 = 110001_2$

Binary mode: $\text{AC} \text{ MODE} \rightarrow \text{BIN} \text{ MODE} \rightarrow 10111 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow 11010 \text{ MODE} \rightarrow \text{=}$ 0. b

Example 2: To perform the following calculation and produce an octal result:

$7654_8 + 12_{10} = 516_8$

Octal mode: $\text{AC} \text{ MODE} \rightarrow \text{OCT} \text{ MODE} \rightarrow 7654 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow 12 \text{ MODE} \rightarrow \text{=}$

Example 3: To perform the following calculation and produce a hexadecimal and a decimal result:

$120_{16} \text{ or } 1101_2 = 12d_{16} = 301_{10}$

Hexadecimal mode: $\text{AC} \text{ MODE} \rightarrow \text{HEX} \text{ MODE} \rightarrow 120 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow 1101 \text{ MODE} \rightarrow \text{=}$
 Decimal mode: $\text{AC} \text{ MODE} \rightarrow \text{DEC} \text{ MODE} \rightarrow 120 \text{ MODE} \rightarrow \text{+} \text{ MODE} \rightarrow 1101 \text{ MODE} \rightarrow \text{=}$

Example 4: To convert the value 22_{10} to its binary, octal, and hexadecimal equivalents.

($10110_2, 26_8, 16_{16}$)

Binary mode: $\text{AC} \text{ MODE} \rightarrow \text{BIN} \text{ MODE} \rightarrow 22 \text{ MODE} \rightarrow \text{=}$ 0. b

Octal mode: $\text{AC} \text{ MODE} \rightarrow \text{OCT} \text{ MODE} \rightarrow 22 \text{ MODE} \rightarrow \text{=}$ 10110. b

Hexadecimal mode: $\text{AC} \text{ MODE} \rightarrow \text{HEX} \text{ MODE} \rightarrow 22 \text{ MODE} \rightarrow \text{=}$ 16. H

Example 5: To convert the value 513_{10} to its binary equivalent.

Binary mode: $\text{AC} \text{ MODE} \rightarrow \text{BIN} \text{ MODE} \rightarrow 513 \text{ MODE} \rightarrow \text{=}$ 0. b

$\text{MODE} \rightarrow \text{MODE} \rightarrow 1 \text{ (d)} \text{ MODE} \rightarrow 513 \text{ MODE} \rightarrow \text{=}$ Math ERROR. b

You may not be able to convert a value from a number system whose calculation range is greater than the calculation range of the resulting number system.

The message "Math ERROR" indicates that the result has too many digits (overflow).

Statistical Calculations SD REG

Normal Distribution SD

Use the MODE key to enter the SD Mode when you want to perform a calculation involving normal distribution.


SD $\text{MODE} \rightarrow \text{MODE} \rightarrow 1$

In the SD Mode and REG Mode, the MODE key operates as the MODE key.

Press $\text{SHIFT} \rightarrow \text{DISTR}$, which produces the screen shown below.

P(Q(R(\rightarrow t
1 2 3 4

Input a value from (1) to (4) to select the probability distribution calculation you want to perform.



Example: To determine the normalized variate ($\rightarrow t$) for $x = 53$ and normal probability distribution $P(t)$ for the following data: 55, 54, 51, 55, 53, 53, 54, 52

($\rightarrow t = -0.284747398$, $P(t) = 0.38974$)
 $\text{MODE} \rightarrow 55 \text{ MODE} \rightarrow 54 \text{ MODE} \rightarrow 51 \text{ MODE} \rightarrow 55 \text{ MODE} \rightarrow 53 \text{ MODE} \rightarrow 53 \text{ MODE} \rightarrow 54 \text{ MODE} \rightarrow 52 \text{ MODE} \rightarrow 53 \text{ MODE} \rightarrow \text{DISTR} \text{ MODE} \rightarrow 1 \text{ MODE} \rightarrow \text{MODE} \rightarrow 0.28 \text{ MODE} \rightarrow \text{MODE}$

Differential Calculations COMP

The procedure described below obtains the derivative of a function.

Use the MODE key to enter the COMP Mode when you want to perform a calculation involving differentials.

COMP $\text{MODE} \rightarrow 1$

Three inputs are required for the differential expression: the function of variable x , the point (a) at which the differential coefficient is calculated, and the change in $x</$

Matrix Calculations

(MAT)

The procedures in this section describe how to create matrices with up to three rows and three columns, and how to add, subtract, multiply, transpose and invert matrices, and how to obtain the scalar product, determinant, and absolute value of a matrix.

Use the **MAT** key to enter the MAT Mode when you want to perform matrix calculations.


MAT**MAT** **MAT** **MAT** **2**

Note that you must create one or more matrices before you can perform matrix calculations.

- You can have up to three matrices, named A, B, and C, in memory at one time.
- The results of matrix calculations are stored automatically into MatAns memory. You can use the matrix in MatAns memory in subsequent matrix calculations.
- Matrix calculations can use up to two levels of the matrix stack. Squaring a matrix, cubing a matrix, or inverting a matrix uses one stack level. See "Stacks" in the separate "User's Guide" for more information.

Creating a Matrix

To create a matrix, press **MAT** **MAT** **1** (Dim), specify a matrix name (A, B, or C), and then specify the dimensions (number of rows and number of columns) of the matrix. Next, follow the prompts that appear to input values that make up the elements of the matrix.

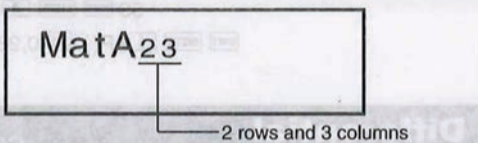

You can use the cursor keys to move about the matrix in order to view or edit its elements.

To exit the matrix screen, press **AC**.

Editing the Elements of a Matrix

Press **MAT** **MAT** **2** (Edit) and then specify the name (A, B, or C) of the matrix you want to edit to display a screen for editing the elements of the matrix.

Matrix Addition, Subtraction, and Multiplication

Use the procedures described below to add, subtract, and multiply matrices.

Example: To multiply Matrix A = $\begin{bmatrix} 1 & 2 \\ 4 & 0 \\ -2 & 5 \end{bmatrix}$ by $\begin{bmatrix} 3 & -8 & 5 \\ -4 & 0 & 12 \\ 12 & -20 & -1 \end{bmatrix}$

(Matrix A 3x2) **MAT** **MAT** **1** (Dim) **1** (A) **3** **2**
 (Element input) **1** **2** **4** **0** **2** **5** **AC**
 (Matrix B 2x3) **MAT** **MAT** **1** (Dim) **2** (B) **2** **3**
 (Element input) **3** **-8** **5** **-4** **0** **12** **12** **-20** **-1** **AC**
 (MatA x MatB) **MAT** **MAT** **3** (Mat) **1** (A) **X**
MAT **MAT** **3** (Mat) **2** (B) **AC**

- An error occurs if you try to add, subtract matrices whose dimensions are different from each other, or multiply a matrix whose number of columns is different from that of the matrix by which you are multiplying it.

Calculating the Scalar Product of a Matrix

Use the procedure shown below to obtain the scalar product (fixed multiple) of a matrix.

Example: Multiply Matrix C = $\begin{bmatrix} 2 & -1 \\ -5 & 3 \end{bmatrix}$ by 3. $\begin{bmatrix} 6 & -3 \\ -15 & 9 \end{bmatrix}$

(Matrix C 2x2) **MAT** **MAT** **1** (Dim) **3** (C) **2** **2**
 (Element input) **2** **-1** **-5** **3** **AC**
 (3xMatC) **3** **X** **MAT** **MAT** **3** (Mat) **3** (C) **AC**

Obtaining the Determinant of a Matrix

You can use the procedure below to determine the determinant of a square matrix.

Example: To obtain the determinant of Matrix A = $\begin{bmatrix} 2 & -1 & 6 \\ 5 & 0 & 1 \\ 3 & 2 & 4 \end{bmatrix}$ (Result: 73)

(Matrix A 3x3) **MAT** **MAT** **1** (Dim) **1** (A) **3** **3**
 (Element input) **2** **-1** **6** **5** **0** **1** **3** **2** **4** **AC**
 (DetMatA) **MAT** **MAT** **1** (Det)
MAT **MAT** **3** (Mat) **1** (A) **AC**

- The above procedure results in an error if a non-square matrix is specified.

Transposing a Matrix

Use the procedure described below when you want to transpose a matrix.

Example: To transpose Matrix B = $\begin{bmatrix} 5 & 7 & 4 \\ 8 & 9 & 3 \end{bmatrix}$

$\begin{bmatrix} 5 & 8 \\ 7 & 9 \\ 4 & 3 \end{bmatrix}$

(Matrix B 2x3) **MAT** **MAT** **1** (Dim) **2** (B) **2** **3**
 (Element input) **5** **7** **4** **8** **9** **3** **AC**
 (TrnMatB) **MAT** **MAT** **2** (Trn)
MAT **MAT** **3** (Mat) **2** (B) **AC**

Inverting a Matrix

You can use the procedure below to invert a square matrix.

Example: To invert Matrix C = $\begin{bmatrix} -3 & 6 & -11 \\ 3 & -4 & 6 \\ 4 & -8 & 13 \end{bmatrix}$

$\begin{bmatrix} -0.4 & 1 & -0.8 \\ -1.5 & 0.5 & -1.5 \\ -0.8 & 0 & -0.6 \end{bmatrix}$

(Matrix C 3x3) **MAT** **MAT** **1** (Dim) **3** (C) **3** **3**
 (Element input) **-3** **6** **-11** **3** **-4** **6** **4** **-8** **13** **AC**
 (MatC⁻¹) **MAT** **MAT** **3** (Mat) **3** (C) **X⁻¹** **AC**

- The above procedure results in an error if a non-square matrix or a matrix for which there is no inverse (determinant = 0) is specified.

Determining the Absolute Value of a Matrix

You can use the procedure described below to determine the absolute value of a matrix.

Example: To determine the absolute value of the matrix produced by the inversion in the previous example.

$\begin{bmatrix} 0.4 & 1 & 0.8 \\ 1.5 & 0.5 & 1.5 \\ 0.8 & 0 & 0.6 \end{bmatrix}$

(AbsMatAns) **MAT** **MAT** **3** (Mat) **3** (Mat) **4** (Ans) **AC**

Vector Calculations

(VCT)

The procedures in this section describe how to create a vector with a dimension up to three, and how to add, subtract, and multiply vectors, and how to obtain the scalar product, inner product, outer product, and absolute value of a vector. You can have up to three vectors in memory at one time.

Use the **MAT** key to enter the VCT Mode when you want to perform vector calculations.


VCT**MAT** **MAT** **MAT** **3**

Note that you must create one or more vector before you can perform vector calculations.

- You can have up to three vectors, named A, B, and C, in memory at one time.
- The results of vector calculations are stored automatically into VctAns memory. You can use the matrix in VctAns memory in subsequent vector calculations.

Creating a Vector

To create a vector, press **MAT** **VCT** **1** (Dim), specify a vector name (A, B, or C), and then specify the dimensions of the vector. Next, follow the prompts that appear input values that make up the elements of the vector.

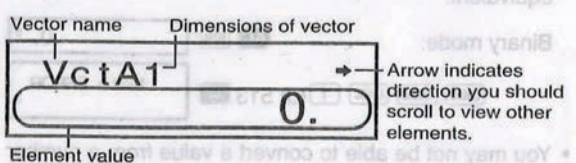

You can use the **←** and **→** keys to move about the vector in order to view or edit its elements.

To exit the vector screen, press **AC**.

Editing Vector Elements

Press **MAT** **VCT** **2** (Edit) and then specify the name (A, B, C) of the vector you want to edit to display a screen for editing the elements of the vector.

Adding and Subtracting Vectors

Use the procedures described below to add and subtract vectors.

Example: To add Vector A = (1 -2 3) to Vector B = (4 5 -6). (Result: (5 3 -3))

(3-dimensional Vector A) **MAT** **VCT** **1** (Dim) **1** (A) **3**
 (Element input) **1** **-2** **3** **AC**
 (3-dimensional Vector B) **MAT** **VCT** **1** (Dim) **2** (B) **3**
 (Element input) **4** **5** **-6** **AC**
 (VctA + VctB) **MAT** **VCT** **3** (Vct) **1** (A) **+**
MAT **VCT** **3** (Vct) **2** (B) **AC**

- An error occurs in the above procedure if you specify vectors of different dimensions.

Calculating the Scalar Product of a Vector

Use the procedure shown below to obtain the scalar product (fixed multiple) of a vector.

Example: To multiply Vector C = (-7.8 9) by 5. (Result: (-39 45))

(2-dimensional Vector C) **MAT** **VCT** **1** (Dim) **3** (C) **2**
 (Element input) **-7.8** **9** **5** **AC**
 (5xVctC) **5** **X** **MAT** **VCT** **3** (Vct) **3** (C) **AC**

Calculating the Inner Product of Two Vectors

Use the procedure described below to obtain the inner product (·) for two vectors.

Example: To calculate the inner product of Vector A and Vector B (Result: -24)

(VctA · VctB) **MAT** **VCT** **3** (Vct) **1** (A) **·**
MAT **VCT** **3** (Vct) **2** (B) **AC**

- An error occurs in the above procedure if you specify vectors of different dimensions.

Calculating the Outer Product of Two Vectors

Use the procedure described below to obtain the outer product for two vectors.

Example: To calculate the outer product of Vector A and Vector B (Result: (-3, 18, 13))

(VctA x VctB) **MAT** **VCT** **3** (Vct) **1** (A) **X**
MAT **VCT** **3** (Vct) **2** (B) **AC**

- An error occurs in the above procedure if you specify vectors of different dimensions.

Determining the Absolute Value of a Vector

Use the procedure shown below to obtain the absolute value (size) of a vector.

Example: To determine the absolute value of Vector C (Result: 11.90965994)

(AbsVctC) **MAT** **MAT** **MAT** **3** (Vct) **3** (C) **AC**
Example: To determine the size of the angle (angle unit: Deg) formed by vectors A = (-1 0 1) and B = (1 2 0), and the size 1 vector perpendicular to both A and B. (Result: 108.4349488°)

Size 1 vector perpendicular to both A and B = $\frac{A \times B}{|A \times B|}$

(3-dimensional Vector A) **MAT** **VCT** **1** (Dim) **1** (A) **3**
 (Element input) **-1** **0** **1** **AC**
 (3-dimensional Vector B) **MAT** **VCT** **1** (Dim) **2** (B) **3**
 (Element input) **1** **2** **0** **AC**
 (VctA · VctB) **MAT** **VCT** **3** (Vct) **1** (A) **·**
MAT **VCT** **3** (Vct) **2** (B) **AC**

(Ans ÷ (AbsVctA x AbsVctB))
 $\frac{1}{\sqrt{1+4+1} \sqrt{1+4+0}} = \frac{1}{\sqrt{2} \sqrt{5}} = \frac{1}{\sqrt{10}}$
 (cos⁻¹Ans) (Result: 108.4349488°) **MAT** **cos⁻¹** **Ans** **AC**
 (VctA x VctB) **MAT** **VCT** **3** (Vct) **1** (A) **X**
MAT **VCT** **3** (Vct) **2** (B) **AC**
 (AbsVctAns) **MAT** **MAT** **MAT** **3** (Vct) **4** (Ans) **AC**
 (VctAns ÷ Ans) **MAT** **MAT** **MAT** **3** (Vct) **4** (Ans) **÷** **Ans** **AC**
 (Result: (-0.6666666666 0.3333333333 -0.6666666666))

Metric Conversions

(COMP)

Use the **MAT** key to enter the COMP Mode when you want to perform metric conversions.

COMP**MAT** **1**

- A total of 20 different conversion pairs are built-in to provide quick and easy conversion to and from metric units.
- See the Conversion Pair Table for a complete list of available conversion pairs.
- When inputting a negative value, enclose it within parentheses (), ().
- Example:** To convert -31 degrees Celsius to Fahrenheit

(-31) **C** **→** **F** **COMP** **38** **AC**
 38 is the Celsius-to-Fahrenheit conversion pair number.

Conversion Pair Table

Based on NIST Special Publication 811 (1995).

To perform this conversion:	Input this pair number:	To perform this conversion:	Input this pair number:
in → cm	01	oz → g	21
cm → in	02	g → oz	22
ft → m	03	lb → kg	23
m → ft	04	kg → lb	24
yd → m	05	atm → Pa	25
m → yd	06	Pa → atm	26
mile → km	07	mmHg → Pa	27
km → mile	08	Pa → mmHg	28
n mile → m	09	hp → kW	29
m → n mile	10	kW → hp	30
acre → m ²	11	kgf/cm ² → Pa	31
m ² → acre	12	Pa → kgf/cm ²	32
gal (US) → ℓ	13	kgf·m → J	33
ℓ → gal (US)	14	J → kgf·m	34
gal (UK) → ℓ	15	lbf/in ² → kPa	35
ℓ → gal (UK)	16	kPa → lbf/in ²	36
pc → km	17	°F → °C	37
km → pc	18	C → °F	38
km/h → m/s	19	J → cal	39
m/s → km/h	20	cal → J	40

Scientific Constants

(COMP)

Use the **MAT** key to enter the COMP Mode when you want to perform calculations using scientific constants.

COMP**MAT** **1**

- A total of 40 commonly-used scientific constants, such as the speed of light in a vacuum and Planck's constant are built-in for quick and easy lookup whenever you need them.
- Simply input the number that corresponds to the scientific constant you want to look up and it appears instantly on the display.
- See the Scientific Constant Table for a complete list of available constants.

Example: To determine how much total energy a person weighing 65kg has ($E = mc^2 = 5.841908662 \times 10^{16}$)

65 **CONST** 28 **AC** **5.841908662E16**
 28 is the "speed of light in vacuum" constant number.

Scientific Constant Table

Based on ISO Standard (1992) data and CODATA recommended values (1998).

To select this constant:	Input this scientific constant number:
proton mass (mp)	01
neutron mass (mn)	02
electron mass (me)	03
muon mass (mμ)	04
Bohr radius (a0)	05
Planck constant (h)	06
nuclear magneton (μN)	07
Bohr magneton (μB)	08
Planck constant, rationalized (ħ)	09
fine-structure constant (α)	10
classical electron radius (re)	11
Compton wavelength (λc)	12
proton gyromagnetic ratio (γp)	13
proton Compton wavelength (λcp)	14
neutron Compton wavelength (λcn)	15
Rydberg constant (R∞)	16
atomic mass unit (u)	17
proton magnetic moment (μp)	18
electron magnetic moment (μe)	19
neutron magnetic moment (μn)	20
muon magnetic moment (μμ)	21
Faraday constant (F)	22
elementary charge (e)	23
Avogadro constant (NA)	24
Boltzmann constant (k)	25

To select this constant:	Input this scientific constant number:
molar volume of ideal gas (Vm)	26
molar gas constant (R)	27
speed of light in vacuum (C0)	28
first radiation constant (C1)	29
second radiation constant (C2)	30
Stefan-Boltzmann constant (σ)	31
electric constant (ε0)	32
magnetic constant (μ0)	33
magnetic flux quantum (φ0)	34
standard acceleration of gravity (g)	35
conductance quantum (Ge)	36
characteristic impedance of vacuum (Z0)	37
Celsius temperature (t)	38
Newtonian constant of gravitation (G)	39
standard atmosphere (atm)	40

Power Supply

The type of battery you should use depends on the model number of your calculator.

The TWO WAY POWER system actually has two power supplies: a solar cell and a G13 Type (LR44) button battery. Normally, calculators equipped with a solar cell alone can operate only when relatively bright light is present. The TWO WAY POWER system, however, lets you continue to use the calculator as long as there is enough light to read the display.

Replacing the Battery

Either of the following symptoms indicates battery power is low, and that the battery should be replaced.

- Display figures are dim and difficult to read in areas where there is little light available.
- Nothing appears on the display when you press the **ON** key.

To replace the battery

- Remove the five screws that hold the back cover in place and then remove the back cover.
- Remove the old battery.
- Wipe off the sides of new battery with a dry, soft cloth. Load it into the unit with the positive (+) side facing up (so you can see it).
- Replace the back cover and secure it in place with the five screws.
- Press **ON** to turn power on. Be sure not to skip this step.



Auto Power Off

Calculator power automatically turns off if you do not perform any operation for about six minutes. When this happens, press **ON** to turn power back on.

Specifications

Power Supply: Solar cell and a single G13 Type button battery (LR44)

Battery Life: Approximately 3 years (1 hour use per day).

Dimensions: 12.7 (H) × 78 (W) × 154.5 (D) mm
 1/2" (H) × 3 1/16" (W) × 6 1/16" (D)

Weight: 105 g (3.7 oz) including battery

Power Consumption: 0.0002 W

Operating Temperature: 0°C to 40°C (32°F to 104°F)