


# LOOKOUT EXTREME PLAYSET F25745

## INSTALLATION AND OPERATING INSTRUCTIONS

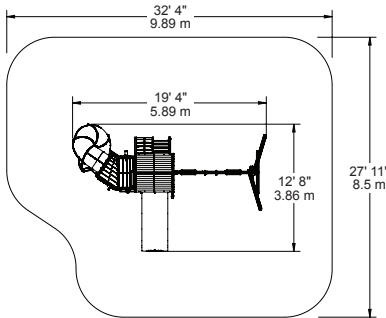

**WARNING** To reduce the risk of serious injury or death, you must read and follow these instructions. Keep and refer to these instructions often and give them to any future owner of this play set.

Manufacturer contact information provided below.

OBSTACLE FREE SAFETY ZONE - 32' 4" x 27' 11" (9.89 x 8.5 m) area requires Protective Surfacing. See page 3.

MAXIMUM VERTICAL FALL HEIGHT - 6' 7" (2.01 m)

CAPACITY - 16 Users Maximum, Ages 3 to 10; Weight Limit 110 lbs. (49.9 kg) per child.

RESIDENTIAL HOME USE ONLY. Not intended for public areas such as multi-unit residences, schools, churches, nurseries, day cares or parks.

Warning. Only for domestic use.




**1 - 2 Hrs**  
TUBE SLIDE  
**TWO PERSON ASSEMBLY**



**14 - 18 Hrs**  
FOR FORT & SWING  
**TWO PERSON ASSEMBLY**

For Outdoor Family Domestic Use Only

Cedar Summit by KidKraft  
4630 Olin Road  
Dallas, TX 75244, United States

customerservice@kidkraft.com  
Online Parts Replacement: parts.kidkraft.com  
To warranty your product: kidkraft.com/warranty/  
Customer Service:  
1(800) 933-0771 or (972) 385-0100

KidKraft Netherlands BV  
Olympisch Stadion 8  
1076 DE Amsterdam, The Netherlands

Europe Customer Service: +31 (0)20 305 8620  
europecustomerservice@kidkraft.com  
EU Online Parts Replacement: parts.kidkraft.eu

### Table of Contents

Warnings and Safe Play Instructions..... pg. 2  
 Protective Surfacing Guidelines..... pg. 3  
 Instructions for Proper Maintenance..... pg. 4  
 About Our Wood – Limited Warranty..... pg. 5-6  
 Keys to Assembly Success..... pg. 7  
 Part ID..... pg. 10-19  
 Step-By-Step Instructions..... pg. 21  
 Installation of I.D./Warning Plaque..... Final Step



# Warnings and Safe Play Instructions



**CONTINUOUS ADULT SUPERVISION REQUIRED.** Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.



## WARNING

### SERIOUS HEAD INJURY HAZARD

Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 3 of these instructions.

### COLLISION HAZARD

Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover)

### CHOKING HAZARD/SHARP EDGES & POINTS

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

### WARNING LABEL

Owners shall be responsible for maintaining the legibility of the warning labels.

### STRANGULATION HAZARD

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

### TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the play-set until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).



## WARNING – Safe Play Instructions

- ✓ Observe capacity limitations of your play-set. See front cover.
- ✓ Dress children with well fitting and full foot enclosing footwear.
- ✓ Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- ✓ Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- ✓ On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.
- ✗ Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs.
- ✗ Do not allow children to walk, in front, between, behind or close to moving rides.
- ✗ Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- ✗ Do not let children get off rides while they are in motion.
- ✗ Do not permit climbing on equipment when it is wet.
- ✗ Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- ✗ Do not allow children to swing empty rides or seats.
- ✗ Do not allow children to go down slide head first or run up slide.

# ⚠️ Protective Surfacing - Reducing Risk of Serious Head Injury From Falls

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

## Loose-Fill Materials

- Maintain a minimum depth of 9 inches (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet (2,45 m) high; and 9 inches (23 cm) of sand or pea gravel for equipment up to 5 feet (1,5 m) high. NOTE: An initial fill level of 12 inches (31 cm) will compress to about a 9-inch (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch (23 cm) depth.
- Use a minimum of 6 inches (16 cm) of protective surfacing for play equipment less than 4 feet (1,22 m) in height. If maintained properly, this should be adequate. (At depths less than 6 inches (16 cm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

## Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles


You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.

- Installations of these surfaces generally require a professional and are not “do-it yourself” projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 *Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height - vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below - of your play equipment.
- Check the protective surfacing frequently for wear.

## Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;

- Extend surfacing at least 6 feet (1,8 m) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet (1,8 m) in all directions.

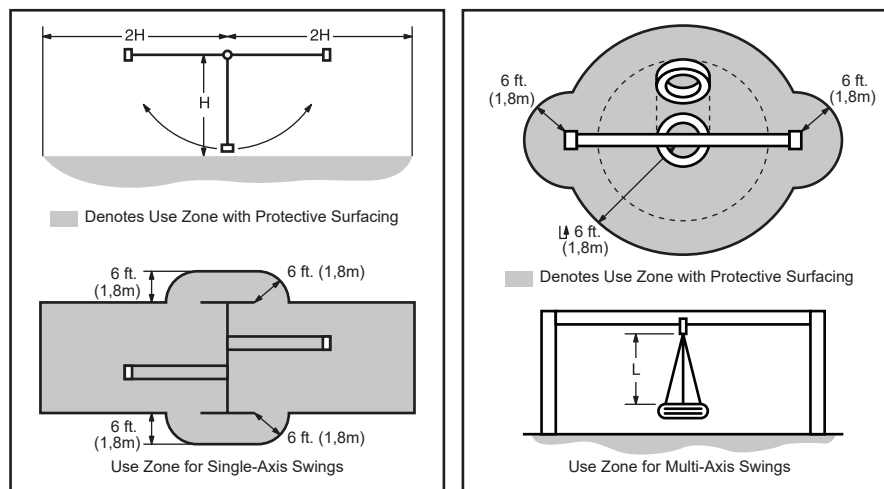



# Instructions for Proper Maintenance

Your KidKraft Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.

## Check the following at the beginning of the play season:

### HARDWARE:

- ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303.
- ✓ Inspect and tighten all hardware. On wood assemblies **DO NOT OVER-TIGHTEN** as to cause crushing and splintering of wood.
- ✓ Check for sharp edges or protruding screw threads, add washers if required.

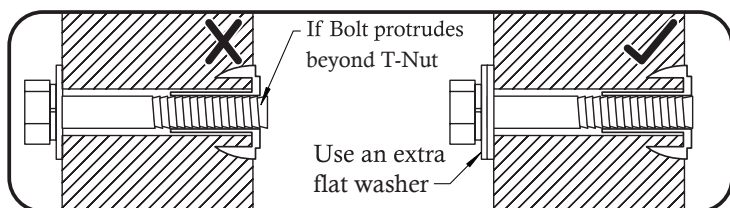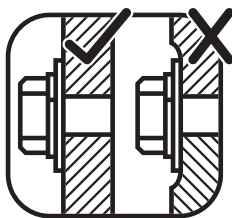

### SHOCK ABSORBING SURFACING:

- ✓ Check for foreign objects. Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

### GROUND STAKES (ANCHORS):

- ✓ Check for looseness, damage or deterioration. Should firmly anchor unit to ground during use. Re-secure and or replace, if necessary.

### SWING HANGERS:

- ✓ Check that bolts are secure and tight. Quick clips should be completely closed and threaded clips screwed tight.

- ✓ If squeaking occurs lubricate bushings with oil or WD-40®.

### SWINGS, ROPES AND RIDES:

- ✓ Reinstall if removed during cold season. Check all moving parts including swing seats, ropes, chains and attachments for wear, rust and other deterioration. Replace as needed.
- ✓ Check that ropes are tight, secure at both ends and cannot loop back as to create an entrapment.

### WOOD PARTS:

- ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal.
- ✓ Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.

## Check twice a month during play season:

### HARDWARE:

- ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. **DO NOT OVER-TIGHTEN.** This will cause splintering of wood.
- ✓ Check for sharp edges or protruding screw threads. Add washers if required.

### SHOCK ABSORBING SURFACING:

- ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

## Check once a month during play season:

### SWING HANGERS:

- ✓ Check that they are secure and orientated correctly. Hook should rotate freely and perpendicular to support beam.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®.

### SWINGS AND RIDES:

- ✓ Check swing seats, all ropes, chains and attachments for fraying, wear, excessive corrosion or damage. Replace if structurally damaged or deteriorated.

## Check at the end of the play season:

### SWINGS AND RIDES:

- ✓ To prolong their life, remove swings and store inside when outside temperature is below 32°F/0°C. Below freezing, plastic parts may become more brittle.

### SHOCK ABSORBING SURFACING:

- ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

**If you dispose of your play set:** Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

## About Our Wood

KidKraft Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

### **What causes weathering? Does it affect the strength of my Play System?**

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.
2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

### **How can I reduce the amount of weathering to my Play System?**

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

**Complete and mail registration card to receive important product notifications and assure prompt warranty service.**

# KidKraft Limited Warranty

## MISSING OR DAMAGED PARTS:

KidKraft will replace any parts within 90 days from date of purchase found to be missing from or damaged in the original packaging. See Fig.1

Fig. 1	<u>Product Age (All Parts)</u> 0-90 Days from date of purchase	<u>Consumer Pays</u> \$0 for Part + Free Shipping
--------	---	--

## DEFECTS IN MATERIAL AND WORKMANSHIP:

KidKraft warrants that this product is free from defects in materials and workmanship for a period of one (1) year from the original date of purchase (dated sales receipt and/or product registration is required). This one (1) year warranty covers all parts including wood, hardware, and all accessories (Such as swings, rides, and slides). See Fig. 2

Fig. 2	<u>Product Age (All Parts)</u> 91 Days to 1 Year	<u>Consumer Pays</u> \$0 for Part + Free Shipping
--------	---	--

## WOOD ROT, DECAY, AND INSECT DAMAGE:

All wood carries a five (5) year warranty against rot, decay, and insect damage (dated sales receipt and/or product registration is required). Refer to the schedule below for charges associated with replacement of wood parts under this **Limited Warranty**. See Fig. 3

Fig. 3	<u>Product Age (Wood Parts)</u> 0 Days to 1 Year After 1 Year to 5 Year Over 5 Years	<u>Consumer Pays</u> \$0 for Part + Free Shipping \$0 for Part + Shipping & Handling 100% for Part (if available) + Shipping & Handling
--------	---	--

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure the integrity of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty.

This Limited Warranty does NOT cover:

- Any inspection cost
- Labor and/or costs for replacement of any defective item(s), including but not limited to, professional installer costs
- Incidental or consequential damages, including but not limited to, as a result of set relocation, move and/or reinstall
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use or installation, or acts of nature, including but not limited to, high winds, fire, and flood
- Minor twisting, warping, checking, or any natural occurring properties of wood that do not affect performance or integrity.
- Any KidKraft product purchased, including but not limited to, a non-approved retailer, auction houses, second-hand, and as-is clearance items.

KidKraft products have been designed for safety and quality. Modifications made to the original product may damage the structural integrity of the unit leading to failure and possible injury. KidKraft cannot assume any responsibility for the modified products. Furthermore, modifications void all warranties.

This product is warranted for **RESIDENTIAL USE ONLY**. Under no circumstance should a KidKraft product be used in public settings such as schools, churches, playgrounds, parks, home and professional day cares and the like. Such use may lead to product failure and potential injury. Public use will void this warranty. KidKraft disclaims all other representations and warranties of any kind, express or implied.


# Keys to Assembly Success

## Tools Required

<ul style="list-style-type: none"> <li>• Tape Measure</li> <li>• Carpenters Level</li> <li>• Carpenters Square</li> <li>• Claw Hammer</li> <li>• Standard or Cordless Drill</li> <li>• Rubber Mallet</li> </ul>	<ul style="list-style-type: none"> <li>• #1 Phillips, #2 Robertson and Screwdriver</li> <li>• Ratchet with extension (1/2" &amp; 9/16" sockets)</li> </ul>	<ul style="list-style-type: none"> <li>• Open End Wrench (1/2" &amp; 9/16")</li> <li>• Adjustable Wrench</li> <li>• 1/8" &amp; 3/16" Drill Bits</li> </ul>	<ul style="list-style-type: none"> <li>• 3/16" Hex Key</li> <li>• 8' Step Ladder</li> <li>• Safety Glasses</li> <li>• Adult Helpers</li> <li>• Pencil</li> </ul>
---	--	--	--





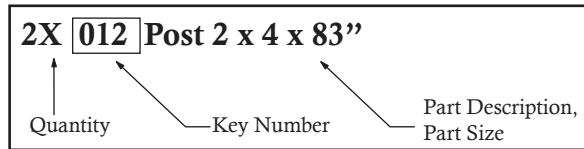


## Part Identification Key

On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.




## Symbols

Throughout these instructions symbols are provided as important reminders for proper and safe assembly.

<p>This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.</p> 	<p>Check that set or assembly is properly level before proceeding.</p> <p>Use Level</p> 
<p>Use Help</p>  <p>Use Help</p>  <p>Where this is shown, 2 or 3 people are required to safely complete the step. To avoid injury or damage to the assembly make sure to get help!</p>	<p>Pre-drill 1/8" &amp; 3/16" Bit</p> <p>Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.</p>
<p>Measure Distance</p>  <p>Check that assembly is square before tightening bolts.</p> <p>Square Assembly</p> 	<p>Tighten Bolts</p>  <p>This indicates time to tighten bolts, but not too tight! Do not crush the wood. This may create splinters and cause structural damage.</p>

## CAUTION – Protrusion Hazard

Once the assembly is tightened, watch for exposed threads. If a thread protrudes from the T-Nut, remove the bolt and add washers to eliminate this condition. Extra washers have been provided for this purpose.

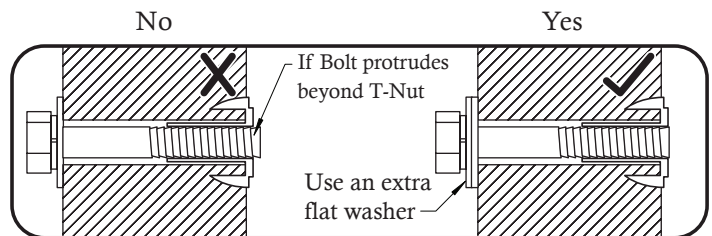


## Proper Hardware Assembly

Lag screws require drilling pilot holes to avoid splitting wood. Only a flat washer is required. For ease of installation liquid soap can be used on all lag-type screws.

For bolts, tap T-Nut into hole with hammer. Insert the hex bolt through lock washer first then flat washer then hole. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" is slightly larger than 1/4".

Note: Wafer head bolts with blue lock tight or a bolt with a Ny-Lok nut do NOT require a lock washer.

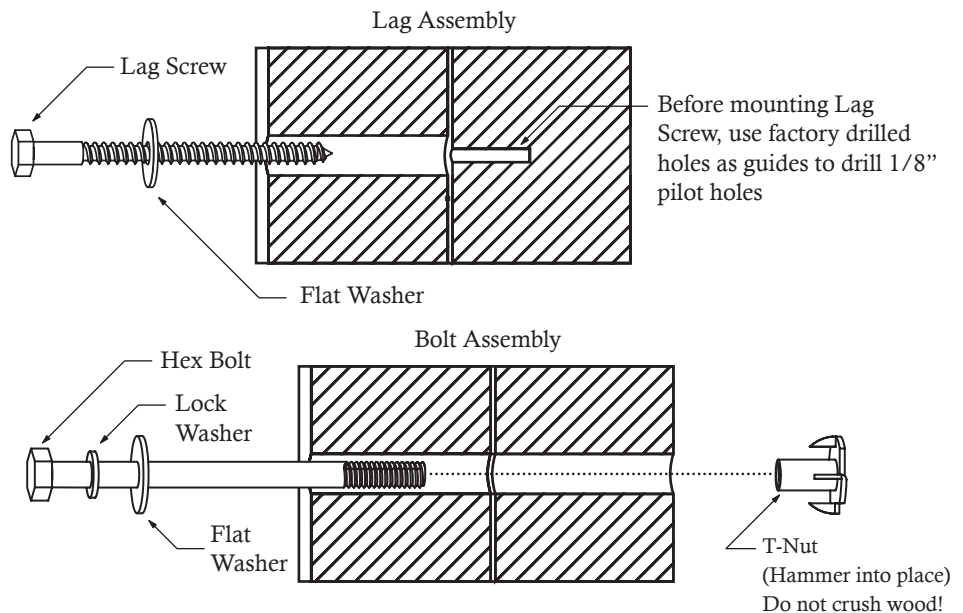








# Part Identification (Reduced Part Size)

1pc. - **572** - 15.9 x 76.2 x 436.5mm - Rope Support FSC - Box 2 - 4819262




2pc. - **471** - 15.9 x 82.6 x 254.5mm - Nest Floor Board G FSC - Box 2 - 4819227



2pc. - **477** - 15.9 x 82.6 x 312.9mm - Nest Floor Board F FSC - Box 3 - 4819226




2pc. - **034** - 15.9 x 82.6 x 482.6mm - Nest Ladder Gap FSC - Box 2 - 4819234



1pc. - **026** - 15.9 x 82.6 x 1060.5 mm - Access Rope Ladder Gap FSC - Box 2 - 4819286




1pc. - **025** - 15.9 x 82.6 x 1060.5 mm - RW-AL Support FSC - Box 2 - 4819263



1pc. - **561** - 15.9 x 82.6 x 1376mm - Narrow Wall B FSC - Box 2 - 4819215




1pc. - **193** - 15.9 x 85.7 x 285.8mm - Bell Top RT FSC - Box 2 - 4019101




1pc. - **191** - 15.9 x 85.7 x 285.8 mm - Bell Top FSC - Box 2 - 4019102




1pc. - **541** - 15.9 x 85.7 x 398.5mm - Short Floor Gap FSC - Box 2 - 4819264




1pc. - **542** - 15.9 x 85.7 x 398.5mm - Short Floor FSC - Box 3 - 4819265



15pc. - **611** - 15.9 x 85.7 x 812.8mm - Nest Wall Rails FSC - Box 2 - 4819245




1pc. - **123** - 15.9 x 85.7 x 904.9mm - Floor Board FSC - Box 2 - 4819050




2pc. - **476** - 15.9 x 108 x 388.4mm - Nest Floor Board E FSC - Box 3 - 4819225




2pc. - **475** - 15.9 x 108 x 463.9mm - Nest Floor Board D FSC - Box 2 - 4819224



1pc. - **573** - 15.9 x 108 x 1447.8mm - Rock Wall D FSC - Box 2 - 4819249




1pc. - **574** - 15.9 x 108 x 1447.8mm - Rock Wall E FSC - Box 2 - 4819250




# Part Identification (Reduced Part Size)

1pc. - **575** - 15.9 x 108 x 1447.8mm - Rock Wall F FSC - Box 2 - 4819251




5/8 x 4-1/4 x 57"

1pc. - **576** - 15.9 x 108 x 1447.8mm - Rock Wall G FSC - Box 2 - 4819252



5/8 x 4-1/4 x 57"

2pc. - **474** - 15.9 x 114.3 x 543.6mm - Nest Floor Board C FSC - Box 3 - 4819223



5/8 x 4-1/2 x 21-13/32"

2pc. - **473** - 15.9 x 114.3 x 623.3mm - Nest Floor Board B FSC - Box 3 - 4819222




5/8 x 4-1/2 x 24-17/32"

2pc. - **472** - 15.9 x 114.3 x 703mm - Nest Floor Board A FSC - Box 2 - 4819221



5/8 x 4-1/2 x 27-43/64"

16pc. - **121** - 15.9 x 114.3 x 904.9mm - Floor Board FSC - Box 2 - 4819051



5/8 x 4-1/2 x 35-5/8"

1pc. - **571** - 15.9 x 133.4 x 1424.8mm - Rock Wall B FSC - Box 2 - 4819247




5/8 x 5-1/4 x 56-1/16"

1pc. - **662** - 23.8 x 57.2 x 838.2mm - End Wall Top FSC - Box 3 - 4819287



15/16 x 2-1/4 x 33"

1pc. - **131** - 23.8 x 57.2 x 850.9mm - SW Wall Top FSC - Box 3 - 4819071



15/16 x 2-3/8 x 33-1/2"

1pc. - **132** - 23.8 x 57.2 x 990.6mm - Half Wall Top FSC - Box 2 - 4819131




15/16 x 2-3/8 x 39"

1pc. - **101** - 23.8 x 60.3 x 308.1mm - Nest Center Joist FSC - Box 2 - 4819233




15/16 x 2-3/8 x 12-1/8"

1pc. - **592** - 23.8 x 76.2 x 204.6mm - Barrier Bottom D FSC - Box 2 - 4819204




15/16 x 3 x 8-3/64"

1pc. - **582** - 23.8 x 76.2 x 204.6mm - Barrier Top D FSC - Box 2 - 4819209



15/16 x 3 x 8-3/64"

2pc. - **521** - 23.8 x 76.2 x 435mm - Short Wall Tie FSC - Box 3 - 4819266




15/16 x 3 x 17-1/8"

2pc. - **275** - 23.8 x 76.2 x 489mm - Wall Tie FSC - Box 3 - 4819117




15/16 x 3 x 19-1/4"

1pc. - **584** - 23.8 x 76.2 x 520mm - Barrier Top E FSC - Box 2 - 4819210





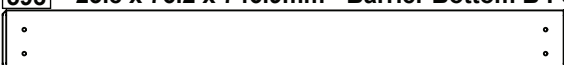
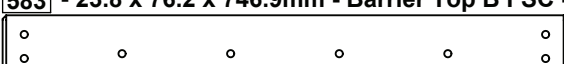
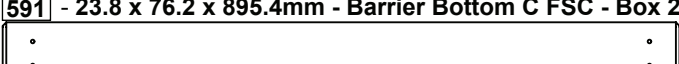
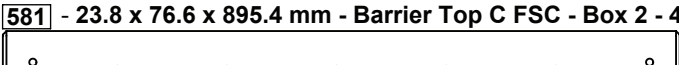
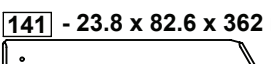
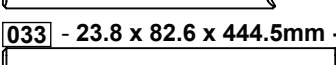
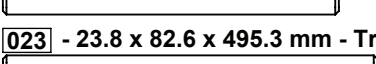
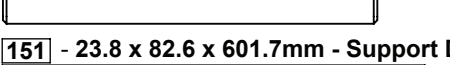
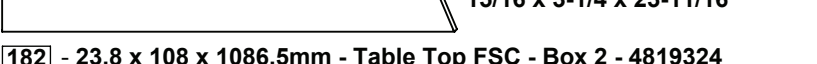

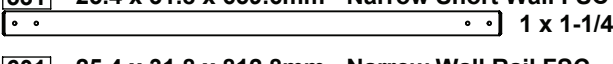







15/16 x 3 x 20-15/32"

1pc. - **585** - 23.8 x 76.2 x 526.4mm - Barrier Top A FSC - Box 2 - 4819206



15/16 x 3 x 20-23/32"
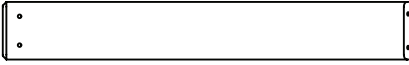
# Part Identification (Reduced Part Size)

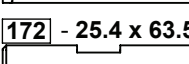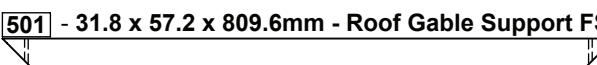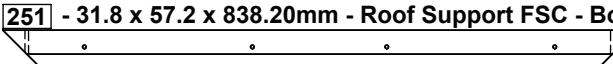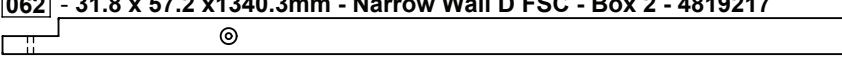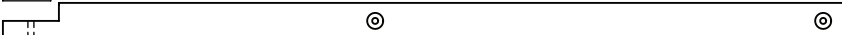- 1pc. - **595** - 23.8 x 76.2 x 539.8mm - Barrier Bottom A FSC - Box 2 - 4819201  
 15/16 x 3 x 21-1/4"
- 1pc. - **594** - 23.8 x 76.2 x 539.8mm - Barrier Bottom E FSC - Box 2 - 4819205  
 15/16 x 3 x 21-1/4"
- 1pc. - **593** - 23.8 x 76.2 x 746.9mm - Barrier Bottom B FSC - Box 3 - 4819202  
 15/16 x 3 x 29-13/32"
- 1pc. - **583** - 23.8 x 76.2 x 746.9mm - Barrier Top B FSC - Box 2 - 4819207  
 15/16 x 3 x 29-13/32"
- 1pc. - **591** - 23.8 x 76.2 x 895.4mm - Barrier Bottom C FSC - Box 2 - 4819203  
 15/16 x 3 x 35-1/4"
- 1pc. - **581** - 23.8 x 76.6 x 895.4 mm - Barrier Top C FSC - Box 2 - 4819208  
 15/16 x 3 x 35-1/4"
- 1pc. - **141** - 23.8 x 82.6 x 362 mm - SW Ground FSC - Box 3 - 4812606  
 15/16 x 3-1/4 x 14-1/4"
- 3pc. - **033** - 23.8 x 82.6 x 444.5mm - Nest Tread FSC - Box 3 - 4819243  
 15/16 x 3-1/4 x 17-1/2"
- 4pc. - **023** - 23.8 x 82.6 x 495.3 mm - Tread FSC - Box 3 - 4818957  
 15/16 x 3-1/4 x 19-1/2"
- 1pc. - **151** - 23.8 x 82.6 x 601.7mm - Support Diagonal FSC - Box 3 - 4819269  
 15/16 x 3-1/4 x 23-11/16"
- 1pc. - **182** - 23.8 x 108 x 1086.5mm - Table Top FSC - Box 2 - 4819324  
 15/16 x 4-1/4 x 42-3/4"
- 4pc. - **531** - 25.4 x 31.8 x 659.6mm - Narrow Short Wall FSC - Box 2 - 4819213  
 1 x 1-1/4 x 25-31/32"
- 1pc. - **601** - 25.4 x 31.8 x 812.8mm - Narrow Wall Rail FSC - Box 2 - 4819218  
 1 x 1-1/4 x 32"
- 1pc. - **043** - 25.4 x 60.3 x 865mm - Back Wall Tie FSC - Box 3 - 4819303  
 1 x 2-3/8 x 34-1/16"
- 1pc. - **042** - 25.4 x 60.3 x 865mm - Front Wall Tie FSC - Box 3 - 4819302  
 1 x 2-3/8 x 34-1/16"
- 1pc. - **172** - 25.4 x 63.5 x 254mm - Door Stop FSC - Box 3 - 4812715  
 1 x 2-1/2 x 10"
- 1pc. - **501** - 31.8 x 57.2 x 809.6mm - Roof Gable Support FSC - Box 3 - 4819259  
 1-1/4 x 2-1/4 x 31-7/8"
- 4pc. - **251** - 31.8 x 57.2 x 838.20mm - Roof Support FSC - Box 3 - 4609105  
 1-1/4 x 2-1/4 x 33"
- 1pc. - **062** - 31.8 x 57.2 x 1340.3mm - Narrow Wall D FSC - Box 2 - 4819217  
 1-1/4 x 2-1/4 x 52-49/64"
- 1pc. - **052** - 31.8 x 57.2 x 1340.3mm - Rock Wall I FSC - Box 2 - 4819254  
 1-1/4 x 2-1/4 x 52-49/64"

# Part Identification (Reduced Part Size)

2pc. - **051** - 31.8 x 57.2 x 1930mm - Rock Wall H FSC - Box 2 - 4819253



1pc. - **063** - 31.8 x 57.2 x 2133.6mm - Rock Wall A FSC - Box 3 - 4819246




1pc. - **057** - 31.8 x 57.2 x 2133.6mm - Narrow Wall A FSC - Box 2 - 4819214




1pc. - **058** - 31.8 x 57.2 x 2336.8mm - Rock Wall C FSC - Box 2 - 4819248 *(reduced scale)*




1pc. - **045** - 31.8 x 60.3 x 139.7mm - Ladder Joist Side FSC - Box 2 - 4819296




2pc. - **621** - 31.8 x 60.3 x 340.8mm - Roof Tie FSC - Box 2 - 4819260



1pc. - **044** - 31.8 x 60.3 x 374.7mm - Nest Side Joist FSC - Box 2 - 4819294



1pc. - **041** - 31.8 x 60.3 x 857.3mm - Nest Joist Mid FSC - Box 2 - 4819297




2pc. - **282** - 31.8 x 63.5 x 419.1mm - Swing Side Upright FSC - Box 3 - 4819112




1pc. - **027** - 31.8 x 63.5 x 476.3 - Rope Bottom FSC - Box 3 - 4819200




1pc. - **422** - 31.8 x 63.5 x 616mm - TNR Front Support FSC - Box 3 - 4819273




2pc. - **271** - 31.8 x 63.5 x 1124mm - TB Support FSC - Box 2 - 4819114



2pc. - **321** - 31.8 x 76.2 x 138.7mm - Swing Top Small FSC - Box 3 - 4819270



2pc. - **064** - 31.8 x 76.2 x 205.6mm - Narrow Wall Cross FSC - Box 2 - 4819220



1pc. - **065** - 31.8 x 76.2 x 286.1mm - Narrow Wall Angled Cross FSC - Box 2 - 4819219




1pc. - **059** - 31.8 x 76.2 x 349mm - Rock Wall Angle Cross FSC - Box 2 - 4819255




1pc. - **701** - 31.8 x 76.2 x 378.3mm - SL Gusset FSC - Box 2 - 4819268




2pc. - **274** - 31.8 x 76.2 x 419.1mm - Center Upright FSC - Box 3 - 4819106



2pc. - **272** - 31.8 x 76.2 x 419.1mm - Right Upright FSC - Box 3 - 4819110




1pc. - **761** - 31.8 x 76.2 x 514.4mm - TNR Upright FSC - Box 2 - 4818965



# Part Identification (Reduced Part Size)

1pc. - **056** - 31.8 x 76.2 x 554mm - Rock Wall Bottom Cross FSC - Box 2 - 4819256




1-1/4 x 3 x 21-13/16"

1pc. - **055** - 31.8 x 76.2 x 554mm - Rock Wall Short Cross FSC - Box 2 - 4819258




1-1/4 x 3 x 21-13/16"

1pc. - **142** - 31.8 x 76.2 x 558.8mm - Diagonal FSC - Box 2 - 4812607




1-1/4 x 3 x 22"

1pc. - **432** - 31.8 x 76.2 x 617.5mm - SL Bottom A FSC - Box 3 - 4819288




1-1/4 x 3 x 24-5/16"

1pc. - **054** - 31.8 x 76.2 x 746.9mm - Rock Wall Floor Cross FSC - Box 3 - 4819257



1-1/4 x 3 x 29-13/32"

1pc. - **053** - 31.8 x 76.2 x 746.9mm - Rope Support Back FSC - Box 2 - 4819261




1-1/4 x 3 x 29-13/32"

2pc. - **442** - 31.8 x 76.2 x 822.1mm - Nest Floor Joist C FSC - Box 2 - 4819230




1-1/4 x 2-3/8 x 13-11/16"

2pc. - **511** - 31.8 x 76.2 x 844.6mm - Wall Post FSC - Box 2 - 4819284



1-1/4 x 2-3/8 x 13-11/16"

1pc. - **762** - 31.8 x 76.2 x 997mm - TNR Ground Brace FSC - Box 2 - 4819274



1-1/4 x 3 x 39-1/4"

2pc. - **091** - 31.8 x 76.2 x 1035.1mm - Floor Joist FSC - Box 3 - 4812608




1-1/4 x 3 x 40-3/4"

1pc. - **281** - 31.8 x 76.2 x 1187.5mm - Swing Top FSC - Box 2 - 4819113




1-1/4 x 3 x 46-3/4"

1pc. - **122** - 31.8 x 76.2 x 1606.6 - Long Floor Joist FSC - Box 3 - 4819056




1-1/4 x 3 x 63-1/4"

1pc. - **451** - 31.8 x 82.6 x 222.3 - TNR Slide Block FSC - Box 3 - 4816005




1-1/4 x 3-1/4 x 8-3/4"

1pc. - **421** - 31.8 x 82.6 x 746.1 - TNR Floor Support FSC - Box 2 - 4819272




1-1/4 x 3-1/4 x 29-3/8"

2pc. - **411** - 31.8 x 82.6 x 1174.8 - Side Support FSC - Box 2 - 4819267




1-1/4 x 3-1/4 x 46-1/4"

1pc. - **382** - 31.8 x 101.6 x 787.4 - Nest Wall Spacer FSC - Box 3 - 4819244




1-1/4 x 4 x 31"

1pc. - **431** - 31.8 x 102.2 x 617.5 - SL Bottom B FSC - Box 3 - 4819289



1-1/4 x 4 x 24-5/16"


2pc. - **273** - 31.8 x 108 x 419.1mm - Left Upright FSC - Box 3 - 4819107




1-1/4 x 4-1/4 x 16-1/2"

# Part Identification (Reduced Part Size)


1pc. - **401** - 31.8 x 139.7 x 847.7mm - TNR Brace Support FSC - Box 2 - 4819271




1pc. - **032** - 34.9 x 63.5 x 1045.2mm - Nest Right Access FSC - Box 3 - 4819236




1pc. - **031** - 34.9 x 63.5 x 1045.2mm - Nest Left Access FSC - Box 3 - 4819237




1pc. - **022** - 34.9 x 63.5 x 1468.8mm - Right Rail FSC - Box 3 - 4819240




1pc. - **021** - 34.9 x 63.5 x 1468.8mm - Left Rail FSC - Box 3 - 4819239




2pc. - **192** - 38.1 x 38.1 x 269.9mm - Bell Support FSC - Box 2 - 4609100




1pc. - **441** - 38.1 x 38.1 x 749.3mm - Nest Floor Joist B FSC - Box 3 - 4819229




2pc. - **381** - 38.1 x 38.1 x 889mm - Nest Floor Joist A FSC - Box 3 - 4819228




1pc. - **181** - 38.1 x 38.1 x 1006.5mm - Table Support FSC - Box 3 - 4812612




2pc. - **291** - 38.1 x 38.1 x 1409.7 - Wall Support FSC - Box 1 - 4819118




2pc. - **092** - 38.1 x 38.1 x 1600 - Side Joist FSC - Box 1 - 4819064




1pc. - **024** - 50.8 x 63.5 x 1468.8mm - Rope Rail FSC - Box 3 - 4819238




1pc. - **211** - 63.5 x 76.2 x 381 - SW Block Angle FSC - Box 3 - 4819068




1pc. - **212** - 63.5 x 76.2 x 381 SW Block FSC - Box 3 - 4818507



1pc. - **202** - 76.2 x 76.2 x 406.4 - SW Mount FSC - Box 3 - 4819069




1pc. - **221** - 63.5 x 76.2 x 1295.4 - Support Cross FSC - Box 1 - 4819067



2pc. - **213** - 76.2 x 76.2 x 2336.8mm - SW Post FSC - Box 1 - 4819070




1pc. - **201** - 76.2 x 133.4 x 2336.8 - Engineered SW Beam FSC - Box 1 - 4819049




# Part Identification (Reduced Part Size)


1pc. - [083] - 31.8 x 1092.2 x 2336.8mm  
 Wall Panel Back FSC - Box 2 - 47819194  
 1-1/4 x 43 x 92"

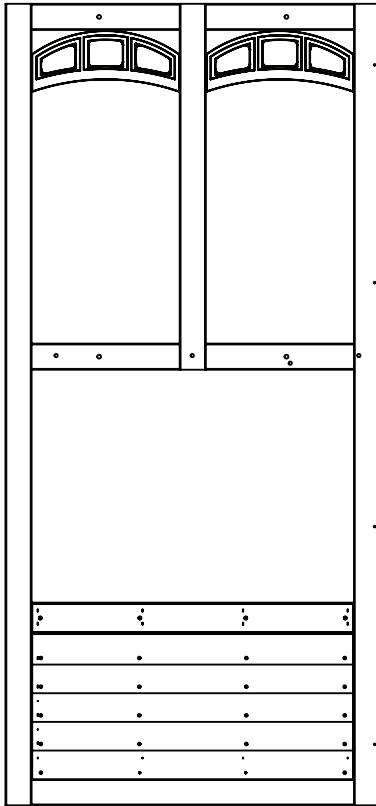


1pc. - [082] - 31.8 x 1092.2 x 2336.8mm  
 Panel Front Wall FSC - Box 2 - 47819135  
 1-1/4 x 43 x 92"

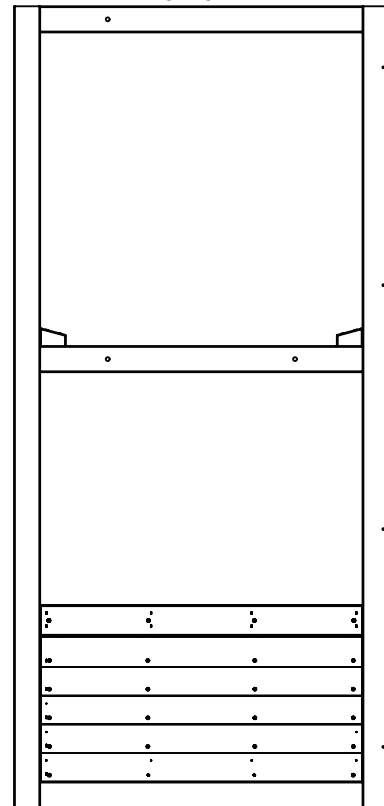


1pc. - [073] - 31.8 x 546.1 x 2336.8mm  
 Narrow Front Panel FSC - Box 2 - 47819144  
 1-1/4 x 21-1/2 x 92"

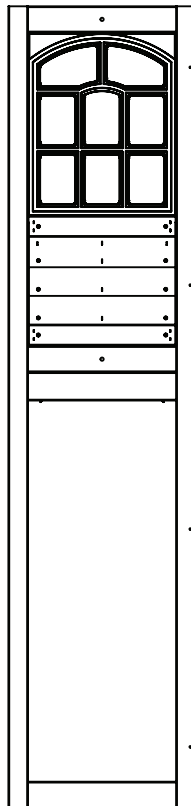


1pc. - [081] - 31.8 x 939.8 x 2336.8mm  
 SW Wall Panel FSC - Box 3 - 47819150  
 1-1/4 x 37 x 92"

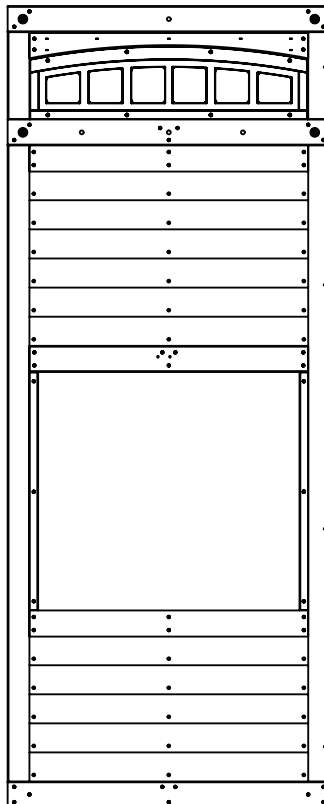

1pc. - [071] - 31.8 x 939.8 x 2336.8mm  
 Nest End Panel FSC - Box 3 - 47819197  
 1-1/4 x 37 x 92"




1pc. - [072] - 31.8 x 546.1 x 2336.8mm  
 Back Panel Narrow FSC - Box 2 - 47819193  
 1-1/4 x 21-1/2 x 92"

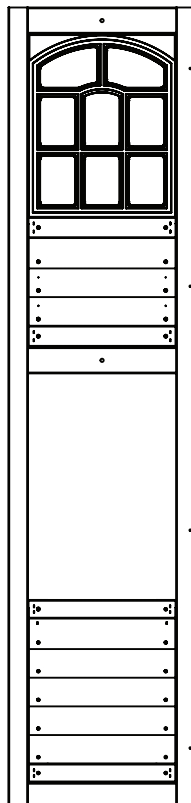





# Part Identification (Reduced Part Size)

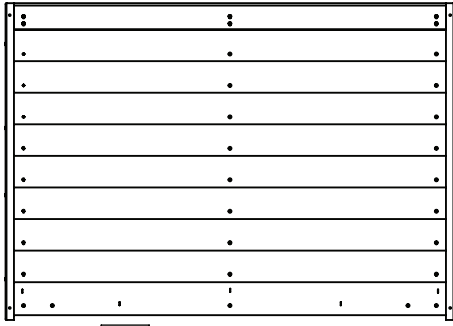


1pc. - [262] - 31.8 x 819.2 x 1143 mm  
 Back Roof Panel 1-1/4 x 32-1/4 x 45" FSC  
 Box 3 - 47609124  
 1-1/4 x 32-1/2 x 45"

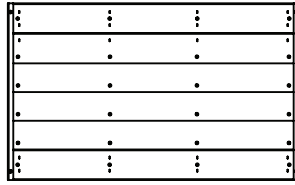


1pc. - [661] - 34.9 x 514.4 x 847.8mm  
 SL Panel FSC - Box 2 - 47819196  
 1-3/8 x 20-1/4 x 33-1/8"

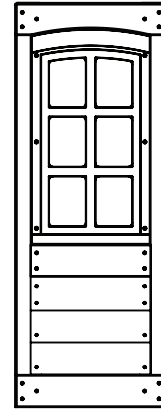


1pc. - [171] - 31.8 x 400.1 x 1070mm  
 Door Window Panel FSC - Box 2 - 47602837  
 1-1/4 x 15-3/4 x 42-1/8"

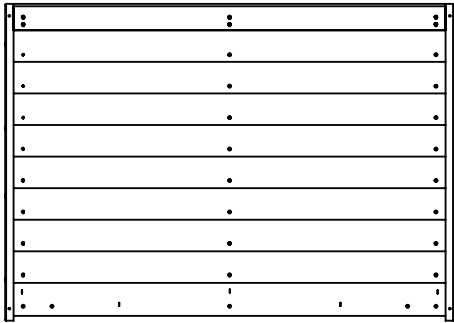


1pc. - [261] - 30.2 x 926.6 x 1124 mm  
 Front Roof Panel 1-3/16 x 36-1/2 x 44-1/2" FSC  
 Box 3 - 47609082  
 1-1/4 x 32-1/4 x 45"

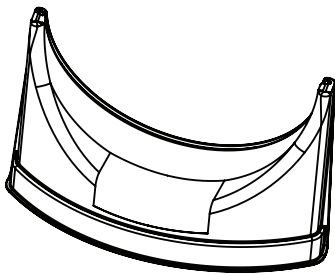


1x - TNR3 Short Exit  
 (3310232)

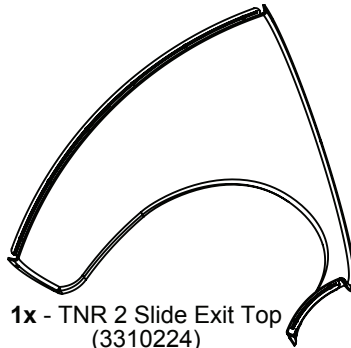


1x - TNR 2 Slide Exit Top  
 (3310224)

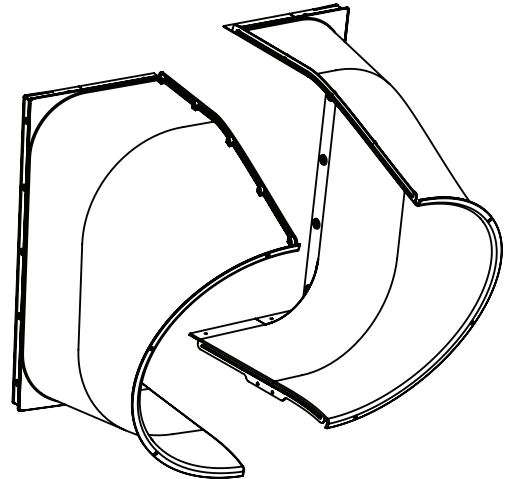

1x - TNR 3 Extended Flange Lt  
 (3310230)

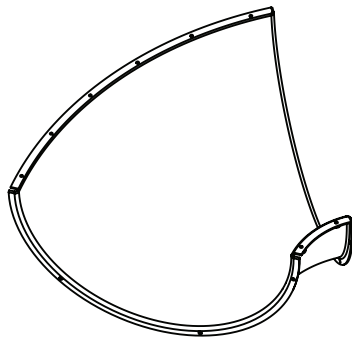


9x - TNR 2 Slide Elbow  
 (3310221)

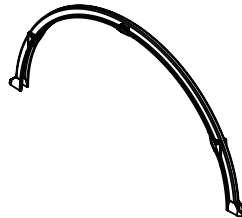

10x - TNR 4 Clamp Ring  
 (9300230) (Yellow)  
 10pcs number 3300230

# Hardware Identification (Actual Size)


(5) **LW2** - 5/16" Lock Washer - (51303300)



(34) **FW0** - 3/16" Flat Washer - (51103100)




(9) **FW6** - #12 Screw Bezel - (9299500)




(92) **LW1** - 1/4" Lock Washer - (51303200)



(87) **FW1** - 1/4" Flat Washer - (51103200)

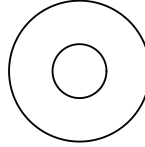


(60) **TN1** - 1/4" T - Nut -(54503200)

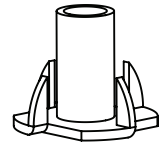


(67) **LN1** - 1/4 Lock Nut - (54303200)




(82) **FW2** - 5/16" Flat Washer - (51103300)

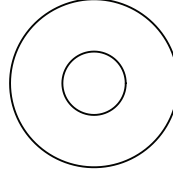


(40) **TN2** - 5/16" T- Nut - (54503300)

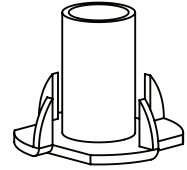


(18) **LN2** - 5/16" Lock Nut - (54303300)




(13) **FW10** - 3/8" Flat Washer - (51103800)

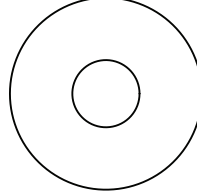


(34) **BN1** - 1/4" Barrel Nut - (54803200)

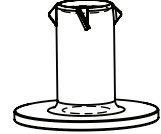


(7) **LN3** - 3/8 Lock Nut - (54303800)

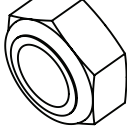


(54) **PB1** - Pan Bolt 1/4 x 3/4" - (53453203)



(100) **S0** - Truss Screw #8 x 7/8" - (52933505)




(11) **PB6** - Pan Bolt 1/4 x 1" - (53413210)




(34) **PB2** - Pan Bolt 1/4 x 1-1/4" - (53433212)



(34) **S37** - Pan Screw #7 x 5/8" - (52433009)




(9) **S38** - Pan Screw #7 x 1-1/8" - (52433014)




(6) **S10** - Pan Screw #8 x 1" - (52433510)




(305) **S20** - Wood Screw #8 x 1-3/8" - (52043516)




(33) **S8** - Pan Screw #12 x 3/4" - (52433603)



(136) **S11** - Wood Screw #8 x 2" - (52043520)




(40) **S6** - Pan Screw #12 x 1" - (52433610)



(99) **S3** - Wood Screw #8 x 2-1/2" - (52043522)



(31) **S7** - Pan Screw #12 x 2" - (52433620)




(28) **S4** - Wood Screw #8 x 3" - (52043530)



1pc. - **S15** - Flat Head Screw #8 x 1 3/4" - (52042513)







# Hardware Identification (Actual Size)

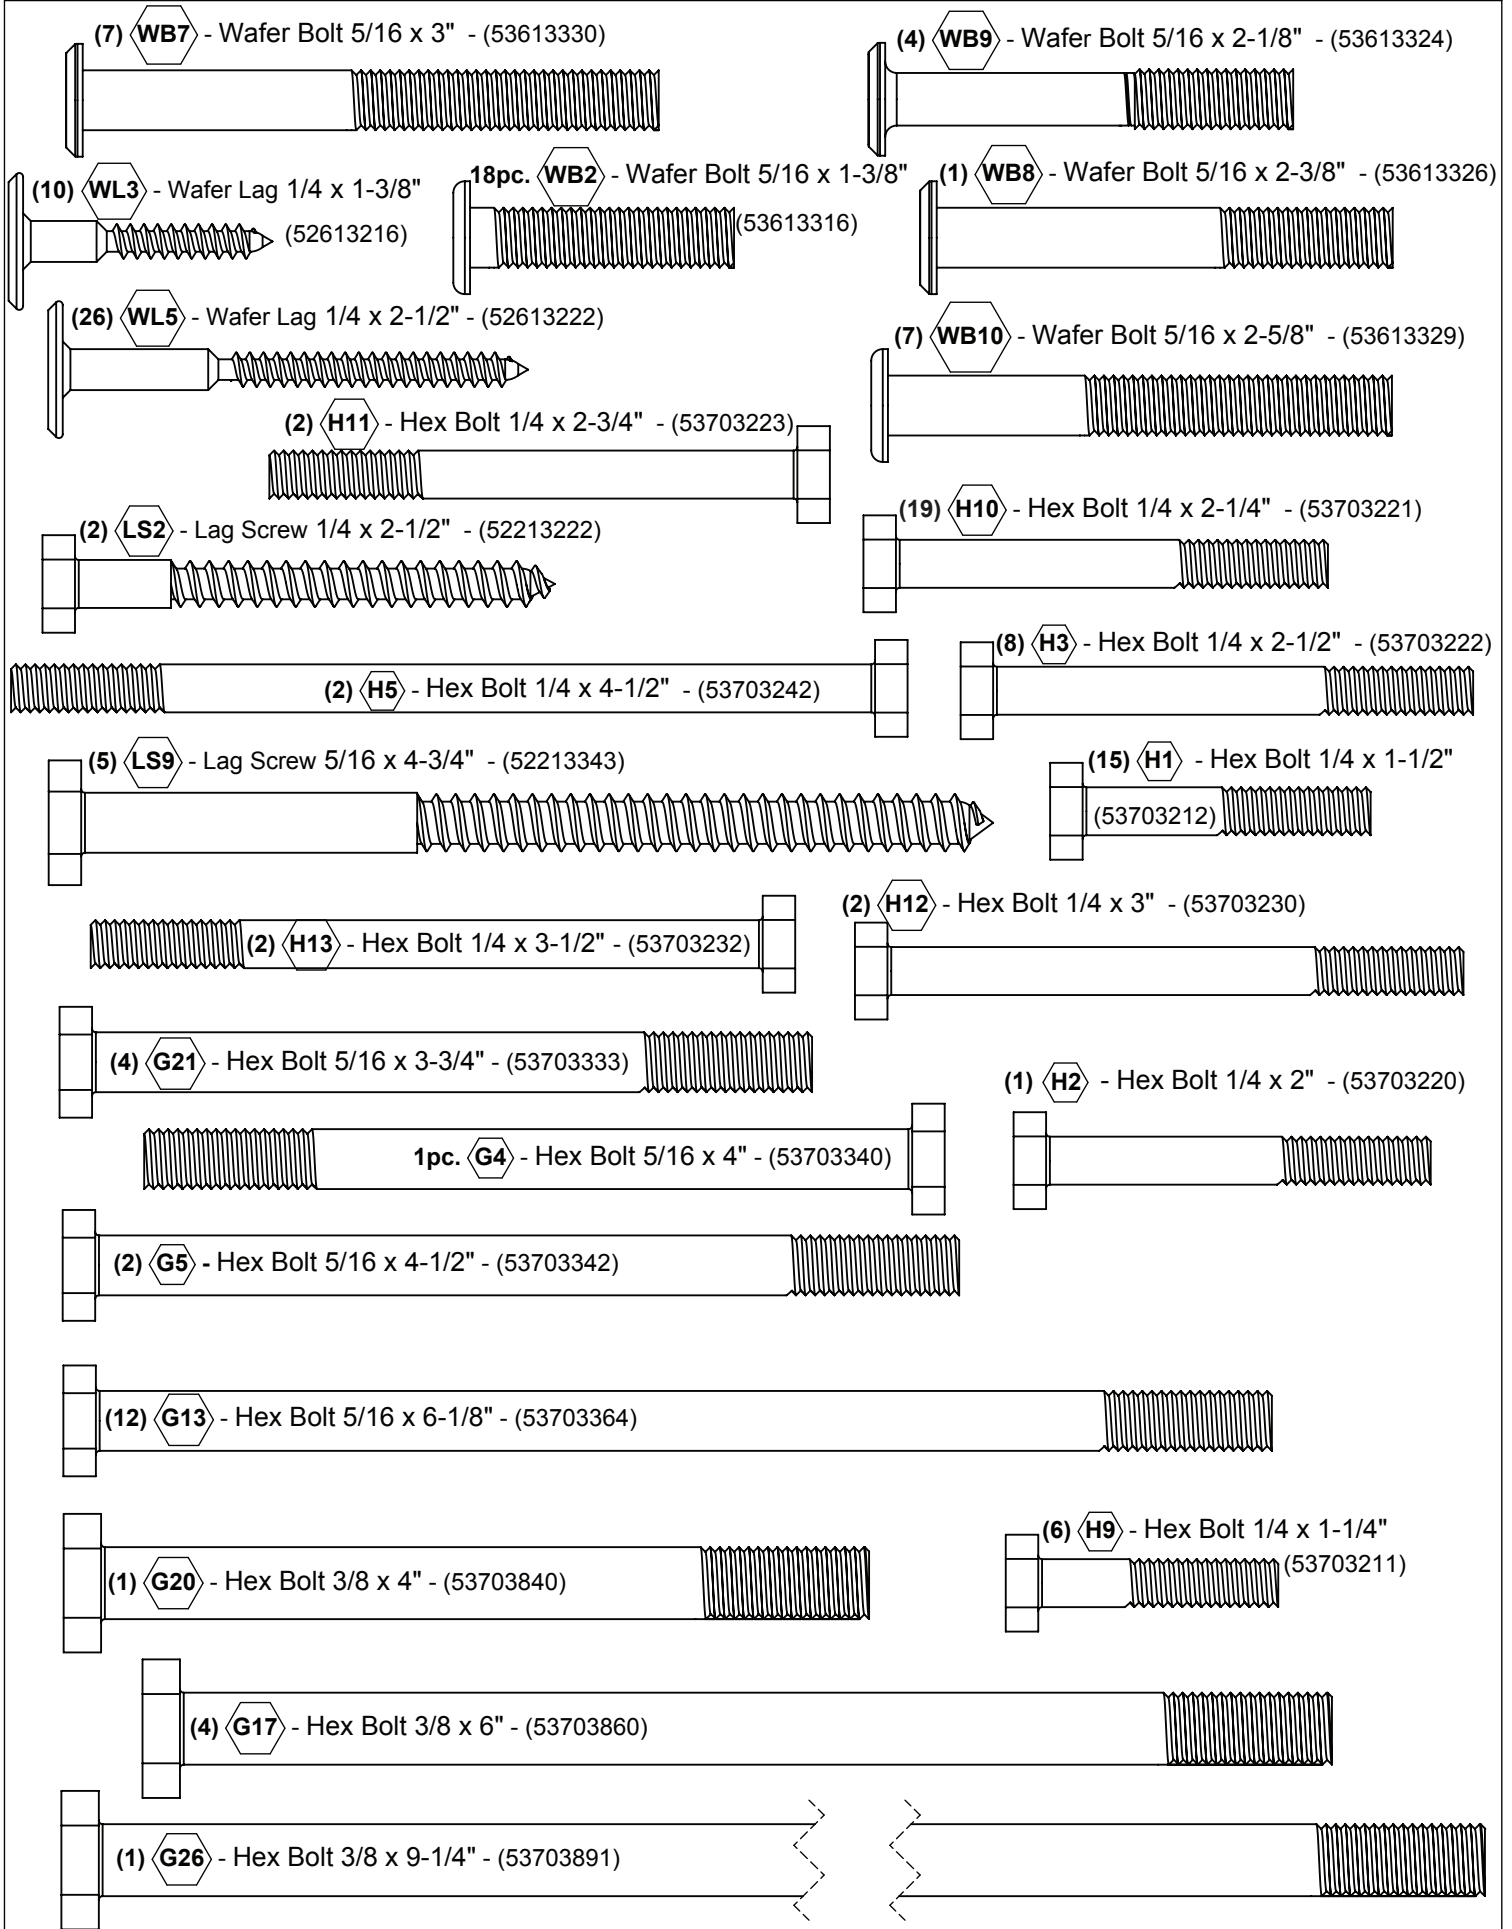

# Part Identification (Reduced Part Size)


<p>2x - TNR 4 Post Mount Clamp (9203657)</p> <p>31x - Square Nylok Nut (54902200)</p> <p>1x - TNR 4 Post Mount Base (9203656)</p> <p>30x - 1/4 x 12.7mm Pan Head Bolt (53453202)</p> <p>1x - 1/4 x 14.5mm Pan Head Bolt (53452209)</p>	<p>1x - Cedar Summit/KidKraft Plaque (9320358)</p> <p>1x - Rocks (10pk) (3320012)</p> <p>1x - Telescope w/ Mount (3320161)</p>	
<p>1x - TNR 4 Post Mount (9203655)</p> <p>3x - Steel Hand Grip (9200211) -Yellow</p> <p>1x - EN71 Hand Rail (3200224) -Yellow</p> <p>1x - Chalkboard Flag (3320716)</p> <p>2x - MOD 5 Pane Window (2Pk) (3330502)</p> <p>1x - Map Chalk Doodle Board (9320719)</p> <p>2x - Acro Handle (9200133)</p> <p>1x - Quadrex Driver (9200015)</p> <p>2x - Swing Belt Seat (9320130)</p> <p>1x - Rope Ladder (3700204)</p>	<p>1x - KK Playset Plaque (9320374)</p> <p>1x - Plastic Formed Washer (18 Pk) (3290000)</p> <p>1x - Steering Wheel (3320255)</p> <p>1x - TNR Tube Support Long (9200268)</p> <p>1x - #2 x 2" Robertson Driver (9200014)</p> <p>1x - Acro Bar (9200131)</p> <p>1x - 12' Climbing Rope 5/8" (3502150)</p> <p>1x - DX Swing Hangers with Quick Links (6 Pk) (3201950)</p> <p>1x - BBQ Deluxe Kitchen Set (3330008)</p> <p>2x - Utensil Shelf 9321691</p> <p>1x - BBQ Sink Set 3332608</p> <p>1x - BBQ Utensils 3331610</p> <p>1x - Basket with Fruit 3330015</p> <p>1x - BBQ Lid 9327812</p> <p>1x - BBQ Base 3331611</p> <p>1x - BBQ Cooktop 33326909</p> <p>1x - Sign 9331614</p> <p>1x - Horseshoe Bell Set (3200307)</p> <p>1x - Rebar Ground Stake (6 Pk) (3200318)</p> <p>1x - Maze N Wave Double Slide Yellow (3318220)</p> <p>1x - Crow Ladder Grip (9200235)</p> <p>1x - 3/8" Drill Bit</p>	
<p>1x - Door Hardware (3200710)</p> <p>2x 9207712 Door Hinge</p> <p>9207713 Door Catch</p> <p>1x Magnetic Catch</p> <p>1x Catch Plate</p> <p>2x 9207711 Door Handle</p>	<p>1x - Heavy Bracket Set (3205701)</p> <p>3x - Heavy L-Bracket (9200151)</p> <p>1x - Heavy C-Bracket (9200153)</p> <p>2x - Heavy Flat Bracket (9200149)</p>	<p>1x - Playset Bracket Set (3205945)</p> <p>1x - Corner Bracket (6 Pk) (3205979)</p> <p>1x - Front Wall Bracket (angled) (4 Pk) (3205948)</p> <p>1x - Flat Panel Bracket (8 Pk)(3205942)</p> <p>1x - Flat Bracket (2 Pk)(3205960)</p> <p>1x - Corner Panel Bracket (6 Pk) (3205977)</p>
<p>1x - Welded Chain (3200173)</p> <p>4x 48" Chain</p> <p>2x 20" Chain</p>		<p>1x - Narrow Angle Bracket (3 PK) (3205940)</p> <p>1x - Wall Bracket (angled)(4 Pk) (3205949)</p>

# Step 1: Inventory Parts - Read This Before Starting Assembly

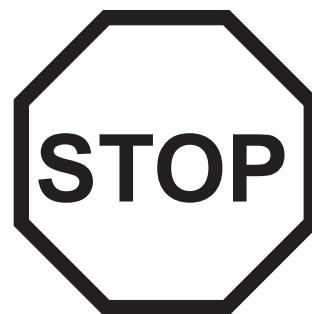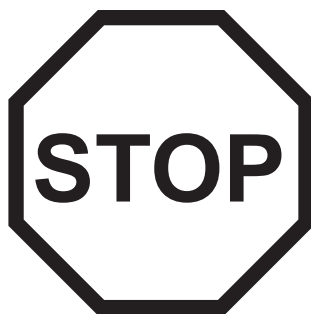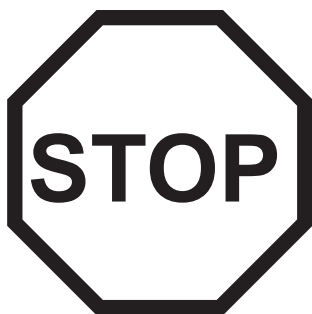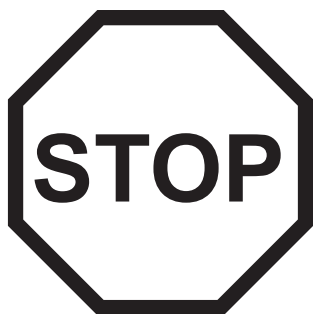

**A.** This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.

- The wood pieces will have the key number stamped on the ends of the boards. Organize the wood pieces by step, as per the key numbering system below.

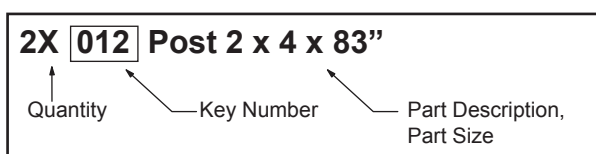

**Key Number:** The first two digits represent the step number. The third digit represents the piece. Note that if the part is used in multiple steps then the number only reflects the first step it is used in.

- Please refer to Page 7 for proper hardware assembly.
- Each step indicates which bolts and/or screws you will need for assembly, as well as any flat washers, lock washers, t-nuts or lock nuts.

**B.** If there are any missing or damaged pieces or you need assistance with assembly please contact the consumer relations department directly. Call us before going back to the store.

customerservice@kidkraft.com  
 Online Parts Replacement: parts.kidkraft.com  
 To warranty your product: kidkraft.com/warranty/  
**Customer Service:**  
 1(800) 933-0771 or (972) 385-0100

**Europe Customer Service: +31 (0)20 305 8620**  
 europecustomerservice@kidkraft.com  
 EU Online Parts Replacement: parts.kidkraft.eu

**C.** Read the assembly manual completely, paying special attention to ANSI warnings; notes; and safety/maintenance information on pages 1 - 7.

**D.** Before you discard your cartons fill out the form below.

- The carton I.D. stamp is located on the end of each carton. The tracking number is located on the KK ID Plaque (9320374).
- Please retain this information for future reference. You will need this information if you contact the Consumer Relations Department.

## MODEL NUMBER: **F25745**

CARTON I.D. STAMP: \_\_ \_\_ \_\_ \_\_ 14459 \_\_ (Box 1)

CARTON I.D. STAMP: \_\_ \_\_ \_\_ \_\_ 14459 \_\_ (Box 4)

CARTON I.D. STAMP: \_\_ \_\_ \_\_ \_\_ 14459 \_\_ (Box 2)

CARTON I.D. STAMP: \_\_ \_\_ \_\_ \_\_ 14459 \_\_ (Box 5)

CARTON I.D. STAMP: \_\_ \_\_ \_\_ \_\_ 14459 \_\_ (Box 3)

CARTON I.D. STAMP: \_\_ \_\_ \_\_ \_\_ 14459 \_\_ (Box 6)

TRACKING NUMBER (from ID Plaque): \_\_\_\_\_

# Step 2: Access Ladder/Rope Wall Assembly

## Part 1



- A:** Place (021) Left Access on one side of 4 (023) Treads and (022) Right Access on the other side with the grooves facing in. (fig. 2.1)
- B:** Fit each (023) Tread into grooves on both (021) and (022) Access rails, making sure the top edge of the (023) Treads are flush to the front of the Access rails. (fig. 2.1 and 2.2)
- C:** Pre-drill pilot holes with a 1/8" drill bit and attach rails and treads together using 4 (S3) #8 x 2-1/2" Wood Screws per tread. (fig. 2.1)

Fig. 2.1


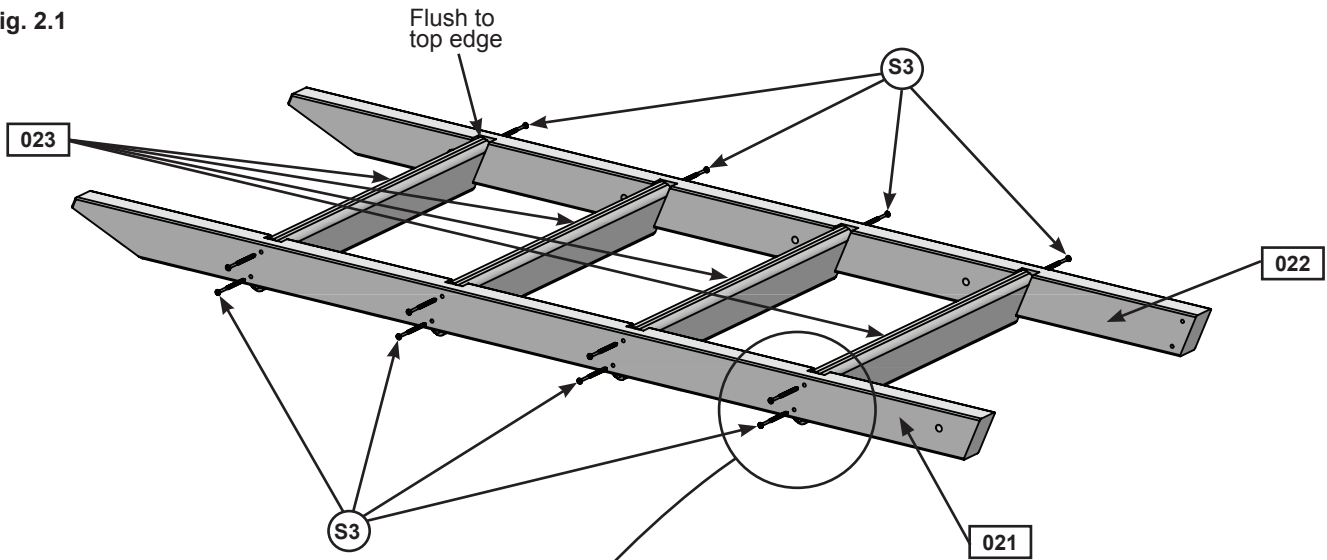


Fig. 2.2  
End View

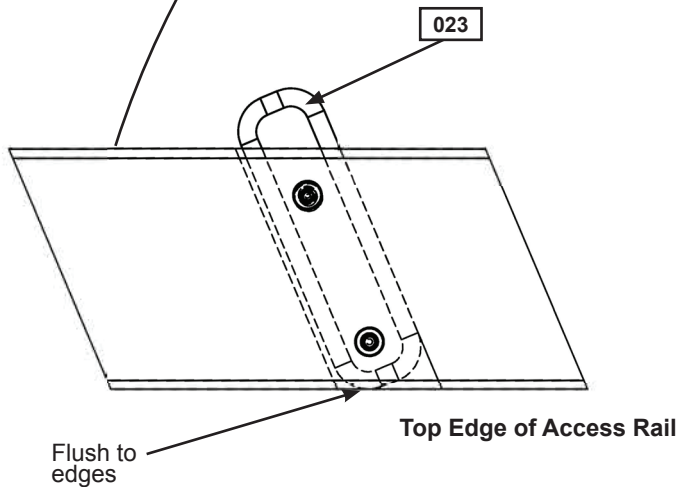

### Wood Parts

- 1 x (021) Left Access 1-3/8 x 2-1/2 x 57-53/64"
- 1 x (022) Right Access 1-3/8 x 2-1/2 x 57-53/64"
- 4 x (023) Tread 15/16 x 3-1/4 x 19-1/2"

### Hardware

- 16 x (S3) #8 x 2-1/2" Wood Screw




# Step 2: Access Ladder/Rope Wall Assembly Part 2



**D:** Making sure that the pre-sunk holes are facing the outside, place (024) Rope Rail on the ground next to (022) Right Access so it matches the orientation of the two access rails as shown in fig. 2.5. Attach (025) RW-AL Support flush to the top of Access Ladder assembly and (024) Rope Rail using 3 (S20) #8 x 1-3/8" Wood Screws in the top holes and 3 (S11) #8 x 2" Wood Screws in the bottom holes. Pilot holes in (025) RW-AL Support should be centred over the rails. (fig. 2.3 and 2.4)

**E:** Place one end of the (026) Access Rope Ladder Gap on the (021) Left Access and the other end on the (024) Rope Rail so there is a 1-3/8" gap between (026) Access Rope Ladder Gap and the top (023) Tread. Attach using 6 (S11) #8 x 2" Wood Screws. (fig. 2.3)

**F:** Place (027) Rope Bottom between (024) Rope Rail and (022) Right Access and attach using 4 (S4) #8 x 3" Wood Screws. (fig. 2.5)

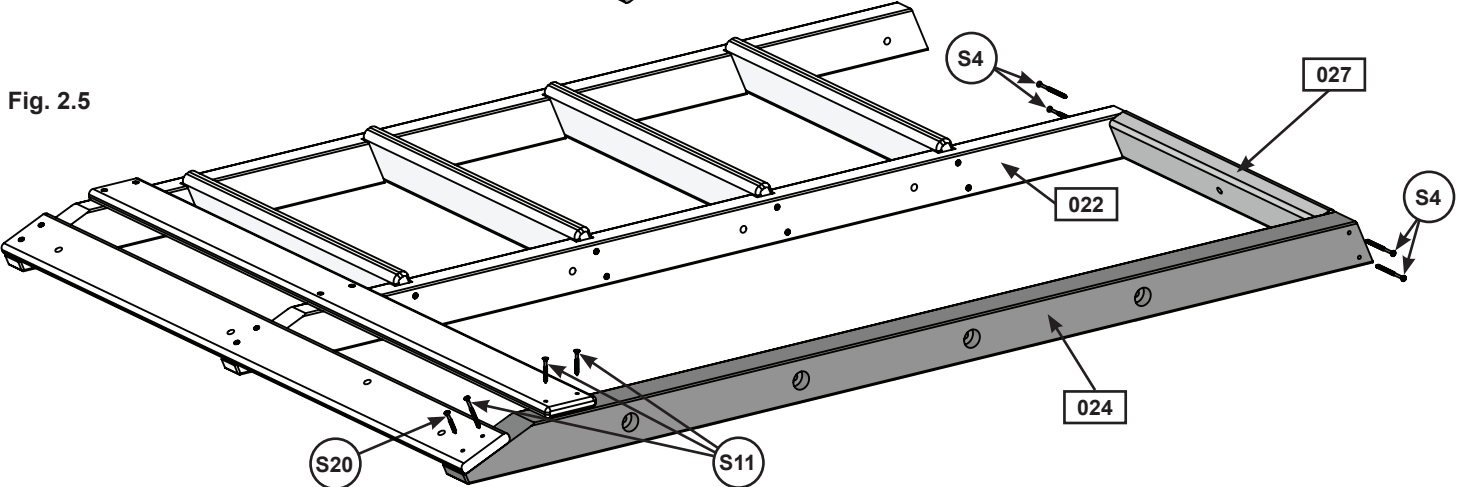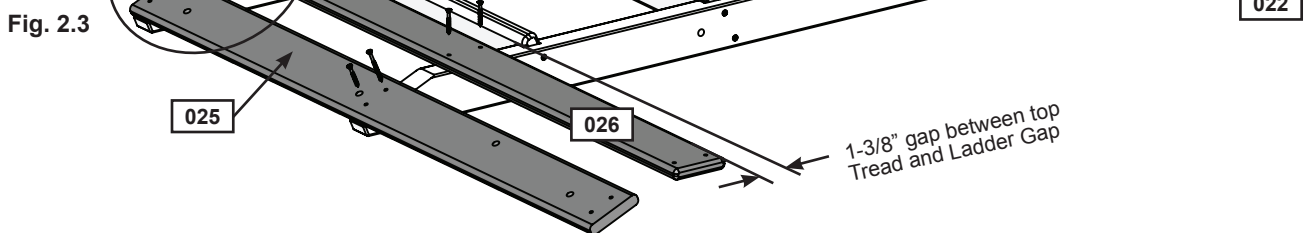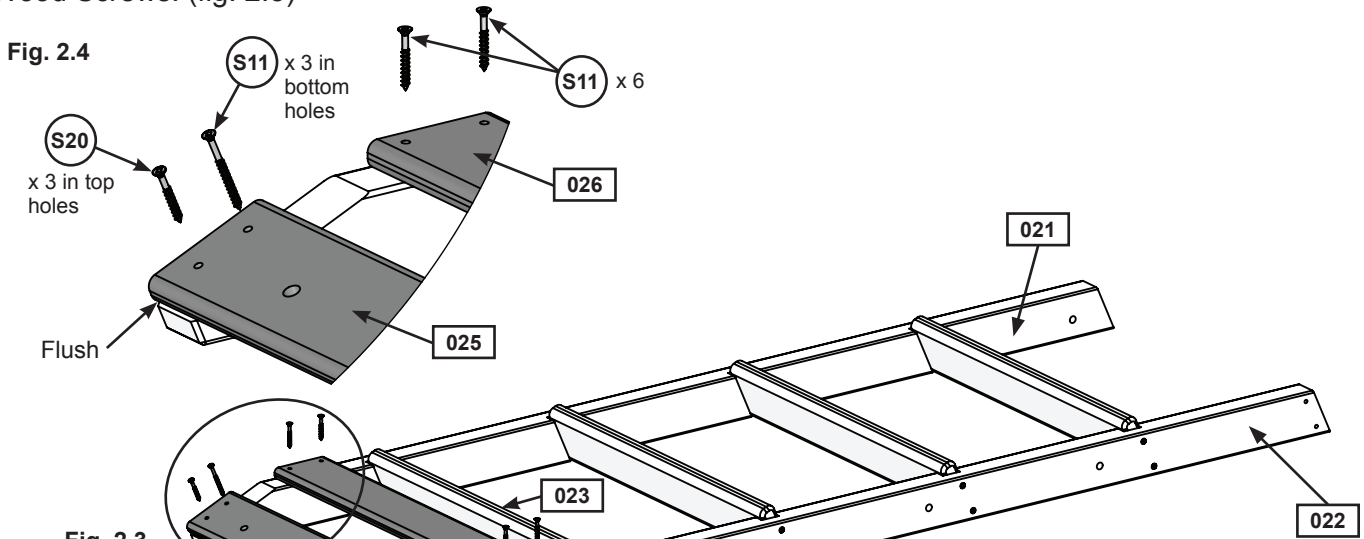

**Wood Parts**

- 1 x 024 Rope Rail 2 x 2-1/2 x 57-13/16"
- 1 x 025 RW-AL Support 5/8 x 3-1/4 x 41-3/4"
- 1 x 026 Access Rope Ladder Gap 5/8 x 3-1/4 x 41-3/4"
- 1 x 027 Rope Bottom 1-1/4 x 2-1/2 x 18-3/4"



**Hardware**

- 9 x S11 #8 x 2" Wood Screw
- 3 x S20 #8 x 1-3/8" Wood Screw
- 4 x S4 #8 x 3" Wood Screw

# Step 3: Nest Ladder Assembly



- A:** Place (031) Nest Left Access on one side of 3 (033) Nest Treads and (032) Nest Right Access on the other side with the grooves facing in. (fig. 2.1)
- B:** Fit each (033) Nest Tread into grooves on both (031) and (032) Access rails, making sure the top edge of the (033) Nest Treads are flush to the front of the Access rails. (fig. 2.1 and 2.2)
- C:** Pre-drill pilot holes with a 1/8" drill bit and attach rails and treads together using 4 (S3) #8 x 2-1/2" Wood Screws per tread. (fig. 2.1)
- D:** Place (034) Nest Ladder Gap on each access rail so there is a 2-3/8" gap between (034) Ladder Gap and the top (033) Nest Tread. Attach using 4 (S20) #8 x 1-3/8" Wood Screws. (fig. 3.3)
- E:** Center a second Ladder Gap between the bottom Tread and the bottom ends of the access rails and attach using 4 (S20) #8 x 1-3/8" Wood Screws.

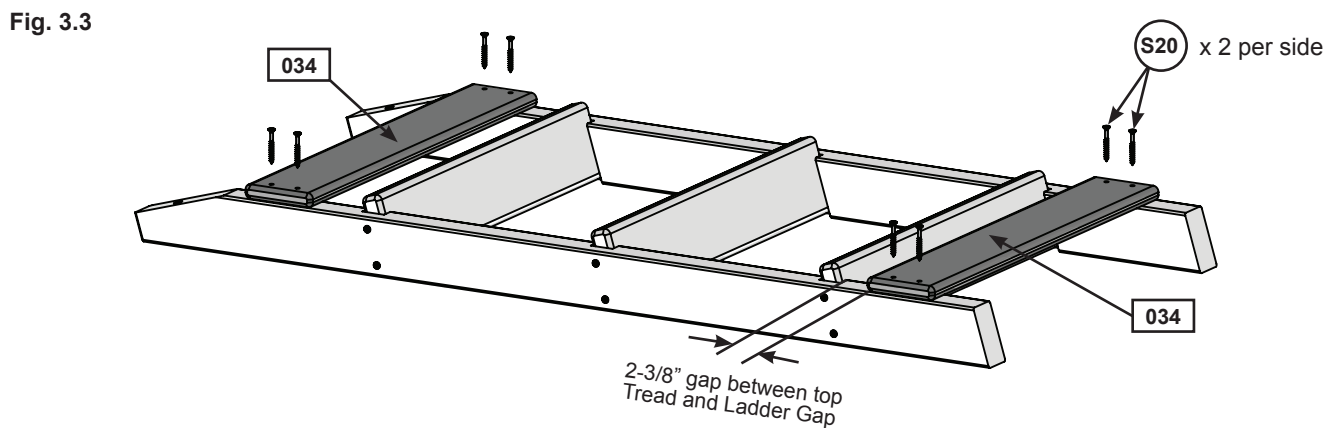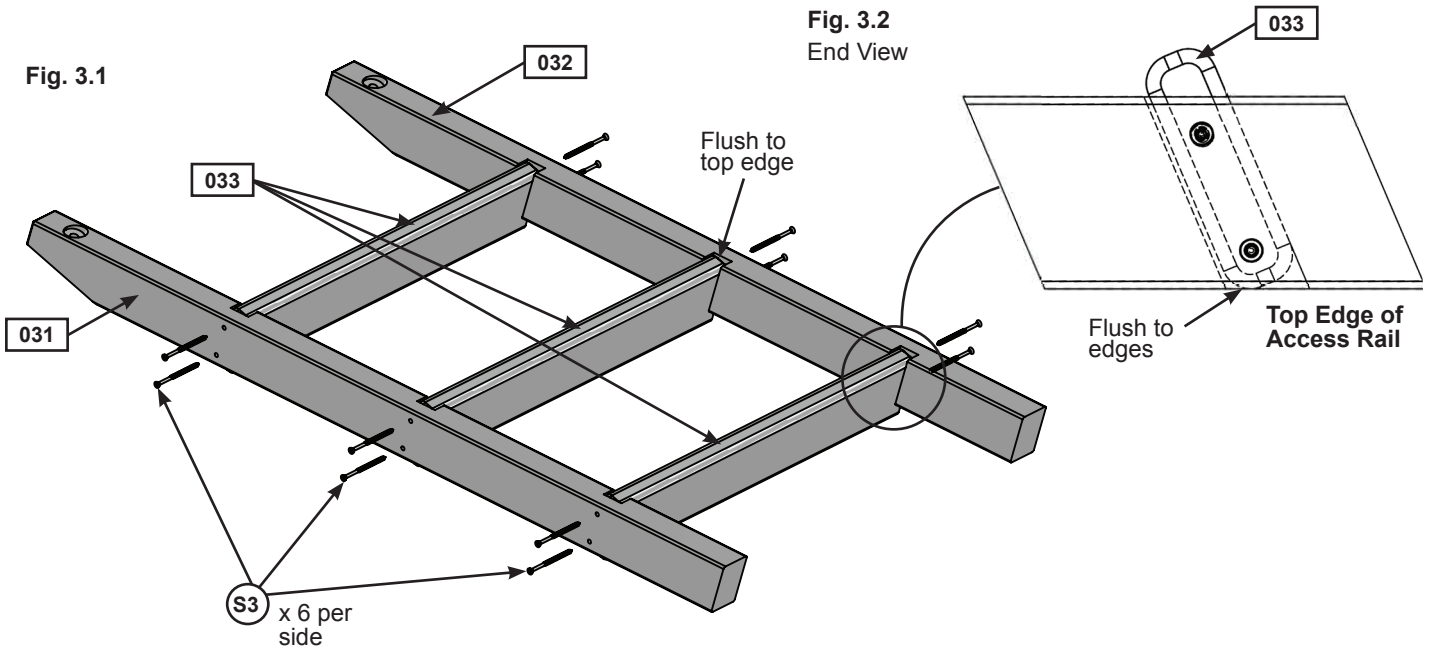

### Wood Parts


- 1 x 031 Nest Left Access 1-3/8 x 2-1/2 x 41-1/8"
- 1 x 032 Nest Right Access 1-3/8 x 2-1/2 x 41-1/8"
- 3 x 033 Nest Tread 15/16 x 3-1/4 x 17-1/2"
- 2 x 034 Nest Ladder Gap 5/8 x 3-1/4 x 19"

### Hardware

- 12 x S3 #8 x 2-1/2" Wood Screw
- 8 x S20 #8 x 1-3/8" Wood Screw



# Step 4: Nest Joist Assembly



**A:** Place (041) Nest Mid Joist between (042) Front Wall Tie and (043) Back Wall Tie as shown in fig. 4.1 making sure to closely follow the hole orientation. Attach using 4 (S3) #8 x 2-1/2" Wood Screws. (Fig. 4.1)

**B:** Using the next set of pre-drilled holes on the (043) Back Wall Tie attach the (044) Nest Side Joist using 2 (S3) #8 x 2-1/2" Wood Screws. (Fig. 4.2)

**C:** Place (045) Ladder Side Joist between (041) Nest Mid Joist and (044) Nest Side Joist and attach using 4 (S3) #8 x 2-1/2" Wood Screws as shown in fig. 4.3.

Fig. 4.1


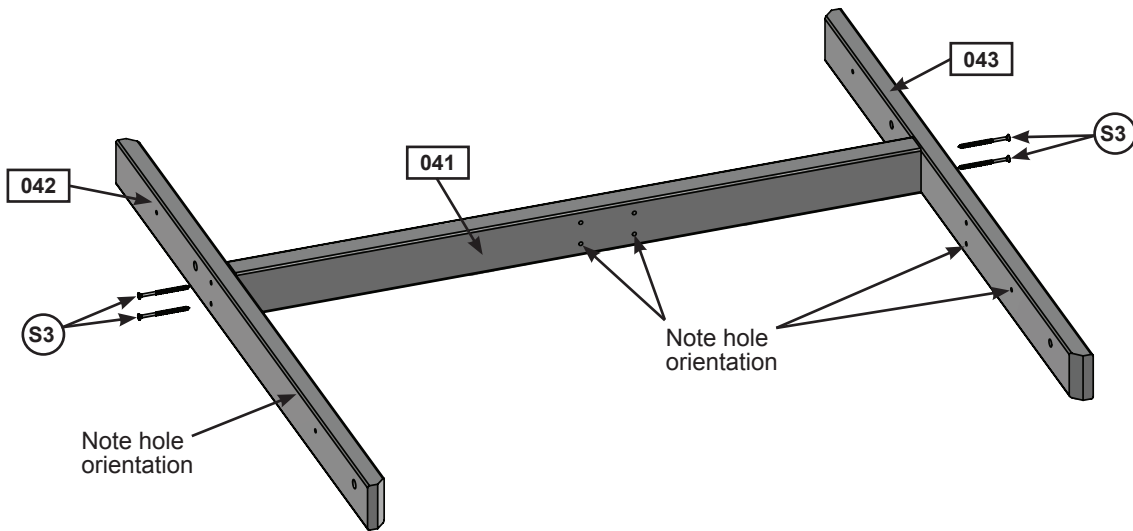


Fig. 4.2

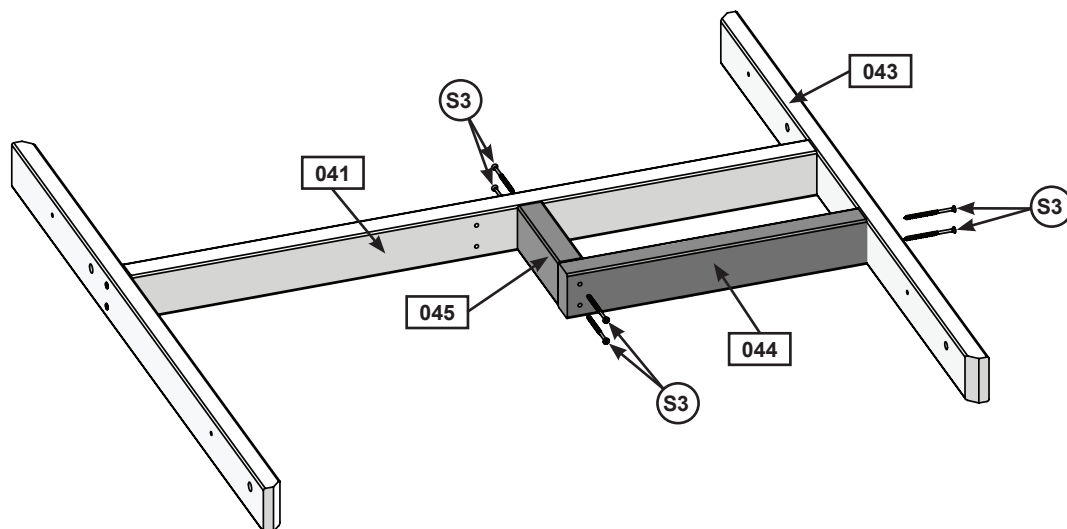


### Wood Parts

- 1 x 041 Nest Mid Joist 1-1/4 x 2-3/8 x 33-3/4"
- 1 x 042 Front Wall Tie 1 x 2-3/8 x 34-1/16"
- 1 x 043 Back Wall Tie 1 x 2-3/8 x 34-1/16"
- 1 x 044 Nest Side Joist 1-1/4 x 2-3/8 x 13-11/16"
- 1 x 045 Ladder Side Joist 1-1/4 x 2-3/8 x 5-1/2"

### Hardware

- 10 x S3 #8 x 2-1/2" Wood Screw

# Step 5: Large Rock Wall Frame Assembly Part 1




It is important to note the beveled edges on all horizontal boards.

**A:** Place (051) Rock Wall H and (052) Rock Wall I together so that they are connected at the notched ends. Attach using 1 (H10) 1/4 x 2-1/4" Hex Bolt (with lock washer, flat washer and t-nut). (Fig. 5.1 and 5.2)

**B:** Taking care to note the hole orientation place (053) Rope Support Back so that it lines up with the center holes on (051) Rock Wall H and place (054) Rock Wall Floor Cross so that it lines up with lower set of holes. Attach each board using 1 (WB2) 5/16 x 1-3/8" Wafer Head Bolt (with flat washer and t-nut) and 2 (S20) #8 x 1-3/8" Wood Screws as shown in fig. 5.3 and 5.4.

**C:** Place (055) Rock Wall Short Cross so that it lines up with the upper holes on (052) Rock Wall I and place (056) Rock Wall Bottom Cross so that it lines up with the bottom holes, making sure that the pre-drilled rope hole is at the bottom. Attach boards using 1 (WB2) 5/16 x 1-3/8" Wafer Head Bolt (with flat washer and t-nut) and 2 (S20) #8 x 1-3/8" Wood Screws. (Fig. 5.3 and 5.4)

**D:** Flip frame assembly over and install (058) Rock Wall C as shown in fig. 5.5 making sure to note the hole orientation. Attach using 4 (WB2) 5/16 x 1-3/8" Wafer Head Bolt (with flat washer and t-nut) and 8 (S20) #8 x 1-3/8" Wood Screws. (Fig. 5.3 and 5.4)

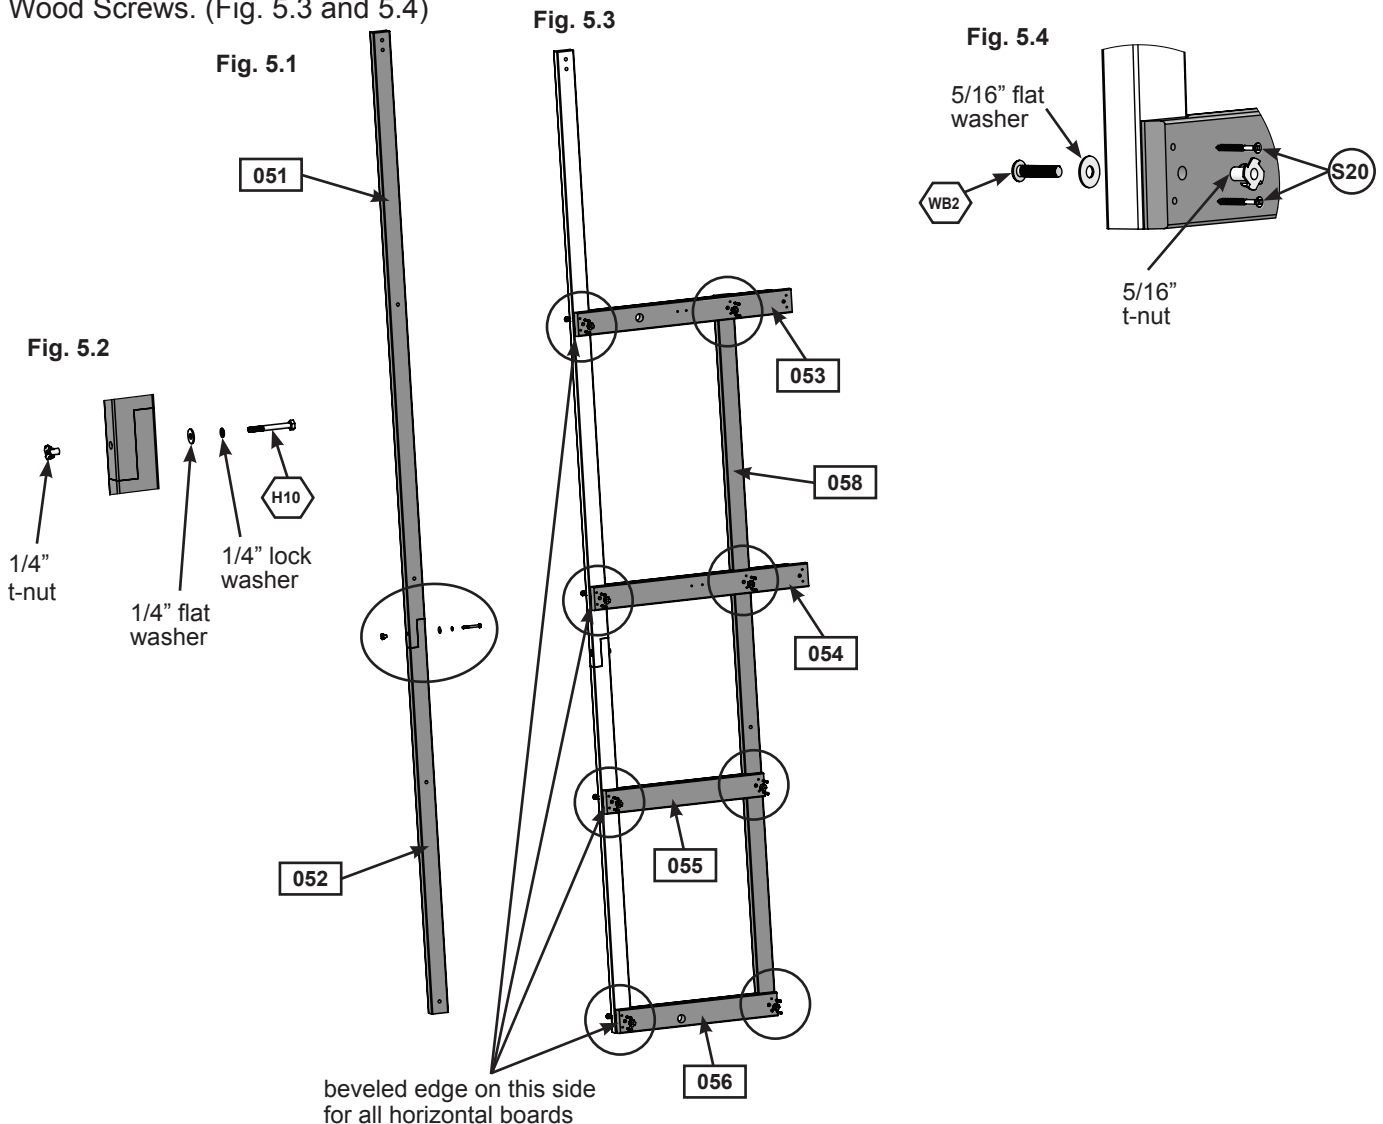

beveled edge on this side  
for all horizontal boards

### Wood Parts

- 1 x 051 Rock Wall H 1-1/4 x 2-1/4 x 75-63/64"
- 1 x 052 Rock Wall I 1-1/4 x 2-1/4 x 52-49/64"
- 1 x 053 Rope Support Back 1-1/4 x 3 x 29-13/32"
- 1 x 054 Rock Wall Floor Cross 1-1/4 x 3 x 29-13/32"
- 1 x 055 Rock Wall Short Cross 1-1/4 x 3 x 21-13/16"

- 1 x 056 Rock Wall Bottom Cross 1-1/4 x 3 x 21-13/16"
- 1 x 058 Rock Wall C 1-1/4 x 2-1/4 x 92"

### Hardware

- 16 x S20 #8 x 1-3/8" Wood Screw
- 1 x H10 1/4 x 2-1/4" Hex Bolt (with 1/4" lock washer, 1/4" flat washer and 1/4" t-nut)
- 8 x WB2 5/16 x 1-3/8" Wafer Head Bolt (5/16" flat washer, 5/16" t-nut)

# Step 5: Large Rock Wall Frame Assembly

## Part 2



**E:** Taking care to note hole orientation place (063) Rock Wall A as shown in fig.5.6 and attach to (053) Rock Support Back and (054) Rock Wall Floor Cross using 2 (WB2) 5/16 x 1-3/8" Wafer Head Bolt (with flat washer and t-nut) and 4 (S20) #8 x 1-3/8" Wood Screws. (Fig. 5.5 and 5.6)

**F:** Attach (059) Rock Wall Angle Cross to (063) Rock Wall A and (058) Rock Wall C using 2 (WB2) 5/16 x 1-3/8" Wafer Head Bolt (with flat washer and t-nut) and 4 (S20) #8 x 1-3/8" Wood Screws as shown in fig. 5.5 and 5.6.

Fig. 5.5


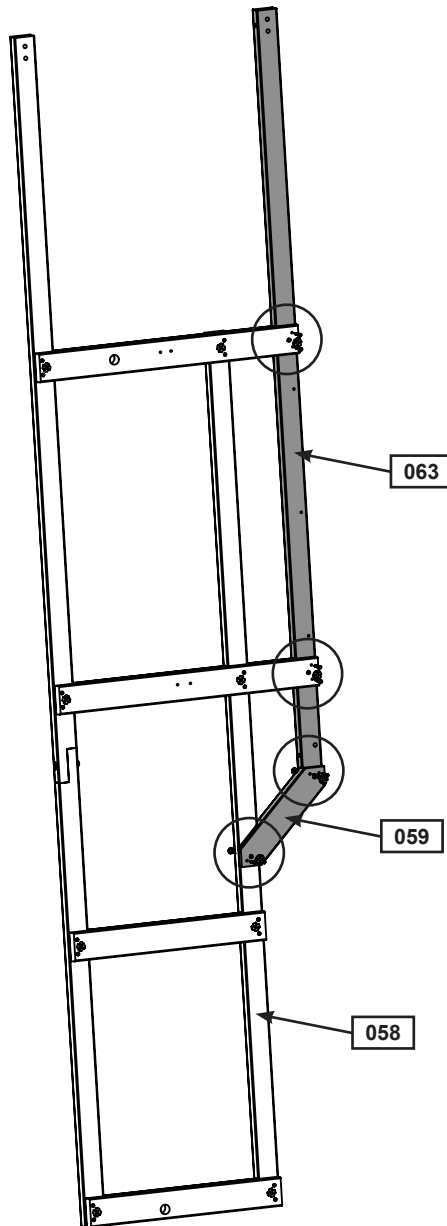


Fig. 5.6

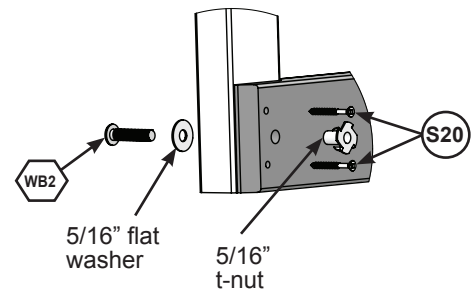


### Wood Parts

- 1 x 063 Rock Wall A 1-1/4 x 2-1/4 x 84"
- 1 x 059 Rock Wall Angle Cross 1-1/4 x 3 x 13-3/4"

### Hardware

- 8 x S20 #8 x 1-3/8" Wood Screw
- 4 x WB2 5/16 x 1-3/8" Wafer Head Bolt (5/16" flat washer, 5/16" t-nut)

# Step 6: Narrow Wall Frame Assembly



**A:** Place (051) Rock Wall H and (062) Narrow Wall D together so that they are connected at the notched ends. Attach using 1 (H10) 1/4 x 2-1/4" Hex Bolt (with lock washer, flat washer and t-nut). (Fig. 6.1 and 6.2)

**B:** Place (057) Narrow Wall A on the left side of the frame assembly so that the top ends of the boards line up, making sure to note hole orientation. Place 1 (064) Narrow Wall Cross in each of the 2 locations shown in fig. 6.3 and attach using 2 (WB2) 5/16 x 1-3/8" Wafer Head Bolts (with flat washer and t-nut) and 4 (S20) #8 x 1-3/8" Wood Screws per board. (Fig. 6.3 and 6.4)

**C:** Place (065) Narrow Wall Angled Cross as shown in fig. 6.3 and attach using 2 (WB2) 5/16 x 1-3/8" Wafer Head Bolts (with flat washer and t-nut) and 4 (S20) #8 x 1-3/8" Wood Screws per board. (Fig. 6.3 and 6.4)

Fig. 6.1

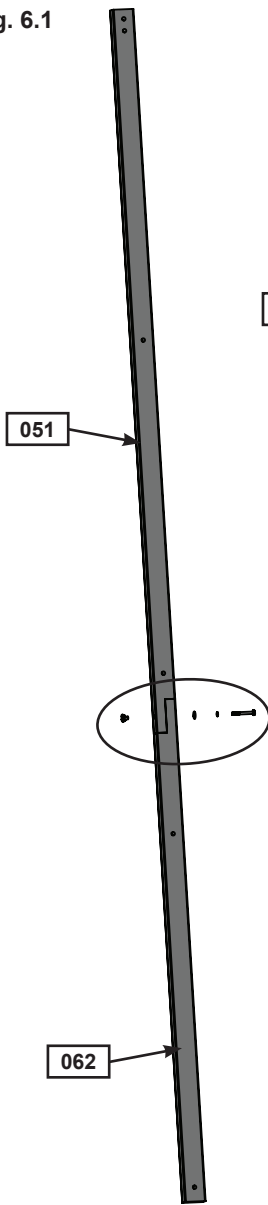


Fig. 6.2



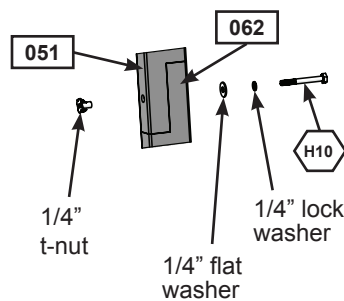


Fig. 6.3

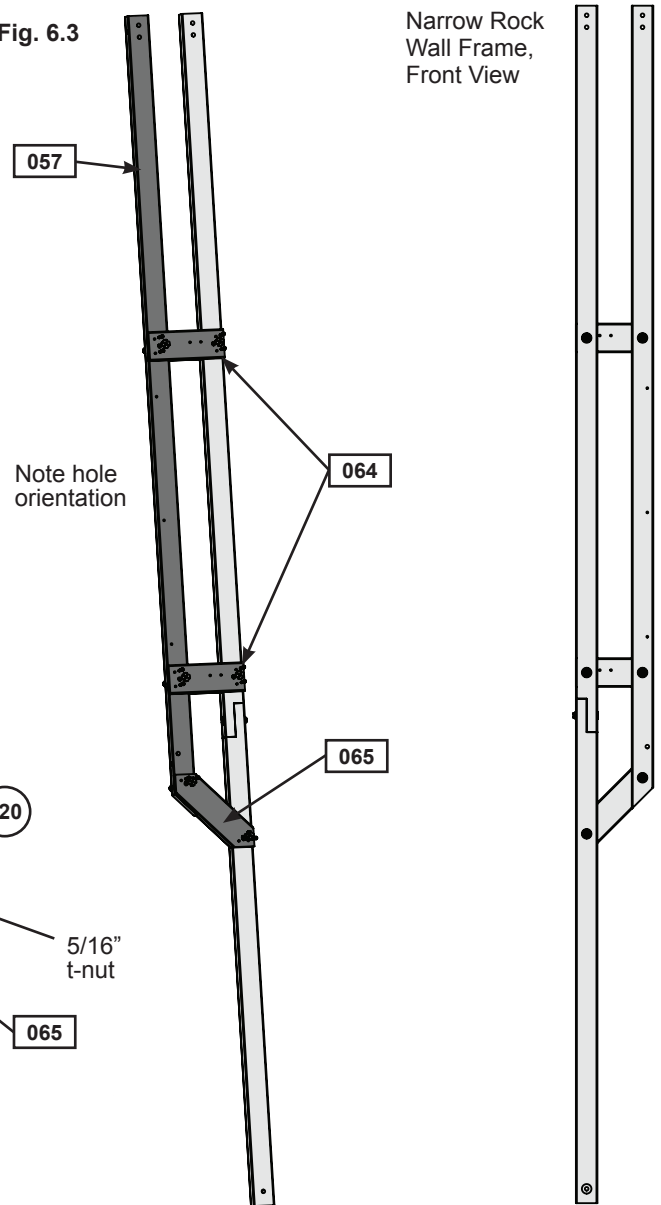

Narrow Rock Wall Frame, Front View

Fig. 6.4

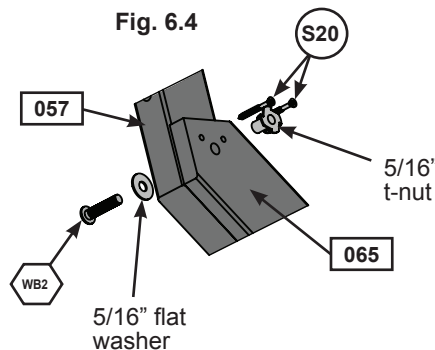


### Wood Parts

- 1 x 051 Rock Wall H 1-1/4 x 2-1/4 x 75-63/64"
- 1 x 062 Narrow Wall D 1-1/4 x 2-1/4 x 52-49/64"
- 1 x 057 Narrow Wall A 1-1/4 x 2-1/4 x 84"
- 2 x 064 Narrow Wall Cross 1-1/4 x 3 x 8-3/32"
- 1 x 065 Narrow Wall Angled Cross 1-1/4 x 3 x 11-1/4"

### Hardware


- 12 x S20 #8 x 1-3/8" Wood Screw
- 1 x H10 5/16 x 1-3/8" Hex Bolt (with 1/4" lock washer, 1/4" flat washer and 1/4" t-nut)
- 6 x WB2 5/16 x 1-3/8" Wafer Head Bolt (5/16" flat washer, 5/16" t-nut)

# Step 7: Slide Wall Assembly



**A:** Place (072) Narrow Panel Back against the left side of (071) Nest End Panel noticing panel orientation. The tops and bottoms of the panels should be flush and panels square. Pre-drill with a 3/16" drill bit, then fasten (072) Narrow Panel Back to (071) Nest End Panel with 4 (WL5) 1/4 x 2-1/2" Wafer Lags. (Fig. 7.1, 7.2 and 7.4)

**B:** Place (073) Narrow Front Panel against the right side of (071) Nest End Panel noticing panel orientation. The tops and bottoms of the panels should be flush and panels square. Pre-drill with a 3/16" drill bit, then fasten (071) Nest End Panel to (073) Narrow Front Panel with 4 (WL5) 1/4 x 2-1/2" Wafer Lags. (Fig. 7.1, 7.3 and 7.4)

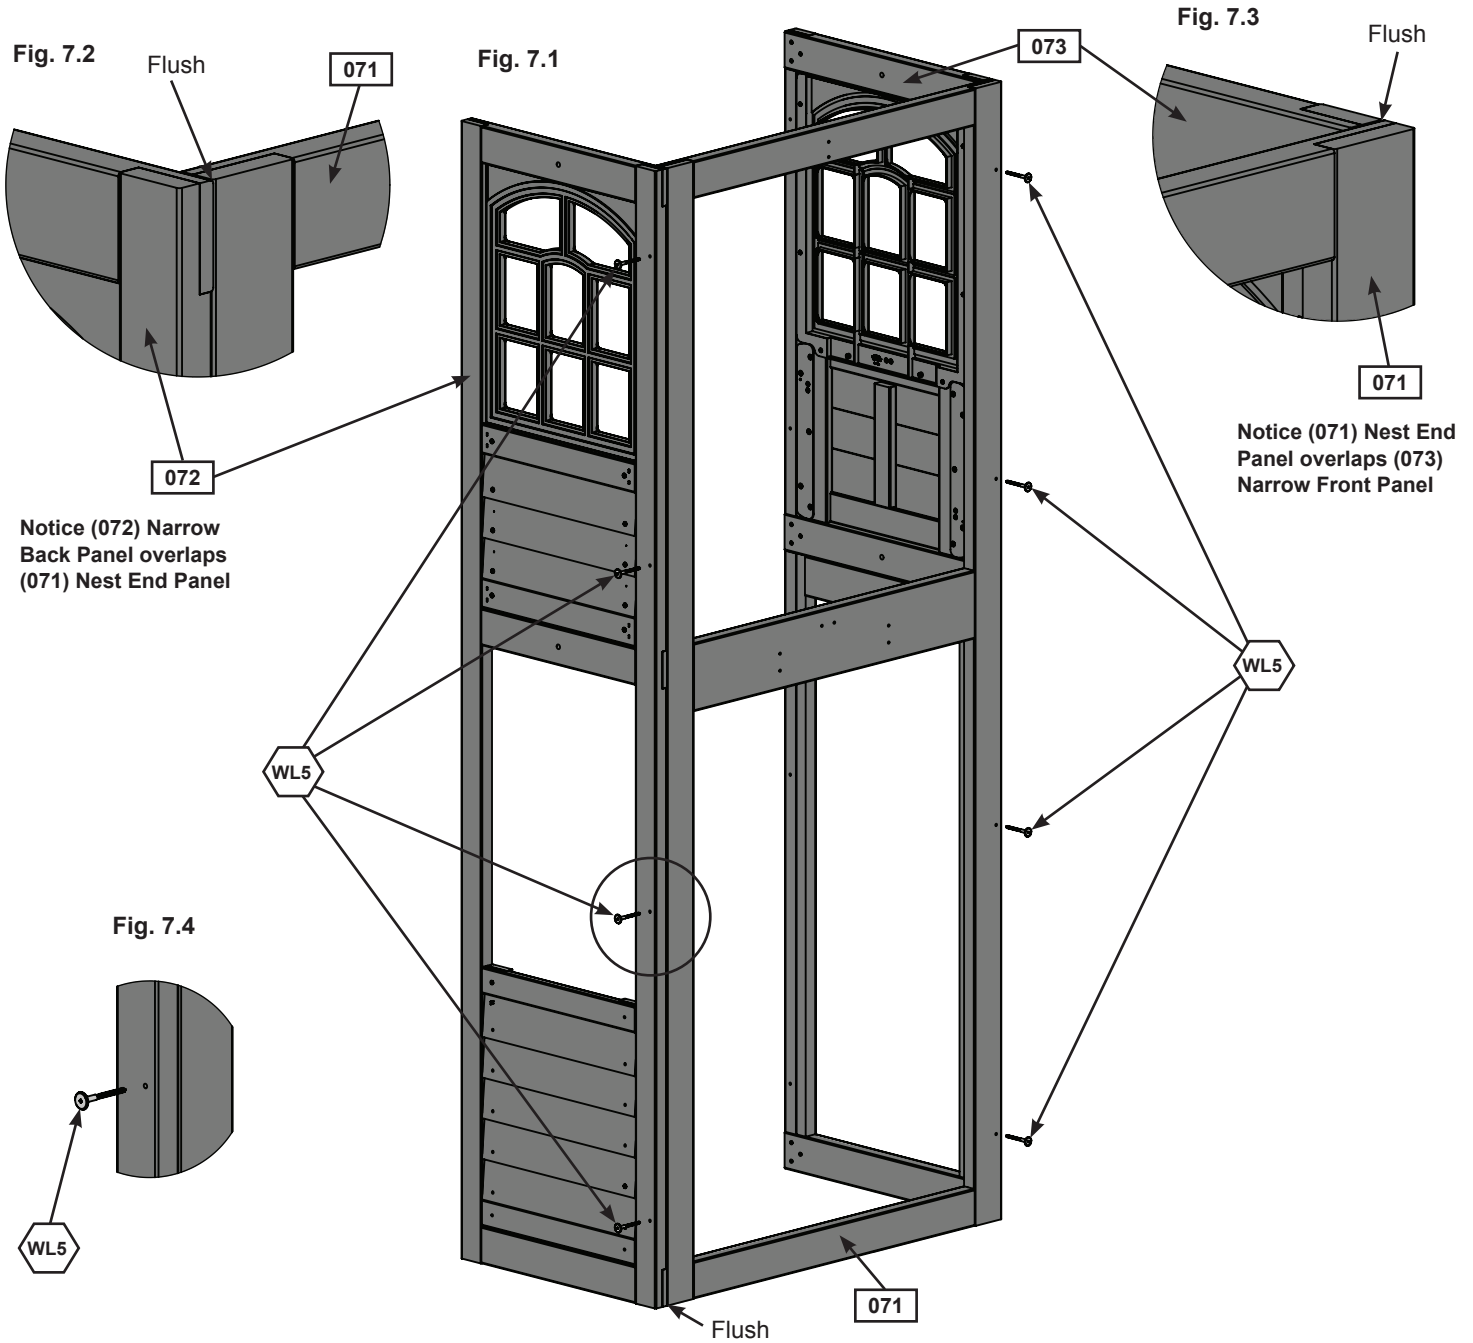


## Wood Parts

- 1 x 071 Nest End Panel 1-1/4 x 37 x 92"
- 1 x 072 Narrow Panel Back 1-1/4 x 21-1/2 x 92"
- 1 x 073 Narrow Front Panel 1-1/4 x 21-1/2 x 92"

## Hardware


- 8 x WL5 1/4 x 2-1/2" Wafer Lag

# Step 8: Swing Wall Assembly



**A:** Place (082) Panel Front Wall against the left side of (081) SW Wall Panel noticing panel orientation. The tops and bottoms of the panels should be flush and panels square. Pre-drill with a 3/16" drill bit, then fasten (082) Panel Front Wall to (081) SW Wall Panel with 4 (WL5) 1/4 x 2-1/2" Wafer Lags. (fig. 8.1 and 8.2)

**B:** Place (083) Wall Panel Back against the right side of (081) SW Wall Panel noticing panel orientation. The tops and bottoms of the panels should be flush and panels square. Pre-drill with a 3/16" drill bit, then fasten (081) SW Wall Panel to (083) Wall Panel Back with 4 (WL5) 1/4 x 2-1/2" Wafer Lags. (fig. 8.1 and 8.3)

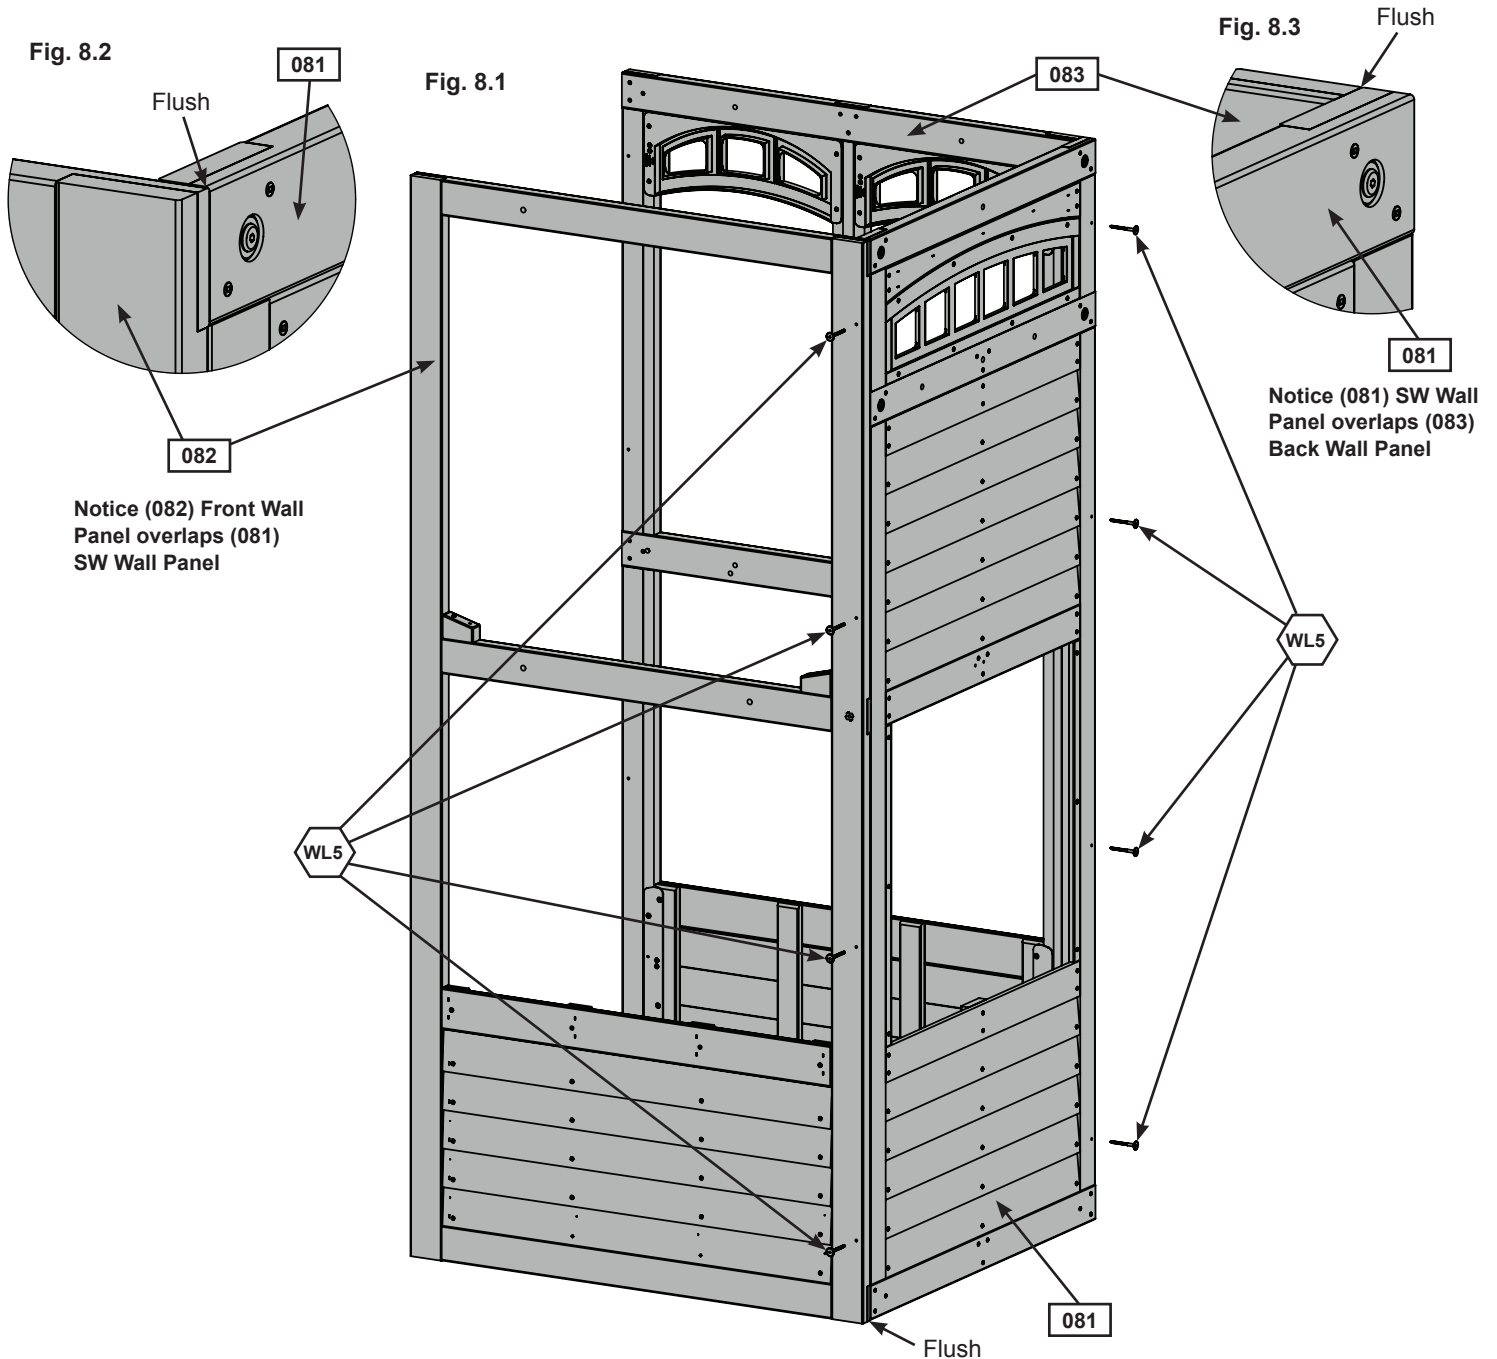

### Wood Parts

- 1 x **081** SW Wall Panel 1-1/4 x 37 x 92"
- 1 x **082** Panel Front Wall 1-1/4 x 43 x 92"
- 1 x **083** Wall Panel Back 1-1/4 x 43 x 92"

### Hardware

- 8 x **WL5** 1/4 x 2-1/2" Wafer Lag