



LSN50v2-S31 LoRaWAN Temperature & Humidity Sensor Manual

Document Version: 1.2

Image Version: v1.7.2

Version	Description	Date
1.0	Release	2020-Nov-10
1.1	Add Power on info, add pin definition and jumper. Switch info	2021-Jan-5
1.2	Add S31-B hardware photo	2021-Jun-26

1. Introduction	4
1.1 What is LSN50V2-S31 LoRaWAN Temperature & Humidity Sensor	4
1.2 Specifications	5
1.3 Features	6
1.4 Applications	6
1.5 Pin Definitions and Switch	6
1.5.1 Pin Definition	6
1.5.2 Jumper JP2	7
1.5.3 BOOT MODE / SW1	7
1.5.4 Reset Button	7
1.5.5 LED	7
1.5.6 Probe Dimension	7
1.6 Hardware Variant	8
2. How to use LSN50v2-S31?	9
2.1 How it works?	9
2.2 Quick guide to connect to LoRaWAN server (OTAA)	9
2.3 Uplink Payload	12
2.3.1 Payload Analyze	12
2.3.2 Payload Decoder file	13
2.4 Temperature & Humidity Alarm Feature	13
2.5 Configure LSN50v2-S31	14
2.5.1 General Configure Commands	14
2.5.2 Sensor related commands:	14
2.6 LED Status	17
2.7 Button Function	17
2.8 Firmware Change Log	17
3. Battery Info	18
4. Use AT Command	19
4.1 Access AT Command	19
5. FAQ	20
5.1 What is the frequency range of LSN50v2-S31?	20

5.2	<i>What is the Frequency Plan?</i>	20
5.3	<i>How to update the firmware?</i>	20
6.	Order Info	21
7.	Packing Info	22
8.	Support	22

1. Introduction

1.1 What is LSN50V2-S31 LoRaWAN Temperature & Humidity Sensor

The Dragino LSN50v2-S31 is a **LoRaWAN Temperature and Humidity Sensor** for Internet of Things solution. It is used to measure the **surrounding environment temperature and relative air humidity precisely**, and then upload to IoT server via LoRaWAN wireless protocol.


The temperature & humidity sensor used in LSN50v2-S31 is SHT31, which is fully calibrated, linearized, and temperature compensated digital output from Sensirion, it provides a strong reliability and long-term stability. The SHT31 is fixed in a **waterproof anti-condensation casing** for long term use.

LSN50v2-S31 supports **temperature and humidity alarm** feature, user can get alarm for instant notice.

LSN50v2-S31 is powered by **8500mAh Li-SOCI2 battery**, It is designed for long term use up to 10 years. (Real-world battery life depends on the use environment, update period. Please check related Power Analyze report).

Each LSN50v2-S31 is pre-load with a set of unique keys for LoRaWAN registration, register these keys to local LoRaWAN server and it will auto connect after power on.

LSN50v2-S31 in a LoRaWAN Network

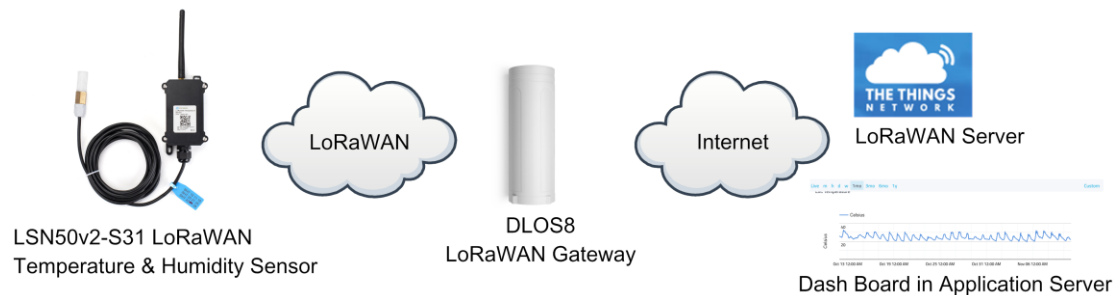

1.2 Specifications

Micro Controller:

- MCU: STM32L072CZT6
- Flash:192KB
- RAM:20KB
- EEPROM: 6KB
- Clock Speed: 32Mhz

Common DC Characteristics:

- Supply Voltage: built in 8500mAh Li-SOCI2 battery
- Operating Temperature: -40 ~ 85°C

Temperature Sensor:

- Range: -40 to + 80°C
- Accuracy: ± 0.2 @ 0-90 °C
- Resolution: 0.01°C
- Long Term Shift: <0.03 °C/yr

Humidity Sensor:

- Range: 0 ~ 99.9% RH
- Accuracy: $\pm 2\%$ RH (0 ~ 100%RH)
- Resolution: 0.01% RH
- Long Term Shift: <0.25 %RH/yr

LoRa Spec:

- Frequency Range,
 - ✓ Band 1 (HF): 862 ~ 1020 Mhz
- 168 dB maximum link budget.
- High sensitivity: down to -148 dBm.
- Bullet-proof front end: IIP3 = -12.5 dBm.
- Excellent blocking immunity.
- Built-in bit synchronizer for clock recovery.
- Preamble detection.
- 127 dB Dynamic Range RSSI.
- Automatic RF Sense and CAD with ultra-fast AFC.
- LoRaWAN 1.0.3 Specification

Power Consumption

- Sleeping Mode: 20uA
- LoRaWAN Transmit Mode: 125mA @ 20dBm 44mA @ 14dBm


1.3 Features

- ✓ LoRaWAN v1.0.3 Class A
- ✓ Ultra-low power consumption
- ✓ External 3 meters SHT31 probe
- ✓ Measure range -55°C ~ 125°C
- ✓ Temperature & Humidity alarm
- ✓ Bands: CN470/EU433/KR920/US915
EU868/AS923/AU915/IN865
- ✓ AT Commands to change parameters
- ✓ Uplink on periodically or Interrupt
- ✓ Downlink to change configure

1.4 Applications

- ✓ Wireless Alarm and Security Systems
- ✓ Home and Building Automation
- ✓ Industrial Monitoring and Control
- ✓ Long range Irrigation Systems.

1.5 Pin Definitions and Switch

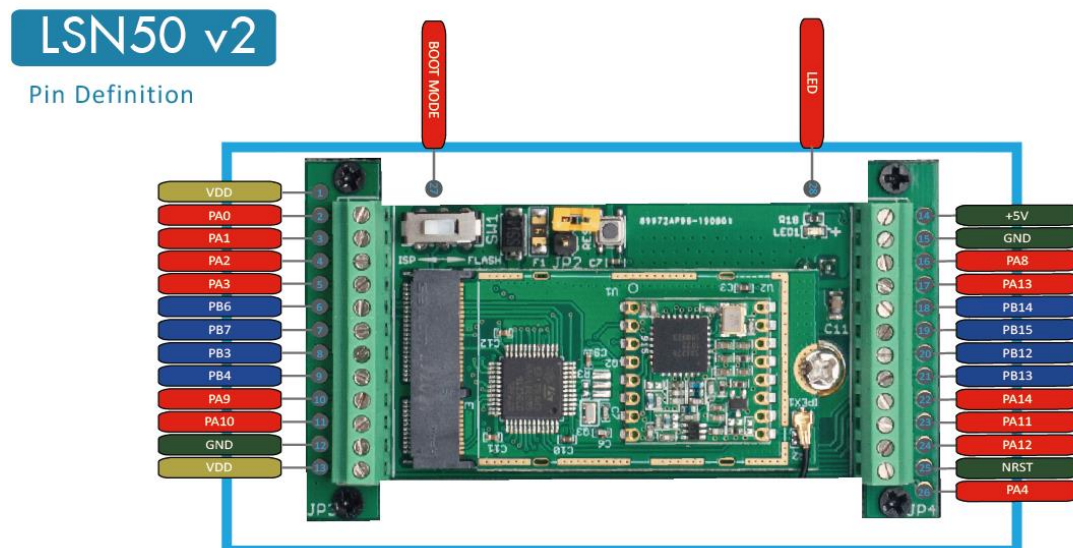

1.5.1 Pin Definition

The device is pre-configured to connect to SHT31 sensor. The other pins are not used. If user want to know more about other pins, please refer the user manual of LSn50v2 at:

<http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/>

1.5.2 Jumper JP2

Power on Device when put this jumper.

1.5.3 BOOT MODE / SW1

- 1) ISP: upgrade mode, device won't have any signal in this mode. but ready for upgrade firmware. LED won't work. Firmware won't run.
- 2) Flash: work mode, device starts to work and send out console output for further debug

1.5.4 Reset Button

Press to reboot the device.


1.5.5 LED

It will flash:

- 1) When boot the device in flash mode
- 2) Send an uplink packet

1.5.6 Probe Dimension

For LSN50 v2-S31

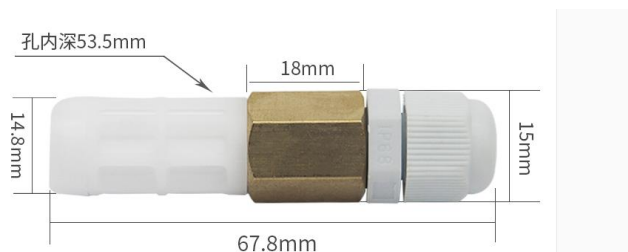

1.6 Hardware Variant

See [Order Info](#)

2. How to use LSN50v2-S31?


2.1 How it works?

The LSN50v2-S31 is working as LoRaWAN OTAA Class A end node. Each LSN50v2-S31 is shipped with a worldwide unique set of OTAA and ABP keys. User needs to input the OTAA or ABP keys in the LoRaWAN network server to register. Open the enclosure and power on the LSN50v2-S31, it will join the LoRaWAN network and start to transmit data. The default period for each uplink is 20 minutes.

2.2 Quick guide to connect to LoRaWAN server (OTAA)

Here is an example for how to join the [TTN LoRaWAN Server](#). Below is the network structure, in this demo we use [DLOS8](#) as LoRaWAN gateway.

LSN50v2-S31 in a LoRaWAN Network

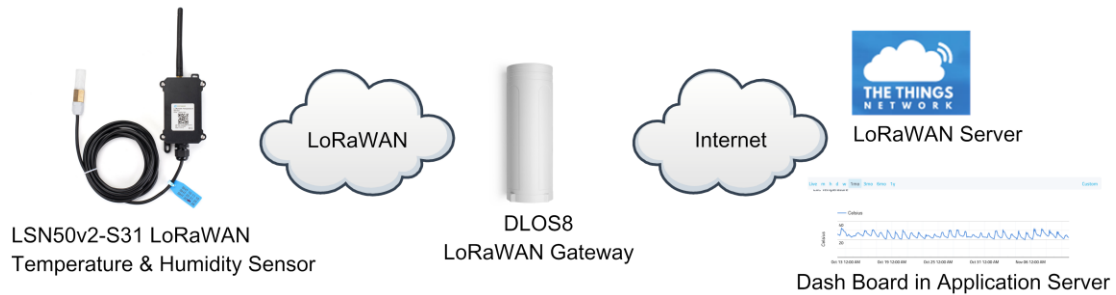

The DLOS8 is already set to connect to [TTN](#). What the rest we need to is register the LSN50V2-S31 to TTN:


Step 1: Create a device in TTN with the OTAA keys from LSN50V2-S31.

Each LSN50V2-S31 is shipped with a sticker with the default device EUI as below:





Input these keys in their LoRaWAN Server portal. Below is TTN screen shot:

Add APP EUI in the application

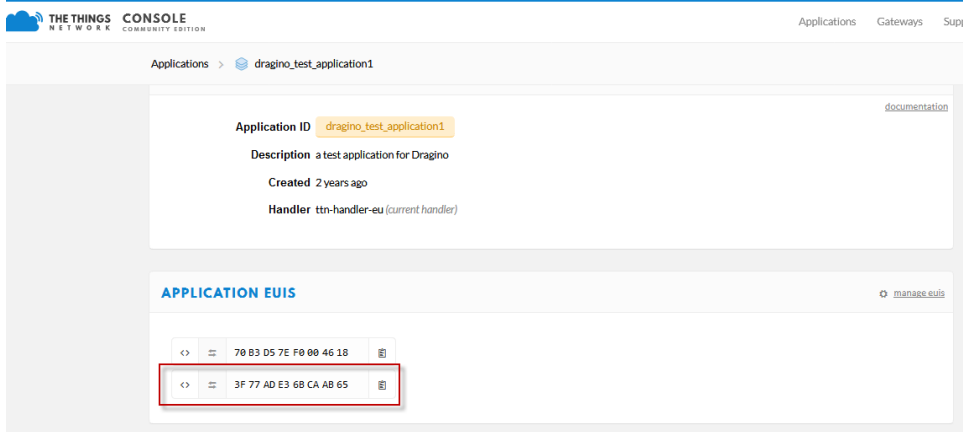

Add APP KEY and DEV EUI

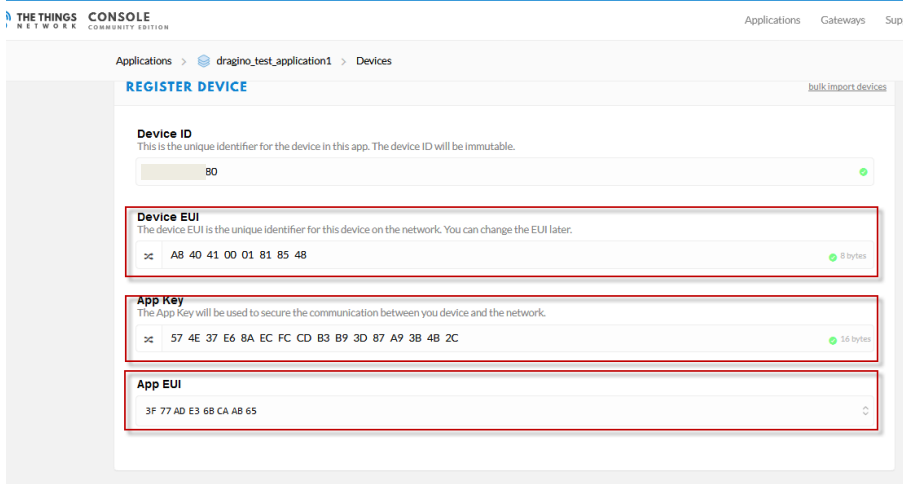

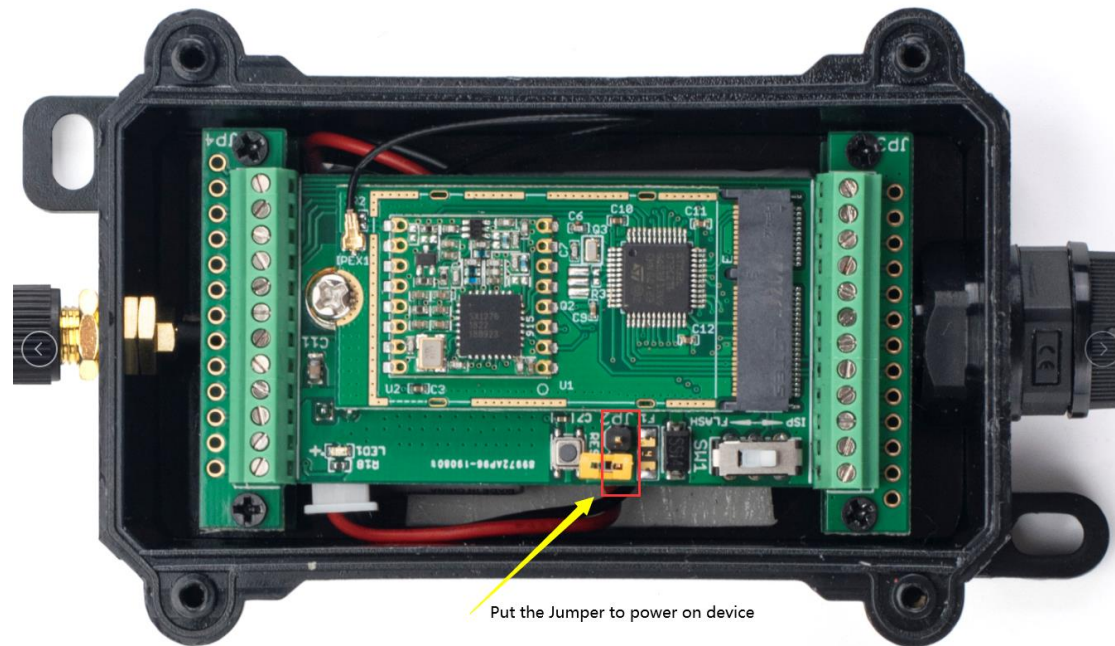Step 2: Power on LSN50V2-S31

Step 3: LSN50V2-S31 will auto join to TTN network via the LoRaWAN coverage by DLOS8. After join success, LSN50V2-S31 will start to uplink temperature value to server.

2.3 Uplink Payload

2.3.1 Payload Analyze

Normal Upload Payload:

LSN50v2-S31 use the same payload as LSn50v2 mod1, as below.

Size(bytes)	2	4	1	2	2
Value	Battery	Ignore	Alarm Flag	Temperature	Humidity

Battery:

Check the battery voltage.

Ex1: 0x0B45 = 2885mV

Ex2: 0x0B49 = 2889mV

Temperature:

Example:

If payload is: 0105H: (0105 & FC00 == 0), temp = 0105H / 10 = 26.1 degree

If payload is: FF3FH: (FF3F & FC00 == 1), temp = (FF3FH - 65536)/10 = -19.3 degrees.

Humidity:

Read:0x(0197)=412 Value: 412 / 10=41.2, So 41.2%

Alarm Flag & MOD:

Example:

If payload & 0x01 = 0x01 → This is an Alarm Message

If payload & 0x01 = 0x00 → This is a normal uplink message, no alarm

If payload >> 2 = 0x00 → means MOD=1, This is a sampling uplink message

If payload >> 2 = 0x31 → means MOD=31, this message is a reply message for polling, this message contains the alarm settings. see [this link](#) for detail.

2.3.2 Payload Decoder file


In TTN, use can add a custom payload so it shows friendly.

In the page Applications --> Payload Formats --> Custom --> decoder to add the decoder from:

http://www.dragino.com/downloads/index.php?dir=LoRa_End_Node/LSN50v2-S31/Decoder/

2.4 Temperature & Humidity Alarm Feature

LSN50V2-S31 work flow with Alarm feature.

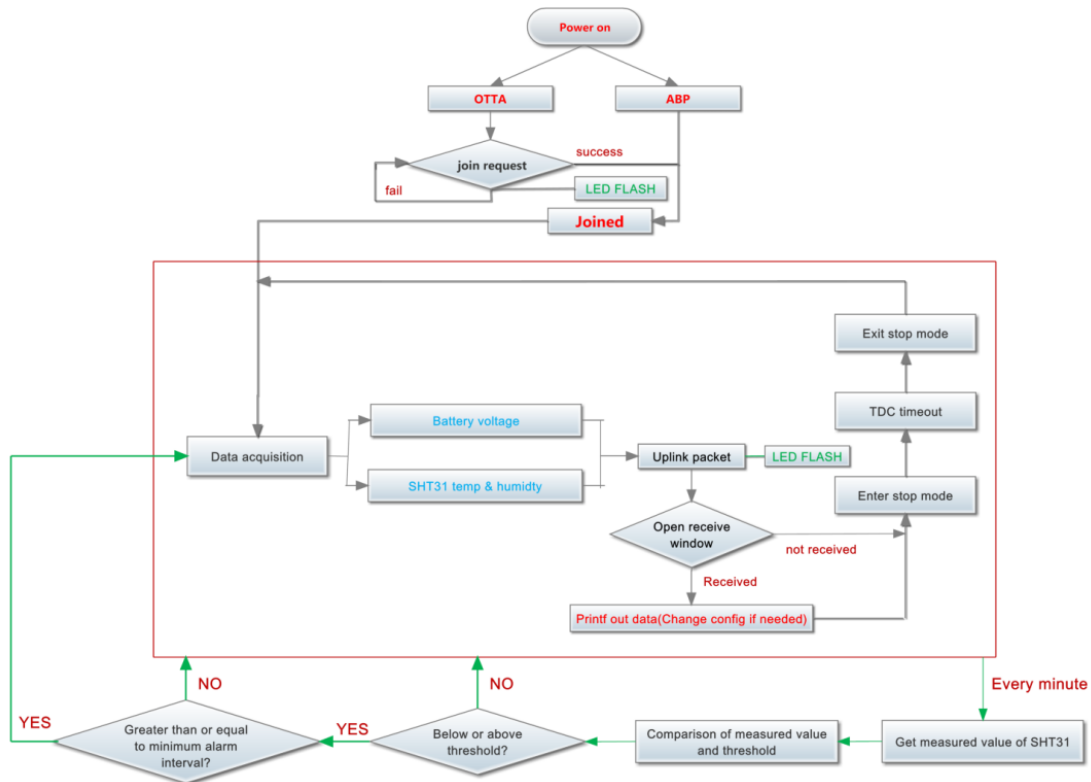

User can use **AT+SHTEMP** and **AT+SHHUM** command to set the alarm low limit or high limit. Device will check the temperature & Humidity every minute, if the temperature lower than low limit or greater than high limit. LSN50v2-S31 will send an [Alarm packet base on Confirmed Uplink Mode](#) to server.

Below is an example of the Alarm Packet.

Applications > engineer-lin > Devices > Isn50 > Data

Overview Data Settings

APPLICATION DATA

Filters: uplink downlink activation ack error

time	counter	port	payload	ADC_CH0V	BatV	Digital_IStatus	Door_sta
15:45:04	6	2	payload: OCEF0000010200012801BB	0.258	3.311	"L"	Door_sta
15:44:38	0						
							Alarm uplink
			confirmed payload: OCEC000000FC01012403BC	0.252	3.308	"L"	Door_status: "OPEN" EXTI_Trigger: "TRUE" Hum_S
15:44:04	4	2	payload: OCEC0000012200011903A8	0.29	3.308	"L"	Door_sta
15:43:34	3	2	payload: OCEC0000011A00010F032C	0.282	3.308	"L"	Door_sta

2.5 Configure LSN50v2-S31

LSN50V2-S31 supports configuration via LoRaWAN downlink command or AT Commands.

- Downlink command instructions for different platform:

http://wiki.dragino.com/index.php?title=Main_Page#Use_Note_for_Server

- AT Command Access Instructions: [LINK](#)

There are two parts of commands: General one and Special for this model.

2.5.1 General Configure Commands

These commands are to configure:

- ✓ General system settings like: uplink interval.
- ✓ LoRaWAN protocol & radio related command.

These commands can be found on the wiki:

http://wiki.dragino.com/index.php?title=End_Device_AT_Commands_and_Downlink_Commands

2.5.2 Sensor related commands:

Set Temperature Alarm Threshold:

- AT Command:

AT+SHTEMP=min,max

- ✧ When min=0, and max≠0, Alarm higher than max
- ✧ When min≠0, and max=0, Alarm lower than min
- ✧ When min≠0 and max≠0, Alarm higher than max or lower than min

Example:

AT+SHTEMP=0,30 // Alarm when temperature higher than 30.

➤ Downlink Payload:

0x(0C 01 00 1E): //Set AT+SHTEMP=0,30

(note: 3rd byte= 0x00 for low limit(not set), 4th byte = 0x1E for high limit: 30)

Set Humidity Alarm Threshold:

➤ AT Command:

AT+SHHUM=min,max

- ✧ When min=0, and max≠0, Alarm higher than max
- ✧ When min≠0, and max=0, Alarm lower than min
- ✧ When min≠0 and max≠0, Alarm higher than max or lower than min

Example:

AT+SHHUM=70,0 // Alarm when humidity lower than 70%.

➤ Downlink Payload:

0x(0C 02 46 00): //Set AT+SHTHUM=70,0

(note: 3rd byte= 0x46 for low limit (70%), 4th byte = 0x00 for high limit (not set))

Set Alarm Interval:

The shortest time of two Alarm packet. (unit: min)

➤ AT Command:

AT+ATDC=30 // The shortest interval of two Alarm packets is 30 minutes, Means is there is an alarm packet uplink, there won't be another one in the next 30 minutes.

➤ Downlink Payload:

0x(0D 00 1E) ---> Set AT+ATDC=0x 00 1E = 30 minutes

Poll the Alarm settings:

Send a LoRaWAN downlink to ask device send Alarm settings.

➤ Downlink Payload:

0x0E 01

Example:

Applications > engineer-lin > Devices > lsn50 > Data

Overview Data Settings

APPLICATION DATA

Filters: uplink downlink activation ack error

Alarm status

time	counter	port	payload	ADC_CH0V: 0.265	BatV: 3.311	Digital_IStatus: "L"	Door_status	
15:43:04	2	2	payload: 0C EF 00 00 01 09 00 01 0D 01 97					
15:42:39	1	2	payload: 0C EC 00 00 00 00 7C F6 1E 00 50		BatV: 3.308	SHTEMPMAX: 30	SHTEMPMIN: -10	SHTHUMMAX: 50
15:42:43	1	confirmed ack	app id: engineer-lin	SHT31Temp minimum of alarm value	SHT31Temp maximum of alarm value	SHT31Hum minimum of alarm value	SHT31Hum maximum of alarm value	
15:42:39	1	confirmed	payload: 0E 01					
15:42:36	0	2	payload: 0C EF 00 00 01 00 00 01 0D 01 A1	ADC_CH0V: 0.256	BatV: 3.311	Digital_IStatus: "L"	Door_status	

Explain:

- Alarm & MOD bit is 0x7C, 0x7C >> 2 = 0x31: Means this message is the Alarm settings message.

2.6 LED Status

LSN50v2-S31 has an internal LED, it will active in below situation:

- LED will fast blink 5 times when boot, this means the temperature sensor is detected
- After the fast blinks on boot, the LED will flash once which means device is trying to send Join Packet to the network.
- If device successful join LoRaWAN network, the LED will be solid on for 5 seconds.

2.7 Button Function

Internal RESET button:

Press this button will reboot the device. Device will process OTAA Join to network again.

2.8 Firmware Change Log

Firmware version and change log please see:

[See this link.](#)

3. Battery Info

The LSN50v2-S31 battery is a combination of a 8500mAh ER26500 Li/SOCI2 Battery and a Super Capacitor. The battery is non-rechargeable battery type with a low discharge rate (<2% per year). This type of battery is commonly used in IoT devices such as water meter.

The battery is designed to last for more than 5 years for the LSN50v2-S31.

The battery related documents can be found as below:

<http://www.dragino.com/downloads/index.php?dir=datasheet/Battery/ER26500/>

The connector is as below incase user want to use their own battery





There are several parameters affect the battery power. Please see consumption report from here for the detail explain:

http://www.dragino.com/downloads/index.php?dir=LoRa_End_Node/LSN50v2-S31/Test_Report/

4. Use AT Command

4.1 Access AT Command

User can use a USB to TTL adapter to connect to LSN50V2-S31 to use AT command to configure the device. Example is as below:

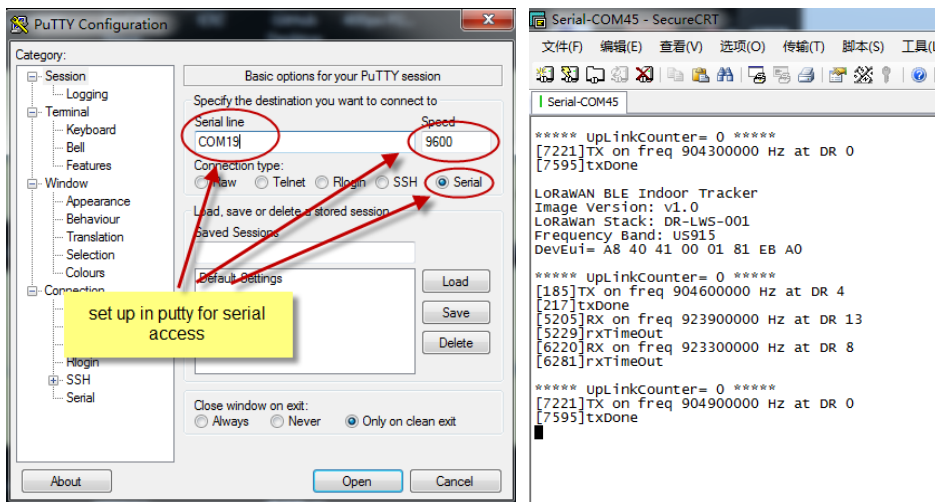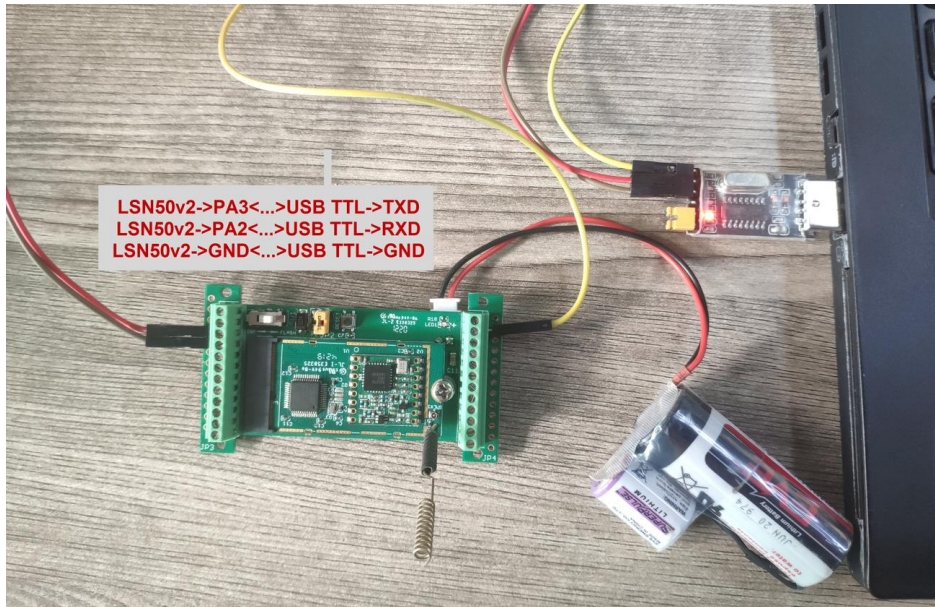

5. FAQ

5.1 What is the frequency range of LSN50v2-S31?

Different LSN50V2-S31 version supports different frequency range, below is the table for the working frequency and recommend bands for each model:

Version	LoRa IC	Working Frequency	Best Tune Frequency	Recommend Bands
433	SX1278	Band2(LF): 410 ~525 Mhz	433Mhz	CN470/EU433
868	SX1276	Band1(HF):862~1020 Mhz	868Mhz	EU868/IN865/RU864
915	SX1276	Band1(HF):862 ~1020 Mhz	915Mhz	AS923/AU915/ KR920/US915

5.2 What is the Frequency Plan?

Please refer Dragino End Node Frequency Plan:

http://wiki.dragino.com/index.php?title=End_Device_Frequency_Band

5.3 How to update the firmware?

User can upgrade the firmware for 1) bug fix, 2) new feature release or 3) change frequency plan.

Please see this link for how to upgrade:

http://wiki.dragino.com/index.php?title=Firmware_Upgrade_Instruction_for_STM32_base_products#Hardware_Upgrade_Method_Support_List



6. Order Info

Part Number: **LSN50V2-S31-XXX**

Or **LSN50V2-S31B-XXX**

XXX: The default frequency band

- ✓ **AS923**: LoRaWAN AS923 band
- ✓ **AU915**: LoRaWAN AU915 band
- ✓ **EU433**: LoRaWAN EU433 band
- ✓ **EU868**: LoRaWAN EU868 band
- ✓ **KR920**: LoRaWAN KR920 band
- ✓ **US915**: LoRaWAN US915 band
- ✓ **IN865**: LoRaWAN IN865 band
- ✓ **CN470**: LoRaWAN CN470 band

Model	Photo	Description
LSN50-v2-S31		External 3 meters SHT31 probe
LSN50-v2-S31B		On device SHT31 Probe

7. Packing Info

Package Includes:

- ✓ LSN50v2-S31 or LSN50v2-S31B LoRaWAN Temperature Sensor x 1

Dimension and weight:

- ✓ Device Size:
- ✓ Device Weight:
- ✓ Package Size:
- ✓ Package Weight:

8. Support

- Support is provided Monday to Friday, from 09:00 to 18:00 GMT+8. Due to different time zones we cannot offer live support. However, your questions will be answered as soon as possible in the before-mentioned schedule.
- Provide as much information as possible regarding your enquiry (product models, accurately describe your problem and steps to replicate it etc) and send a mail to

support@dragino.com