



AI ToF People Counting Sensor

VS133-P

User Guide



Safety Precautions

Milesight will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.

- ❖ Though the device is compliant with Class 1 (IEC/EN 60825-1:2014), please **DO NOT** look at the ToF sensor too close and directly.
- ❖ The device must not be disassembled or remodeled in any way.
- ❖ To avoid risk of fire and electric shock, do keep the product away from rain and moisture before installation.
- ❖ Do not place the device where the temperature is below/above the operating range.
- ❖ **Do not touch the device directly to avoid the scalds when the device is running.**
- ❖ The device must never be subjected to shocks or impacts.
- ❖ Make sure the device is firmly fixed when installing.
- ❖ Do not expose the device to where laser beam equipment is used.
- ❖ Use a soft, dry cloth to clean the lens of the device.


Declaration of Conformity

VS133-P is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.



Copyright © 2011-2023 Milesight. All rights reserved.

All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Xiamen Milesight IoT Co., Ltd.

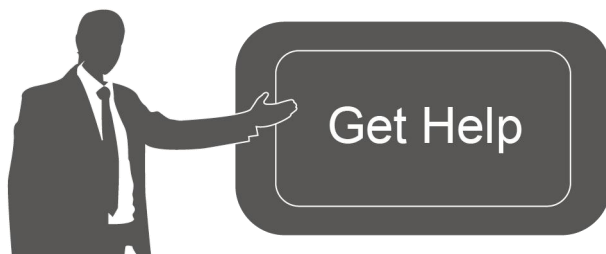

For assistance, please contact

Milesight technical support:

Email: iot.support@milesight.com

Support Portal: support.milesight-iot.com

Tel: 86-592-5085280

Fax: 86-592-5023065

Address: Building C09, Software Park
Phase III, Xiamen 361024,
China

Revision History

Date	Doc Version	Description
May 24, 2023	V 1.0	Initial version
Aug. 10, 2023	V 1.1	<ol style="list-style-type: none">1. Add staff lanyard accessory;2. Add multi-device stitching feature;3. Add installation height detection feature;4. Add DHCP feature;5. Display HTTP/MQTT connection status and support data re-transmission feature;6. Add DST time feature;7. Add ToF frequency setting.
Sep. 28, 2023	V1.2	<ol style="list-style-type: none">1. Add Region Monitoring and dwell time function;2. Add Heat Map function;3. Add Feet Tracking tracking mode of counting;4. Add preview layout edition feature;5. Add cumulative count reset schedule feature;6. Add HTTPS web access and data transmission feature.
Nov. 30, 2023	V1.3	<ol style="list-style-type: none">1. Add Group Counting function;2. Add video validation function;3. Add other functions.

Contents

1. Product Introduction	5
1.1 Overview	5
1.2 Key Features	5
2. Hardware Introduction	6
2.1 Packing List	6
2.2 Hardware Overview	6
2.3 Reset Button	7
2.4 Dimensions (mm)	7
3. Power Supply	7
4. Access the Sensor	8
5. Operation Guide	9
5.1 Dashboard	10
5.2 Rule	11
5.2.1 Basic Counting Settings	12
5.2.2 Multi-Device Stitching	17
5.3 Communication	23
5.4 Report	26
5.5 Validation	27
5.6 System	29
5.6.1 Device Info	29
5.6.2 User	30
5.6.3 Time Configuration	32
5.6.4 Remote Management	32
5.6.5 System Maintenance	33
6. Installation Instruction	34
6.1 Installation Height	34
6.2 Covered Detection Area	34
6.3 Environment Requirements	35
6.4 Installation	36
6.5 Factors Affecting Accuracy	39
7. Communication Protocol	39
7.1 Line Crossing People Counting-Periodic Report	39
7.2 Line Crossing People Counting-Trigger Report	41
7.3 Region People Counting - Periodic Report	43
7.4 Region People Counting - Trigger Report	44

1. Product Introduction

1.1 Overview


VS133-P is a sensor that uses second-generation ToF technology to accurately count people. This technology provides more precise depth maps and longer detection distances while maintaining an excellent privacy protection rate. The advanced ToF technology combined with an AI algorithm enables the sensor to handle complex scenes and distinguish non-human objects with up to 99.8% accuracy. With easy installation, VS133-P is ideal for entrances or corridors in retail stores, malls, offices, subways, and other locations.

1.2 Key Features

- Up to 99.8% accuracy combining the 2nd generation ToF technology and AI algorithm
- Support Multi-Device Stitching which enables the linking of multiple devices, allowing for up to four-device stitching to expand coverage
- Allow to collect people counting data by differentiating children and adults and detecting staffs via identification like staff lanyards for clearer people analysis
- Smart U-turn detection to filter redundant counting of people wandering in the area
- Support queuing management via dwell time detection and regional people counting
- Support both motion and dwell time heat map for anonymous customer tracking
- Support Group Counting function to gain deeper insights into customers' behaviors
- Support advanced Heat Map function which provides deeper insights by visually representing the distribution and intensity of foot traffic
- Wider field angle to obtain longer-distance depth maps and cover a larger area
- Working well even in low-light or completely dark environments with great lighting adaptability
- Free from privacy concerns without image capturing
- Automatically detect the optimal installation height, facilitating fast deployment and intelligent detection
- High compatibility of data transmission from Ethernet port (HTTP/MQTT/CGI)
- Various serial ports are equipped
- Support local data storage and data retransmission to collect data securely
- Easy configuration via Ethernet port for web GUI configuration
- Quick and easy management with Milesight DeviceHub

2. Hardware Introduction

2.1 Packing List



1 × VS133-P Device



4 × Ceiling Mounting Kits




1 × Mounting Sticker



8 × Staff Tags



1 × Multi-interface Cable

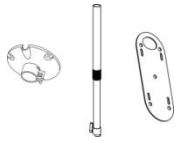

1 × VB01 Multifunctional Bracket Kit (Optional)



8 × Staff Lanyards (Optional)




1 × Quick Guide



1 × Warranty Card

! If any of the above items is missing or damaged, please contact your sales representative.


2.2 Hardware Overview

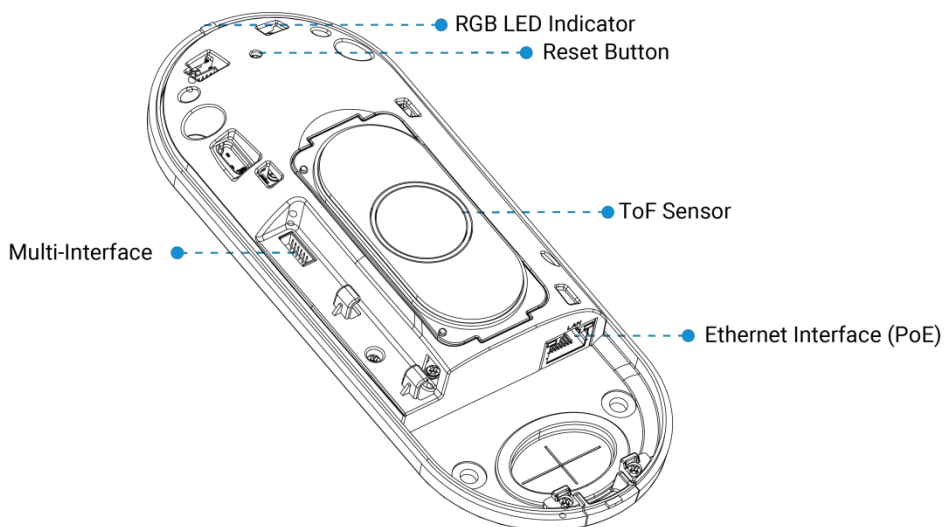

2.3 Reset Button

Function	Action	LED Indication
Reset to Factory Default	Press and hold the reset button for more than 10 seconds.	Green light blinks until the reset process is completed


2.4 Dimensions (mm)

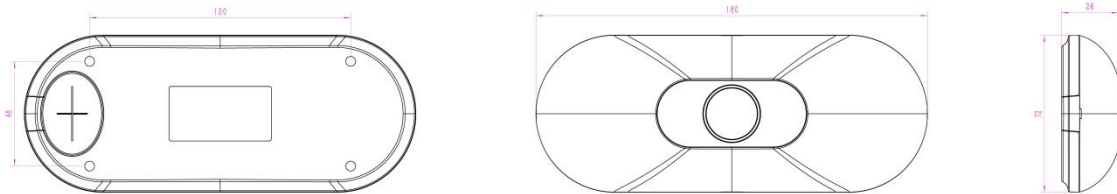


3. Power Supply

VS133-P can be powered by 802.3at PoE+. Choose one of the following methods to power up the device.

- **Powered by a PoE Switch**

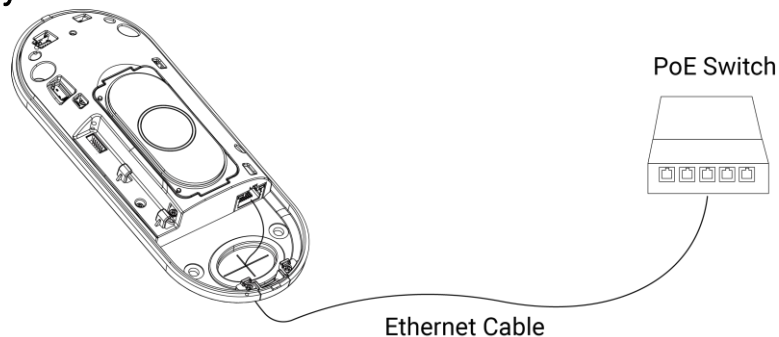

- **Powered by a PoE Injector**

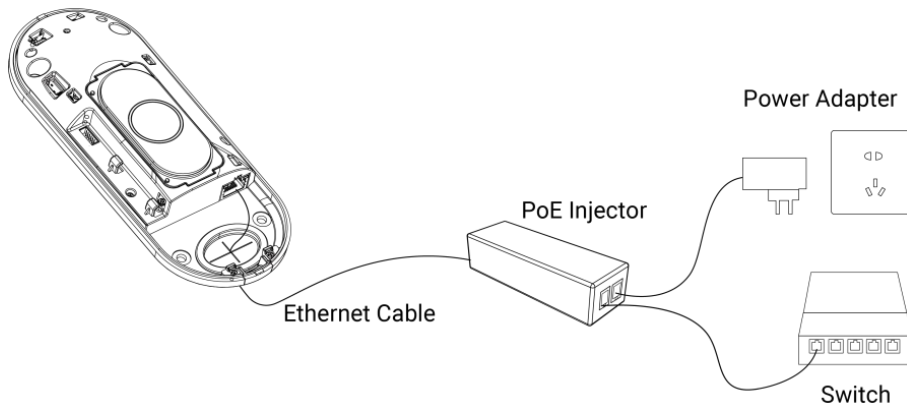


4. Access the Sensor

VS133-P sensor provides user-friendly web GUI for configuration and users can access it via Ethernet port. The recommended browsers are Chrome and Microsoft Edge. The default IP of Ethernet port is **192.168.5.220** (can be found on the device label).


Step 1: Power on the device and connect the Ethernet port to a PC.

Step 2: Change the IP address of computer to 192.168.5.0 segment as below:

- a. Go to Start → Control Panel → Network and Internet → Network and Sharing Center → Ethernet → Properties → Internet Protocol Version 4 (TCP/IPv4).

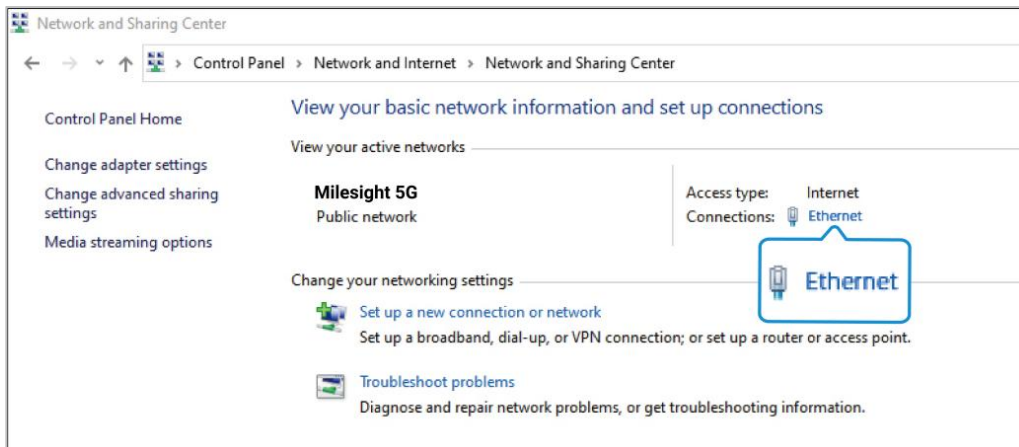

- b. Enter an IP address that in the same segment with sensor (e.g. 192.168.5.61, but please note that this IP address shall not conflict with the IP address on the existing network).

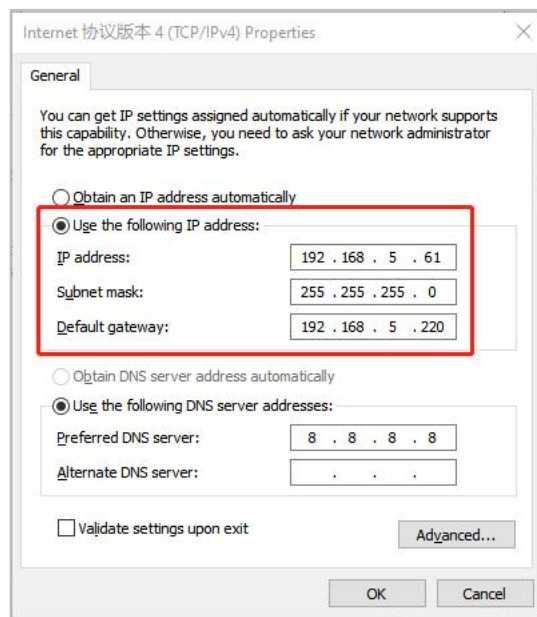

Step 3: Open the Browser and type 192.168.5.220 to access the web GUI.


Step 4: Select the language.

Step 5: Users need to set the password and three security questions when using the sensor for

the first time (three questions can be skipped by refreshing webpage). After configuration, log in with username (admin) and custom password.


Note:

- 1) Password must be 8 to 16 characters long, which contains at least two kinds or more in combination with numbers, lowercase letters, uppercase letters and special characters.
- 2) You can click the “forgot password” in login page to reset the password by answering three security questions when you forget the password if you set the security questions in advance.

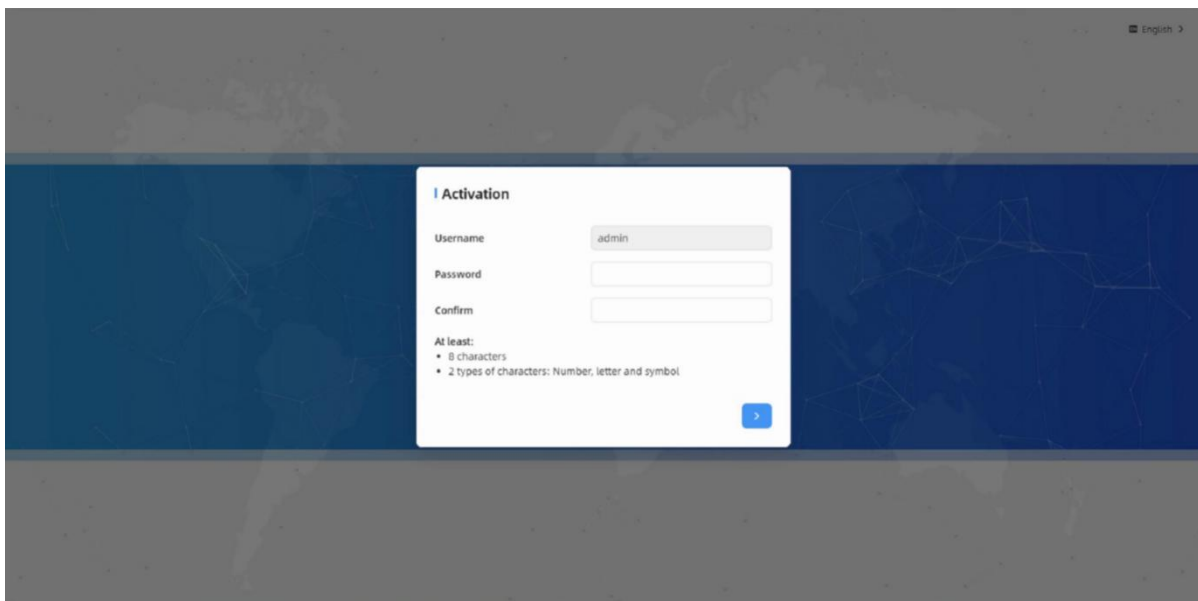

The screenshot shows the 'Activation' form on a web page. The form is centered on a dark blue background with a white border. It contains the following fields and text:

- Activation** (Section Header)
- Username**: Input field containing 'admin'
- Password**: Input field
- Confirm**: Input field
- At least:**
 - 8 characters
 - 2 types of characters: Number, letter and symbol
- A blue button with a right-pointing arrow.

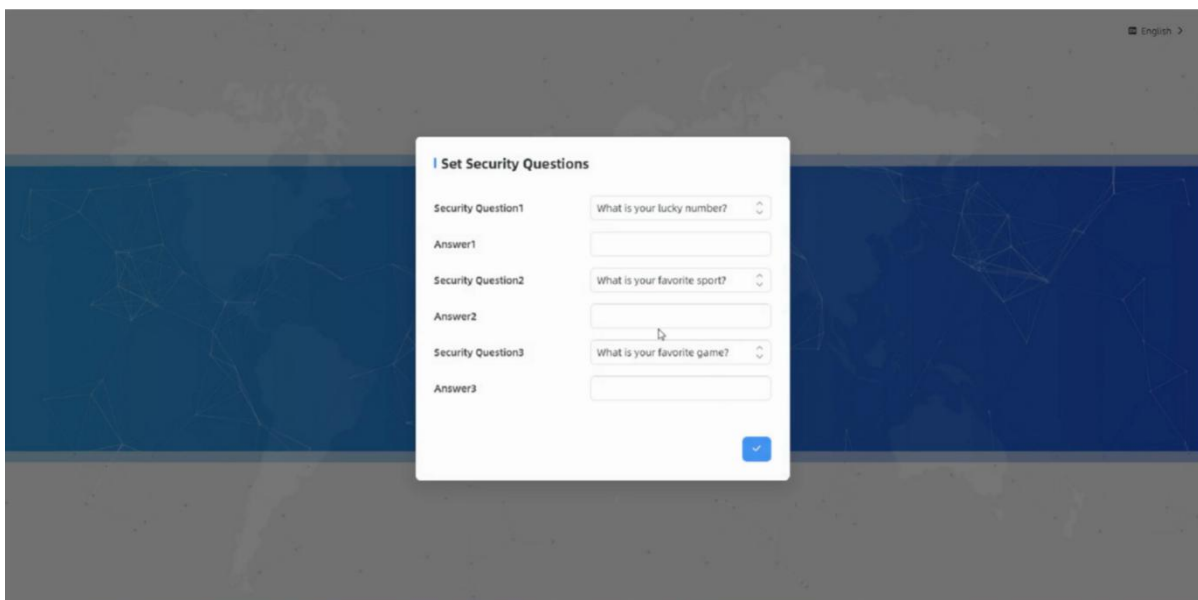

The screenshot shows the 'Set Security Questions' form on a web page. The form is centered on a dark blue background with a white border. It contains the following fields and text:

- Set Security Questions** (Section Header)
- Security Question1**: Dropdown menu with 'What is your lucky number?' selected.
- Answer1**: Input field
- Security Question2**: Dropdown menu with 'What is your favorite sport?' selected.
- Answer2**: Input field
- Security Question3**: Dropdown menu with 'What is your favorite game?' selected.
- Answer3**: Input field
- A blue button with a checkmark.

5. Operation Guide

5.1 Dashboard

After logging on to the device web GUI successfully, user is allowed to view live video as follows.

The screenshot shows the Milesight dashboard interface. On the left is a sidebar menu with options: Dashboard, Rule, Communication, Report, Validation, and System. The main area contains several data cards and a large video feed. The video feed shows a room with a heatmap overlay indicating people's movement. Labels include 'Node3', 'Master', 'Line3', 'Region1', and 'Node2'. A data card for 'Line1' shows 0 Total In, 0 Total Out, and 0 Capacity. Another card for 'Region1' shows 2 Total Count, 0s Max. Dwell, and 0s Avg. Dwell. Below the cards are 'Reset Count' and 'Digital Output' buttons. The bottom of the dashboard shows the date and time: 01/12/2023 13:54:04.

This screenshot shows the dashboard in full-screen mode. The video feed is the central focus, with the heatmap overlay. The data cards are smaller and positioned on the left. A 'Collapse' button is visible in the top left of the data cards area. The text '按 Esc 即可退出全屏模式' is displayed at the top center of the video area.

Parameters	Description
	Hide Capacity: Hide the total count data capacity; Staff Excluded: Exclude staff data from statistical data; Children Excluded: Exclude children data from statistical data.
Reset Count	Clear all accumulated entrance and exit people counting values.
Digital Output	Click to output a 5s high level signal from alarm out interface. Alarm Output: dry contact, output=two contacts closure

Edit Preview
Layout

Click to edit the preview layout.

Step 1: Select video stream preview, static image preview or no image preview as needed.

Step 2: Click to show tracking lines, detection lines, U-turn areas and detection regions as needed.

Edit Preview Layout

Scene Preview Video Stream Static Images No Image

Show Tracking Lines

Show Detection Lines


Show U-turn Areas

Show Detection Regions

Note: When working mode is Node mode, the device will not show people counting data.

The screenshot shows the Milesight dashboard interface. On the left is a dark sidebar with navigation options: Dashboard, Rule, Communication, and System. Below the sidebar are language and user settings: English and admin. The main content area is titled 'Node Mode' and includes a 'Digital Output' button. A large heatmap visualization shows a person walking through a scene, with blue and yellow areas indicating detection regions. Below the heatmap are two buttons: 'Edit Preview Layout' and 'Refresh Image'.

5.2 Rule

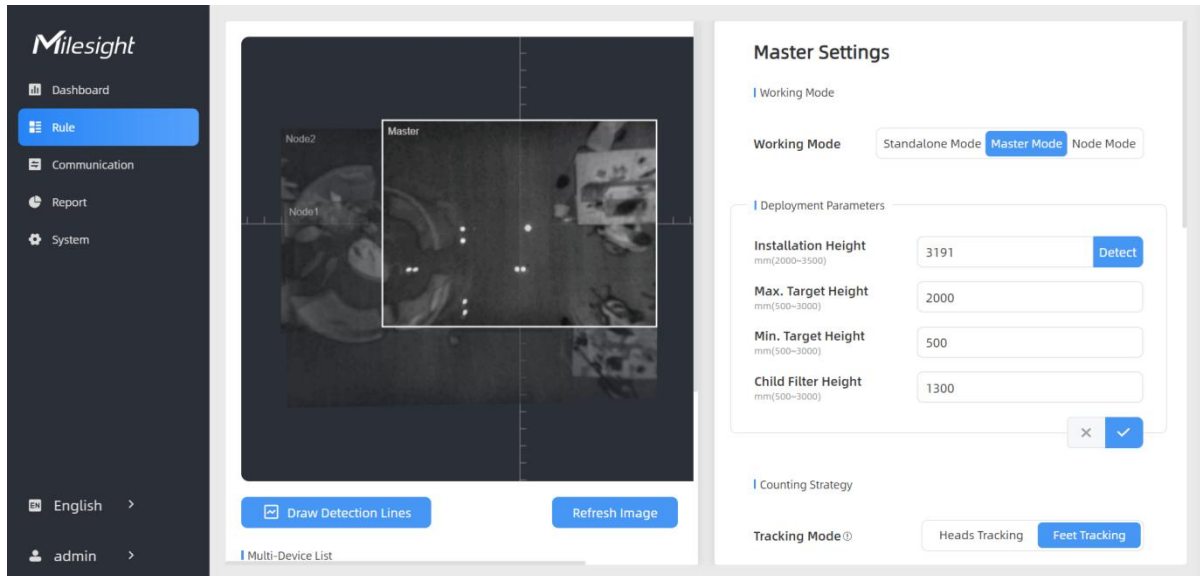

VS133-P supports 3 working modes:

Standalone Mode: works as a standalone device to count people.

Master Mode: works as a master device to receive live view and tracks from other node devices. One master device can connect 3 node devices at most.

Node Mode: works as a node device to forward live view and tracks to the master device.

5.2.1 Basic Counting Settings

Draw Detection Lines

Users can draw detection lines to record the people count values which indicate the number of people enter or exit.

Step 1: Click **Draw Detection Lines**.

Step 2: Left-click to start drawing and drag the mouse to draw a line, left-click again to continue drawing a different direction edge, and right-click the mouse to complete the drawing. The line can be dragged to adjust the location and length. One device supports at most 4 broken lines with maximum 4 segments each.


Step 3: If users need to delete the line, click **Draw Detection Lines** and select the line which need to be deleted, then click **Clear This Line** or click **Clear All**.

The screenshot displays the Milesight software interface. On the left is a dark sidebar with navigation options: Dashboard, Rule (highlighted), Communication, Report, and System. Below these are language and user settings: English and admin. The main area is split into two sections. The left section shows a camera feed with a 'Master' node and two 'Node1' nodes. Three detection lines are drawn across the feed, labeled 'Line1', 'Line2', and 'Line3'. Below the feed are buttons for 'Draw Detection Lines' and 'Refresh Image'. The right section is the 'Master Settings' panel, which includes:

- Working Mode:** Standalone Mode, Master Mode (selected), Node Mode.
- Deployment Parameters:**
 - Installation Height: 3191 mm (range 2000-3500) with a 'Detect' button.
 - Max. Target Height: 2000 mm (range 500-3000).
 - Min. Target Height: 500 mm (range 500-3000).
 - Child Filter Height: 1300 mm (range 500-3000).
- Counting Strategy:** Heads Tracking, Feet Tracking (selected).

Note:

- 1) The arrow direction of the detection line depends on your drawing direction. If users need to flip the line, select the line which need to be flipped and click Flip Arrow Direction. And users can click Flip All to flip all detection lines.

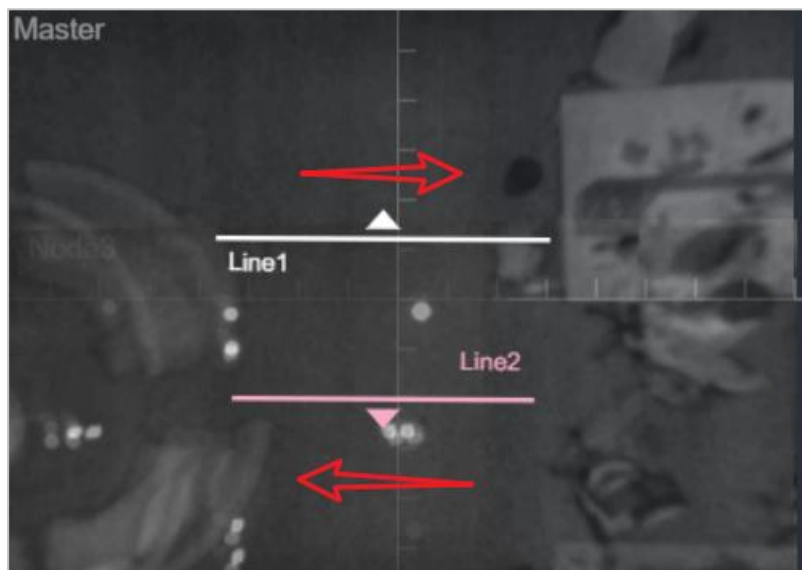

- 2) Ensure that the detected target can pass through the detection line completely. It's recommended that the detection line is perpendicular to the In/Out direction and on the center of the detection area without other objects around.
- 3) Redundant identification spaces are needed on both sides of the detection line for the target detection. It ensures the stable recognition and tracking of the target before passing the detection line, which will make the detection and count more accurate.

Deployment Parameters

Parameters	Description
Installation Height	<p>Set the device installation height. Click Detect to detect the current installation height automatically.</p> <p>Note:</p> <ol style="list-style-type: none"> 1) Ensure that there are no objects directly below the device avoiding interfering the height detection. 2) The automatic detection of the installation height is not supported with dark floor/carpet (black, grey, etc.)
Max Target Height	Set the maximum target height, then the device will ignore the objects higher than this setting value.
Min Target Height	Set the minimum target height, then the device will ignore the object shorter than this setting value.
Child Filter Height	Set the max child height when children distinction feature is enabled.

Note:




Due to the error in ToF distance measurement (0.035 m), the Max. Target Height should be set as maximum pedestrian height plus 0.035 m and the Min. Target Height as minimal pedestrian height minus 0.035 m in the actual applications. For example, if the pedestrian height is 1.6 m to 1.8 m, the Max. and Min. Target Height should be configured as 1.835 m and 1.565 m respectively.

Counting Strategy

Device	IP Address	SN	Device Name	Operation
Master	192.168.46.79	6757D326752100...	People Counter_oem...	[Edit] [Delete]
Node1			[Bind] Node1	
Node2	192.168.46.80	6757D161799500...	People Counter	[Edit] [Delete]
Node3	192.168.46.81	6757D168669700...	People Counter	[Edit] [Delete]

No.	Region Name	Advanced Properties	Operation
No.1	Region1	Region People Counting(5s) Dwell Time...	[Edit] [Delete]

Parameters	Description
Tracking Mode	Select the tracking mode of counting, including Heads Tracking and Feet Tracking. Note: 1) Only Feet Tracking is supported when the working mode is multi-device stitching. 2) It is recommended to use heads tracking mode when the installation height is low in standalone working mode.
U-turns Filtering	When enabled, it allows to draw an area for every line and the device will count the In and Out values only when people passed this area. Users can left-click to start the drawing and add edges for this area, then right-click to stop drawing.

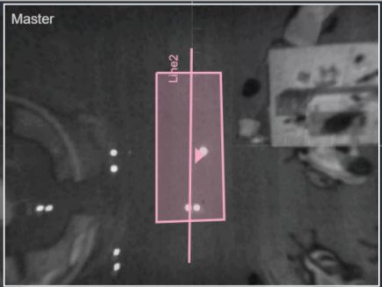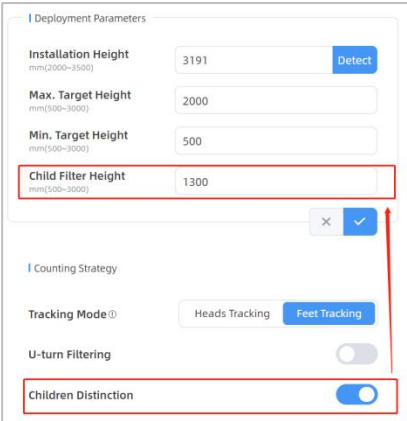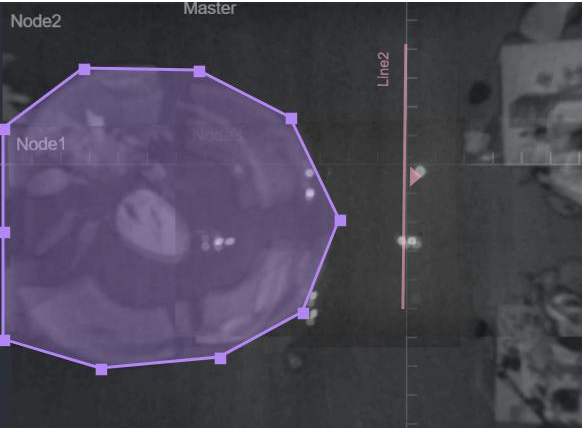	
<p>Children Distinction</p>	<p>The device will detect the people shorter than child filter height as children.</p> 
<p>Staff Detection</p>	<p>The device will detect the people who wear reflective stripes as staff tags on the visible parts (neck, shoulders, etc.) as staffs. Reflective stripe requirements: width > 2cm, about 500 cd/lux.m²</p>
<p>Group Counting</p>	<p>Click to enable the group counting function that based on the distance, moving direction and speed difference to gain deeper insights into customer' behaviors. Note: This function is only applicable for line cross people counting.</p>
<p>Region Monitoring</p>	<p>Click "+Add" to add the region monitoring. Up to 4 regions are supported with maximum 10 segments each. Step 1: Draw the region monitoring areas on the screen.</p>  <p>Step 2: You can customize the zone name. And click to enable Region People Counting and Dwell Time Detection as needed. Pass-by Filtering can be set to improve statistical accuracy and Min.Dwell Time</p>

can be set to improve statistical validity.

Advanced Properties

Zone Name

Region People Counting

Pass-by Filtering
s(0~3600)

Dwell Time Detection

Min. Dwell Time
s(0~3600)

Step 3: The configuration is displayed in the list after the configuration is complete. You can redraw the areas by clicking the redraw button in the list. And click the edit button to modify the advanced settings of the areas or click delete button to delete the areas separately.

Region Monitoring

No.	Region Name	Advanced Properties	Operation
No.1	Region1	Region People Counting(5s)	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
+ Add			

Heat Map

Click to enable Heat Map function. Heat Map function can analyze person movement to reveal insights for better business management with the intuitive and accurate statistical analysis results in time or space pattern as needed.

Support Motion Heat Map and Dwell Heat Map. The motion heat map show where the most people flow. And the dwell heat map shows the areas that people stay for the longest time.

Input Enable Line Crossing Count Externally

Only when trigger status is the same as the current status, will the device count the data.

Low Status=two contacts disconnected
High Status=two contacts closure

Reset Cumulative Count on Schedule

Enable to periodically reset cumulative count on schedule.


Cumulative Count includes:

Total In/Out counting of each detection line.

Max./Avg. Dwell Time of each detection region.

5.2.2 Multi-Device Stitching

Multi-device stitching is mainly used to monitor a larger detection area than just the area covered by a single device. When using this feature, devices should be installed next to each other and ensure the **detection areas** tangent or overlapping. It only uses one master device to output total counting data.

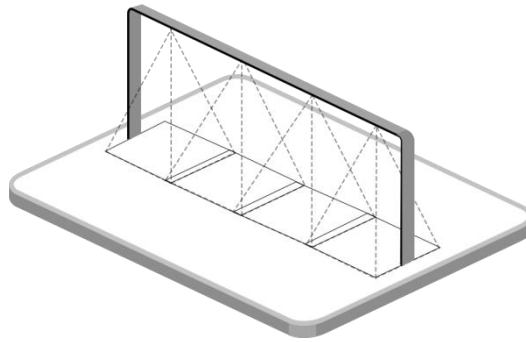


Before using this feature, set one device as **Master Mode** and other devices as **Node Mode**.

The screenshot displays the Milesight web interface. On the left is a navigation menu with options: Dashboard, Rule (highlighted), Communication, Report, and System. Below the menu are language and user selection options: English and admin. The main content area is split into two panels. The left panel, titled 'Master', shows a live video feed of a person's face with a red detection box and a vertical line labeled 'Line2'. Below the video are buttons for 'Draw Detection Lines' and 'Refresh Image', and a 'Multi-Device List' table. The right panel, titled 'Master Settings', contains configuration options for Working Mode, Deployment Parameters, Counting Strategy, Tracking Mode, Line Cross Counting, and U-turn Filtering. The 'Working Mode' section is highlighted with a red box, showing 'Master' selected over 'Standalone' and 'Node'.


Device	IP Address	SN	Device Name	Operation
Master	192.168.46.79	6757D32675210018	People_Counter_08 m_test	[Edit]
Node1		[Link]	Blind Node1	
Node2		[Link]	Blind Node2	

Note:

1) Ensure the head of one person can be seen on both live views at the same time.

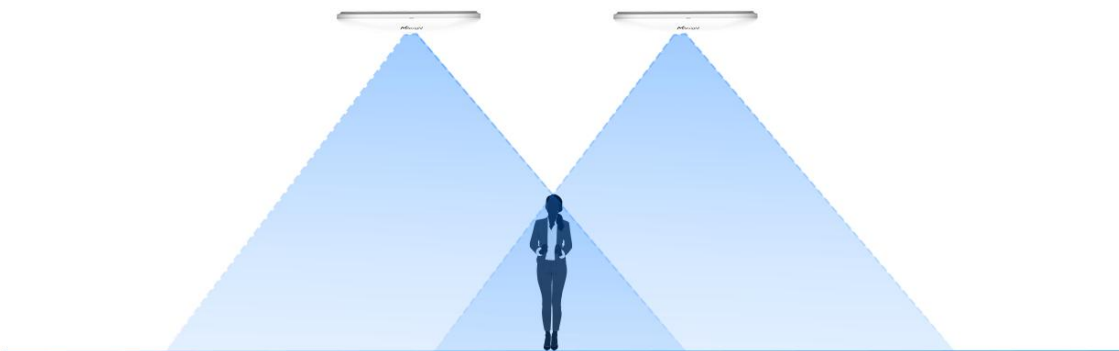


2) The devices can also be installed without overlapping as required.

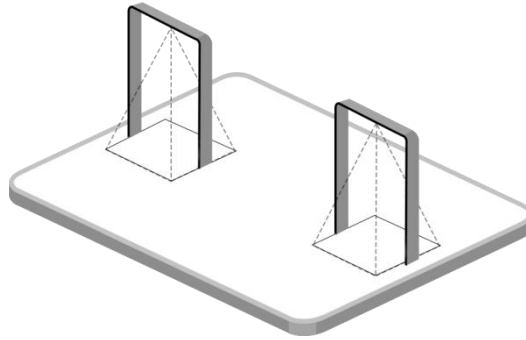

Device Positioning

Device positioning is done via X&Y coordinates. For example, the installation direction of the master device is shown as below. When the master device's coordinate is (0, 0), the coordinates of the node devices are all positive values.

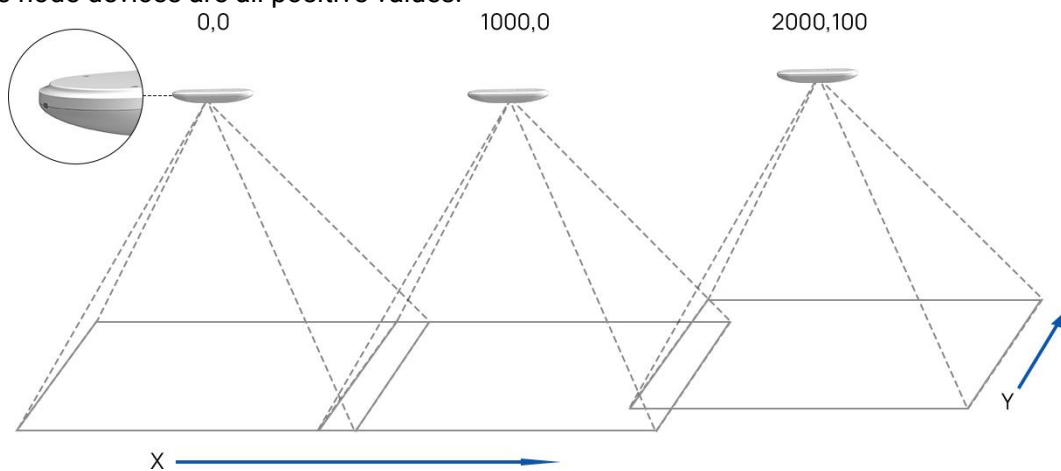


Add Node Devices

Step 1: Go to the master device web GUI, then click **Bind Node** on Multi-Device List.

Manual: You can add a node device by the IP address, HTTP Port, Username or Password.

Note: Please ensure that the device you want to add is on the same local network as the master device and has low latency.

Auto: The device will use multicast protocol to search for the unbound node devices under the same local network.

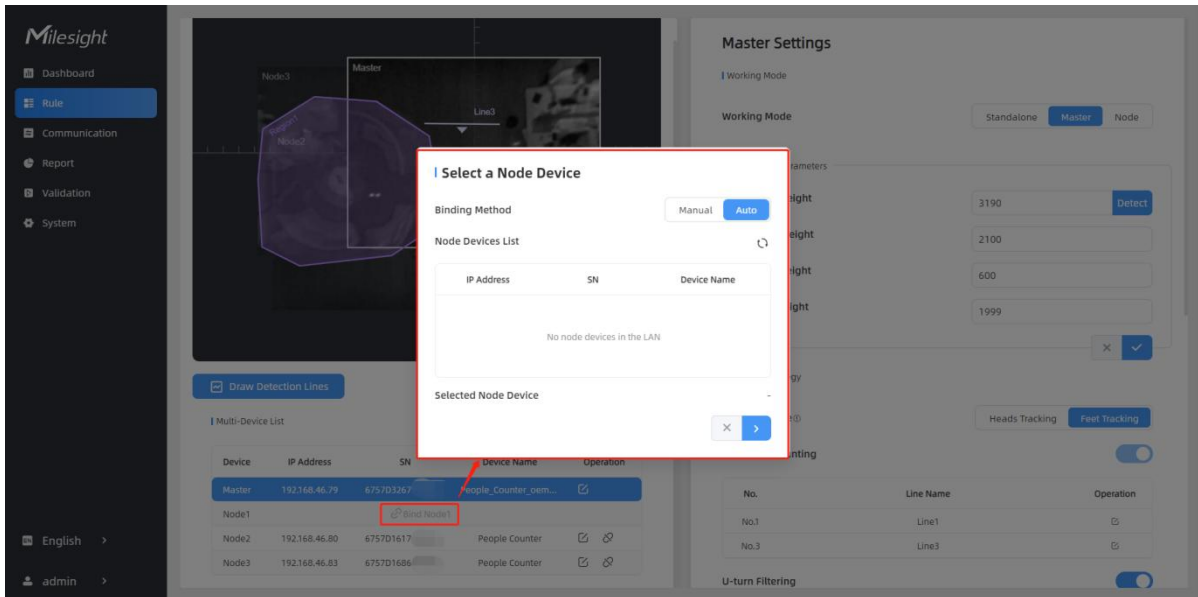

Step 2: Select the node device and type the login password of the node device.

Step 3: Fill in the installation height of a node device and relative position information if these parameters are already measured. If not, save default settings and skip to Step 4.

Confirm Authorization

Selected Node Device: 192.168.46.80

Node Device Username:

Node Device Password:

Bind the Node Device

Selected Node Device: 192.168.46.80


Installation Height:

Relative X Position:

Relative Y Position:

Relative Angle:

Step 4: Select the node device on the Multi-Device List, click **Adjust Relative Position**.

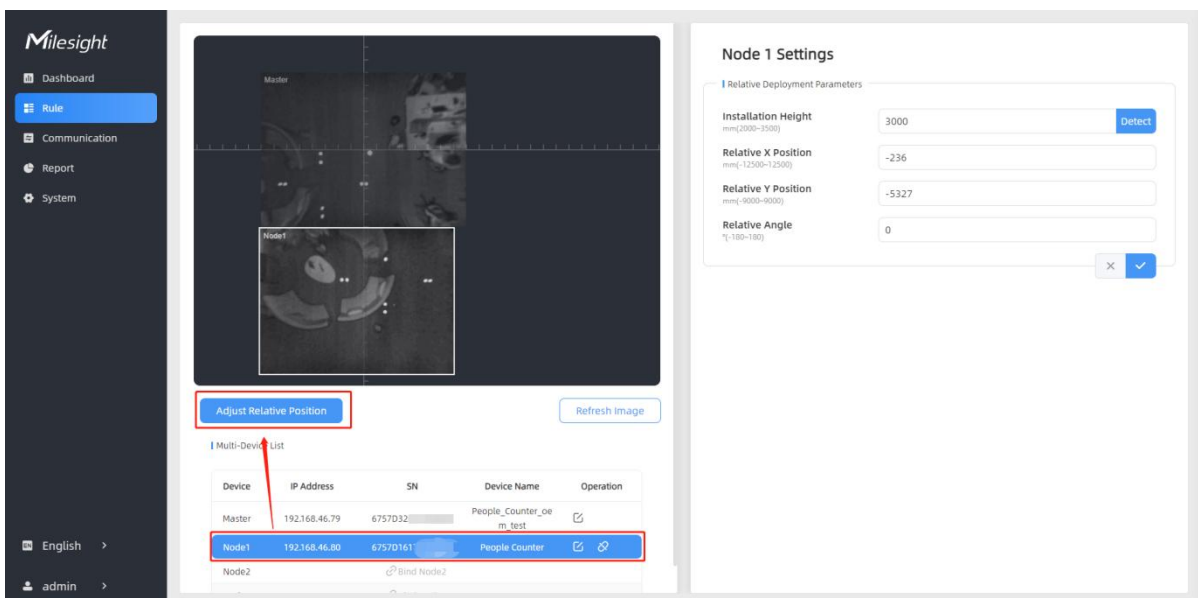

Drag the live view of node device to adjust the location and angle, and the relative position parameters will change automatically as your operations. Besides, users can also adjust the size of this live view.

The screenshot displays the Milesight web interface. On the left is a navigation menu with options: Dashboard, Rule (selected), Communication, Report, and System. Below the menu are language and user settings (English, admin). The main area is split into two panels. The left panel shows a live view of a device labeled 'Node1' with a white bounding box. Below the live view is a 'Set & Testing Track' button and a 'Multi-Device List' table. The right panel shows 'Node 1 Settings' with fields for Installation Height, Relative X Position, Relative Y Position, and Relative Angle.

Device	IP Address	SN	Device Name	Operation
Master	192.168.46.79	6757D32675210018	People_Counter_oe m_test	
Node1	192.168.46.80	6757D16179920018	People Counter	
Node2			Blind Node2	

Tips: cut the staff tags or other reflective stripes into pieces and stick them to the ground of overlapping areas, then drag the live view of node devices to make highlight markers in the two live views overlap. This allows equipment splicing configuration **without measurement**.

Step 5: Click **Set & Testing Track**, then check if the tracking lines are connected and smooth when people pass on the live views of multiple devices. If not, click **Stop Testing** to adjust the node device's live view location slightly.

The screenshot displays the Milesight web interface. On the left is a navigation menu with options: Dashboard, Rule (selected), Communication, Report, and System. Below the menu are language and user settings (English, admin). The main area is split into two panels. The left panel shows a live view of a device labeled 'Node3' with a blue bounding box. Below the live view is a 'Stop Testing' button and a 'Multi-Device List' table. The right panel shows 'Node 3 Settings' with fields for Installation Height, Relative X Position, Relative Y Position, and Relative Angle.

Device	IP Address	SN	Device Name	Operation
Master	192.168.46.79	6757D326	People_Counter_oe m_test	
Node1	192.168.46.80	6757D161	People Counter	
Node2	192.168.46.83	6757D166	People Counter	
Node3	192.168.46.90	6757D16	People Counter	

Step 6: When all settings are completed, users can draw detection lines and even U-turn areas on the new stitching live view the same as standalone mode devices.

Step 7: Click **Unbind** to disconnect the node device if necessary.

The screenshot shows the Milesight web interface. On the left is a navigation menu with options: Dashboard, Rule (selected), Communication, Report, System, English, and admin. The main content area is split into two panels. The left panel displays a heatmap of a building layout with nodes labeled 'Master', 'Node2', and 'Node3'. Below the heatmap is a 'Stop Testing' button and a 'Multi-Device List' table. The table has columns for Device, IP Address, SN, Device Name, and Operation. The 'Operation' column for 'Node3' has an 'Unbind' button highlighted with a red box and a red arrow. The right panel shows 'Node 3 Settings' with 'Relative Deployment Parameters' including Installation Height (3000), Relative X Position (231), Relative Y Position (-2452), and Relative Angle (0).

Device	IP Address	SN	Device Name	Operation
Master	192.168.46.79	6757D32	People_Counter_oe m_test	[Icon]
Node1	192.168.46.80	6757D1	People Counter	[Icon]
Node2	192.168.46.83	6757D1	People Counter	[Icon]
Node3	192.168.46.90	6757D1	People Counter	[Unbind]

Node Mode

The screenshot shows the Milesight web interface for Node Mode configuration. The left navigation menu is the same as in the previous screenshot. The main content area shows 'Working Mode' with three tabs: Standalone Mode, Master Mode, and Node Mode (selected). Below this is 'Master Device Info.' with a 'Connection Status' field showing 'To be connected'. There are three input fields for 'Master Device IP Address', 'Master Device SN', and 'Master Device Name'.

Parameters	Description
Connection Status	Show the connection status between the node device and master device.
Master Device IP Address	Show master device's IP address. When this IP address is under the same network with node device, the node device can bind to the master device.
Master Device SN	Show the master device's serial number.
Master Device Name	Show master device name.
Unbind Master Device	Click Unbind to release the connection status, this device will be deleted from the list of the master device.

5.3 Communication

VS133-P provides a Ethernet port for wired access. Besides, users can get the people counting data or configure the device via CGI. For CGI document, please contact Milesight IoT support: iot.support@milesight.com.

The screenshot shows the Milesight web interface with a sidebar menu containing Dashboard, Rule, Communication (selected), Report, and System. The main content area is divided into two sections: TCP/IP and HTTP/HTTPS.

TCP/IP Configuration:

- IP Assignment: Manual (selected) or Automatic (DHCP)
- IP Address: 192.168.46.79 (with a Test button)
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.46.1
- Primary DNS Server: 8.8.8.8
- Secondary DNS Server: 114.114.114.114

HTTP/HTTPS Configuration:

- HTTP: Enabled (toggle)
- HTTP Port (1-65535): 80
- HTTPS: Enabled (toggle)
- HTTPS Port (1-65535): 443
- Certificate Installation Method: Create Self-Signed Certificate
- Certificate: Update, Show Properties

Recipient Table:

Name	URL/Host	Protocol	Status	Operation
Recipient	http://192.168.45.12	HTTP(S)	Disconnect	✕ 🗑️
+Add				

Parameters	Description
TCP/IP	
IP Assignment	Manual or Automatic (DHCP) is optional.
IP Address	Set the IPv4 address of the Ethernet port, the default IP is 192.168.5.220 .
Subnet Netmask	Set the Netmask for the Ethernet port.
Default Gateway	Set the gateway for the Ethernet port's IPv4 address.
Primary DNS Server	Set the primary IPv4 DNS server.
Secondary DNS Server	Set the secondary IPv4 DNS server.
Test	Click to test if the IP is conflicting.
HTTP/HTTPS	
HTTP	Start or stop using HTTP.
HTTP Port	Web GUI login port, the default is 80.
HTTPS	Start or stop using HTTPS.
HTTPS Port	Web GUI login port via HTTPS, the default is 443.
Certificate Installation Method	Create Self-signed Certificate: upload the custom CA certificate, client certificate and secret key for verification.
Certificate	Create the SSL certificate.

Recipient

Add data receivers (supports HTTP(s)/MQTT(s)). The device will proactively push data to the receivers according to the configured reporting scheme.


Recipient


Recipient Name	URL/Host	Protocol	Status	Operation
Recipient	https://data...	HTTP(S)	Connected	
+Add				

Parameters	Description
Recipient Name	Show the recipient name.
URL/Host	Show the URL/host of HTTP(s) server or MQTT broker.
Protocol	Show the report protocol.
Status	Show connection status from device to HTTP(s) server or MQTT broker.
Operation	Click to edit the information or delete the recipient.

Note:

- Up to six receivers can be added.
- When working mode is the Node mode, the device will not support Recipients Settings.

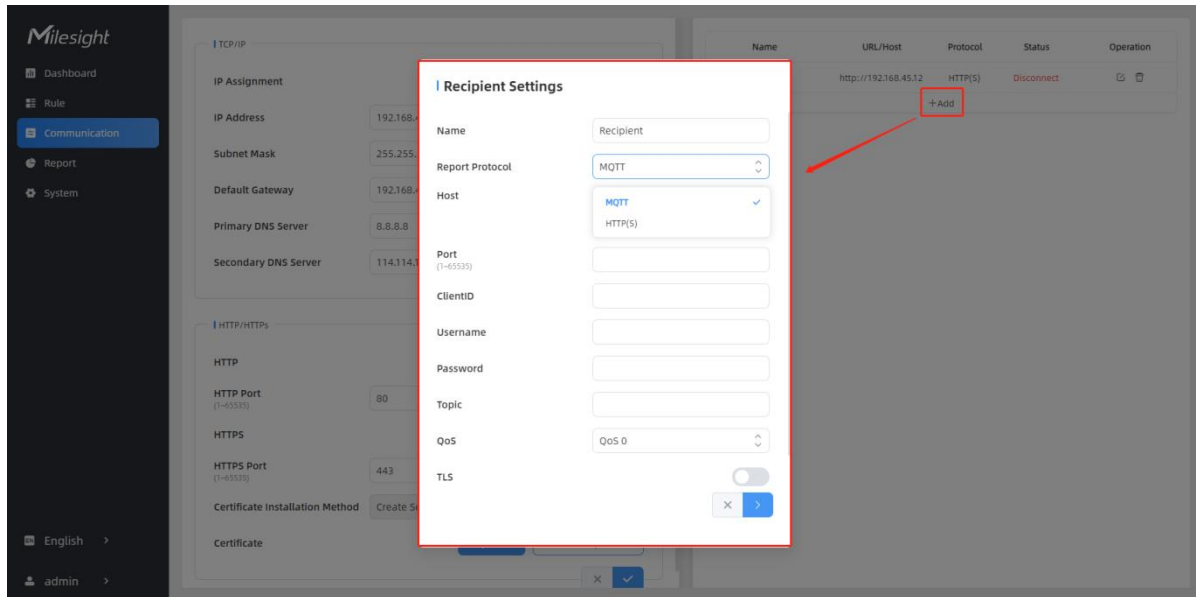

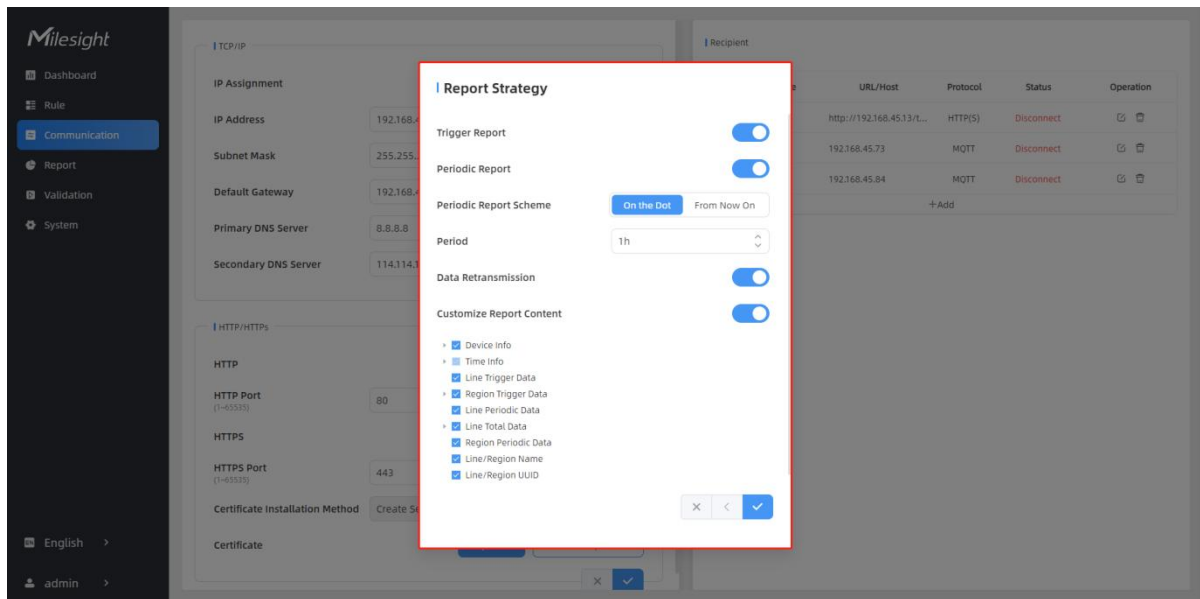


Parameters	Description
Recipient Name	Customize the recipient name.
Report Protocol	HTTP(s) or MQTT is optional.
HTTP(s)	
URL	The device will post the people counting data in json format to this URL.
Connection Test	Click Test to send test message to URL to check connectivity.
User	The username used for authentication.
Password	The password used for authentication.
MQTT	
Host	MQTT broker address to receive data.
Port	MQTT broker port to receive data.
Client ID	Client ID is the unique identity of the client to the server. It must be unique when all clients are connected to the same server, and it is the key to handle messages at QoS 1 and 2.
Username	The username used for connecting to the MQTT broker.
Password	The password used for connecting to the MQTT broker.
Topic	Topic name used for publishing.
QoS	QoS0, QoS1, QoS2 are optional.
TLS	Enable the TLS encryption in MQTT communication.
Certificate Type	CA Signed Server or Self Signed is optional. CA signed server certificate: verify with the certificate issued by Certificate Authority (CA) that pre-loaded on the device. Self signed certificates: upload the custom CA certificates, client certificates and secret key for verification.
Report Strategy	
Trigger Report	Report immediately when there is a change of the line crossing people counting number or region people counting number.
Periodic Report	Select the periodic report of "On the Dot" or "From Now On".

Periodic Report Scheme	<p>On the Dot: The device will report at the top of each hour. For example, When the interval is set to 1 hour, it will report at 0:00, 1:00, 2:00 and so on; when the interval is set to 10 minutes, it will report at 0:10, 0:20, 0:30, and so on.</p> <p>From Now On: Begin reporting from this moment onwards and regularly report based on the interval cycle.</p>
Period	
Data Retransmission	Enable to resend stored data packets from the disconnected period when the device's network connection is restored. Every recipient supports to receive 30,000 pieces of data at most.
Customize Report Content	<p>Customizable selection of content to be reported, avoiding data redundancy.</p>

5.4 Report

VS133-P supports to generate visual line chart or bar chart to display the people traffic and supports to export the report. Before using this feature, **ensure that the device time is correct on System page.**

Note: When working mode is Node mode, the device will not generate this report.

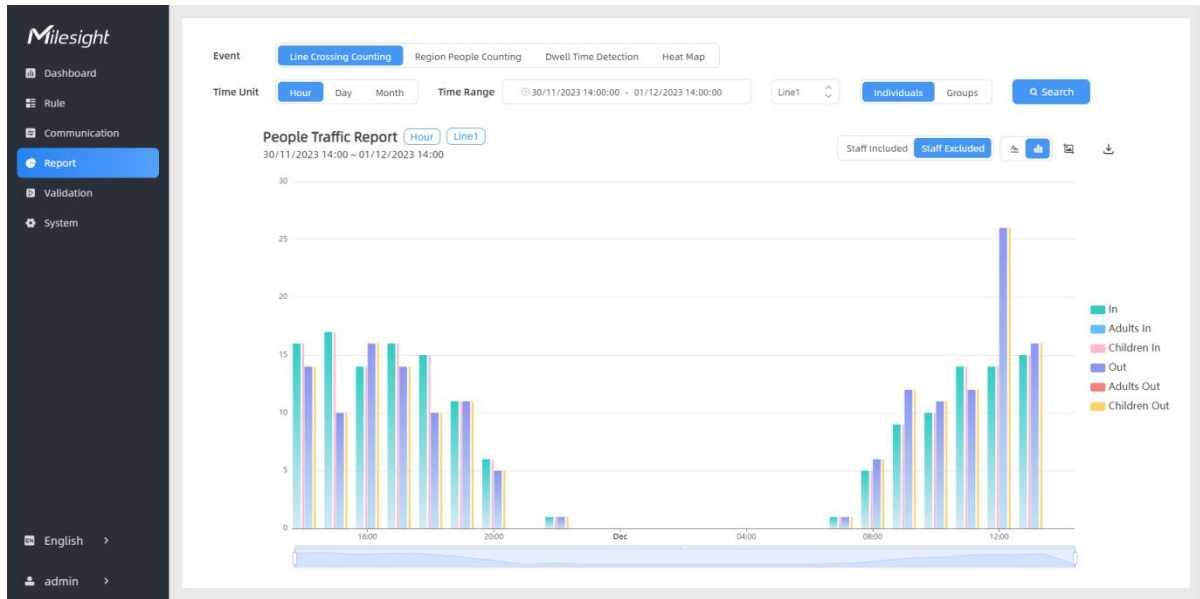

Parameters	Description
Event	Select the event which you want to query the report. Line crossing counting, region people counting, dwell time detection and heat map are optional.
Time Unit	Select the unit to generate the graph or export the data.
Time Range	Select the time range to generate the graph.
Line1	Select the line to display the graph.
Individuals Groups	Select the individuals counting reports or groups counting reports.
Region1	Select the region to display the graph.
Report Type	For heat map report, Motion Heatmap and Dwell Heatmap are optional.
Search	Click to generate the graph according to the time range and line option.
Export	Export the historical traffic data as CSV file according to the selected time unit. The device can store up to one million data records to CSV file.
Staff Included/Excluded	Select whether to contain staff counting values on the graph.
Line/Bar	Select the display type as line or bar.
Download	Download the graph screenshot.



5.5 Validation

Video validation function can assist users in verifying the accuracy of people counting by setting

up a video task of recording.

Note:

- Only one video task can be performed at a time, please delete the previous task before creating a new one.
- Detection rules and ToF frequency parameters cannot be modified during the recording process.
- Recording tasks can only be performed on the master device when multi-device stitching.

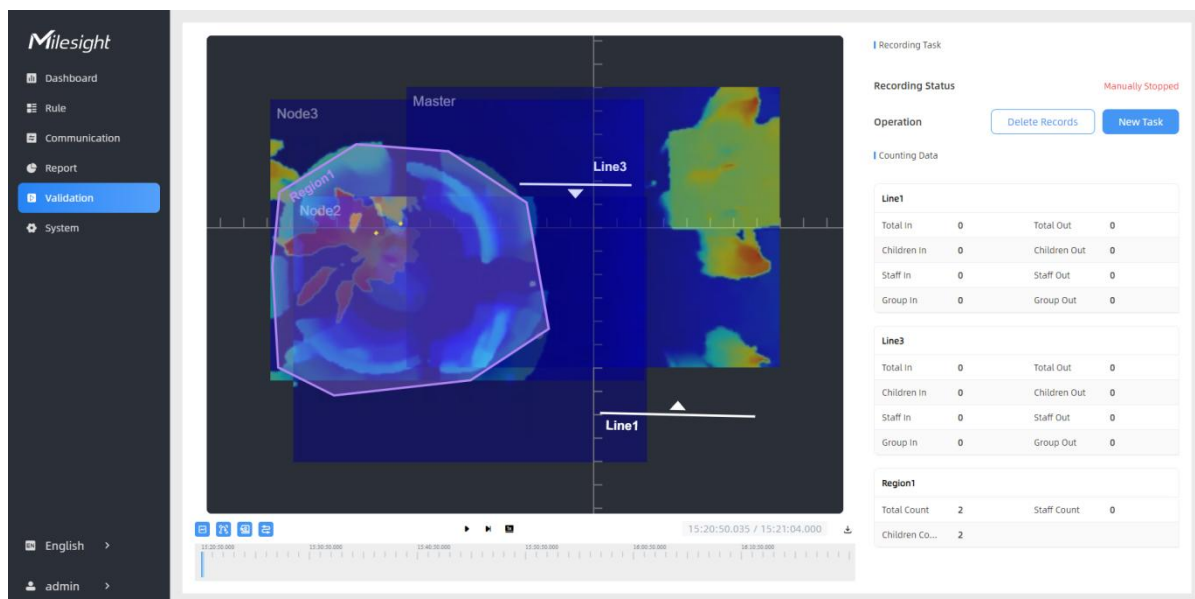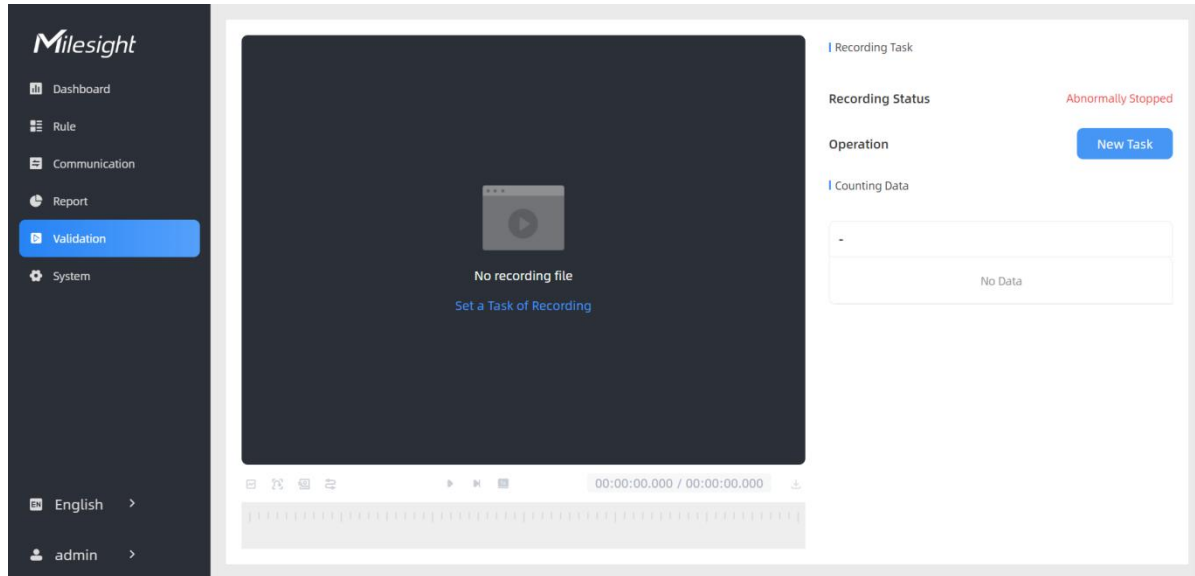

Parameters		Description
Video Task	Start Recording	Clicking Start Recording to initiate the recording task. You can manually click Stop Recording to end the recording, or it will automatically stop when the recording time reaches 60 minutes.
	Set a Task of Recording	Configure the start time and duration of the recording. The duration can be set from 1 to 60 minutes. Clicking Cancel Task manually will cancel the recording schedule.

Playback Button		Enable/Disable detection lines in the recording footage.
		Enable/Disable u-turn area in the recording footage.
		Enable/Disable detection region in the recording footage.
		Enable/Disable tracking line in the recording footage.
		Rewind/Pause/Play/Forward(supports switching between 0.5x, 1x, 2x, and 4x playback speed).
		Start time and end time of the recording.
		Download video stream footage.

5.6 System

5.6.1 Device Info

All information about the hardware and software can be checked on this page. Besides, users can modify the device name, customize device ID and site ID for large amounts of devices management.

5.6.2 User

The screenshot shows the Milesight System configuration interface. On the left is a navigation menu with options: Dashboard, Rule, Communication, Report, System (selected), English, and admin. The main content area is divided into two panels. The left panel, titled 'Device Info', contains fields for Device Name (People_Counter), Product Model (oem_test-P), SN (6757D32675210018), Hardware Version (V1.2), Software Version (V_133.1.0.4-r2-a1), MAC Address (24:E1:24:F5:73:16), Customized Device ID, Customized Site ID, and Running Time (2 hours 17 minutes 35 seconds). Below this is a 'User' section with 'Users modify' and 'Security Question' buttons, both labeled 'Edit'. The right panel, titled 'Current System Time', shows Date (28/09/2023), Time (11:51:20), Time Zone (UTC+8:00 China Standard Time (CT/CST)), Daylight Saving Time (disabled), Synchronize Mode (NTP Timing selected), Server Address (pool.ntp.org), and Time Interval (1440).

This screenshot shows the same Milesight System configuration interface, but with the 'Users' section expanded. The 'Device Info' panel now shows Device Name (People_Counter_oem_test) and Running Time (2 days 15 hours 40 minutes 46 seconds). The 'Users' section displays a table with the following data:

Username	User Level	Operation
admin	Administrator	✉️ 🛑
+ Add User		

The rest of the interface, including the navigation menu and the 'Current System Time' panel, remains the same as in the previous screenshot.

Parameters	Description
✍️	You can change the login password of this device.

Users modify

Username	<input type="text" value="admin"/>
User Level	<input type="text" value="Administrator"/>
Administrator Password	<input type="password"/>
New Password	<input type="password"/>
Confirm	<input type="password"/>

At least:

- 8 characters
- 2 types of characters: Number, letter and symbol



Click to set three security questions for your device. In case that you forget the password, you can click **Forget Password** button on login page to reset the password by answering three security questions correctly.

Secure Question Settings Already Set

Password	<input type="password"/>
Security Question1	<input type="text" value="What is your lucky number?"/>
Answer1	<input type="text"/>
Security Question2	<input type="text" value="What is your favorite sport?"/>
Answer2	<input type="text"/>
Security Question3	<input type="text" value="What is your favorite game?"/>
Answer3	<input type="text"/>



Click to add a viewer, who will only have access to the "Dashboard" and "Report" interfaces.

Add User

Username	<input type="text" value="viewer"/>
User Level	<input type="text" value="Viewer"/>
Password	<input type="password"/>
Confirm	<input type="password"/>

At least:

- 8 characters
- 2 types of characters: Number, letter and symbol




5.6.3 Time Configuration

Parameters	Description
Time Zone	Choose the time zone for your location.
Daylight Saving Time	Enable or disable Daylight Saving Time (DST). Start Time: the start time of DST time range. End Time: the end time of DST time range. DST Bias: the DST time will be faster according to this bias setting.
Synchronize Mode	NTP Timing or Manual Timing is optional.
Server Address	NTP server address to sync the time.
Time Interval	Set the interval to sync time with NTP server.
Setting Time	Set the device time manually.
Synchronize with computer time	Synchronize the time with your computer.


5.6.4 Remote Management

Users can connect the device to the Milesight DeviceHub management platform on this page so as to manage the device centrally and remotely. For more details, please refer to [DeviceHub User Guide](#). Before connecting, ensure the device has connected to network via Ethernet port and Internet connection is seamless.

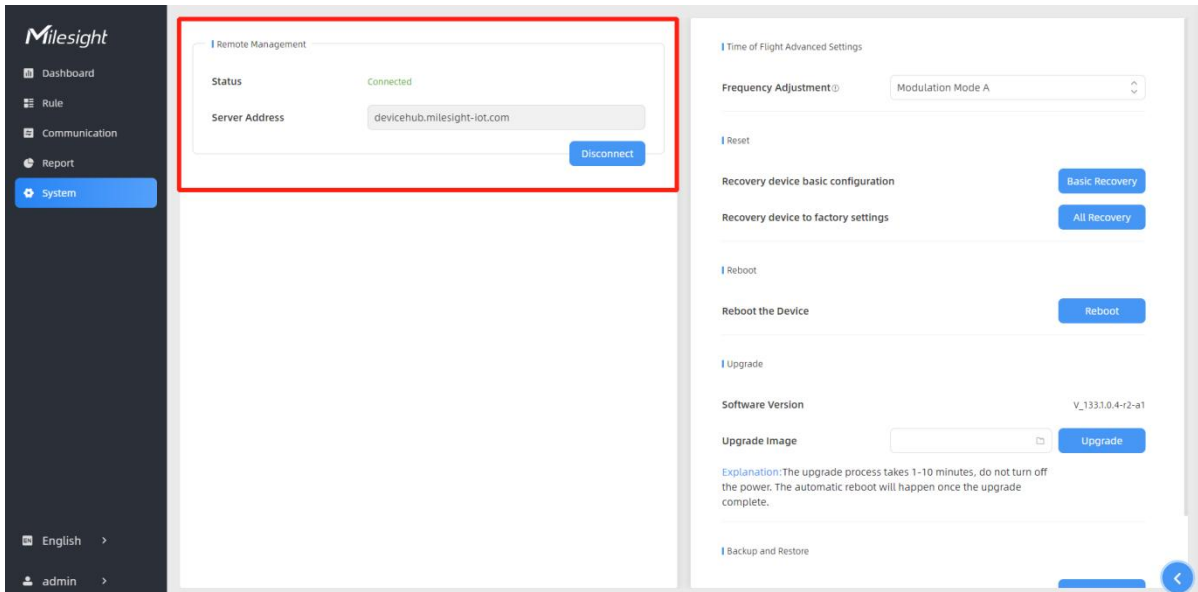

Parameters	Description
Status	Show the connection status between the device and the DeviceHub.
Server Address	IP address or domain of the DeviceHub management server.
Activation Method	Select activation method to connect the device to the DeviceHub server, options are Authentication Code and Account .

5.6.5 System Maintenance

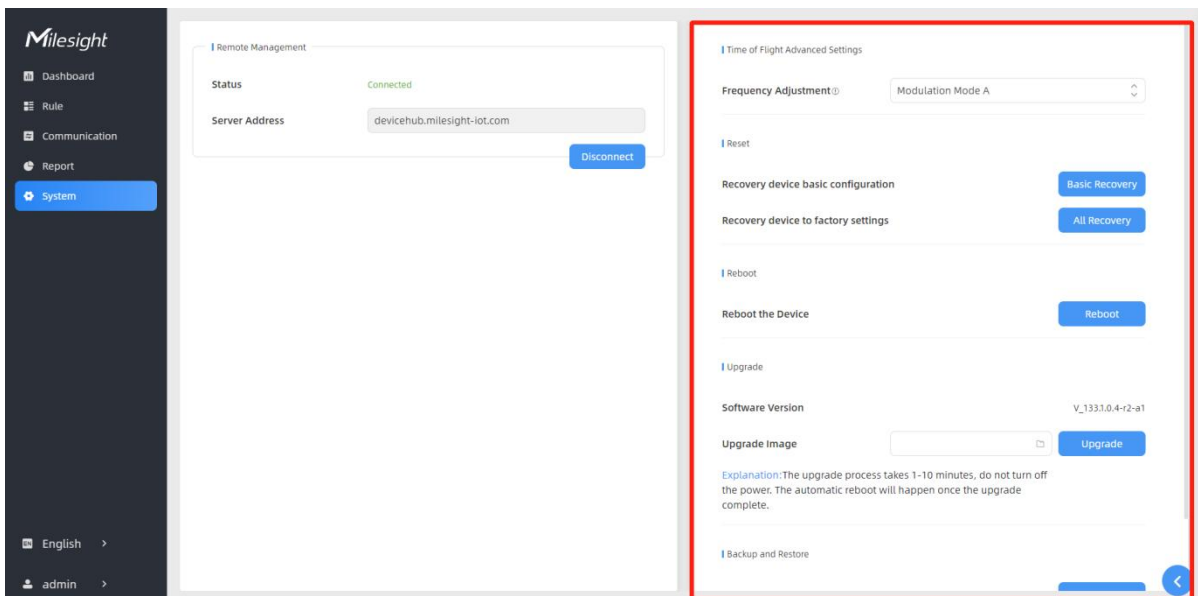

Parameters	Description
Frequency Adjustment	Adjust the ToF frequency modulation mode to avoid the interference of surrounding IR devices. When using Multi-Device Stitching, please avoid using the same mode with other node devices. Note: If there is only one option, please contact Milesight IoT support:

	iot.support@milesight.com
Reset	Recovery device basic configuration: keep the IP settings and user information when resetting.
	Recovery device to factory settings: reset device to factory default, which needs to verify admin password.
Reboot	Restart the device immediately.
Upgrade	Click the folder icon and select the upgrading file, then click the Upgrade button to upgrade. The update will be done when the system reboots successfully. Note: The upgrade process takes about 1-10 minutes. Do not turn off the power and complete automatic restart after the upgrade.
Backup and Restore	Export Config File: Export configuration file.
	Import Config File: Click the file icon and select the configuration file, click Import button to import configuration file.

6. Installation Instruction

Parameter definition:


Parameters	Explanation	Value
H	Installation height	≤3.5 m
d	Minimum detection distance of VS133-P	0.5 m
Δd	Distance measurement error of VS133-P	0.035 m
h_{max}	Maximum pedestrian height	Example 1.8 m
h_{min}	Minimum pedestrian height	Example 1.7 m
α	ToF horizontal field of view angle	98°
β	ToF vertical field of view angle	80°
x	Length of detection range	
y	Width of detection range	

6.1 Installation Height

The maximum installation height is 3.5 m and the minimum installation height is $h_{max}+d+\Delta d$. For example, when the maximum pedestrian height is 1.8 m, then the minimum installation height is $1.8+0.5+0.035=2.335$ m.

6.2 Covered Detection Area

The detection area covered by the device is related to the field of view angle of the device, the installation height and the target height. The length of the detection area is approximately $x=2.300 \times (H-h_{min})$ and the width of the detection area is approximately $y=1.678 \times (H-h_{min})$.

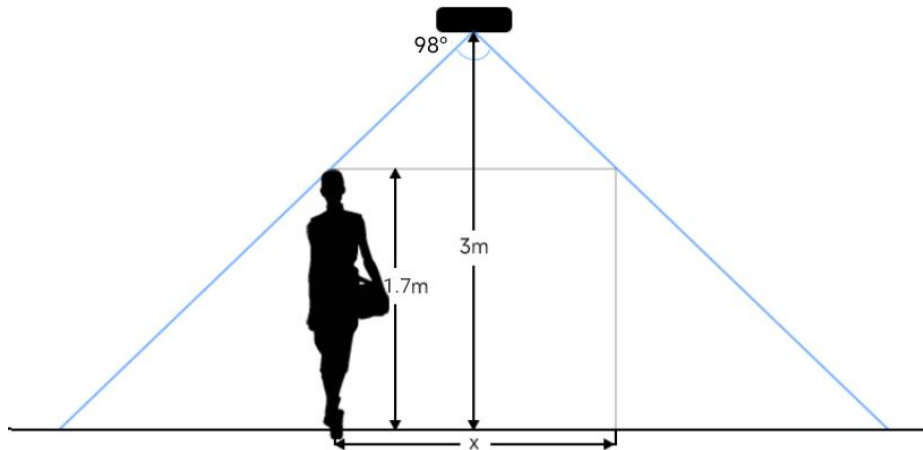


For example, if the Minimum height of pedestrians is 1.7 m, the detection area corresponding to each installation height is as follows:


Installation Height	FoV Monitored Area (m)	Detection Area (m)
2.5	5.75 × 4.20	1.84 × 1.34
2.6	5.98 × 4.36	2.07 × 1.51
2.7	6.21 × 4.53	2.30 × 1.68
2.8	6.44 × 4.70	2.53 × 1.85
2.9	6.67 × 4.87	2.76 × 2.01
3.0	6.90 × 5.03	2.99 × 2.18
3.1	7.13 × 5.20	3.22 × 2.35
3.2	7.36 × 5.37	3.45 × 2.52
3.3	7.59 × 5.54	3.68 × 2.69
3.4	7.82 × 5.71	3.91 × 2.85
3.5	8.05 × 5.87	4.14 × 3.02

6.3 Environment Requirements

- Dark floor/carpet (black, grey, etc.) will affect the device to count staffs when Staff Detection is enabled.

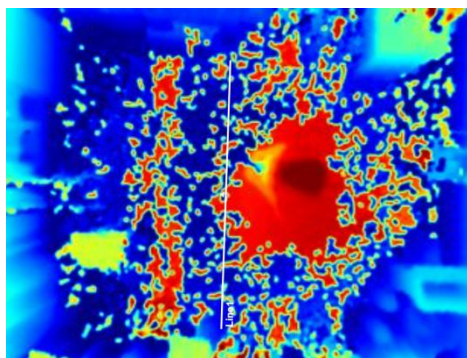

- Avoid 940nm light which may result in incorrect counting.
- Outdoor sunlight shining on the over channel will not have any effect, but the mirrored reflections that allow sunlight to shine on the ToF Sensor should be avoided.
- When the carpet/floor is black, make sure there are no obstacles within a 60cm hemisphere range in the direction of the device. Otherwise, the device imaging may appear abnormally red.

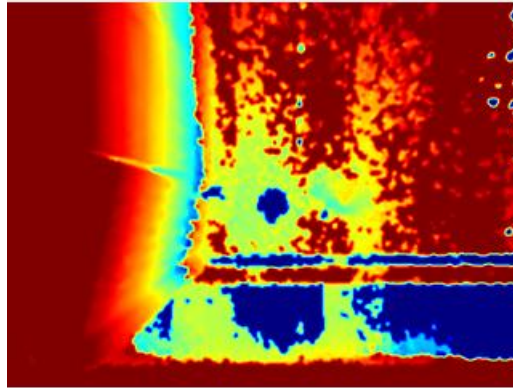

6.4 Installation


Ceiling Mount

Step 1: Ensure the thickness of the ceiling is more than 30 mm, then attach the mounting sticker to the ceiling and drill 4 holes with a diameter of 6mm. If the wire needs to be extended to the interior of the ceiling, a wire hole with a suitable size is also required to be drilled.

Step 2: Fix the wall plugs into the ceiling holes.


Step 3: Remove the cover on the device, and then connect all required wires and pass them through the wire hole behind the device or block on the side of the device if the wires need to be protruded from the side of the device.

(Note: if the alarm I/O of VS133-P is going to be used, please connect a multi-interface cable to the device)

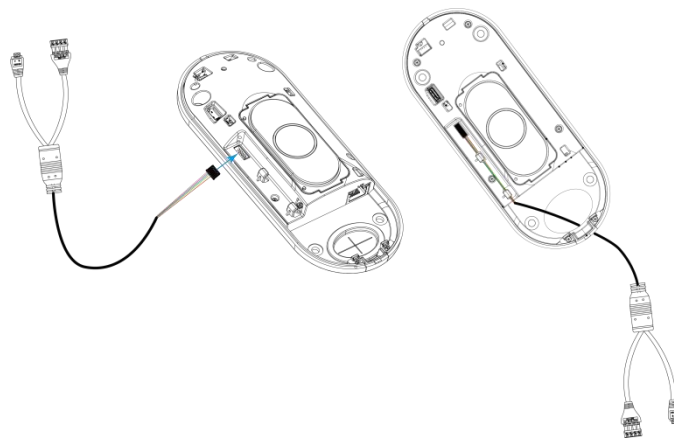

Step 4: Fix the device to the wall plugs via mounting screws; remember to adjust the mounting direction according to the detection area requirement.

Step 5: Fix the cover back to the device.

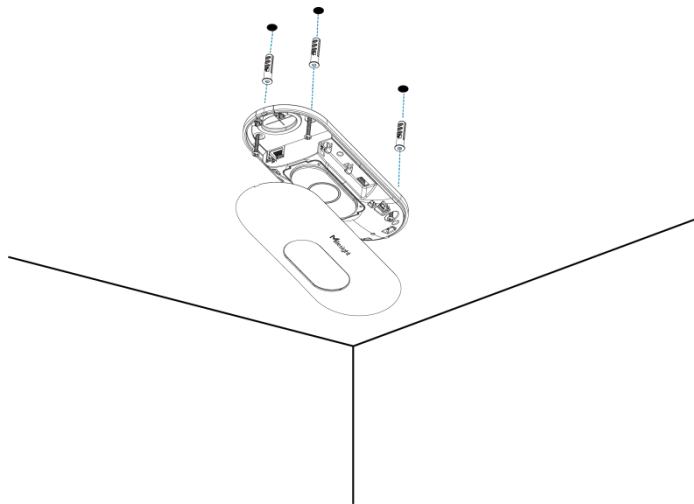

Ceiling/Lintel Mount (with Optional VB01 Multifunctional Bracket)


Step 1: Attach the mounting plate to the device with 4 screws.

Step 2: Fix the pole to the mounting plate with the hole on the plate.

Step 3: Adjust the length of the pole, then adjust the direction of 3-axis ball and tighten it with the handle.

Step 4: Determine the mounting location and drill 3 holes, fix the wall plugs into the mounting holes, then fix the bracket base to the wall plugs via mounting screws.


(**Note:** If the wire needs to be extended to the interior of the ceiling or wall, a wire hole with a suitable size is also required to be drilled.)

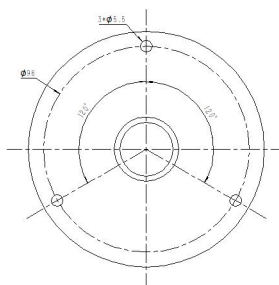

Step 5: Remove the cover on the device, and then connect all required wires and pass them through the inside of pole.


(**Note:** if the alarm I/O of VS133-P is going to be used, please connect a multi-interface cable to the device)

Step 6: Fix the pole to bracket base with screws and nuts.

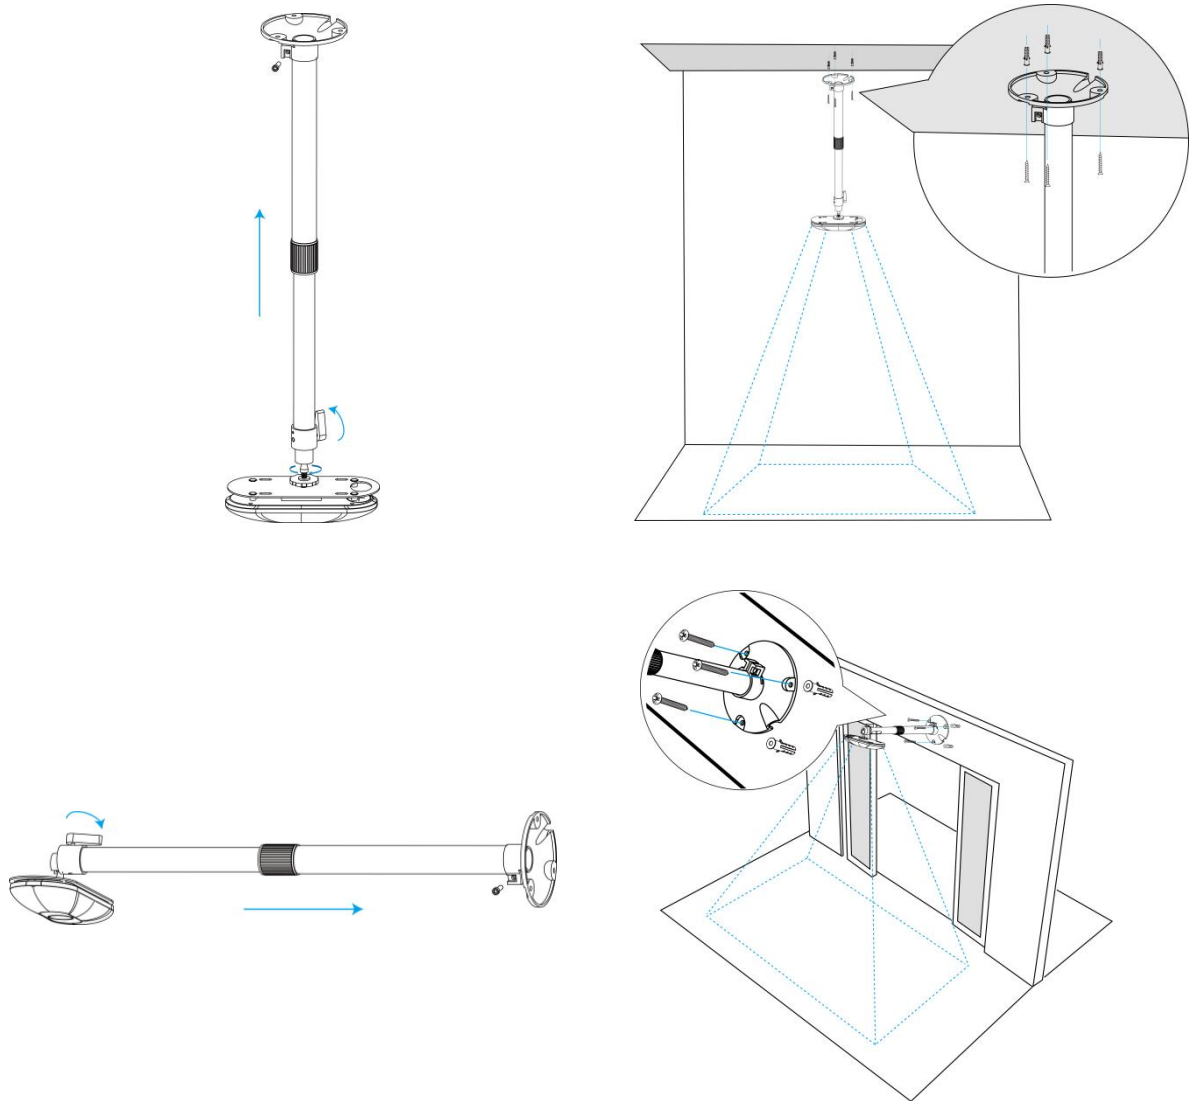


Note:

- Tilt installation should be avoided. Ensure that the front of the device and the ground plane are paralleled.
- Avoid installing the device against the wall and ensure that the device keeps away from the wall at least 30 cm on the short side and 50 cm on the long side.

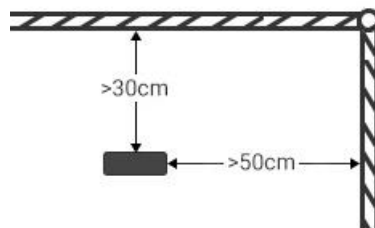

- Ensure that there are no other objects blocking the ToF light within a 30 cm radius of the front of the device.
- When you install devices on the top of swinging doors, it is suggested to keep the door normally open. If the door must be normally closed, please install the device on the other side of the door to keep away from the door movement. And it is suggested to keep away from the door with a distance of at least 30 cm.

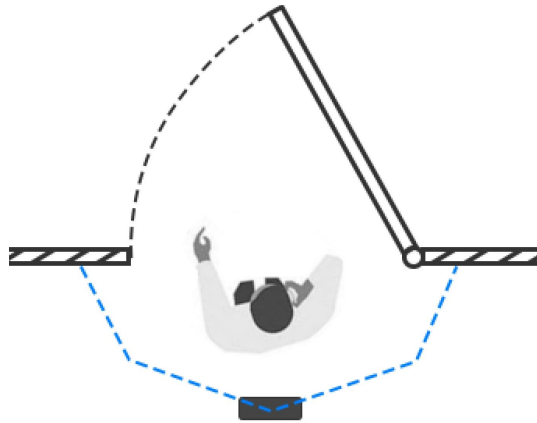

6.5 Factors Affecting Accuracy

- Wearing a fisherman's hat or carrying a cardboard box on the shoulder: The target will not be recognized because it will become unlike a human in depth map.
- Handheld or cart-carrying a humanoid doll with sufficient height to pass by: The doll will be mistakenly detected as people because it is human-like in depth map.

7. Communication Protocol

VS133-P will post the people counting data in json format to HTTP URL or MQTT broker.

7.1 Line Crossing People Counting-Periodic Report

```
{
  "device_info":
  {
    "device_name": "People Counter",
    "device_sn": "369362028335",
    "device_mac": "00:16:28:FA:8E:68",
    "ip_address": "192.168.0.99",
    "cus_device_id": "123468773",
    "cus_site_id": "asdfasf1231231",
    "running_time": 1564648484648
  },
  "time_info":
  {
    "time_zone": "UTC-11:00 Samoa Standard Time (SST)",
    "enable_dst": false,
    "dst_status": false,
    "start_time": "2022-12-20T18:15:00+03:00",
  }
}
```

```
    "end_time": "2022-12-20T18:15:00+03:00"
  },
  "line_periodic_data":
  [
    {
      "line": 1,
      "line_name": "line name",
      "line_uuid": "c2cff803-8311-4a73-8ff3-9348cf4fa0d9",
      "in": 10,
      "out": 9,
      "staff_in": 1,
      "staff_out": 1,
      "children_in": 0,
      "children_out": 0,
      "group_in": 1,
      "group_out": 0,
    },
    {
      "line": 2,
      "line_name": "line2 name",
      "line_uuid": "c2cff789-8311-4a73-8ff3-9348cf4fa0d9",
      "in": 0,
      "out": 1,
      "staff_in": 0,
      "staff_out": 0,
      "children_in": 0,
      "children_out": 0,
      "group_in": 0,
      "group_out": 0
    }
  ],
  "line_total_data":
  [
    {
      "line": 1,
      "line_name": "line name",
      "line_uuid": "c2cff803-8311-4a73-8ff3-9348cf4fa0d9",
      "in_counted": 10,
```



```
        "out_counted":9,  
        "capacity_counted":1,  
        "staff_in_counted":1,  
        "staff_out_counted":1,  
        "children_in_counted":0,  
        "children_out_counted":0,  
        "group_in_counted": 1,  
        "group_out_counted": 0,  
    },  
    {  
        "line":2,  
        "line_name": "line2 name",  
        "line_uuid": "c2cff789-8311-4a73-8ff3-9348cf4fa0d9",  
        "in_counted":10,  
        "out_counted":9,  
        "capacity_counted":1,  
        "staff_in_counted":1,  
        "staff_out_counted":1,  
        "children_in_counted":0,  
        "children_out_counted":0,  
        "group_in_counted": 1,  
        "group_out_counted": 0,  
    }  
] }  
}
```

7.2 Line Crossing People Counting-Trigger Report

```
{  
    "device_info":  
    {  
        "device_name":"People Counter",  
        "device_sn":"369362028335",  
        "device_mac":"00:16:28:FA:8E:68",  
        "ip_address":"192.168.0.99",  
        "cus_device_id":"123468773",  
        "cus_site_id":"asdfasf1231231",  
        "running_time": 1564648484648  
    }  
}
```

```
    },  
    "time_info":  
    {  
        "time_zone": "UTC-11:00 Samoa Standard Time (SST)",  
        "enable_dst": false,  
        "dst_status": false,  
        "time": "2022-12-20T18:15:00+03:00"  
    },  
    "line_trigger_data":  
    [  
        {  
            "line": 1,  
            "line_name": "line name",  
            "line_uuid": "c2cff803-8311-4a73-8ff3-9348cf4fa0d9",  
            "in": 1,  
            "out": 0,  
            "staff_in": 1,  
            "staff_out": 0,  
            "children_in": 0,  
            "children_out": 0,  
            "group_in": 1,  
        },  
        {  
            "line": 2,  
            "line_name": "line2 name",  
            "line_uuid": "c2cff789-8311-4a73-8ff3-9348cf4fa0d9",  
            "in": 0,  
            "out": 1,  
            "staff_in": 0,  
            "staff_out": 0,  
            "children_in": 0,  
            "children_out": 0,  
            "group_in": 0,  
            "group_out": 0  
        }  
    ]  
}
```

7.3 Region People Counting - Periodic Report

```
{
  "device_info":
  {
    "device_name": "People Counter",
    "device_sn": "369362028335",
    "device_mac": "00:16:28:FA:8E:68",
    "ip_address": "192.168.0.99",
    "cus_device_id": "123468773",
    "cus_site_id": "asdfasf1231231",
    "running_time": 1564648484648
  },
  "time_info":
  {
    "time_zone": "UTC-11:00 Samoa Standard Time (SST)",
    "enable_dst": false,
    "dst_status": false,
    "start_time": "2022-12-20T18:15:00+03:00",
    "end_time": "2022-12-20T18:15:00+03:00"
  },
  "region_data":
  {
    "region_count_data":
    [
      {
        "region": 1,
        "region_name": "Region1",
        "region_uuid": "c2cff789-8311-4a73-8ff3-9348cf4fa0d9",
        "current_total": 10,
        "current_staff": 1,
        "current_children": 1
      },
      {
        "region": 2,
        "region_name": "Region2",
        "region_uuid": "c2cff789-8311-4a73-8ff3-9348cf4faaca",
        "current_total": 10,
        "current_staff": 1,

```

```

        "current_children":1
      }
    ],
    "dwell_time_data":
    [
      {
        "region":1,
        "region_name":"Region1",
        "region_uuid": "c2cff789-8231-4a73-8ff3-9348cf4faaca",
        "max_dwell_time":156464,
        "avg_dwell_time": 156464,
        "staff_max_dwell_time":1522,"staff_avg_dwell_time":1522,
        "children_max_dwell_time":1522, "children_avg_dwell_time":1522
      },
      {
        "region":1,
        "region_name":"Region1",
        "region_uuid": "c2cff789-8231-4a73-8ff3-9348cf4faaca",
        "max_dwell_time":156464,
        "avg_dwell_time": 156464,
        "staff_max_dwell_time":1522,
        "staff_avg_dwell_time":1522,
        "children_max_dwell_time":1522,
        "children_avg_dwell_time":1522
      }
    ]
  }
}

```

7.4 Region People Counting - Trigger Report

```

{
  "device_info":
  {
    "device_name":"People Counter",
    "device_sn":"369362028335",
    "device_mac":"00:16:28:FA:8E:68",

```

```
    "ip_address": "192.168.0.99",
    "cus_device_id": "123468773",
    "cus_site_id": "asdfasf1231231",
    "running_time": 1564648484648
  },
  "time_info":
  {
    "time_zone": "UTC-11:00 Samoa Standard Time (SST)",
    "enable_dst": false,
    "dst_status": false,
    "time": "2022-12-20T18:15:00+03:00"
  },
  "region_trigger_data":
  {
    "region_count_data":
    [
      {
        "region": 1,
        "region_name": "Region1",
        "region_uuid": "c2cff789-8311-4a73-8ff3-9348cf4fa0d9",
        "current_total": 10,
        "current_staff": 1,
        "current_children": 1
      },
      {
        "region": 2,
        "region_name": "Region2",
        "region_uuid": "c2cff789-8311-4a73-8ff3-9348cf4faaca",
        "current_total": 10,
        "current_staff": 1,
        "current_children": 1
      }
    ],
    "dwell_time_data":
    [
      {
        "region": 1,
        "region_name": "Region1",
```

```
    "region_uuid": "c2cff789-8231-4a73-8ff3-9348cf4faaca",
    "people_id":1,
    "dwell_start_time":"2022-12-20T18:15:52+03:00",
    "dwell_end_time":"2022-12-20T19:15:52+03:00" ,
    "duration":5646,
    "staff":false,
    "children":true
  },
  {
    "region":1,
    "region_name":"Region1",
    "region_uuid": "c2cff789-8231-4a73-8ff3-9348cf4faaca",
    "people_id":2,
    "dwell_start_time":"2022-12-20T17:15:52+03:00",
    "dwell_end_time":"2022-12-20T19:15:52+03:00",
    "duration":5646,
    "staff":false,
    "children":true
  }
]
}
```

-END-