

CIC850 FITNESS BIKE

OWNER'S MANUAL

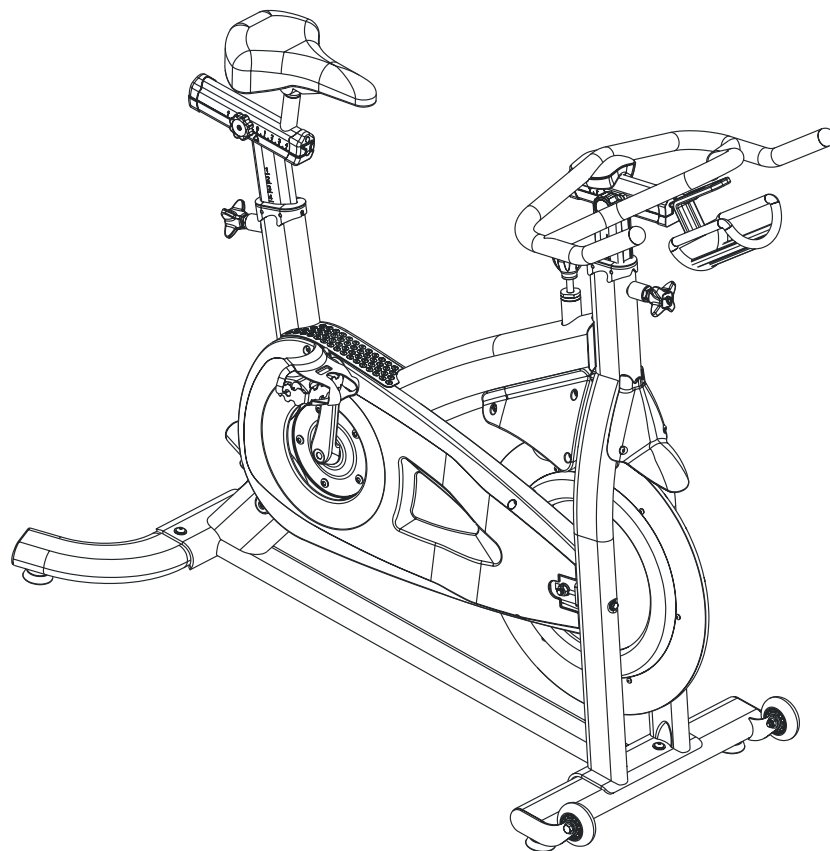


TABLE OF CONTENTS

5	PRODUCT REGISTRATION
6	IMPORTANT SAFETY INSTRUCTIONS
7	IMPORTANT OPERATION INSTRUCTIONS
9	CIC850 ASSEMBLY INSTRUCTIONS
30	GENERAL MAINTENANCE
31	MANUFACTURER'S LIMITED WARRANTY

Thank you for purchasing our product, please save these instructions. Please do not perform or attempt any customizing, adjustments, repair or maintenance that is not described in this manual.



Congratulations on your new Indoor Cycle and welcome to the Spirit Fitness family!

Thank you for your purchase of this quality group indoor cycle from Spirit Fitness. Your new indoor cycle was manufactured by one of the leading fitness manufacturers in the world and is backed by one of the most comprehensive warranties available. Through your dealer, Spirit Fitness will do all we can to make your ownership experience as pleasant as possible for many years to come. If not purchased direct from Spirit Fitness, the local dealership where you purchased this indoor cycle is your administrator for all Spirit Fitness warranty and service needs. Their responsibility is to provide you with the technical knowledge and service personnel to make your experience more informed and any difficulties easier to remedy.

Please take a moment at this time to record the name of the dealer, their telephone number, and the date of purchase below to make any future, needed contact easy. We appreciate your support and we will always remember that you are the reason that we are in business.

Yours in Health,
Spirit Fitness

NAME OF DEALER _____


DEALER PHONE # _____

PURCHASE DATE _____

RECORD YOUR SERIAL NUMBER

Please record the serial number of this fitness product in the space provided below.

Serial Number Location

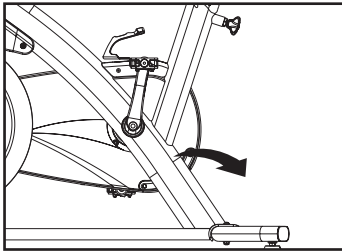

Serial Number:

REGISTER YOUR PURCHASE

The self-addressed product registration card must be completed in full and returned to Spirit Fitness. You can also go to <http://www.spiritfitness.com/warranty> under the Support tab to register online.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- Use this equipment only for its intended use as described in this manual. Do not attempt to ride this bike at high pedal speeds until you have ridden the bike for some time and are comfortable riding at slower pedal speeds.
- The bike is NOT equipped with a freewheel system which means that when the flywheel is in motion, the pedals will be in motion. Do not attempt to stop the unit by applying backward pressure to pedals while they are turning as knee injury may occur. Do not attempt to remove your feet from pedals while they are moving.
- Wait for flywheel to coast to a stop before dismounting the bike. If you want to stop the flywheel, push down on the resistance/brake knob.
- Serious injury or death may occur from over-training. Consult a medical doctor or qualified fitness instructor to determine an exercise program appropriate for your level of fitness.
- Do not attempt to turn the pedal cranks by hand. Do not touch any driving mechanism while it is in motion as possible injury could occur.
- In a home setting, keep children away from the bike when it is not in use. Keep children and pets away from the unit while it is in use.
- Do not attempt to perform dip movements on handlebars.
- Never drop or insert any object into any opening of the bike.
- Only use the bike on a stable, level floor.
- Follow instructions for safe use of the equipment including proper seat position, handlebar position, and use of foot positioning system of pedals. Do not attempt to pull up handlebar post and seat post over the 'MAX.' level
- For safe operation, allow for at least 1 foot (30cm) of free space to either side of the unit and 2 feet (60cm) of free space to the rear of the unit.
- Regularly examine the bike for damage and wear. Inoperable components should be replaced immediately or the equipment should not be used until it is repaired.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep children under the age of 13 away from this machine.

- Failure to follow all guidelines may compromise the effectiveness of the exercise experience, expose yourself (and possibly others) to injury, and reduce the longevity of the equipment.


SAVE THESE INSTRUCTIONS - THINK SAFETY!

IMPORTANT OPERATION INSTRUCTIONS

NEVER expose the bike to rain or moisture. This product is NOT designed for use outdoors, near a pool or spa, or in any other high humidity environment. Maximum environmental ratings are 40-120 degrees Fahrenheit, 95% humidity non-condensing (no water droplets forming on surfaces).

WARNING

This product can expose you to chemicals including Toluene and Acrylamide which are known to the State of California to cause Cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

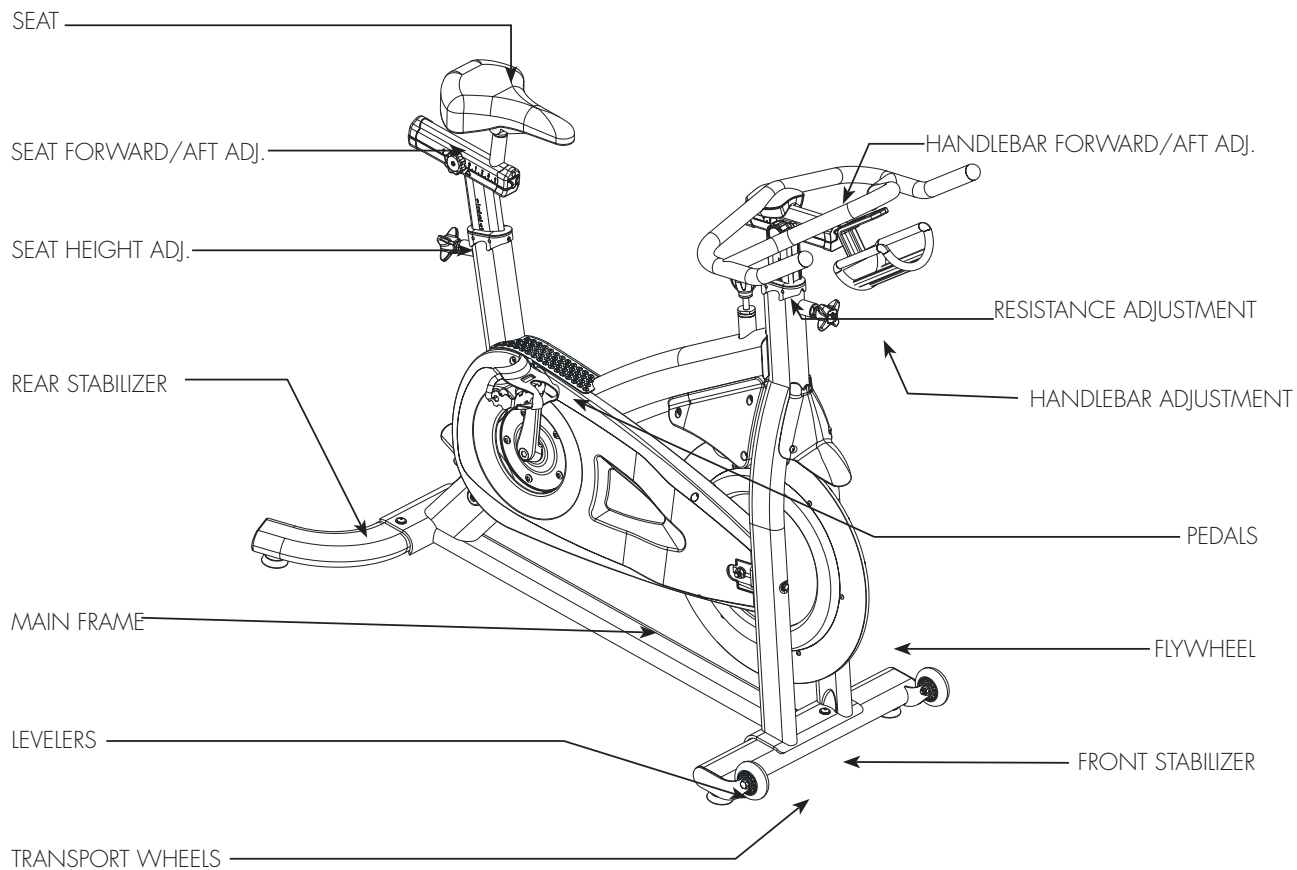

CIC850 PRE-ASSEMBLY

UNPACKING

1. Cut the straps, then along the dotted line on the bottom of the box; lift the box over the unit and unpack.
2. Locate the hardware package. The hardware is separated into six steps. Remove the tools first. Remove the hardware for each step as needed to avoid confusion. The numbers in the instructions that are in parenthesis (#) are the item number from the assembly drawing for reference.


TOOLS INCLUDED:

- ☐ 4mm Allen Wrench A
- ☐ 5mm Allen Wrench B
- ☐ 13/17mm Combination Wrench C
- ☐ M22 Wrench D

PARTS INCLUDED:

- ☐ 1 Main Frame
- ☐ 1 Front Stabilizer
- ☐ 1 Rear Stabilizer
- ☐ 1 Adjustment Handlebar Knob
- ☐ 1 Water Bottle Holder
- ☐ 1 Handlebar Post
- ☐ 1 Handlebar
- ☐ 2 Foot Pedals
- ☐ 1 Hardware Kit
- ☐ 1 Tablet Holder
- ☐ 1 Dumbbell Holder
- ☐ 1 Console Bracket


CIC850 STEP ONE

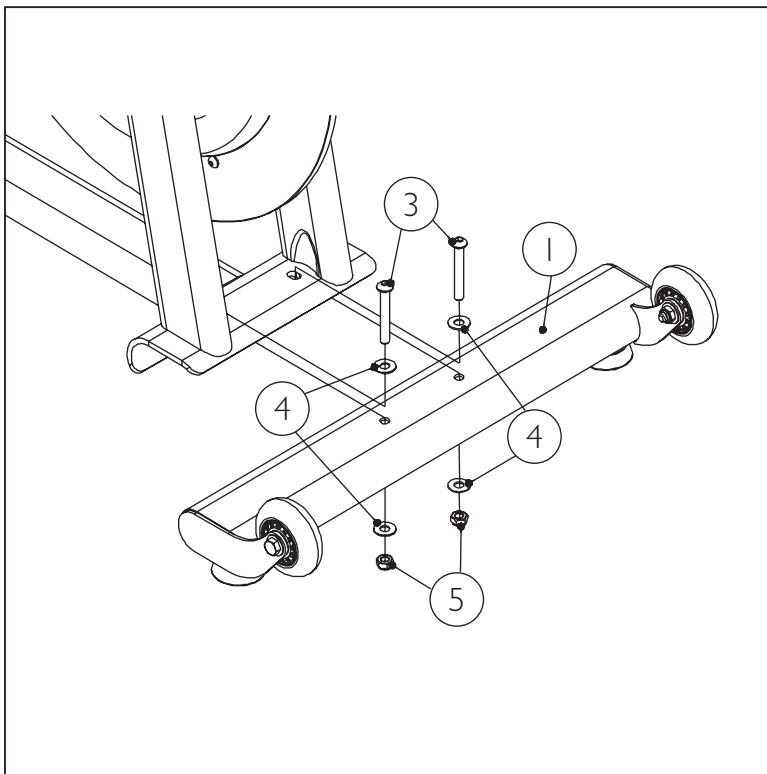

HARDWARE FOR STEP 1			
PART	TYPE	DESCRIPTION	QTY
3	SCREW	M5X1.25X55L	2
4	FLAT WASHER	M8	4

1. Gather **HARDWARE FOR STEP 1**.
2. Position the **FRONT STABILIZER (1)** on the **FRAME BRACKET** as shown in the figure. Make sure the **TRANSPORT WHEELS** are facing up and toward the front of the bike.
3. Attach the **STABILIZER** with 2 **HEX SCREWS (3)** and 4 **FLAT WASHERS (4)**. Do not over tighten as the deformation of stabilizer may occur.
4. Make sure the **LEVELING FEET** with nut are fully screwed into the **STABILIZER**


CIC850 STEP TWO

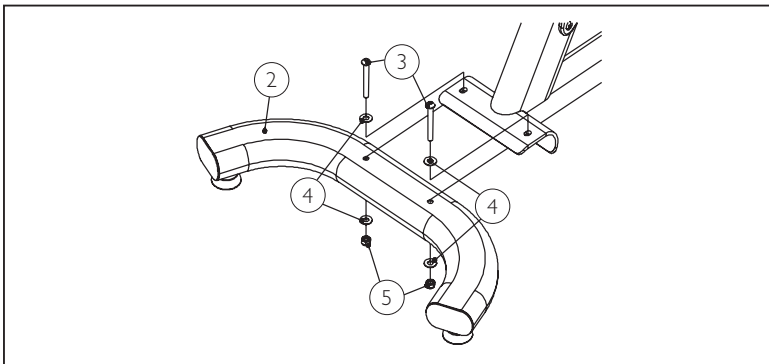

HARDWARE FOR STEP 2			
PART	TYPE	DESCRIPTION	QTY
3	SCREW	M8X1.25X55L	2
4	FLAT WASHER	M8	4

1. Gather **HARDWARE FOR STEP 2**.
2. Position the **REAR STABILIZER (2)** on the **FRAME BRACKET** as shown in the figure.
3. Attach the **STABILIZER** with 2 **HEX SCREWS (3)** and 4 **FLAT WASHERS (4)**. Do not over tightened as the deformation of stabilizer may occur.


CIC850 STEP THREE

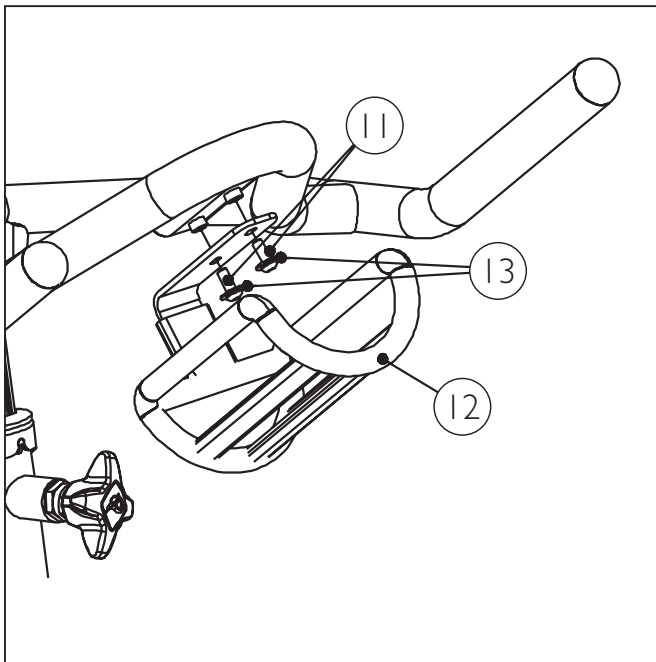

NO HARDWARE FOR STEP 3

1. Remove the **L-POP PIN** from the components box and turn clockwise to tighten firmly into the **FRAME** with the **WRENCH (D)**.

CIC850 STEP FOUR

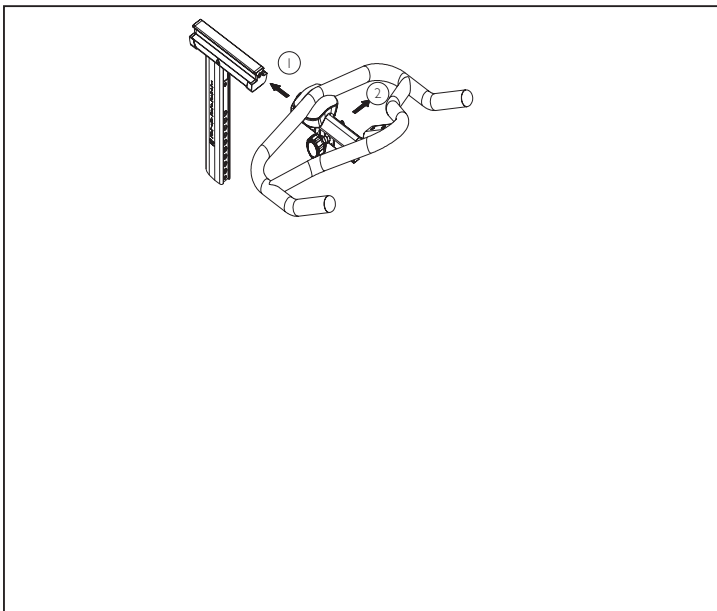


HARDWARE FOR STEP 4			
PART	TYPE	DESCRIPTION	QTY
12	SCREW	M6X1.0"X15L	2
13	FLAT WASHER	M6	2

1. Gather **HARDWARE FOR STEP 4**.
2. Remove the battery cover from the back of the **CONSOLE (6)**. Insert 2 AA batteries into the battery compartment and reinstall the battery cover. When the Battery working voltage is low, the "Low battery" indicator will show up on the **Console** display.
3. Place the **CONSOLE BRACKET (7)** on the back of the console and secure using the 1 **SCREW (8)**. Tighten with **COMBINATION CROSS WRENCH (C)**.
4. Position the **Console Bracket (7)** on the **Handlebar (9)**, making sure to align the screw holes with the screw holes of the Handlebar. Align the screw holes of the **WATER BOTTLE HOLDER (10)** with the **TABLET HOLDER (11)**, and the **CONSOLE BRACKET (7)** and the Handlebar. Secure with 2 **SCREWS (12)** and 2 **FLAT WASHERS (13)**. Tighten using the **L-HEX WRENCH (A)**.

CIC850 STEP FIVE


NO HARDWARE FOR STEP 5

1. Pull out the **SAFETY PIN (14)** and slide the **HANDLEBAR** onto the **POST (15)**.
2. Insert the **HANDLEBAR ASSEMBLY** into the **FRAME TUBE** and tighten firmly with the **L-POP PIN**.

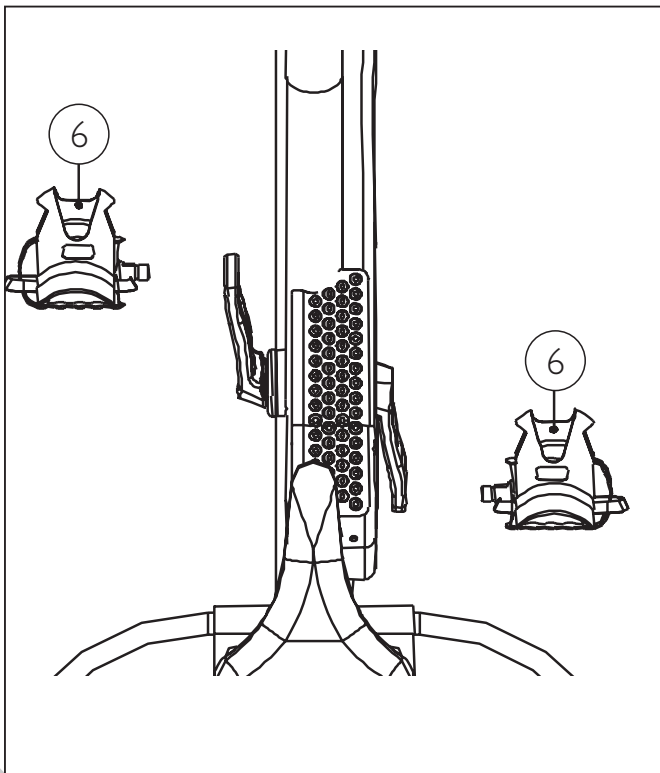

CIC850 STEP SIX

NO HARDWARE FOR STEP 5

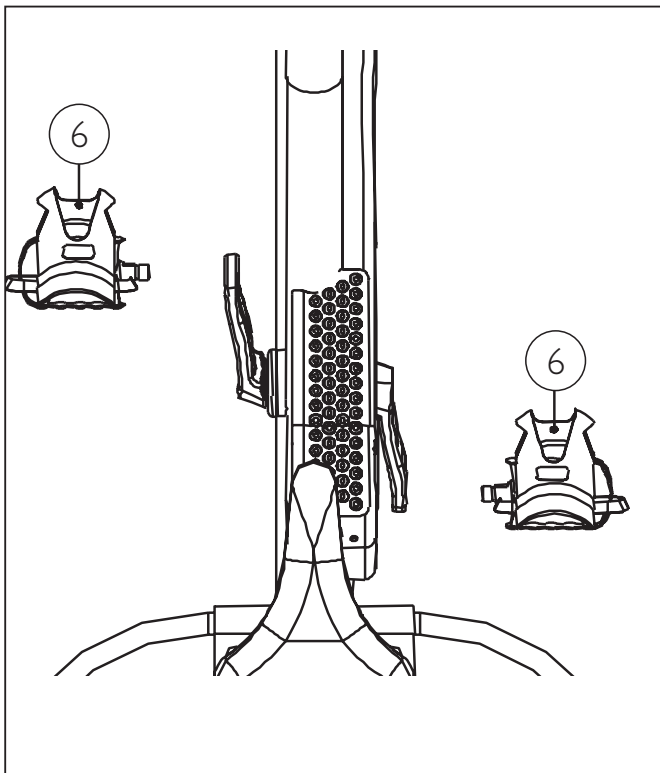

1. Remove pedals from the components box.
2. Look at the end of the pedal axle and notice each pedal is marked with an R and L on the spindle. It is indicated which side of bike the pedal is intended to assemble.
3. Located the pedal marking R on the spindle on the right side of crank (Chain guard side). Turn clockwise to tighten firmly. If possible, apply some grease to the threads before engaging to the crank.
4. Locate the pedal marked L on the spindle on the left side of the crank. Turn counter-clockwise to tighten firmly. If possible, apply some grease to the threads before engaging to the crank.

CONSOLE INSTALLATION:

1. Ensure the **Console Clamp** is securely mounted on the back of the console. Insert the mounting screw through the **Console Clamp** into the **Console**.
2. Place the **CONSOLE BRACKET** on the back of the console and secure using the 1 **SCREW** . Tighten with **Combination Cross Wrench (C)**.
3. Position the **CONSOLE BRACKET** on the Handlebar, making sure to align the screw holes with the screw holes of the Handlebar. Align the screw holes of **WATER BOTTLE HOLDER** with **TABLET HOLDER** and the **CONSOLE BRACKET** and the Handlebar. Secure using 2 **SCREWS** and 2 **FLAT WASHERS** and tighten with **L-hex Wrench (A)**.

TRANSMITTER

Depending on the make and model of the bike, the Speed Sensor Transmitter can typically be installed nearby the drive belt cover. The transmission range is around 2 meters from the Speed Sensor Transmitter to the computer console.

MAGNET

Firmly attach the magnet on the crank arm at the measured location. The allowable maximum distance between the magnet and sensor end is 8mm.



CT800 CONSOLE OPERATION

CONSOLE BATTERY INSTALLATION:

1. Remove the battery cover from the back of the computer.
2. Insert 2 AAA batteries into the battery compartment and reinstall the battery cover.
3. When battery voltage is low, the 'Low battery' indicator will show up on the Console display.

SPEED SENSOR TRANSMITTER BATTERY INSTALLATION

1. Remove the battery cover from the transmitter.
2. Install 2 AAA batteries in the battery compartment and reinstall the battery cover.

INSTALLATION OF THE UNIVERSAL GROUP CYCLING MONITOR

This UNIVERSAL SPINNER BIKE MONITOR can be installed onto most of group cycling and spin style bike handlebars.

In Power Saving Mode", pressing Page key will bring the console to "Quick Start" active state.

MODE SELECT

Press **MODE** key to select the **DIST, KCAL** display.

RESETTING ALL MEASURED VALUE

To clear all the measured values, press and hold key under the **TIME** Mode for 3 seconds. All the measured value for **AVG SPEED, AVG PULSE, TIME, DIST, KCAL** will reset to zero.

TIMER SETTING

The **TIMER** displays users' exercise-workout time. If the user does not set the **COUNT DOWN TIME**, the **TIME** will count up from 00:00 to 99:59. If the user has set a **COUNT DOWN TIME** prior to the workout, the **TIME** will count down to zero. Once the user has reached zero, the display will flash and an alarm will sound. The timer will then start counting up from 00:01. The user can go into **TIMER** setting from **SPEED** or **DISTANCE** Mode by press and hold 'SET' key for 3 seconds.

HEART RATE TARGET ZONES

Hold the **PAGE** key for 3 seconds to enter the settings screen. Press **MODE** and choose the heart rate icon, then press the **PAGE** key to select the heart rate target zones window. Press the **MODE** key to increase the maximum heart rate limit. After setting the maximum heart rate, press the **PAGE** key to adjust the minimum heart rate using the same steps.

PERSONAL DATA SETTING

"Entering your personal data helps make the calories burned data more accurate. To set your user information, hold the **PAGE** key for 3 seconds while in DIST or KCAL mode, then press **MODE** until the heart rate windows are selected.

1. Press the **Page** key to select the gender, either: Male / Female
2. Press the **Page** key to go to the weight unit setting. Press the **Mode** key to select the weight, either: Kg. / Lb. Note: this change of metric units to imperial units will affect the displaying units: MPH/KPH, Lb/KG and ML/KM.
3. Press the **Page** key, this will go to the weight setting. Press the Mode key to increase the weight by 0.5 Kg. or 0.5Lb.

PAIRING CONSOLE TO BION FITNESS APP

1. Download the Bion Fitness App (Google Play)
2. Open the app and press the smartphone icon on your bike console.
3. The app will search for the console, and the bike console will display the pairing interface.
4. Save exercise data method. When the app is connecting, hold the PAGE key on the console for 3 seconds until the bike console symbol appears. The Bion Fitness App will either show "Standby" or "Recording". If you want to stop recording, hold the PAGE key for 3 seconds.

UN-PAIR/RE-PAIR CONSOLE TO BION FITNESS APP

If APP would like to repair with another bike console, first press the "FORGET" button to cancel old bike console then come back LOG page pairing with new bike console. The "FORGET" button is located on the setting page "Device".

PAIRING THE CONSOLE AND TRANSMITTER

NOTE: ALL TRANSMITTERS ARE PAIRED WITH THE CONSOLE BEFORE SHIPPING. THESE STEPS SHOULD ONLY NEED TO BE USED IN CIRCUMSTANCES WHERE THE DEVICES HAVE BEEN UN-PAIRED.

1. Hold both **MODE** and **SET** keys on the console for 3 seconds.
2. On the speed transmitter, press the small "SPEED CONTROL PAIR KEY".
3. The console should read "O" once a successful pairing has been established.
4. If the console reads "Err", the pairing has failed. Press the **SET** key to repeat the pairing steps again. (Note: if no action is taken within 10 seconds the console will automatically exit pairing mode.

TROUBLESHOOTING

No Display on Console

1. Press any key to bring the console to 'Quick Start' mode.
2. Ensure that the batteries are installed properly in the Console and Transmitter. If they are, install fresh batteries.

No Heart Rate signal displayed

1. Ensure that your chest strap is worn correctly, and that there is moisture under the electrodes of the chest strap.
2. Relocate the bike away from any equipment that could potentially interrupt the radio frequency signal, such as a DVD player or television, etc.

RPM or HR does not change

1. Press 'MODE key' repeatedly to toggle between SPEED (SPD), DISTANCE (DIST), TIME (TIME) and CLOCK (CLK) values.
2. Press and Hold 'SET key' repeatedly to clear past measured value or go into setting and exit.

Cadence number jumps high or low

1. Separate bikes that may be paired to the same console code and are cross-talking, or simply run transmitter pair stage again on the bike.
2. Relocate the bike to a different part of the room, away from any RF interference areas.

Heart Rate signal gets interrupted or drops out

1. Ensure that there is a minimum distance of 36 inches between bikes.
2. Verify that your chest strap is secure and that the electrodes are making contact with your chest at all times.

INDOOR CYCLE SETUP

LEVELERS

Place the cycle on a level area, if at all possible. If the cycle needs leveling, turn the levelers clockwise or counterclockwise until the base is stable and does not rock.

ADJUSTMENT KNOBS

All four adjustment levers function the same way. Turn the knob clockwise to tighten and counterclockwise to loosen.

SEAT

The pitch of the saddle can be adjusted to accommodate all users. Loosen the horizontal bolt under the seat to adjust the pitch, then retighten.

TRANSPORTATION


The indoor cycle is equipped with two transport wheels, which are engaged when the rear of the CIC850 indoor cycle is lifted.

Take some time to learn how to properly adjust the bike to your body; it will make your workouts more pleasant and a safer experience too. Riding the bike when it is incorrectly adjusted can result in discomfort and increase your risk of injury.

ADJUSTMENT OF SEAT POSITION


SEAT HEIGHT ADJUSTMENT

1. Standing next to the bike, adjust the seat until it is about hip height.
2. Rotate the crank arms until the pedals are in the vertical position: 12 and 6 o'clock.
3. Place your foot in the toe cage of the pedal closest to the floor and mount the bike. Ensure that the ball of your foot is over the center of the pedal. Your leg should be slightly bent at the knee, about 5 degrees.
4. If your leg is too straight or your foot cannot touch the pedal you will need to lower the seat height. If your leg is bent too much, you will need to raise the seat height.
5. Dismount the bike. Then loosen the knob on the seat post and adjust up or down as necessary.
6. When the seat is in the desired position, tighten the knob to secure the seat post.
7. Note the final position mark on the seat post for future reference.

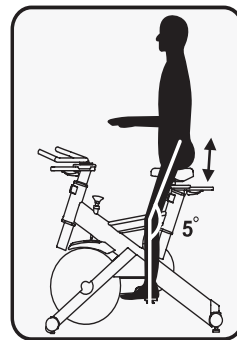

SEAT FORWARD/AFT ADJUSTMENT


1. Sit on the bike with the crank arms in the 3 and 9 o'clock positions. A proper forward/aft position (for road bike training) of the seat is achieved when the small bump at the top of your shin is above the pedal axle.
2. Dismount the bike. Loosen the knob under the seat and slide the seat forward or backward as desired; tighten the knob.

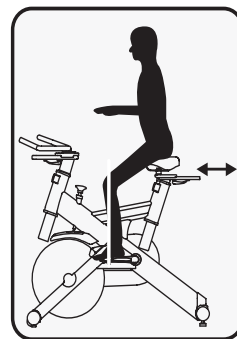

HANDLE BAR ADJUSTMENT

HANDLEBAR HEIGHT ADJUSTMENT

1. The handlebar height is a matter of preference. Start with a handlebar height that is the same as the seat's height. Adjusting the handlebar higher will give the rider a more upright position; lower will result in a more crouched position.
2. Raise or lower the handlebar by loosening the knob on the handlebar post and adjust by sliding the handlebar mount up or down as desired. Then tighten the knob to secure the handlebar post. Note the final position mark on the handlebar post for future reference.

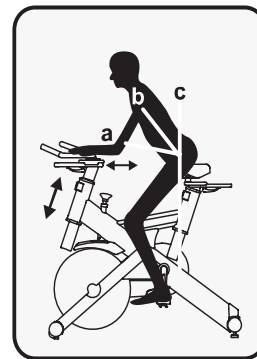

ADJUSTMENT OF HANDLEBAR'S FORWARD/AFT POSITION

1. Loosen the knob under the handlebar and slide the handlebar forward or backward as desired. A suitable forward/aft position should allow the rider to comfortably grasp the handlebar with a slight bend at the elbow.
2. Tighten the knob to secure the handlebar assembly.

RESISTANCE ADJUSTMENT



Resistance can be adjusted easily at any time while riding to change the intensity of workout. Turn the knob clockwise (+) to increase resistance. Turn the knob counterclockwise (-) to decrease resistance.

EMERGENCY BRAKE

In case of emergency or before dismounting the indoor cycle, presses directly **DOWN** on the resistance knob to stop the flywheel and pedal.

PEDAL STRAP ADJUSTMENT

Place the ball of your feet in the toe clip till the front of the shoe is snugly in the cage. Then tighten the strap of toe clip around your shoe by pulling up on the strap until cage of toe clip fits snugly around the shoe.

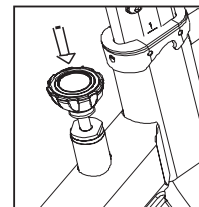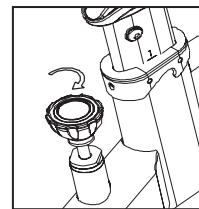

BELT TENSION ADJUSTMENT

The belt tension had been set before shipping. It should not need to be adjusted when first using. However, you may need to make the minor tension adjustment over time.

NOTE: Make sure you adjust both side equally, either tighten or loosen the belt tension so that the flywheel keep in alignment with the frame.

ADJUST THE BELT TENSION

1. Remove the **2 Guard (Top) Cover (No. 47)** on the **Guard (top) (No. 46)**. Remove the **4 Screws (No. 50)** and **2 Screws (No. 51)**. Remove the **Guard (top) (No. 46)**.
2. Remove the **7 Screws (No. 50)** and remove the **Right guard (No. 44)**.
3. Use **L type wrench (B)** to loosen **2 Hex Screws (No. 55)** with two turns counterclockwise.
4. Use **L type wrench (B)** to adjust **Screw (No. 17)**. Turn counter-clockwise to loosen belt. Turn clockwise to tighten belt. Then adjust the belt. Tighten the **2 Hex Screws (No. 55)** clockwise.
5. Turn the crank to see if belt runs smoothly. You can also try riding the bike to test the belt tension. If there is still a problem, repeat step #4 until belt is at correct tension.
6. Put the **Right guard (No. 44)** back on and re-tighten the **Screws (No. 50)**. Put the **Guard (top) (No. 46)** back on and re-tighten the **4 Screws (No. 50)** and **2 Screws (No. 51)**.

GENERAL MAINTENANCE

1. Wipe down all areas in the sweat path with a damp cloth after each workout.
2. If a squeak, thump, clicking or rough feeling develops the main cause is most likely one of two reasons:
 - a. The hardware was not sufficiently tightened during assembly. All bolts that were installed during assembly need to be tightened as much as possible. It may be necessary to use a larger wrench than the one provided if you cannot tighten the bolts sufficiently. We cannot stress this point enough; 90% of calls to the service department for noise issues can be traced to loose hardware.
 - b. The crank arm nut needs to be retightened.
- c. If squeaks or other noises persist, check that the unit is properly leveled. There are 2 leveling pads on the bottom of the rear stabilizer, use a 14mm wrench (or adjustable wrench) to adjust the levelers.

MAINTENANCE SCHEDULE

Part	Recommended Action	Frequency	Cleaner
Pedals	Ensure that pedals are tight in crank arms, that all screws on pedals are tight, and that the pedal straps are not frayed.	Before each Use	N/A
Frame	Wipe down using a clean, soft damp cloth	Daily	Water
Flywheel	Wipe down using a clean, soft damp cloth	Weekly	Water
Brake Pad	Check for wear	Monthly	N/A

1. Do not service internal parts of pedals. If they are found to be worn internally, we recommend replacing the pedal.
2. Use of lubricants or cleaning solutions other than those so specified will result in diminished performance and a shorter life span for that part.

INDOOR CYCLE WARRANTY – EFFECTIVE OCTOBER 28, 2020

Spirit Fitness warrants all its Indoor Cycle parts for a period of time listed below from the date of retail sale, as determined by sale receipt, or in the absence of a sales receipt eighteen (18) months from the original factory shipping date. Spirit Fitness' responsibilities include providing new or remanufactured parts, at Spirit Fitness' option, and technical support to our independent dealers and servicing organizations. In the absence of a dealer or service organization, these warranties will be administered by Spirit Fitness directly to a consumer. The warranty period applies to the following components:

Warranty	Frame	Parts	Labor	Wear Items*
Commercial (Health Clubs, YMCA, Community Centers, dues paying facilities)	10 Years	3 Years	1 Year	1 Year
Commercial (non-dues paying facilities)	15 Years	3 Years	1 Year	1 Year
Residential	Lifetime	3 Years	1 Year	1 Year

*Wear Items include items such as grips, end caps, and toe cage straps.

NORMAL RESPONSIBILITIES OF THE CONSUMER

1. The warranty registration card must be completed and returned to the address listed on the card within 10 days of the original purchase, or completed online to validate the manufacturer's limited warranty.
2. Proper use of the fitness equipment in accordance with the instructions provided in this manual.
3. Expenses for making the fitness equipment accessible for servicing, including any item that was not part of the fitness equipment at the time it was shipped from the factory.
4. Damages to the fitness equipment finish during shipping, installation or following installation.
5. Routine maintenance of this unit as specified in this manual.

EXCLUSIONS

This warranty does not cover the following:

1. CONSEQUENTIAL, COLLATERAL, OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN OR ANY IMPLIED WARRANTY.
Note: Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.
2. Service call reimbursement to the consumer. Service call reimbursement to the dealer that does not involve malfunction or defects in workmanship or material, for units that are beyond the warranty period, for units that are beyond the service call reimbursement period, for fitness equipment not requiring component replacement, or fitness equipment not in non-dues paying facility or household use.
3. Damages caused by services performed by persons other than authorized Spirit Fitness service companies; use of parts other than original Spirit Fitness parts; or external causes such as corrosion, discoloration of paint or plastic, alterations, modifications, abuse, misuse, accident, improper maintenance, inadequate power supply, or acts of God.
4. Products with original serial numbers that have been removed or altered.
5. Products that have been: sold, transferred, bartered, or given to a third party.
6. Products that do not have a warranty registration card on file at Spirit Fitness. Spirit Fitness reserves the right to request proof of purchase if no warranty record exists for the product.
7. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE.
8. Product used in prisons and correctional facilities
9. Warranties outside of the United States may vary. Please contact your local dealer for details.

SERVICE


Keep your bill of sale. Twelve (12) months from the date on the bill of sale or eighteen (18) months from the date of factory shipping as determined by the serial number establishes the labor warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. This written warranty gives you specific legal rights. You may also have other rights that vary from state to state. Service under this warranty must be obtained by following these steps, in order:

1. Contact your selling authorized Spirit Fitness dealer. OR
2. Contact your local authorized Spirit Fitness service organization.
3. If there is a question as to where to obtain service, contact our service department at (870) 935-1107.
4. Spirit Fitness' obligation under this warranty is limited to repairing or replacing, at Spirit Fitness' option, the product through one of our authorized service centers. All repairs must be preauthorized by Spirit Fitness. If the product is shipped to a service center freight charges to and from the service center will be the customer's responsibility. For replacement parts shipped while the product is under warranty, the customer will be responsible for shipping and handling charges. For in-home service, the customer will be responsible for a trip charge. There will be an additional trip charge if the customer is located over 100 miles from the nearest service center.
5. The owner is responsible for adequate packaging upon return to Spirit Fitness. Spirit Fitness is not responsible for damages in shipping. Make all freight damage claims with the appropriate freight carrier. DO NOT SHIP ANY UNIT TO OUR FACTORY WITHOUT A RETURN AUTHORIZATION NUMBER. All units arriving without a return authorization number will be refused.
6. For any further information, or to contact our service department by mail, send your correspondence to:

SPIRIT FITNESS, INC.
P.O. Box 2037
Jonesboro, AR 72402-2037

Product features or specifications as described or illustrated are subject to change without notice. All warranties are made by Spirit Manufacturing, Inc. This warranty applies only in the 48 contiguous United States. NOTE: This does not apply to Alaska or Hawaii.

CIC850 Exploded Drawing

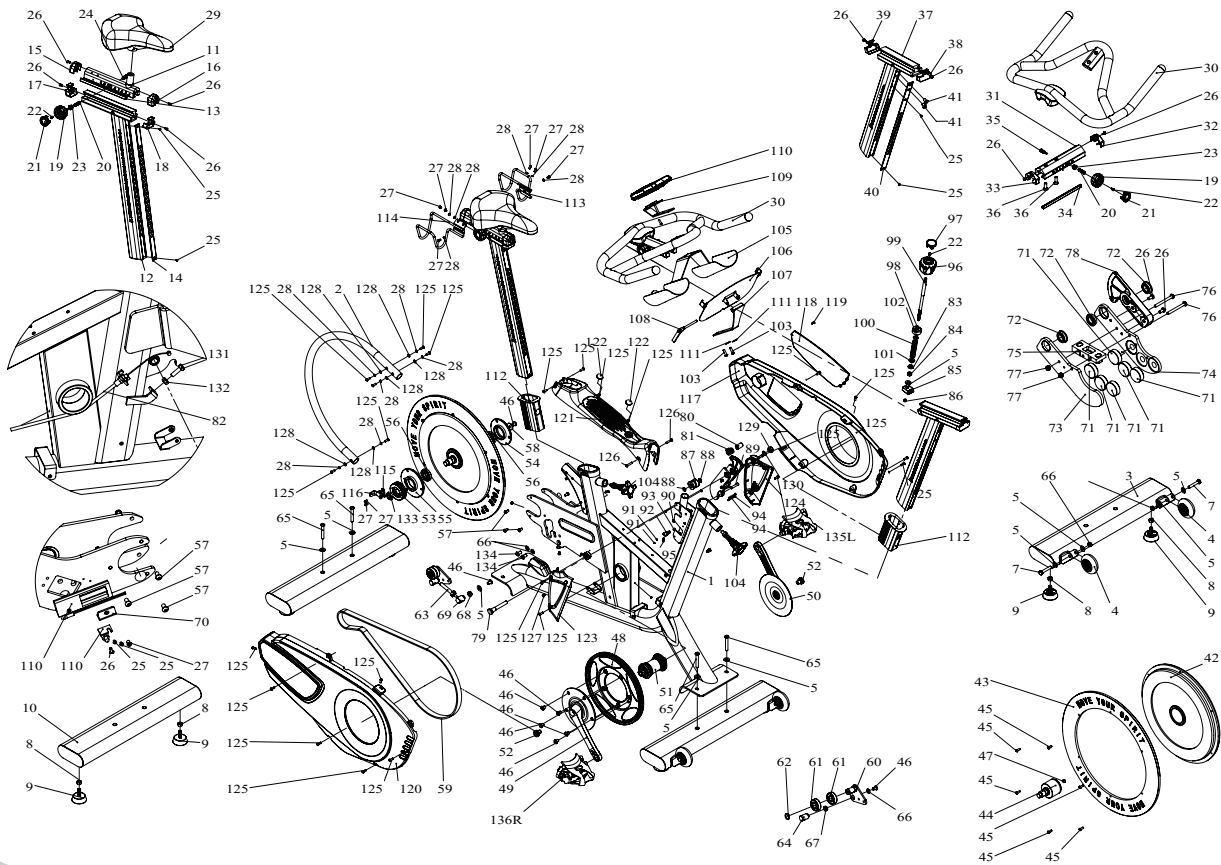

CIC850 PARTS LIST

No.	DESCRIPTION	QTY
1	Frame	1
2	Outer circle tube assembly	1
3	Front stabilizer assembly	1
4	Transportation wheel	2
5	Flat washer SUS304 M8(D19*d8.5*1.0t	8
6	Nylon nut SUS304 M8*P1.25	2
7	Hex screw M8*1.25*45L	2
8	Hex nut ϕ 3/8"*16T*8t	4
9	Leveler foot	4
10	Rear stabilizer assembly	1
11	Seat slider welding assembly	1
12	Seat post assembly	1
13	Seat adjustment taut block	1
14	Seat post panel	1
15	Up sweat guard(back)	1
16	Up sweat guard(front)	1
17	Down sweat guard(back)	1
18	Down sweat guard(front)	1
19	Adjustable knob	2
20	Konb screw (UCP) ϕ 9*27.5L	2

No.	DESCRIPTION	QTY
21	Brake knob-cover	2
22	Flat cross head screw (UCP)M4*P0.7*10L	3
23	Knob bolt block	2
24	Pop pin knob(short)	1
25	Flat cross head screw SUS304 M3*P0.5*6L	6
26	Flat cross head screw SUS304 M4*P0.7*8L	8
27	Flat cross head screw M5*P0.8*8L	9
28	Spring Washer SW5*1.0t	12
29	Saddle	1
30	Handlebar	1
31	Adjustment handlebar block(up)	1
32	Up sweat guard(front) (wider)	1
33	Up sweat guard(back) (wider)	1
34	Handlebar adjustment taut block	1
35	Pop pin knob(long)	1
36	Flat hex screw SUS304 M8*P1.25*25L	2
37	Handlebar Post assembly	1
38	Down sweat guard(front) (wider)	1
39	Down sweat guard(back) (wider)	1
40	Handlebar post panel	1

No.	DESCRIPTION	QTY
41	Flat cross head screw SUS304 M8*P1.25*12L	2
42	Flywheel set	1
43	Aluminum Ring	1
44	Flywheel AXIS	1
45	Flat cross head screw SUS304 M5*P0.8*16L	6
46	Flat cross head screw M8*P1.25*10L	8
47	Permanent magnet	1
48	Sprocket / pulley	1
49	Right crank	1
50	Left crank	1
51	Bottom bracket set	1
52	Crank fix screw	2
53	Small sprocket / pulley	1
54	Bearing block (left)	1
55	Bearing block (right)	1
56	Bearing 16004ZZ	2
57	Flat cross head screw SUS304 M6*P1.0*12L	6
58	Flat washer UCP D24*d8.5*1.5t	1
59	Belt 5PK 1360L	1
60	Idler pulley arm assembly	1

No.	DESCRIPTION	QTY
61	Bearing-6203ZZ	2
62	C type clip	1
63	Idler pully adjust screw	1
64	Idler pully positioning nut	1
65	Flat cross head screw SUS304 M8*P1.25*55L	4
66	Flat washer M8(D16*d8.2*1.0t)	3
67	Idler pully casing	1
68	Flywheel Fixed sheet casing A	1
69	Flywheel Fixed sheet Positioning nut	1
70	Sensor board fixing piece	1
71	Permanent magnet	6
72	Bearing-LF-1910ZZ	3
73	Brake block (right)	1
74	Brake block (left)	1
75	Brake gasket assembly	1
76	Flat cross head screw SUS304 M4*P0.7*40L	2
77	Nylon nut SUS304 M4*P0.7	2
78	Brake line Turntable	1
79	Brake block axis	1
80	Brake block axis Lining	1

No.	DESCRIPTION	QTY
81	Brake Spring	1
82	Brake line	1
83	PE Wahser	1
84	Nylon nut SUS304 M8*P2.0	1
85	Slider block	1
86	Nylon nut SUS304 M5*P0.8	1
87	Fixed pulley	1
88	Nylon bushing (black)	2
89	Handbrake shaft pin L	1
90	E type circlip $\phi 5$	1
91	E type circlip $\phi 3$	2
92	Swing arm assembly	1
93	Nylon fixed pulley	1
94	Handbrake shaft pin B	2
95	Extension spring	1
96	Brake Knob	1
97	Brake knob up cover	1
98	Brake knob cover	1
99	Brake rod	1
100	Compression spring	1

No.	DESCRIPTION	QTY
101	Square plastic bushing	1
102	Flat washer SUS304 M8(D16*d8.1*1.6t)	1
103	Flat cross head screw SUS304 M6*P1.0*20L	2
104	Star-type pop pin knob	2
105	Water bottle holder	1
106	Tablet Holder	1
107	Fixed base assembly	1
108	L type knob	1
109	Console bracket	1
110	Console DT-3268F	1
111	Flat washer SUS304 M6(D16*d6.5*1.0t)	2
112	Bushing (seat post/handlebar)	2
113	Left dumbbell Holder	1
114	Right dumbbell Holder	1
115	Outside plate fixing part backing plate	1
116	Outside plate fixing	1
117	Left chain guard A	1
118	Left chain guard B	1
119	Flat cross head screw M4*P0.7*10L	1
120	Right chain guard B	1

No.	DESCRIPTION	QTY
121	Chian guard up	1
122	Chian guard up cover	2
123	Brake guard right	1
124	Brake guard left	1
125	Flat cross head screw M5*P0.8*14L	25
126	Flat cross head screw M5*P0.8*25L	2
127	Round head Phillips tapping screws	1
128	Flat washer M5(ϕ 5.3* ϕ 10*1t)	6
129	Nylon nut SUS304 M10*P1.5	1
130	Flat washer (D16*d10.2*1.0t)	1
131	Hex screw M6*P1.0*20L	1
132	Hex nuts (UCP)M6*P1.0*5.0t	1
133	Hex nuts (UCP)M16*P1.5*7.8t	1
134	Flat cross head screw M8*P1.25*15L	2
135/ 136	Pedal L/R	1
137	Screw M5*15L	1



800.258.4555
spiritservice@spiritfitness.com
www.spiritfitness.com



Spirit Fitness
3000 Nestle Road
Jonesboro, AR 72401



CIC850 Owners Manual
© 2021 All Rights Reserved
Revision 3: 04.24.2021