

Cast Steel Float & Thermostatic Steam Traps FTB Super Capacity Series


The trap contains a float valve mechanism which modulates to discharge condensate continuously at steam temperature. Noncondensible gases are released by a separate internal balanced pressure thermostatic air vent

Model	FTB-125	FTB-200	
РМО	125 psig 200 psig		
Sizes	2-1/2"		
Connections	NPT, SW		
Construction	Cast Steel Body		
Stainless Steel valve her Mechanism housing		,	
Options	Bimetal Air Vent		

Typical Applications

All process heat exchange equipment, particularly when controlled by modulating temperature control valves; unit heaters and air heating coils.

No.	Part	Material		
1	Body	Cast Steel	ASTM A216 WCB	
2	Cover Screws	Carbon Steel	ASTM A449 Type 1	
3	Cover Gasket	Graphite		
4	Cover	Cast Steel	ASTM A216 WCB	
5	Valve Seat	Stainless Steel		
6	Valve Assembly Gasket	Graphite		
7	Main Valve Assembly Screws	Stainless Steel		
8	Ball Float	Stainless Steel		
9	Air Vent Assembly Air Vent Head Air Vent Seat	Stainless Steel Stainless Steel Stainless Steel		
15	Main Valve Assy Housing	Stainless Steel		
16	Pivot Pin	Stainless Steel		
17	Valve Head	Stainless Steel (FTB-175) Cast Stainless Steel (FTB-125)		
18	Float Arm	Stainless Steel (FTB-175)		

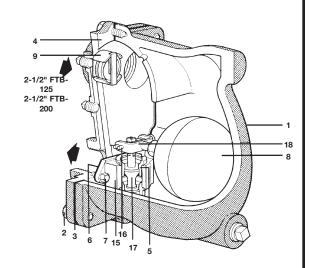

For Capacities, see TI-2-317-US **Limiting Operating Conditions**

Max. Operating Pressure (PMO) FTB-125: 125 psig (8.6 barg) FTB-200: 200 psig (13.8 barg)

Thermostatic air vent operating range			
Steam pressure (psig)	Maximum steam temperature °F		
200	572		
175	558		
150	555		
100	547		
75	542		
50	534		
25	521		
0	464		

Note: Use bimetal air vent outside range on chart up to 650°F

Pressure Shell Design Conditions

FTB-125) **PMA** 200 psig/up to 650°F12.1 barg/up to 343°C Max. allowable pressure

FTB-125 FTB-200 650° F/0-200 psig 343°C/0-12.1 barg Max. allowable temp.

Cast Steel Float & Thermostatic Steam Traps FTB Super Capacity Series

Installation

A pipeline strainer should be installed ahead of any steam trap. Full-port isolating valves should be placed to permit servicing. The trap should be installed below the drainage point of the equipment with a collecting leg before the trap, in a position with the float arm in a horizontal plane so that the float rises and falls vertically, and with the direction of flow as indicated on the cover. Refer to IMI 2.300 for complete instructions.

Maintenance

This product can be maintained without disturbing the piping connections. Complete isolation from both supply and return line is required before any servicing is performed.

The trap should be disassembled periodically for inspection and cleaning of the valve head and seat, and operating mechanism.


Worn or damaged parts should be replaced using a complete valve mechanism assembly and/or air vent assembly.

Complete installation and maintenance instructions are given in IMI 2.300, which accompanies the product.

Sample Specification

Steam traps shall be of the mechanical float type having cast steel bodies, NPT or SW connections, and stainless steel valve heads and seats. Incorporated into the trap body shall be a stainless steel balanced pressure thermostatic air vent capable of withstanding 572°F operating temperature and resisting waterhammer without sustaining damage. Internals of the trap shall be completely servicable without disturbing the piping. Trap tested in accordance to ANSI / FCI 85-1. Capacity data obtained in accordance to PTC 39.1.

Dimensions (nominal) in inches and millimeters							
Type & Size	Α	В	С	D	E	F	Weight
FTB-125 2-1/2"	15.4 390	9.25 235	6.9 184	1.4 35	14.4 397	4.0 95	112 lb 50.8 kg
FTB-200 2-1/2"	15.4 390	9.25 235	6.9 184	1.4 35	14.4 397	4.0 95	112 lb 50.8 kg
* F * C -					A	E	: :
		2-1	/2" FTB-1	05 0 000			

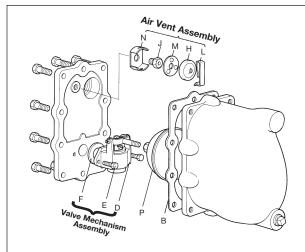

Spare Parts

Gasket Kit (3 of each)	B, E (F)
Air Vent Kit	H, J, L, M, N
Valve Mechanism Kit (less float)	D, E, F
Float	Р

We certify that the data as given on this sheet are correct.
Signed:

Date:

© Snirax Sarco Inc. 20