




CHARGING INSTRUCTION

The charging cradle assembly includes:

- Charging cradle
- Extension cable
- Plug Adapter
(Plug Adapter varies depending on region and only is provided when necessary)

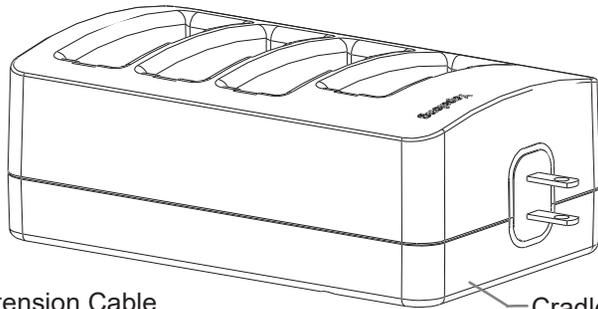

Insert the radio(s) into the cradle as shown. Make sure the front of the radio(s) face the front of the cradle.

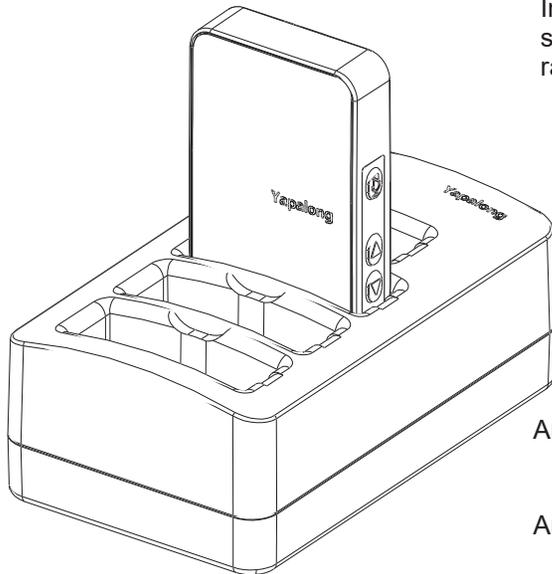



CHANGING LIGHT INDICATIONS

Green light is solid:
Battery is fully charged

Amber light is solid:
Battery is being charged

Amber light blinks every 5 seconds:
1st battery low level warning

Amber light blinks every 2 seconds:
2nd battery low level warning. It turns off in 15 minutes automatically.

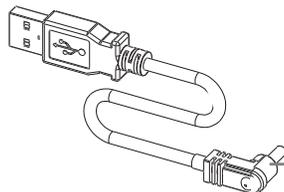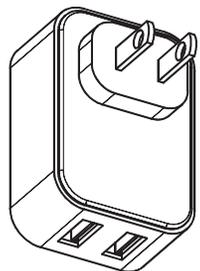

If the cradle is not available, you may use a charging adapter, shown here. Make sure to use the cable with 1.3 mm barrel connector not 1.0 mm barrel, which is for


1.3 mm barrel connector

DUAL GROUP Full-Duplex Radio

YAPALONG-5001 (8 -USER)
YAPALONG-5002 (14-USER)

User's Manual

Please activate your warranty @ yapalong.com/pages/warranty

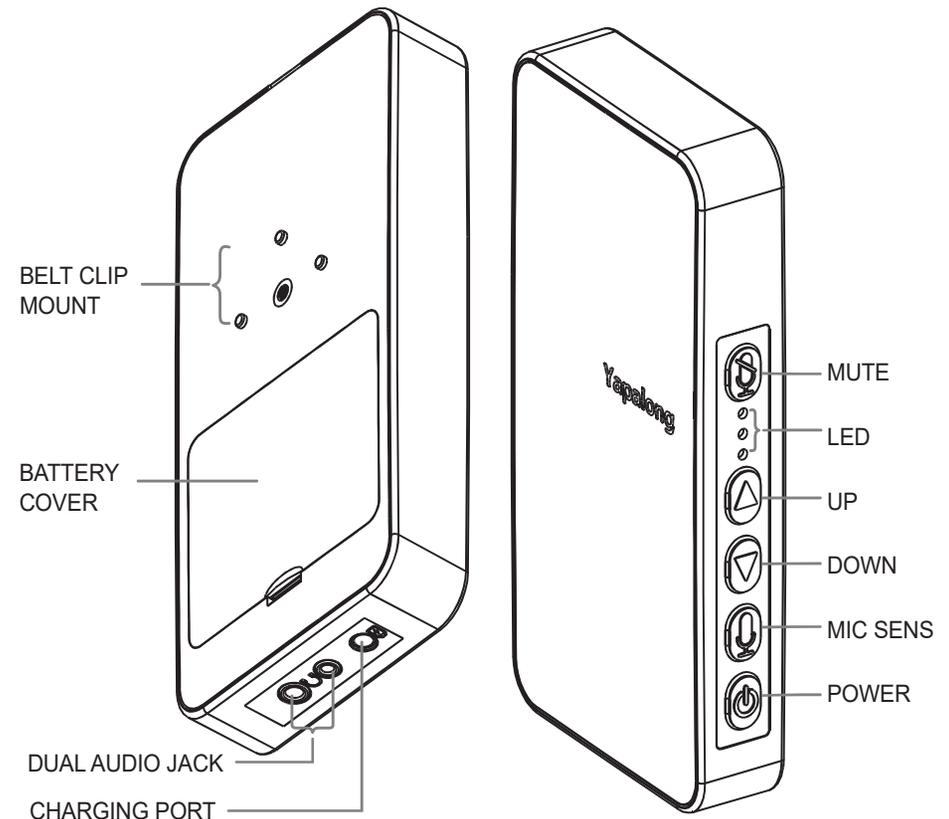

Yapalong

7895 Tranmere Dr., Unit 13
Mississauga, Ontario L5S 1V9
Canada

Email : info@yapalong.com
Phone : 1-(905)-405-0300

About DualGroup

DualGroup is the function that divides all users of one Yapalong channel into 2 groups: group X and group O. The communication in one group will not interfere with the other. The group arrangement is set by Binding procedure via 2C cable (Page 4).

X unit can switch groups dynamically. A 2C Cable is needed for the switching. Toggle the 2C Switch on 2C Cable to switch groups. O unit cannot switch groups.

Both Yapalong-5001 and 5002 have both functions of single group and DualGroup.

Yapalong-5001 DualGroup

The number of total users cannot exceed 8. The number of users in either group is flexible.

Yapalong-5001 is compatible with Yapalong-4000 or 5000, in single group or DualGroup. Yapalong-4000 or 5000 unit can only be bound as O unit.

Yapalong-5002 DualGroup

The number of total users cannot exceed 14. The number of users in either group is flexible.

Yapalong-5002 is only compatible with other 5002 units, whether in single group or DualGroup.

Yapalong-	No. of Users	DualGroup	Compatibility	Range
4000	8	No	5000, 5001	800 m
5000	8	No	4000, 5001	1,100 m
5001	8	Yes	4000, 5000	1,100 m
5002	14	Yes	None	1,000 m

SPECIFICATIONS

FCC ID: UJW-5000
IC: 6695A-5000
Model: Yapalong5000

Radio Frequency	Unlicensed ISM band 900 MHz
Group Size	8 talkers (Yapalong-5001) 14 talkers (Yapalong-5002) Unlimited listeners
Wireless Network	Auto channel selection no-master TDMA/peer-to-peer Encrypted communication
Digital Modulation	FSK/ GFSK
No. of Channels	8 (Yapalong-5001) 4 (Yapalong-5002)
Range	1,100 meters line-of-sight (Yapalong-5001) 1,000 meters line-of-sight (Yapalong-5002)
Overall Latency	25 ms
Size	129mm x 66mm x 21mm
Weight	138 grams
Power Rating	27 dBm/ 500 mW
Power Source	Lithium polymer, 3.7 V, 1700 mAh
Power Efficiency	Over 8 hours after being fully charged
Operating Temp Range	-20 °C ~ 50 °C
Noise Reduction	5-level sensitivity adjustment
Safety	Lead free, RoHS compliance
IP Rating	IP67

SAFETY WARNING!

Don't hold Yapalong too close to your head when in use.

INDUSTRY CANADA COMPLIANCE STATEMENT

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC INFORMATION TO USERS

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by Nautic Devices Inc. could void the user's authority to operate the equipment.

FOR CLASS B – UNINTENTIONAL RADIATORS


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operations.

GET STARTED

1. Turn the unit on by holding down POWER button for 2 seconds until RED LED turns on.
2. If the AMBER LED blinks every 2 or 5 seconds or there is no LED light at all, the battery needs to be charged.
3. If RED LED remains on with high intensity, it means it cannot detect other group unit due to various reasons:
 - no group unit powered on;
 - group unit out of range;
 - unit in different group

(Refer to BINDING PROCEDURE to do binding).

4. If RED LED remains on with normal intensity, it means it has detected group unit(s). Plug in the headset as shown. The unit is now ready to be used with other powered-on group units.

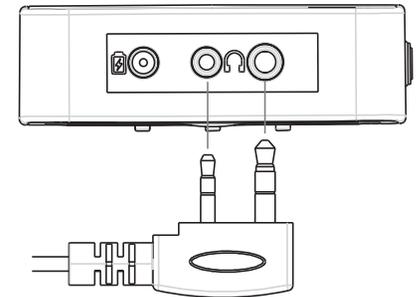

5. To adjust the sound volume, click UP or DOWN button, until desired volume is reached.
6. To adjust the microphone sensitivity, click UP or DOWN button while holding down MIC SENSITIVITY button, until desired sensitivity is reached. Now Yapalongs let every member in the group talk freely and listen at the same time.

POWER UP A GROUP

Power on one of the radios at the location where the radios to be used. Wait until the red light of the radio becomes solid, then power on the rest radios. It is not recommended to turn on radios at one location and use them at the other.

BINDING PROCEDURE

NOTE:

1. Binding needs to be done under minimum radio wave interference environment, which means no cellphone, computer, Bluetooth, electrical control panel, or other radiating electronic devices nearby.
2. After binding procedure, there is no need to do binding again next time for the same group.

A. BINDING PROCEDURE FOR REGULAR UNITS

1. Power down all units with good batteries installed.
2. Power up 1st unit until RED LED is solid on. Hold down UP and DOWN buttons simultaneously for 3 seconds until GREEN and AMBER LEDs begin to flash alternatively. Release buttons for 5 or more seconds, both LEDs stop blinking and all 3 LEDs remain solid on.
3. Power up 2nd unit until RED LED is solid on. Hold down UP and DOWN buttons simultaneously for 3 seconds until GREEN and AMBER LEDs begin to flash alternatively. Release buttons for 5 or more seconds, both LEDs stop blinking and only RED and GREEN remain solid on. If AMBER is also on, restart Binding from Step1.
4. Repeat Step3 for the rest of the units.
5. Power down all units (incl. the 1st one) in random sequence. Then power up all units in random sequence. So far Binding is done. If in doubt, repeat the entire procedure.

B. ORDER FOR BINDING LISTENER UNITS

LISTENER units can be added to existing Yapalong group as listen-only units. Regardless of the previous grouping state, the entire group has to be bound again. The binding procedure is the same as the one for REGULAR units. In addition we need to follow the order below to bind:

1. Set 1st REGULAR into Binding mode.
2. Set 2nd REGULAR into Binding mode.
3. Set all LISTENERS into Binding mode one by one.
4. Set the rest REGULARS into Binding mode one by one.

HOW TO MAXIMIZE RANGE

To obtain maximum range is to eliminate blocking obstacles at line of sight. The range is greatly reduced when the obstacle is very close to the antenna. We need to avoid the following scenarios:




CLOSE BODY BLOCKING

1. placing bodies in between antennas causes communication signs being blocked

ANTENNA TOUCHING BODY


2. Human body is mainly water so it absorbs RF wave. Water absorbs RF (radio frequency) wave.

WEARING POSITION ANALYSES:

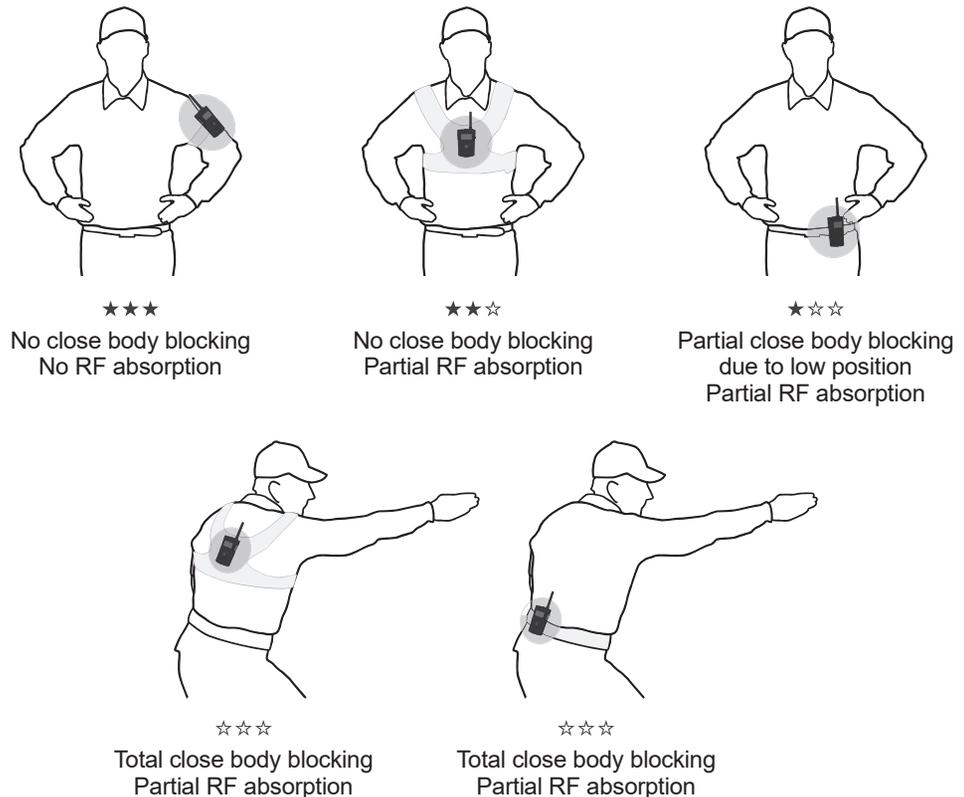



BATTERY REPLACEMENT

1. Get a slotted screwdriver. Insert the tip of the screwdriver into the slot of the battery cover. With a little twist, pry the battery cover open.

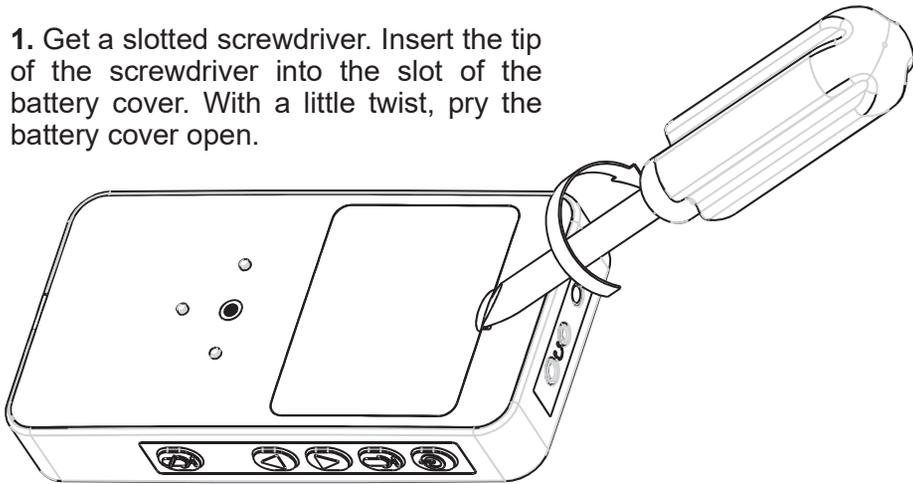


2. Pull gently on the battery connector and take the old battery out.

3. Get the new battery and insert the battery connector as orientation indicated

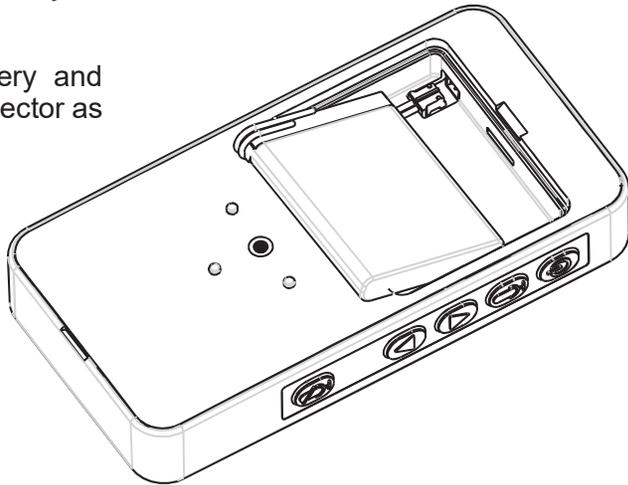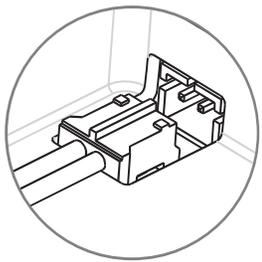

4. Put the battery cover back. Make sure the bump on the battery cover is close to the bottom of the radio.

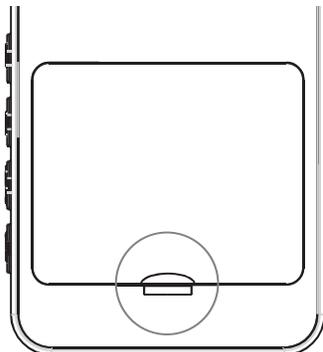

C. ADDITIONAL INFO FOR BINDING DUALGROUP

The first binding unit must be Yapalong-5001 or 5002. The brief procedure goes:

1. Start binding with the first unit and continue to bind a number of units. Keep them in Binding Mode. They are now X units by default. Proceed to bind Listener units if needed.

2. Plug 2C Cable into the first binding unit while it is still in Binding Mode (the only one with all 3 LED's on). Set the 2C Switch at "O" position. A bare 2C Cable without the headset is enough.

3. Proceed to bind the rest of the units. Those are now O units.


Note:

1. After binding, the first binding unit acts as a regular X unit.

2. Only Yapalong-5001 or 5002 can be bound as an X unit.

2C CABLE & DUALGROUP

Yapalong 2C Cable contains a 2C Switch. 2C Switch is a one-inch long waterproof rock switch. One end of 2C Cable is a two-pin plug that can be plugged into Yapalong dual audio jack, and the other end can be plugged into a Yapalong Heavy-Duty Headset.

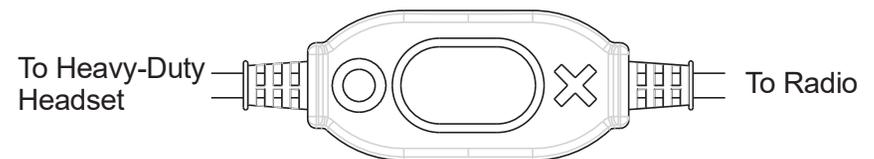

Click 2C button to switch between group "O" and "X". The clicking of 2C button is accompanied with one "beep" sound from the headset and one flash of green LED.

With a 2C cable, an X unit can hot swap between groups during usage. An O unit always stays in group O.

KEYPAD INSTRUCTIONS

Note: Any adjustment to the default settings is volatile. Once you restart your radio, the radio returns to the default setting.

POWER ON 	Hold down POWER button approx. 2 seconds until RED LED turns on. Then release button.	RED LED is on with normal intensity if the unit detects other unit(s) of the same group; otherwise RED LED is on with high intensity.
POWER OFF	Hold down POWER button approx. 2 seconds until RED	All LEDs are off in power down mode except battery charging indicator.
MUTE 	Click MUTE button and GREEN LED flashes 3 times.	Continuous slow blinking of RED LED indicates the microphone is being muted. When the microphone is muted, other Yapalong units cannot hear you but you can hear the others.
UNMUTE	Click MUTE button and GREEN LED flashes 3 times.	RED LED slow blinking stops. Back to normal operation.
VOLUME UP 	Click UP button to move up one level at a time until desired level.	GREEN LED flashes once unless maximum level is reached. There are 6 volume levels. The default level is level 4.
VOLUME DOWN 	Click DOWN button to move down one level at a time until desired level.	GREEN LED flashes once unless minimum level is reached.
MIC SENS UP 	Hold down MIC SENS button then click UP button to move up one level at a time until desired level	GREEN LED flashes twice unless maximum level is reached. Increase microphone sensitivity if you want to speak softly in a quiet environment. There are 5 sensitivity levels. The default level is level 4.
MIC SENS DOWN 	Hold down MIC SENS button then click DOWN button to move down one level at a time until desired level.	GREEN LED flashes twice unless minimum level is reached. Decrease microphone sensitivity when background noise is loud. Speak closer to the microphone to compensate.

KEYPAD INSTRUCTIONS (CONTINUED)

Note: MIC SENS (microphone sensitivity) sets the threshold of sound volume that the microphone can pick up. The higher it is, the more sound is picked up. MIC SENS does not affect the talker but affects the other listeners of the group. It is good practice to lower the setting in a noisy environment so that other users will not hear so much environment noise.

FORCE SYNC 	Press POWER button 1-3 seconds to resume the	RED LED of high intensity is turned into normal intensity once the radio is in sync.
--	--	--

Note: When the radio is moved out of then back into range, its communication with the group will resume automatically, as indicated by RED LED of normal intensity. If does not resume immediately, as indicated by RED LED of high intensity, please perform FORCE SYNC. If still does not resume, please restart the radio.

RED LED Solid	 	Normal intensity High intensity	Has detected other unit(s) of the same group. Cannot detect any other unit of the same group.
AMBER LED Blinking	 	Every 5 seconds Every 2 seconds	Initial warning of low battery Final warning of low battery

BELT CLIP MOUNT

The belt clip can be mounted at 3 different positions as shown. The screw used is M3 machine screw, 4mm long, Philips head.

Note: Always point the radio top towards the sky for better range performance.

