

DVDO



DVDO-C7-1
4K PTZ Camera

User Manual

Version: V1.0.0

Preface




This manual is to ensure that the user can use the product properly and avoid danger while operating. Before using this product, please read the user manual carefully and keep it for future reference.

Overview

This manual covers 4K PTZ camera operation

Graphic Symbols

Description of graphic symbols used in this manual

| Symbols | Description |
|--|---|
|  Illustration | This symbol indicates that the words are clarification or supplement to this article. |
|  Caution | This symbol indicates that negligence of the instructions may lead to mishandling that may cause injury or property damage. |
|  Danger | This symbol indicates a risk that may result in damage to this machine or documents. Follow the instructions to avoid property damage. |

Attention

This manual introduces functions, installations and operations for this product in details. Please read this manual carefully before installation and use.

Precautions:

This product can only be used in the specified conditions in order to avoid any damage to the camera:

- 1) Do not expose the product to rain or moisture.
- 2) To prevent the risk of electric shock, do not open the case. Installation and maintenance should only be carried out by qualified technicians.
- 3) Do not use product beyond temperature, humidity or power supply specifications.
- 4) Please use a soft dry cloth to clean the camera. If the camera is very dirty, clean it with diluted neutral detergent; do not use any type of solvents, which may damage the surface.

Electrical Safety:

Installation and product use must strictly comply with local electrical safety standards.

Transportation:

Avoid any stress, vibration, or moisture during transportation, storage, installation and operation

Installation:

- 1) Do not rotate the camera head violently, doing so may cause mechanical failure;
- 2) This product should be placed on a stable desktop or other horizontal surface. Do not install the product obliquely, otherwise it may display inclined image;
- 3) Ensure there are no obstacles within rotation range of the holder.
- 4) Do not power on before completely installation.

Do Not Dismantle Camera :

We are not responsible for any unauthorized modification or dismantling.

Magnetic Interference

Electromagnetic fields at specific frequencies may affect the video image. This product is Class A. It may cause radio interference in household application. Appropriate measure is required.

Contents

| | |
|-----------------------------------|----|
| 1. Quick Start | 1 |
| 1.1 Interface..... | 1 |
| 1.2 Power-on Self-Test..... | 1 |
| 1.2.1 Power on..... | 1 |
| 1.2.2 Self-Test | 2 |
| 1.3 Video Output | 2 |
| 1.3.1 Network Output..... | 2 |
| 1.3.2 HDMI Output..... | 2 |
| 1.3.3 USB3.0 Output | 2 |
| 1.4 Bracket | 3 |
| 1.4.1 Steps of Wall Mount | 3 |
| 1.4.2 Steps of Ceiling Mount..... | 4 |
| 2. Product Overview | 5 |
| 2.1 Product Overview..... | 5 |
| 2.1.1 Product Dimensions | 5 |
| 2.1.2 Accessory | 5 |
| 2.2 Product Feature | 6 |
| 2.3 Technical Specification | 7 |
| 2.4 Interface Introduction..... | 12 |
| 2.4.1 Interface Diagram..... | 12 |
| 2.4.2 RS-232..... | 13 |
| 3. How to Use | 16 |
| 3.1 Video Output | 16 |
| 3.1.1 Power-on Self-test..... | 16 |
| 3.1.2 Video Output..... | 16 |
| 3.2 Remote Control..... | 16 |
| 3.2.1 IR Remote Control | 18 |
| 3.2.2 Remote Control Usage | 20 |
| 3.3 Menu Setting | 22 |

| | |
|--|----|
| 3.3.1 Main Menu..... | 22 |
| 3.3.2 Tracking Setting..... | 23 |
| 3.3.3 System Setting | 23 |
| 3.3.4 Camera Parameter Setting..... | 24 |
| 3.3.5 P/T/Z..... | 27 |
| 3.3.6 Video Format | 28 |
| 3.3.7 Version..... | 29 |
| 3.3.8 Restore Default | 29 |
| 4. NETWORK CONNECTION | 30 |
| 4.1 Connection Method..... | 30 |
| 4.2 Camera Web Interface | 32 |
| 4.2.1 Web Login | 32 |
| 4.2.2 Preview | 32 |
| 4.2.3 Configuration..... | 33 |
| 4.2.4 Video Configuration..... | 33 |
| 4.2.5 Network Configuration | 37 |
| 4.2.6 System Configuration..... | 39 |
| 4.2.7 Logout..... | 41 |
| 4.2.8 Tracking Function Configuration..... | 41 |
| 5. Serial Port Communication Control | 43 |
| 5.1 VISCA Protocol List | 43 |
| 5.1.1 VISCA Protocol List | 43 |
| 5.1.2 Camera Control Command | 44 |
| 5.1.3 Inquiry Command..... | 51 |
| 5.2 Pelco-D Protocol Command List | 56 |
| 5.3 Pelco-P Protcol Command List | 58 |
| 6. Maintenance and Troubleshooting | 61 |
| 6.1 Camera Maintenance..... | 61 |
| 6.2 Unqualified Applications | 61 |
| 6.3 Troubleshooting | 61 |

1. Quick Start

1.1 Interface

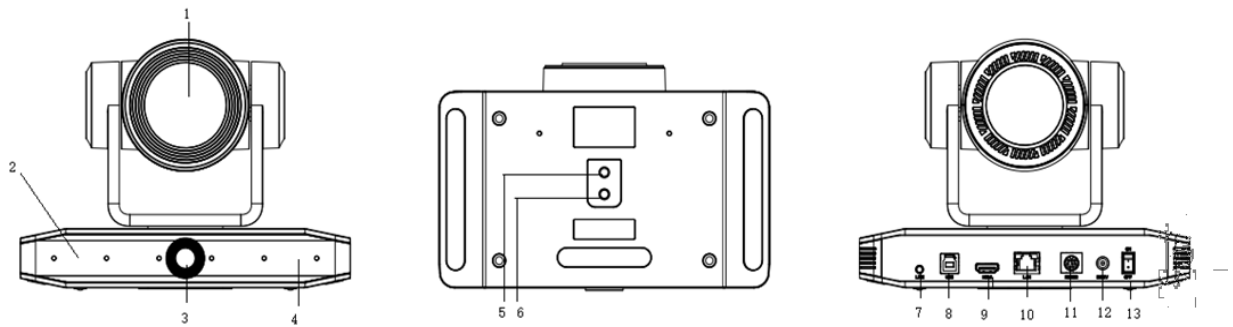


Figure1-1 Interface

Product Interface :

- | | | |
|-----------------------------------|------------------------|------------------|
| 1. Close-up Lens | 7. Audio IN (LINE-IN) | 13. Power Switch |
| 2. Camera Base | 8. USB3.0 | |
| 3. Panoramic Lens | 9. HDMI Output | |
| 4. Remote Control Receiving Light | 10. LAN Port | |
| 5. Screw Hole for Tripod | 11. RS232 Input | |
| 6. Position Hole for Tripod | 12. Power Input Socket | |

When using the camera, please put the plastic pad on the center bottom of device

1.2 Power-on Self-Test

1.2.1 Power on

Connect device to power socket with DC12V power adapter.

1.2.2 Self-Test

After power on, the receiver light will start flashing and camera will do a brief pan-tilt tour and return to the home position. When light stop flashing, the self-test is finished.

Caution

- Default address of the remote control is 1#. When menu restore default setting, the address of IP remote control will restore 1#.
 - If preset 0 is set, the camera will return to the preset 0 position after self-test
-

1.3 Video Output

This series camera can output video through network, HDMI, and USB3.0.

1.3.1 Network Output

- a, Network connection: Shown as diagram 1.1 #10
- b, Log in: You can reach the Web Interface by typing in the camera's IP address(default 192.168.5.163) into a web browser. To log in, type in "admin" into the username and password fields. From the Web Interface, you can adjust many of your camera's settings via this IP interface, like PTZ control, video recording, playback, and configuration setting.

1.3.2 HDMI Output

- a, HDMI connection: Shown as diagram 1.1 #8
- b, Connect camera to the display device via HDMI cable.

1.3.3 USB3.0 Output

USB3.0 connection: Shown as diagram 1.1 #8. Open video software and select image device to output video.

1.4 Bracket

⚠ Caution □

- Bracket can only be wall mounted or upside down mounted on template and concrete wall, but can not be installed on plasterboard.

1.4.1 Steps for Wall Mounting

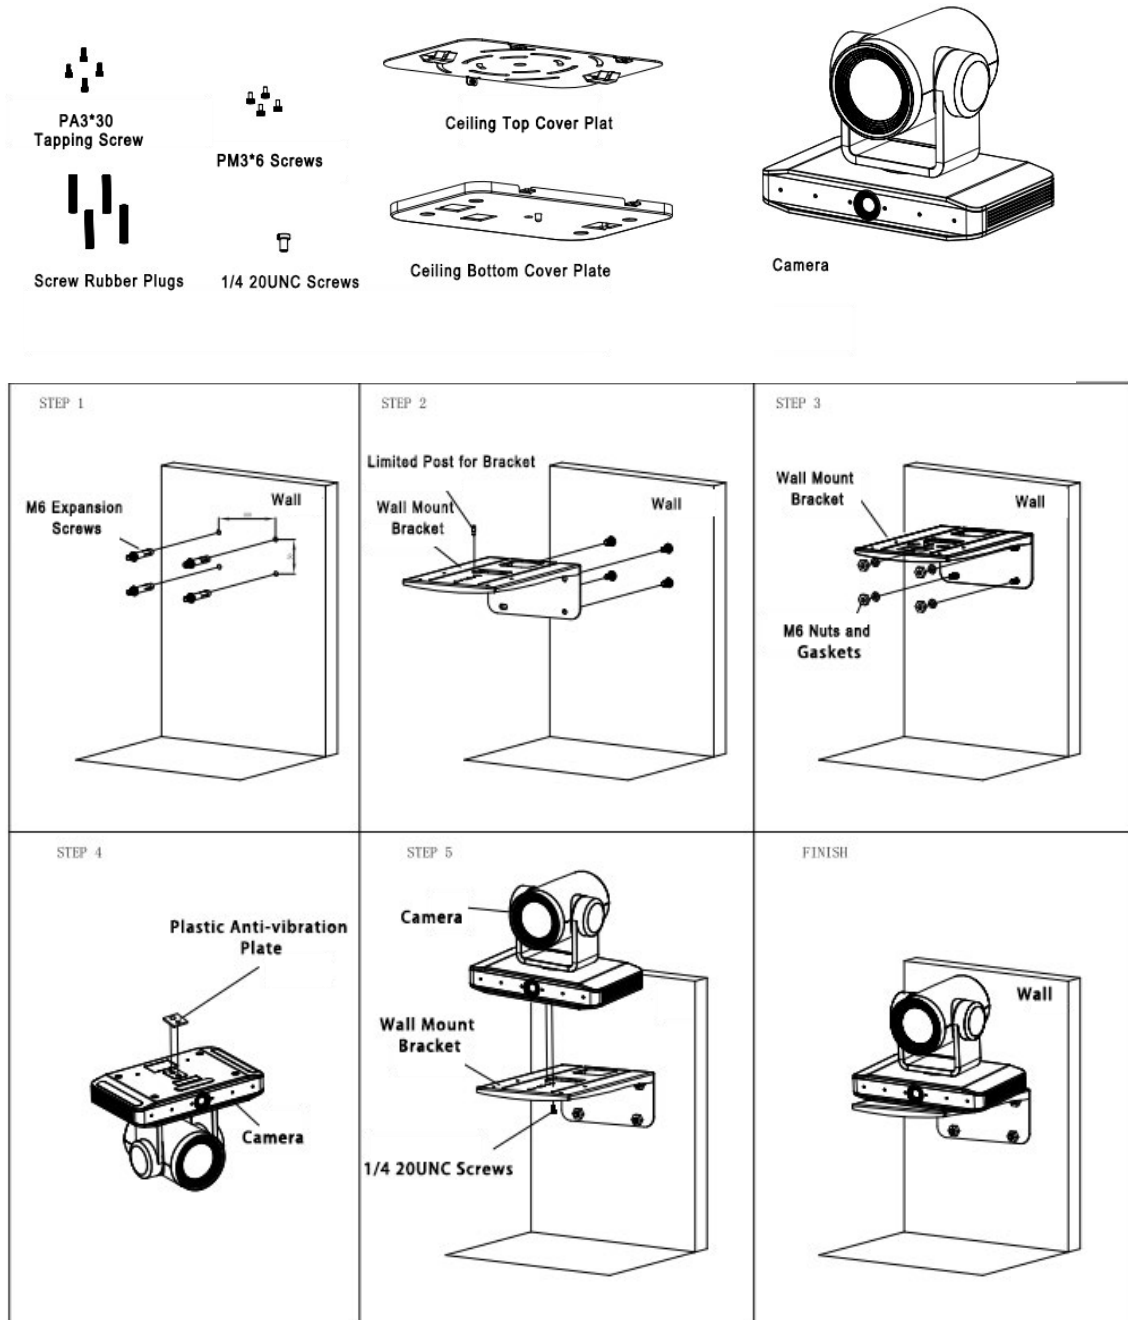


Figure1-2 Steps for Wall Mounting

1.4.2 Steps for Ceiling Mounting

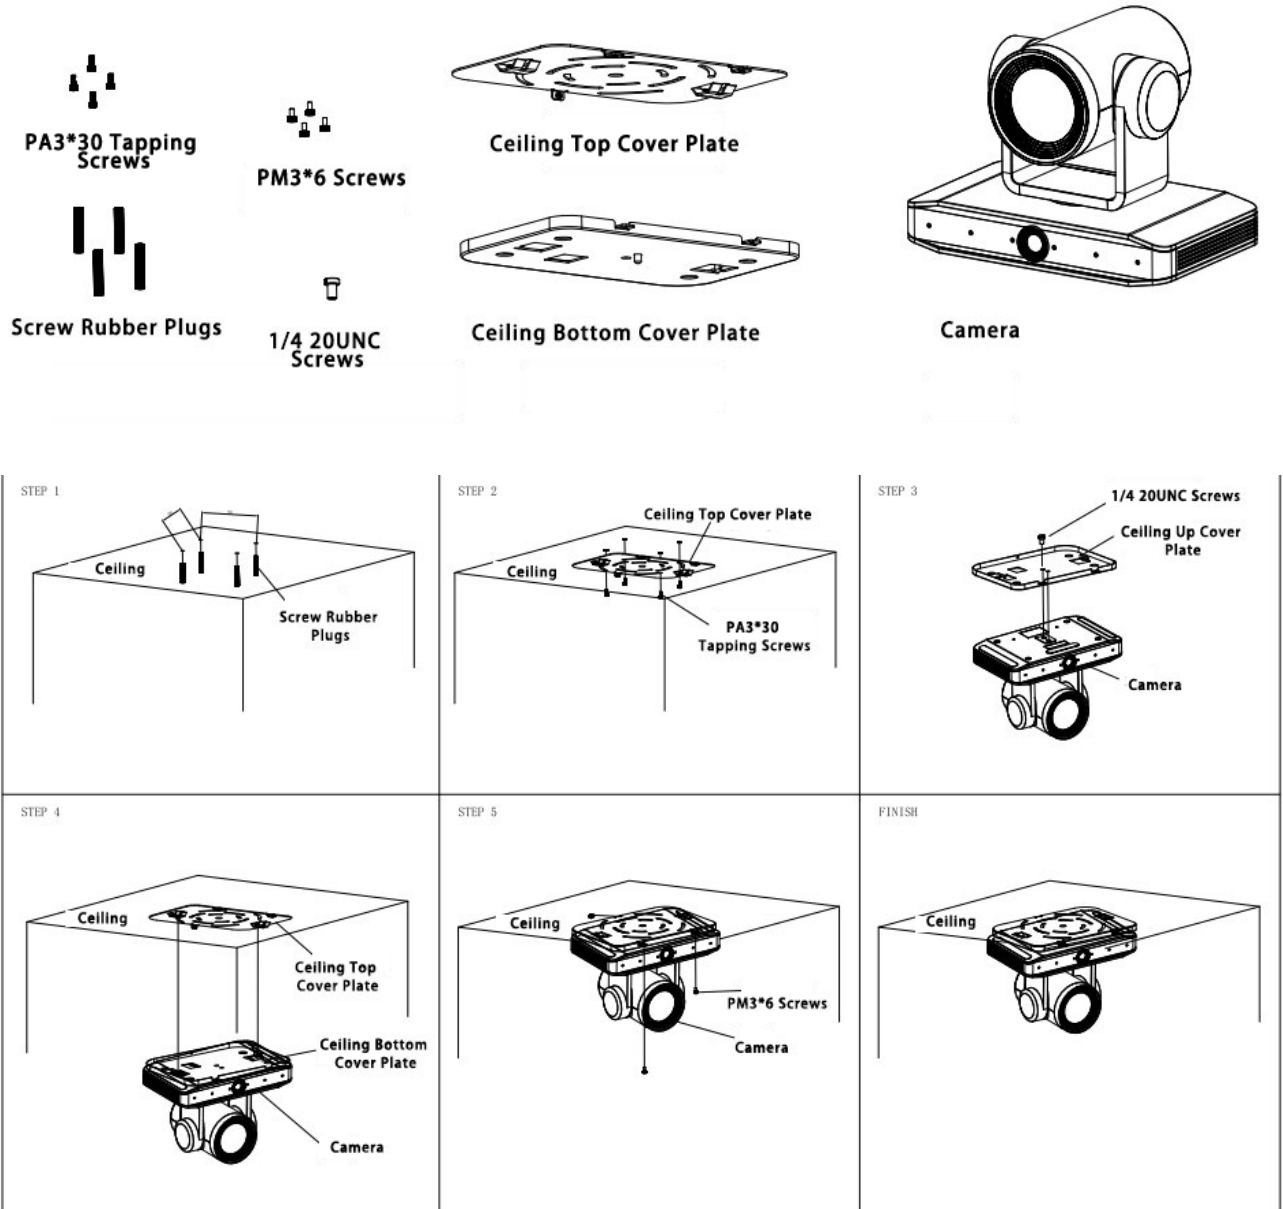


Figure1-3 Steps for Ceiling Mounting

2. Product Overview

2.1 Product Overview

2.1.1 Product Dimensions

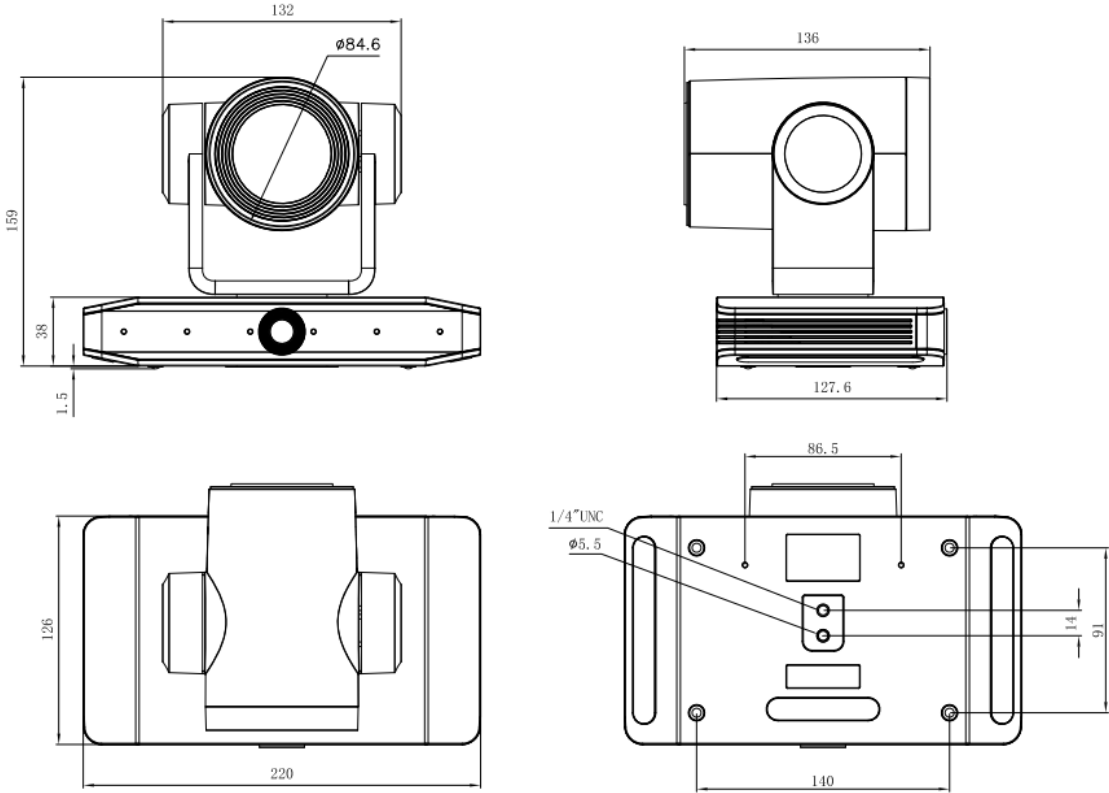


Figure1-4 Product Dimension

2.1.2 Accessory

When you unpack your package, check that all the supplied accessories are included:

Table1-1 Supplied Accessory

| | |
|----------|---------------|
| Supplied | Power adapter |
| | USB3.0 Cable |
| | User manual |
| | Plastic pad |
| | RS232 Cable |

| | |
|----------|----------------------------|
| Optional | Wireless remote control |
| | IR Remote Control |
| | Brackets for wall mounting |
| | Brackets for ceiling mount |

2.2 Product Feature

This is a brand new UHD 4K camera featuring complete functions, excellent performance and rich interfaces. Boasting advanced ISP processing technology and algorithm, this cameras deliver true-to-life image with uniform picture brightness. It supports H.265/H.264 coding, making the image smooth and clear even under low bandwidth.

- **4K UHD Resolution:** Adopting 8.5 million resolution SONY CMOS sensor. Maximum resolution is up to 4K with frame rate up to 30fps.
- **Optical Zoom Lens:** 12X optical zoom 80.5°wide-angle lens.
- **Leading Auto Focus Technology:** Fast, accurate and stable auto focusing technology.
- **Low Noise and High SNR:** Super high SNR image is achieved with low noise CMOS. Advanced 2D/3D noise reduction technology further reduces the noise while ensuring high image clarity.
- **Multiple Video Output Methods:** Support HDMI, USB3.0, wired LAN interface; support POE power supply, USB3.0 supports dual stream.
- **Multiple Audio/Video Compression Standards:** Support YUY2, MJPEG, H.264, H.265, NV12 video encoding formats, MJPEG, H.264, H.265 support up to 3840×2160 resolution 30 frames/second compression; support AAC, MP3, G.711A audio compression
- **Audio Input Interface:** Support AAC, MP3, G.711A audio encoding, AAC, MP3 encoding support 16000, 32000, 44100, 48000 sampling frequency.
- **Built in Gravity Sensor:** Built-in gravity sensor, supports automatic gimbal flip function, convenient for engineering installation
- **Multiple Network Protocol:** Support ONVIF, GB/T28181, RTSP, RTMP, VISCA OVER IP, IP VISCA, RTMPS, SRT protocols; support RTMP push mode, easily link streaming media servers (Wowza, FMS); support RTP multicast mode.
- **Control Interface:** RS232 IN

- **Multiple Control Protocol:** Support VISCA, PELCO-D, PELCO-P protocols; Support automatic identification protocols.
- **Low Power Sleep Mode:** Support low-power sleep/wake-up, power consumption during sleep is less than 400mW.
- **Multiple Presets:** Up to 255 presets (10 presets via remote control).
- **Multiple Remote Controls:** IR remote control and wireless remote control are for options.
- **Auto Framing:** Built in high speed processor and face detection algorithm, it can automatically detect the participants to provide optimal framing.
- **Intelligent Voice Tracking:** Built in 6 omnidirectional mics arrays, intelligent voice localization algorithm, it can track the speaker in the real time.
- **Multiple Application:** Online-education, Lecture Capture, Webcasting, Video conferencing, Tele-medicine, Unified Communication, Emergency command and control systems, etc.

2.3 Technical Specification

Table1-2 Camera Lens Parameter

| | |
|-----------------|---|
| Parameter/Model | 12X |
| Lens | |
| Image Sensor | 1/2.8 inch high quality CMOS sensor |
| Effective Pixel | 8.5M, 16: 9 |
| Video Signal | HDMI: 4KP30, 4KP25, 1080P30, 1080P25, 1080P29.97; USB3.0: Main Stream: YUY2/NV12: 1920 × 1080/1280 × 720/1024 × 576/800 × 600/800 × 448/640 × 360/480 × 270/320 × 180@30/25fps; MJPG/H264: 3840*2160/1920 × 1080/1600 × 896/1280 × 720/1024 × 576/960 × 540/800 × 600/800 × 448/720 × 576/720 × 480/640 |

| | |
|----------------------|---|
| | <p>× 360/640 × 480/480 × 270/352 × 288/320 × 240@30/25/20/15/10/5fps; Sub Stream: YUY2/NV12: 1280 × 720/1024 × 576/800 × 600/800 × 448/640 × 360/640 × 480/480 × 270/320 × 180@30/25/20/15/10/5fps; MJPEG/H264: 1920 × 1080/1600 × 896/1280 × 720/1024 × 576/960 × 540/800 × 600/800 × 448/720 × 576/720 × 480/640 × 360/640 × 480/480 × 270/352 × 288/320 × 240@30/25/20/15/10/5fps;</p> |
| Close-up Lens | 12X |
| Viewing Angle | H: 7.6° (N) ~80.5° (W) |
| Iris Value | F1.8 ~ F3.6 |
| Digital Zoom | 15X |
| Minimum Illumination | 0.5Lux(F1.8, AGC ON) |
| DNR | 2D & 3D |
| White Balance | Auto/Manual/One-Button White Balance/Specified Color Temperature |
| Focus Mode | Auto/Manual/One Button focus |
| Exposure Mode | Auto, Manual, Shutter Priority, Aperture Priority, Brightness Priority |
| Iris | F1.8 ~ F3.6, CLOSE |
| Shutter Speed | 1/25~1/20000 |
| BLC | On/Off |
| Dynamic Range | Off, 1 ~ 8 |
| Video Adjustment | Brightness, Hue, Saturation, Contrast, Sharpness, Black and White Mode, Gamma Curve |
| SNR | >50dB |

| | |
|----------------|-----------------------------|
| Panoramic Lens | Fixed Focus Lens |
| Viewing Angle | 110.2°\101.8°\69.5° (D\H\V) |
| Iris | F2.0±5% |
| Focus | F=1.89mm |

Table1-3 Interface

| Interface | |
|-------------------------------------|---|
| Back Panel | HDMI, LAN (support POE), USB3.0, LINE-IN, RS232-IN, DC12V power supply, power switch |
| Video Output | HDMI, LAN, USB3.0 |
| Video Compression Format | LAN: H.264, H.265 USB 3.0: MJPG, H264, YUY2, NV12 |
| Audio Input | Dual channel 3.5mm line input |
| Audio Output | HDMI, LAN, USB3.0 |
| Audio Compression Formats | AAC, MP3, G.711A |
| Network Port | 10M/100M adaptive Ethernet port, support POE power supply, support audio and video output |
| Network Protocols | RTSP, RTMP, ONVIF, GB/T28181, VISCA OVER IP, IP VISCA, RTMPS, SRT, support remote upgrade, remote restart, remote reset |
| Control Jack | RS232-IN |
| Serial Port Communication Protocols | VISCA/Pelco-D/Pelco-P; Baud Rate: 115200/38400/9600/4800/2400 |
| USB Communication Protocols | UVC (Video Communication Protocols), UAC (Audio Communication Protocols) |
| Power Supply | HEC3800 Power Socket (DC12V) |

| | |
|-------------------|---|
| Power Adapter | Input: AC110V~AC220V ; Output: DC12V/2.5A |
| Input Voltage | DC12V \pm 10% |
| Input Current | <1A |
| Power Consumption | <12W |

Table1-4 PTZ Parameter

| PTZ | |
|-----------------|-------------------------------------|
| Pan Angle | -110° ~+110° |
| Tilt Angle | -30° ~+30° |
| Pan Speed | 0.1°/s~100°/s |
| Tilt Speed | 0.1°/s~70°/s |
| Preset Speed | Pan: 78.8°/s, Tilt: 31.7°/s |
| Preset Quantity | Maximum 255 (10 via remote control) |

Table1-5 Other Parameter

| Others | |
|---------------------|---------------------------------|
| Storage Temperature | -10℃~+60℃ |
| Storage Humidity | 20%~95% |
| Working Temperature | -10℃~+50℃ |
| Working Humidity | 20%~80% |
| Dimension | 220 (长) mm×136mm (宽) ×159mm (高) |
| Weight(Approx.) | 1.7kg |
| Environment | Indoors |

Table1-6
Accessory Parameter

| Accessory | |
|--------------------|--|
| Standard Accessory | Power adapter, RS232 control cable, USB3.0 cable, remote control, user manual, |
| Optional Accessory | Installation brackets |

Table1-7 AI Function

| AI Function | |
|----------------------------|--|
| Auto Framing | Built in high speed processor and face detection algorithm, it can automatically detect the participants to provide optimal framing |
| Intelligent Voice Tracking | Turn on/off voice tracking. Built in 6 omnidirectional mics arrays, intelligent voice localization algorithm, it can track the speaker in the real time. |

2.4 Interface Introduction

2.4.1 Interface Diagram

The interfaces of this product include: HDMI, USB3.0, and audio input interface, network interface, RS232 input, DC12V power supply, interface power switch. The back panel diagram is shown in Figure 2.5:

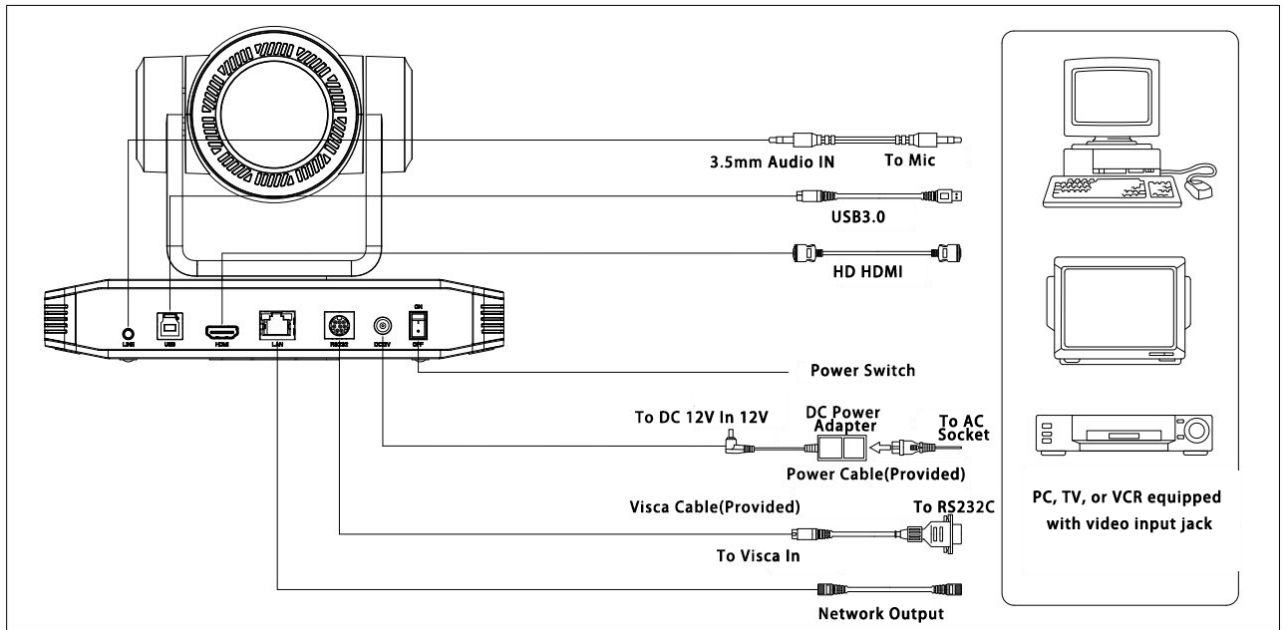


Figure1-5 Interface Diagram

2.4.2 RS-232

1) RS-232 Diagram

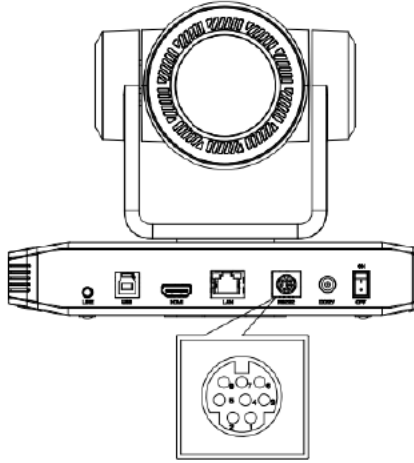



Table1-8 Connecting method to PC or controller

| Device | WindowsDB-9 |
|----------|-------------|
| 1.DTR | 1.DCD |
| 2.DSR | 2.RXD |
| 3.TXD | 3.TXD |
| 4.GND | 4.DTR |
| 5.RXD | 5.GND |
| 6.GND | 6.DSR |
| 7.IR OUT | 7.RTS |
| 8.NC | 8.CTS |
| | 9.RI |



2) RS-232 Mini-DIN 8-pin Terminal Port Definition


Table1-9 RS-232 Mini-DIN 8-pin Terminal Port Definition

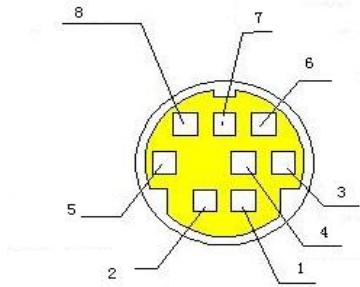

| NO. | Terminal Port | Definition |
|-----|---------------|------------------------|
| 1 | DTR | Data Terminal Ready |
| 2 | DSR | Data Set Ready |
| 3 | TXD | Transmit Data |
| 4 | GND | System Ground |
| 5 | RXD | Receive Data |
| 6 | GND | System Ground |
| 7 | IR OUT | IR Commander Signal IR |
| 8 | NC | No Connection |

3) RS232(DB9) Terminal Port Definition

Table1-10 RS232(DB9) Terminal Port Definition

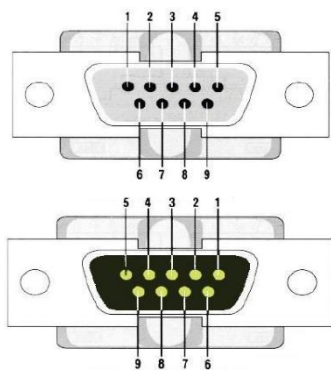

| NO. | Terminal Port | Definition |
|-----|---------------|---------------------|
| NO. | Terminal Port | Definition |
| 1 | DCD | Data Carrier Detect |
| 2 | RXD | Receive Data |
| 3 | TXD | Transmit Data |
| 4 | DTR | Data Terminal Ready |
| 5 | GND | System Ground |
| 6 | DSR | Data Set Ready |
| 7 | RTS | Request to Send |
| 8 | CTS | Clear to Send |
| 9 | RI | Ring Indicator |

4) VISCA Networking Method

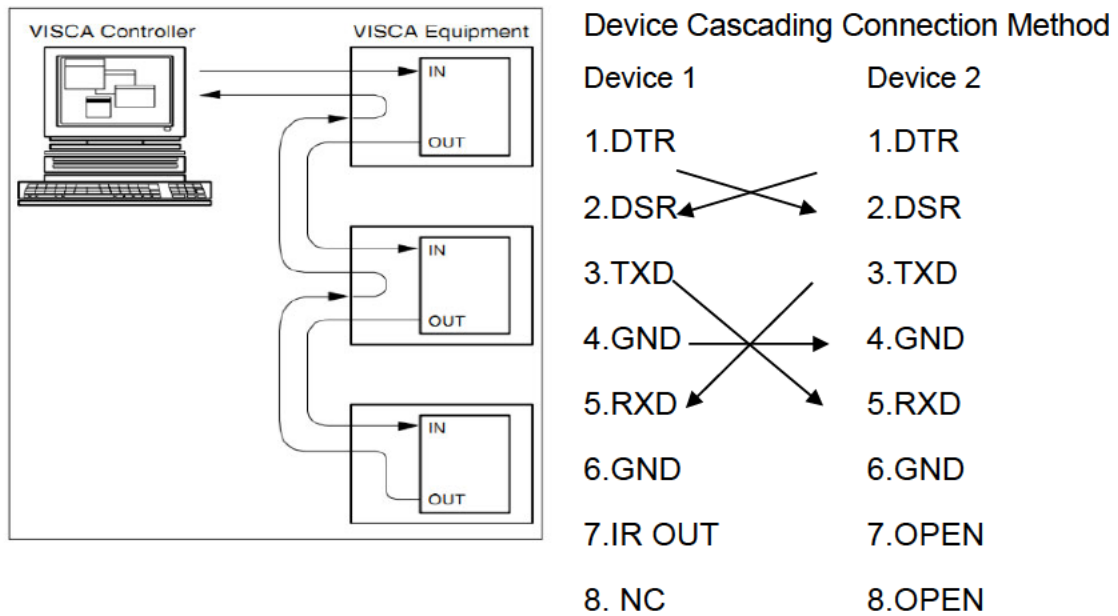


Figure1-6 VISCA Networking Diagram

Caution

- This camera has RS232 Input/Output interface, you can cascade as above method
-

3. How to Use

3.1 Video Output

3.1.1 Power-on Self-test

After powering on, camera will have initial configuration and receiver light will be flashing. Camera will do a brief pan-tilt tour and return to the home position, or if preset 0 is set, the camera will return to the preset 0 position).

3.1.2 Video Output

1) Network output: connect this product and your computer through network cable, then open the browser, enter the camera IP address (factory default 192.168.5.163) in the address bar, then to the login page and input a user name and password (factory default are "admin"), Finally enter the preview page, and the image comes out.

Caution

● If you forget your user name, password, IP address, you can manually restore the default by the remote controller Button combination * #

2) SDI, HDMI Output: Connect the monitor with the corresponding video output interface.

3) USB3.0 Output: Connect this product with computer USB3.0 interface, open the Device Manager to see whether there is an image device and whether the Universal Serial Bus controllers recognize USB3.0 device. After properly identified, open the software, choose the image device and then it will output image.

3.2 Remote Control

Remote control using instruction: There are wireless remote control and IR remote control for options.

Steps for wireless remote control usage are as below:

1) Code Pairing

Press the "Settings" + "*" button for 3 seconds, the LED will turn off to flashing, after releasing the button, the LED light will keep flashing to start the code pairing, the receiver is powered on, and the LED will be off when the code pairing is successful; If you use other remote control, you need to clear the code of this remote control, or re-

pair the code of the new remote control. If the code pairing has been unsuccessful, the red LED light flashes for 20 seconds and then goes out, stop the code pairing and go to sleep; at this time, press any Button to wake up and re-pair the code.

Caution

- After the code is successfully matched, you need to select the camera address to control it
-


2) Clear Code Data

Press the "Settings" Button + "#" Button from light off to flashing, the receiving end is powered off and then powered on. The LED is off, indicating that the paired data is cleared successfully

3) Enter Sleep Mode and Wake Up

If there is no operation in the working state, it will immediately enter the sleep mode, and press any Button to wake up.

3.2.1 IR Remote Control

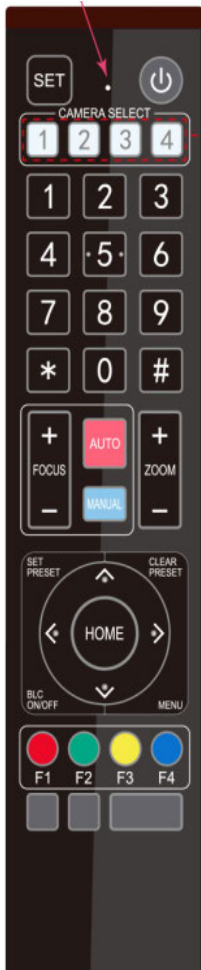

1. Standby Button

After 3S long press, the camera will step into standby mode. Long press 3S again, the camera will self-test again and back to HOME position. (Note: If power-on mode is turned on and Preset 0 is set, and there is no operation within 12s, it will automatically point to the specified preset position.

2. Camera Address Selection

Select the camera address which wants to be controlled

3. Number Button

Set or run 0-9 presets

4,*,# Button

Button combination use

5. Focus Control Button

Auto Focus: Enter into auto focus mode.

Manual Focus: The camera focus mode is manual

Switch the camera focus mode to manual focus by pressing [focus +] or [focus -] to adjust.

6. Zoom Control Button

Zoom + :Lens near

Zoom - :Lens far

7. Set or Clear Preset Button:

Set Preset: Set preset Button + 0-9 number Button:

Clear Preset Button: Clear preset Button + 0-9 number Button

8. Pan/Tilt Control Button

Press ▲Button :Up

Press ▼Button :Down

Press ◀Button :Left

Press ▶Button: Right

“HOME” Button: Return to the middle position or enter into the next level menu

9. BLC Control Button

Back Light ON / OFF: Turn on or off the back light

10. Menu Setting

Open or close the OSD menu

Enter / exit the OSD menu or return to the previous menu.

11. Camera IR Remote Control Address Setting

【*】 + 【#】 + 【F1】 :Camera Address No.1

【*】 + 【#】 + 【F2】 :Camera Address No. 2

【*】 + 【#】 + 【F3】 :Camera Address No. 3

【*】 + 【#】 + 【F4】 :Camera Address No. 4

12. Button Combination Functions

| | |
|--|---|
| 【#】 + 【#】 + 【#】: Clear all presets | 【#】 + 【#】 + 【0】: Switch Video Format into 4KP30 |
| 【*】 + 【#】 + 【6】: Restore Factory Default | 【#】 + 【#】 + 【1】: Switch Video Format into 4KP25 |
| 【*】 + 【#】 + 【3】: Set Menu in Chinese | 【#】 + 【#】 + 【2】: Switch Video Format into 1080P30 |
| 【*】 + 【#】 + 【4】: Set Menu in English | 【#】 + 【#】 + 【3】: Switch Video Format into 1080P25 |
| 【*】 + 【#】 + 【9】: Switch between Wall Mount and Ceiling Mount | 【#】 + 【#】 + 【4】: Switch Video Format into 1080P29 |
| 【*】 + 【#】 + Auto: Enter Aging Mode | |
| 【#】 + 【*】 + Auto: Stop Aging Mode | |
| 【*】 + 【#】 + Auto: Reset IP/User Name/Password | |

3.2.2 Remote Control Usage

Finishing initialization, it can receive and execute the IR commands. Press the remote controller button, the indicator light is flashing; release the button, the indicator light stops flashing. Users can control the pan/tilt/zoom, setting and running preset positions via the IR remote controller.

Button Instruction:

1. In this instruction, “press the Button” means a click rather than a long-press, and a special note will be given if a long-press for more than one second is required.
2. When a Button-combination is required, do it in sequence. For example, “ 【 *】 + 【#】 + 【F1】 ” means press “ 【*】 ” first and then press “ 【#】 ” and last press “ 【F1】 ”

1) Camera Selection



Select the camera address to control.

2) Pan/Tilt Control



Up: press ▲ Down: press ▼

Left: press ◀ Right: press ▶

Back to middle position: press “ 【HOME】 ”

Press and hold the up/down/left/right Button, the pan/tilt will keep running, from slow to fast, until it runs to the endpoint; the pan/tilt running stops as soon as the Button is released.

3) Zoom Control




ZOOM IN: press “ZOOM ▼” Button

ZOOM OUT: press “ZOOM ▲” Button

Press and hold the Button, the camera will keep zooming in or zooming out and stops as soon as the Button is released.

4) Focus Control

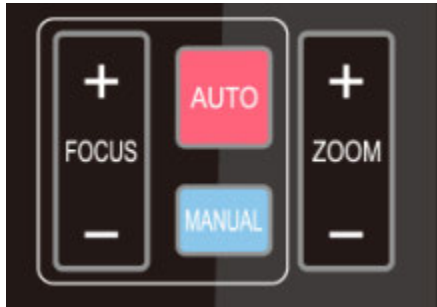

Focus (near): Press “ **【focus+】** ” Button (Valid only in manual focus mode)

Focus (far): Press “ **【focus-】** ” Button (Valid only in manual focus mode)

Auto Focus: Support

Manual Focus: Support

Press and hold the Button, the action of focus will keep continue and stops as soon as the Button is released.

5) BLC Setting



BLC ON / OFF: support

6) Presets Setting, Running, Clearing



1. Preset setting: to set a preset position, the users should press the “ **【SET PRESET】** ” Button first and then press the number Button 0-9 to set a relative preset,

Note: 10 preset positions in total are available by remote controller.

2. Preset Running: Press a number Button 0-9 directly to run a relative preset.


Note: Action in vain if a relative preset position is not existed.

3. Preset clearing : to clear a preset position, the user can press the “ **【CLEAR PRESET】** ” Button first and then press the number Button 0-9 to clear the relative preset;

Note : press the “ **【#】** ” Button three times continually to cancel all the presets.



7) Camera Remote Controller Address Setting

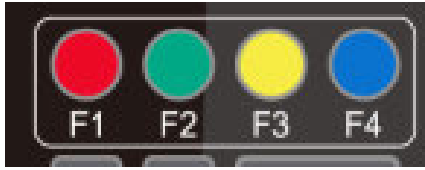


- 【*】 + 【#】 + 【F1】 :Camera Address No. 1
- 【*】 + 【#】 + 【F2】 :Camera Address No. 2
- 【*】 + 【#】 + 【F3】 :Camera Address No. 3
- 【*】 + 【#】 + 【F4】 :Camera Address No. 4

3.3 Menu Setting

3.3.1 Main Menu

In normal working mode, press **【MENU】** Button to display the menu, using scroll arrow to point at or highlight the selected items.

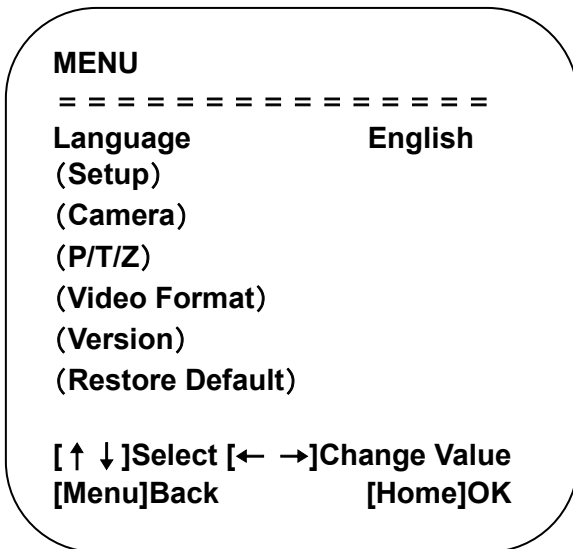

Language: Chinese/English

Camera Parameter : Enter into submenu of camera parameter

Version: Enter into submenu of version

Restore Factory Default: Select Yes or No to restore factory default.

[↑↓]Select: Press[↑↓] to Select menu

Setting: Enter into submenu of system setting


P/T/Z : Enter into submenu of PTZ parameter

[← →]Revise: Press [← →] to revise parameter

[Home]Confirm : Press [Home] to confirm

[Menu]Return: Press [Menu] to return


3.3.2 Tracking Setting

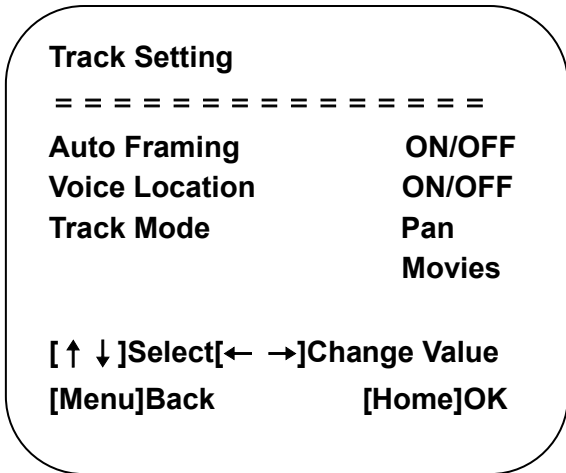

Tracking Mode: On/Off

3.3.3 System Setting

Move the pointer to the (Setup) in the Main Menu, click the **【HOME】** Button and enter into the (System Setting) as shown below

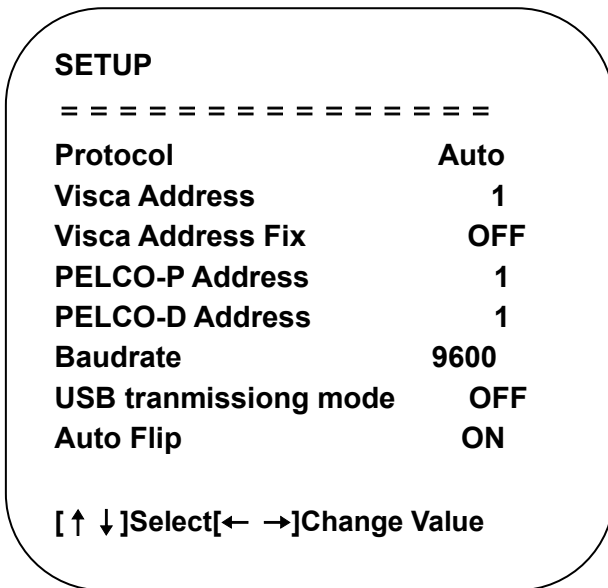

PROTOCOL: VISCA/Pelco-P/Pelco-D/Auto

Visca ADDR: VISCA=1~7 Pelco-P=1~255 Pelco-D = 1~255

Visca Address Fix: On/Off

USB Dual Stream: On/Off

Auto Flip: On/Off

Compensation Level: -7~7 (only available in auto mode when EV is ON)

BLC: ON/OFF for options (only available in auto mode)

Anti-Flicker: OFF/50Hz/60Hz for options (only available in Auto/Iris priority/Brightness priority modes)

Gain Limit: 0~15(only available in Auto/ Iris priority /Brightness priority mode)

WDR: Off,1~8


Shutter Priority: 1/25, 1/30, 1/50, 1/60, 1/90, 1/100, 1/120, 1/200, 1/250, 1/350, 1/500, 1/1000, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000, 1/20000 (only available in Manual and Shutter priority mode)

IRIS Priority: :OFF,F11.0,F9.6,F8.0,F6.8,F5.6,F4.8,F4.0,F3.4,F2.8,F2.4,F2.0,F1.8 (only available in Manual and Iris priority mode)

Brightness: 0~20 (only available in Brightness priority mode)

2) Color

Move the pointer to the (COLOR) in the Main Menu, click the **【HOME】** and enter the (COLOR SET) as follow

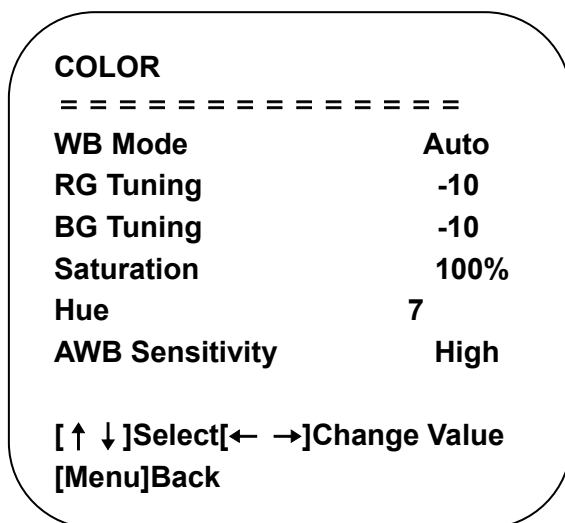

WB Mode: Auto, Manual, One Push, 3000K/3500K/4000K/4500K/5000K/5500K/6000K/6500K/70000K.

Red Tuning: -10~10(only available in Manual mode)

Blue Tuning: -10~10(only available in Manual mode)

Red Gain: 0~255(only available in Manual mode)

Blue Gain: 0~127(only available in Manual mode)

Saturation: 60%, 70%, 80%, 90%, 100%, 110%, 120%, 130%, 140%, 150%, 160%, 170%, 180%, 190%, 200%


Hue: 0 - 8

AWB Sensitivity: high/middle/low (only available in Auto mode)

Color Temperature: 2400K-7100K (Only available in specified color temperature)

3) IMAGE

Move the pointer to the (IMAGE) in the Menu, click the **【HOME】** and enter the (IMAGE) as follow

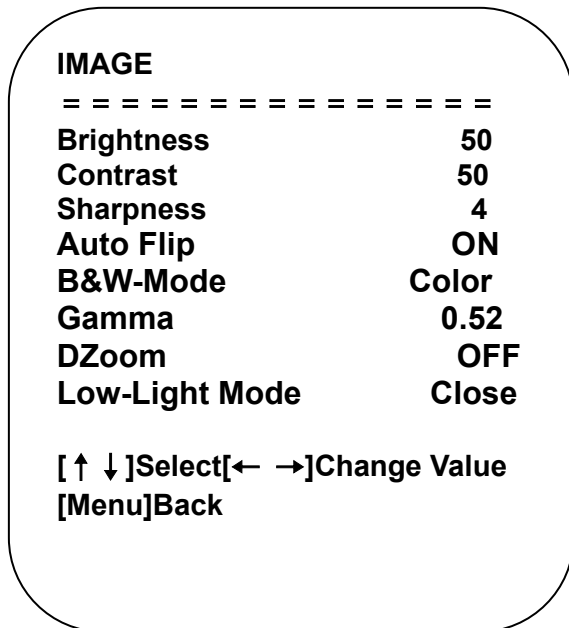

Brightness: 0~100

Contrast: 0~100

Sharpness: 0~15

B&W Mode: Color, black/white


DZoom: On/Off

Gama Curve: Default, 0.45, 0.50, 0.55, 0.63

Minimum Illumination: On/Off

4) Focus


Move the pointer to the (FOCUS) in the Menu, click the **【HOME】** and enter the (FOCUS) as follow.

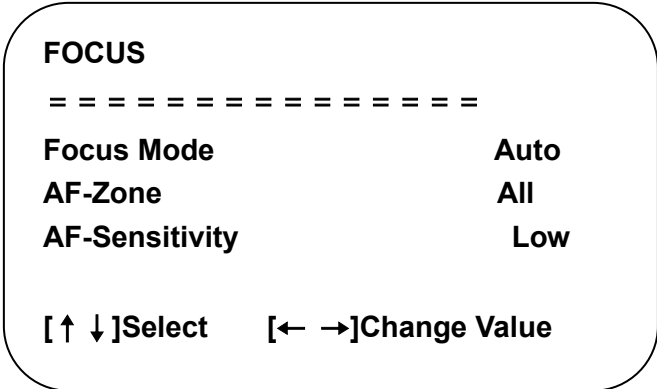

Focus Mode: Auto, manual
AF-Zone: Up/middle/down
AF-Sensitivity: High, middle, low

5) Noise Reduction


Move the pointer to the (NOISE REDUCTION) in the Menu, click the **【HOME】** and enter the (NOISE REDUCTION) as follow

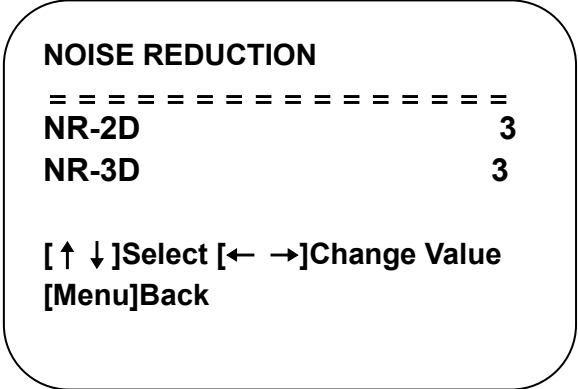

2D Noise Reduction: Off, 1~8
3D Noise Reduction: Off, 1-8

3.3.5 P/T/Z

Move the pointer to the (P/T/Z) in the Main Menu, click the **【HOME】** and enter the (P/T/Z) as follow

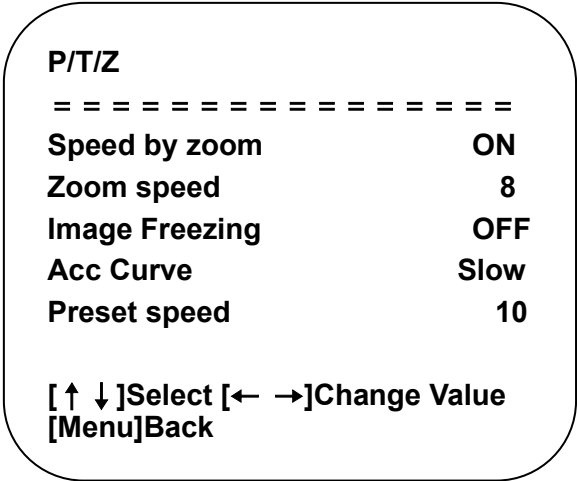

Depth of Field: Only effective for remote controller, On/ Off;
 When zoom in, the Pan/Tilt control speed by remoter will become slow

Zoom Speed: Set the zoom speed for remote controller, 1~8


Image Freezing: On/Off

Accelerating Curve: Fast/slow

Preset Speed: 1-10

3.3.6 Video Format

Move the pointer to the (Video Format) in the Menu, click the **【HOME】** and enter the (Video Format) as follow

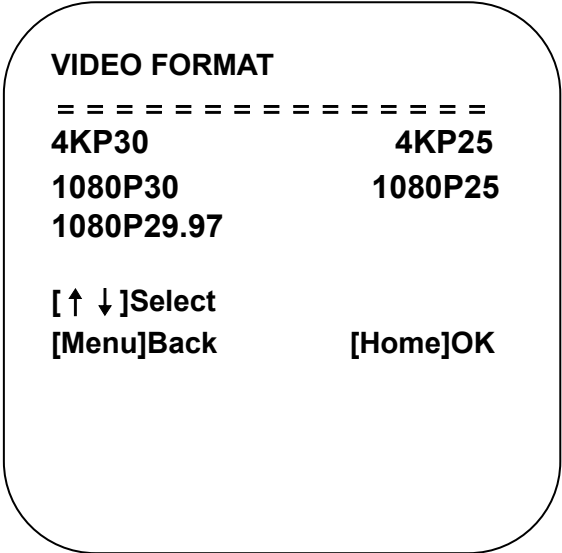


 **Caution**

- Exit menu after modifying parameter to save it
-

3.3.7 Version

Move the pointer to the (VERSION) in the Main Menu, click the **【HOME】** and enter the (VERSION) as follow

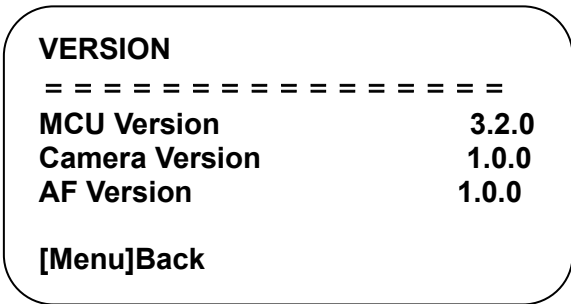


MCU Version: Display MCU version information

Camera Version: Display camera version information

AF Version: Display the focus version information

3.3.8 Restore Default

Move the pointer to the (VERSION) in the Main Menu, click the **【HOME】** and enter the (VERSION) as follow.

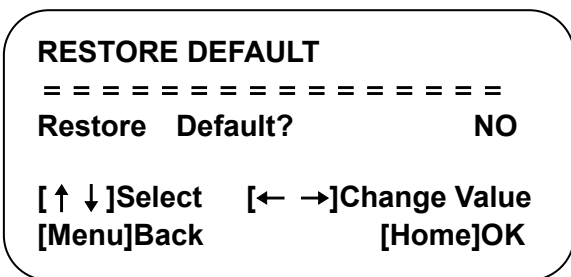

Restore default: Yes/No ;(after restoring default, the language, color, and video format won't be restored)

 **Caution**

- If the address of former remoter is not 1 but another one from 2,3,4,the corresponding camera address will restore to 1 when all parameters or system parameters are restored. User should change the remoter address to be 1 (press No.1 according to the camera so to get normal operation)
-

4. NETWORK CONNECTION

4.1 Connection Method

Direct Connection: Direct connections via “cross-over” network cable

Connection to LAN: Connections to LAN via patch cable to LAN wall jack or LAN switch

Caution

- Please do not put the power and network cable in places where can be easily touched to prevent video quality lowered by unstable signal transmission due to poor contact of cables.

The computer must have the network segment where the camera IP address belongs to. The device will not be accessible if without the segment. I.E. The camera default IP address is 192.168.5.163, then segment 5 must be added in the computer.


Specific steps are as below:

Firstly open the window of Local Area Connection Properties on computer, select the “Internet protocol version 4(TCP/IPv4)” as shown by picture on the left. Double click or click the property “Internet” protocol version 4 (TCP/IPv4)to enter into the Internet Protocol Version 4(TCP/IPv4) Properties window, select “Advanced” to enter into the Advanced TCP/IP Setting and add IP and subnet mask in the IP browser as picture shown below. Click the “Confirm” to finish the adding of IP segment. User can add the corresponding network segment according to the revised IP address of the camera.

Caution

- The IP address to be added cannot be same with that of other computers or devices. The existence of this IP address needs to be verified before adding.

Click the “Start” and select “Operation” to input cmd as picture below to verify if the network segment has been successfully added.

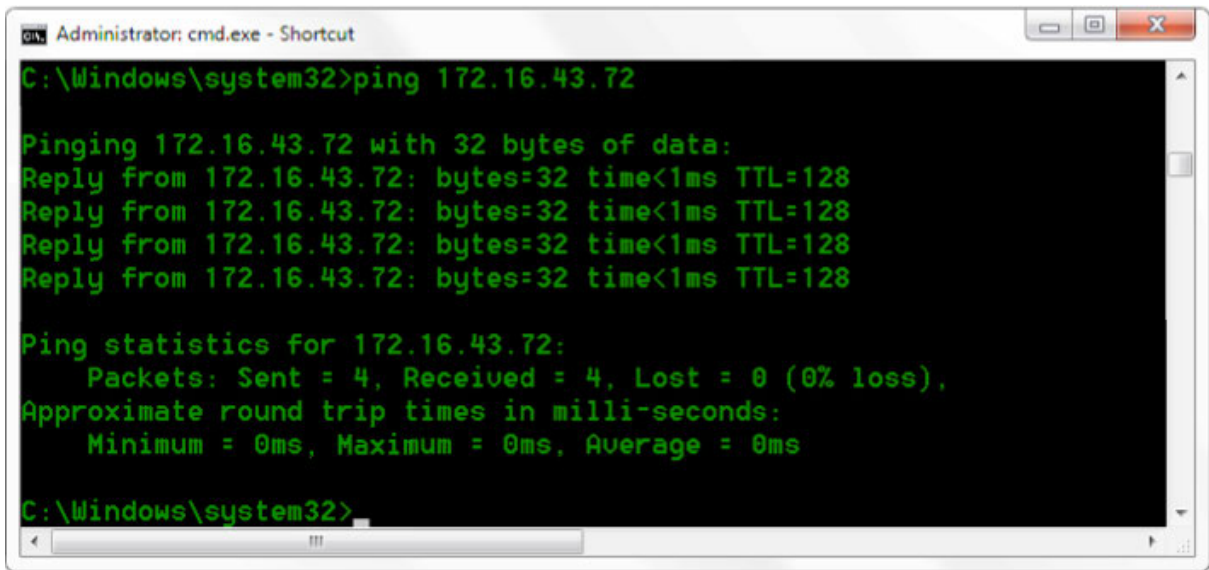

```
Administrator: cmd.exe - Shortcut
C:\Windows\system32>ping 172.16.43.72


Pinging 172.16.43.72 with 32 bytes of data:
Reply from 172.16.43.72: bytes=32 time<1ms TTL=128
Reply from 172.16.43.72: bytes=32 time<1ms TTL=128
Reply from 172.16.43.72: bytes=32 time<1ms TTL=128
Reply from 172.16.43.72: bytes=32 time<1ms TTL=128

Ping statistics for 172.16.43.72:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Windows\system32>
```

Figure1-7 Network segment successfully added

User can also to verify network connection as steps above mentioned after the finish of camera self-check. If IP is default, open DOS command window and input 192.168.5.163, then press Enter Button. It will show message as below: which means network connection is normal.

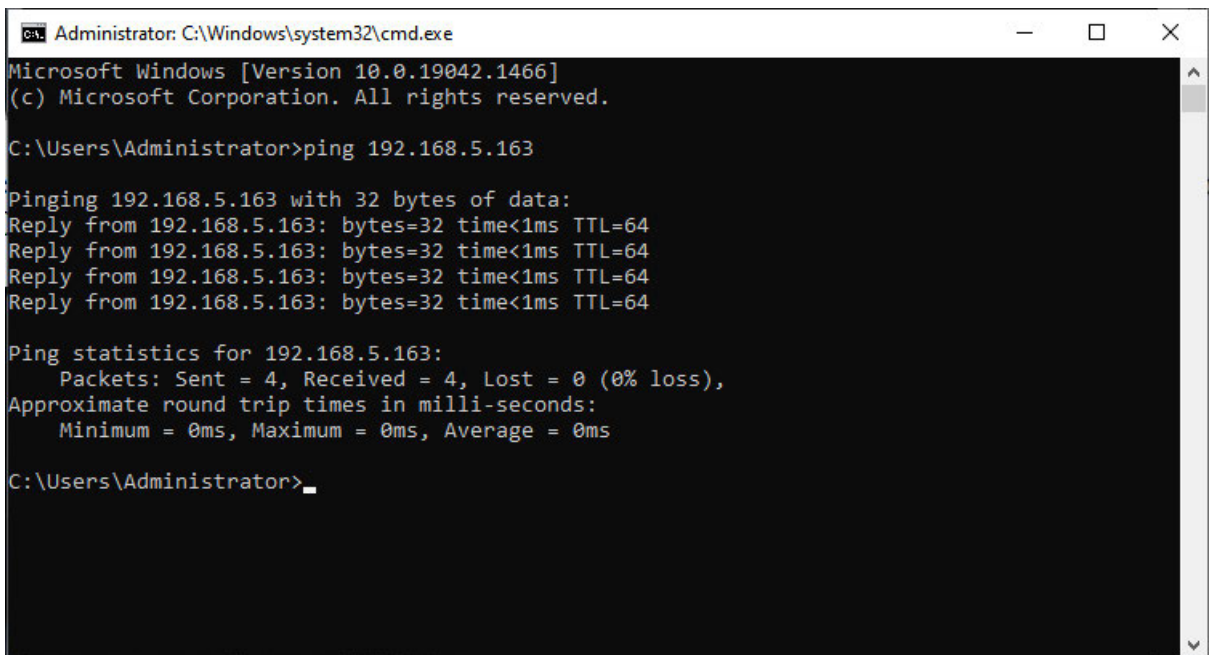

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 10.0.19042.1466]
(c) Microsoft Corporation. All rights reserved.

C:\Users\Administrator>ping 192.168.5.163

Pinging 192.168.5.163 with 32 bytes of data:
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.5.163:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Users\Administrator>
```

Figure1-8 Network Connection Screenshot

4.2 Camera Web Interface

4.2.1 Web Login

1) Web Login

After assigning an IP address to the camera, you can reach the Web Interface by typing in the camera's IP address into a web browser. You can log in this interface as administrator or user. If as administrator, type in "admin" into the username and password fields. If as user, type in "user1" or "user2" into the username and password fields. From the Web Interface, you can control the camera using the arrows on the left side. You can also adjust many of your camera's settings via this IP interface.

Note:

1. If login as "user", your rights are limited to preview, playback, and logout (No configuration right)
2. Browsers that support Web function are Google, IE, 360 and other popular browsers.

Language Selection: On the right top of the interface display "中文|English", click "English".

2) Download Plug-in

When first using IE browser to access the web conferencing camera, the login page will appear "Playback plug-in is not installed, please download and install!" Click on this message, download and install MRWebXinstall.exe, according to information prompts.

After installing the plugin, enter user name and password, click and Sign (initial default user name and password: "admin", users can change the user name and password on their own after entering) into the Web client management interface.

4.2.2 Preview

After successful login into the management interface, it enters the video preview interface. In the preview screen, users can control PTZ, zoom, focus, video capture, sound, focus, full screen and set the preset position, run, delete and other operations.

You can record the video and save it on SD Card when SD Card built in. Video can be saved on the Computer at Local.

1) Login as administrator

User name and default password: admin

You can control PTZ, zoom, focus, video capture, sound, focus, full screen and set run, and delete the preset position.

2) Login as user

User name and default password: “user1” or “user2”

You can control PTZ, zoom, focus, video capture, sound, focus, full screen and set run, and delete the preset position.

4.2.3 Configuration

Click Configuration to enter into the device parameters setting page

There are the following options: video configuration, network configuration, internet access configuration, system configuration, detailed description see the following table.

Table1-11 Explanation of Camera Configuration

| Menu | Explanation |
|-----------------------|--|
| Video Configuration | Including video encoding, video parameters, character-overlapping, character size, video output setting etc. |
| Network Configuration | Including basic parameters, Ethernet, DNS, wireless network setting, GB28181 etc. |
| System Configuration | Including equipment property, system time, user management, version update, Reset, Reboot device settings etc. |

4.2.4 Video Configuration

1) Video Encoding

Code Stream: Different video output mode setting, use different streams. (Main stream, secondary stream)

Compression Format: Set the video compression format, save to take it effect (primary / secondary stream default: H.264,H.265 optional)

Profile: Profile Mode Setting (Default HP, BP,MP Optional)

Video Size: Set video image resolution, save to take it effect (main stream default 1920 * 1080 or 1280 * 720 optional; default secondary stream 640 * 320,320 * 180,1280 * 720,1920 * 1080 optional)

Stream Rate Control: Set rate control mode, save to take it effect (Primary / secondary stream default variable bit rate, fixed rate is for option).

Image Quality: Set the image quality, image quality can be changed only when rate control is variable bit rate,(main stream defaulted is better, secondary stream default is not good, there are best, better, good, bad, worse, worst for options).

Rate (Kb / s): Set the video bit rate (main stream default 4096Kb / s,64-12288Kb / s optional; secondary stream default 1024Kb / s,64-10240Kb / s optional).

Frame rate (F / S): Set the video frame rate (primary / secondary stream default 25F / S, primary stream 5-60F/S optional, secondary stream 5-30F / S optional).

Key frame interval: Set the Button frame interval (primary / secondary stream default 75F,primary / stream 1-300F optional. secondary stream 1-150F optional).

Minimum QP of key frame interval: Set minimum QP of Button frame interval(Default 20, 10-51 optional)

Stream Name: When streaming via rtsp or rtmp, user can modify stream name. Main Stream(live/av0), sub stream(live/av1)

Click the "Save" button to display the "Parameter saved successfully" message, then settings take effect.

2) Stream Release

Switch: To turn on/off the main / secondary stream.

Protocol: primary / secondary stream applies RTMP protocol.

Host Port: server port number (default 1935,0-65535 optional)

Host Address: server IP addresses (default 192.168.5.11)

Stream Name: choose a different stream name (live / av0,live / av1 optional).

User: Set the user name.

Password: Set the password.

Click on the "Save" button to display the "Save successful" message,then settings take effect.

3) RTP Broadcasting

Main/Sub Stream: On/off;

Protocol: RTP or TS

Address: Default 224.1.2.3. It can be edited.

Port: The main stream defaults to 4000, the secondary stream defaults to 4002, and the main/secondary stream is optional from 0 to 65535.

Visit: Address comes up after setting. Eg; rtp://224.1.2.3:4000;

udp://@224.1.2.3:4000; tcp://@224.1.2.3:4002;

4) Video Parameters

A) Focus: Focus mode, focus tactic, focus sensitivity can be set.

Focus Mode: set the focus mode (Default automatic, manual optional, one-push)

Focus Tactic: set the focus tactic (Default before-focus, after-focus, normal meeting, education tracking, moving-target focus, center focus optional.)

Focus Sensitivity: Set the focus sensitivity (default is low, high, medium optional)

B) Exposure: Exposure mode, exposure compensation, backlight compensation, anti-flicker, gain limit, dynamic range, shutter, aperture, brightness, gain can be set.

Exposure Mode: Set the exposure mode (Default automatic, manual, shutter priority, aperture priority, brightness priority optional)

Exposure Compensation: Exposure compensation setting is active when it is auto status (default is off).

Exposure Compensation Value: Set the exposure compensation value, valid when Exposure Compensation is on (default 0, -7 to 7 optional).

BLC: Set back light compensation, valid when it is auto status (default is off).

Gain Limit: Set the gain limits, valid in auto focus, iris priority, and brightness priority.

Gain: Set gain, only valid in manual exposure mode and shutter priority (default 0, 0~20 optional)

Dynamic Range: Set the dynamic range (default 4, 1-8 optional).

Shutter Speed: Set shutter speed value, valid in manual focus and shutter priority. (default 1/100,

1/25, 1/30, 1/50, 1/60, 1/90, 1/100, 1/120, 1/180, 1/250, 1/350, 1/500, 1/1000, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000 optional).

Aperture Value: Set the aperture value, valid in auto focus and iris priority (default F1.8, closed, F11, F9.6, F8.0, F6.8, F5.6, F4.8, F4.0, F3.4, F2.8, F2.4, F2.0, F1.8 optional).

Brightness: Set the brightness value, valid in brightness priority mode (default 7, 0-23 optional).

C) Color: White balance, saturation, hue, white balance sensitivity, red fine tuning, blue fine tuning, red gain, blue gain can be set.

White Balance Mode: Set the white balance mode (Default automatic, manual, one-push white balance, 3000K, 3500K, 4000K, 4500K, 5000K, 5500K, 6000K, 6500K, 7000K optional). Note: Right click the "Correction" button when selected the One-push white balance mode.

Saturation: Set the saturation (default 100%, 60%, 70%, 80%, 90%, 100%, 110%, 120%, 130%, 140%, 150%, 160%, 170%, 180%, 190%, 200% optional).

Red Fine Tuning: Set red fine tuning, valid in manual white balance mode.

Blue Fine Tuning: Set Blue fine tuning, valid in manual white balance mode.

Chroma: Set the chrome (default 7, 0-14 optional).

Auto White Balance Sensitivity: Sensitivity Auto white balance settings (default is low, high, medium optional).

Red Gain: Set the red gain, effective when it is manual (default 145, 0-255 optional).

Blue Gain: Sets the Blue gain, effective when it is manual (default 56, 0-255 optional).

D) Image: You can set brightness, contrast, sharpness, gamma curve, dynamic contrast, black and white mode, horizontal flip, vertical flip, electronic zoom, ultra-low illumination

Brightness: Set the brightness (default 7, 0-14 optional).

Contrast: Set the contrast (default 7, 0-14 optional).

Sharpness: Set the sharpness value (default 6, 0-15 optional).

Gamma: Gamma value setting (default 0.45, 0.50, 0.55, 0.63 optional).

Dynamic Contrast: Set dynamic contrast (default off, 1-8 optional)

BW Mode: Set black and white mode (default color, black/white optional).

Digital Zoom: Set digital zoom (default off, on optional)

Lens Distortion Calibration: Set image distortion (default off, on optional)

E) Noise Reduction: 2D noise reduction, 3D noise reduction and dynamic dead pixel correction available.

2D Noise Reduction: Set 2D noise reduction level (default 3, 1-8 and off optional).

3D Noise Reduction: Set 3D noise reduction level (default 3, 1-8 and off optional).

Dynamic dead pixel correction: Set Dynamic dead pixel correction (default 4, 1-5 optional).

F) Style: Select image (Default, standard, brightness, clarity, and soft can be set)

 **Caution**

- Refresh the page after changing above parameters in a, b, c, d, e, f to take effect.

5) Character Overlapping

Display Time & Date: Yes/No

Display Title: Yes/No

Time, Font and Color: Default white, black, yellow, red and blue optional)

Title Font Color: Default white, black, yellow, red, and blue optional)

Move Character: Set the location where the time and title to display. Click “ up, down, left, right” button to move the characters’ location.

Title: Set title on device property (default CAMERA1)

Time: Set time on system time (default 1970/01/01 05:36:00)

Click “Save” button, “parameters are successfully saves” window pop-up, which means the setting take effect.

6) Character Size

Automatically Adjust According to the Resolution: Yes/No

Main Stream Character Size: Set the character size of the display, the device will automatically restart after changed (default 48, 28-200 optional)

Secondary Stream Character Size: Set the character size of the display, the device will automatically restart after changed (default 48, 28-200 optional)

Click “Save” button, “parameters are successfully saves” window pop-up, which means the setting take effect.

7) Video Output

Output Format: Set the video output format

Click “Save” button, “parameters are successfully saves” window pop-up, which means the setting take effect.

4.2.5 Network Configuration

1) Network Port

Data Port: set the data port, the device will restart automatically after changed (default 3000,0-65535 optional).

Web Port: Set Web port, the device will restart automatically after changed (default is 80, 0-65535 is optional).

Onvif Port: Set Onvif port, the device will restart automatically after changed (default 2000, 0-65535 optional).

Soap Port: Set Soap port (default 1936, 0-65535 optional).

RTMP Port: Set RTMP port (default 1935, 0-65535 optional).

RTSP Port: Set RTSP port, the device will restart automatically after changed (default 554,0-65535 optional).

Visca Port: Set Visca port, the device will restart automatically after changed (default 3001,0-65535 optional).

Https Port: Set http port, the device will restart automatically after changed (default 443, 0-65535 optional).

WebSocket Port: Set WebSocket port, the device will restart automatically after changed (default 8088, 0-65535 optional).

Click on the "Save" button, it will be valid when display "Save successful".

RTMP access: RTMP: // equipment IP address: 1935 / live/av0 (av0 main stream; av1 second stream)

RTMP Access: Rtmp://equipment IP address: 1935 / live/av0 (av0 main stream; av1 second stream)

2) Ethernet Parameter

DHCP: Enable or disable obtain IP automatically can be set. After saved, reboot the device to takes effect (default: OFF)

IP Address: Set the IP address, after saved, reboot the device to takes effect (default 192.168.5.163).

Note: This IP address is the same with the one used to login Web page.

Subnet Mask: Set the subnet mask (default 255.255.255.0).

Default Gateway: Set the default gateway (default 0.0.0.0).

Physical Address: Set the physical address (the parameter is read-only)

Click the "Save" button, it will be valid when display "Save successful". (Note: To prevent IP conflicts when modify).

3) DNS parameters

Preferred DNS Server: Set the preferred DNS server. (Default 0.0.0.0).

Alternate DNS Server: Set alternate DNS server. (Default 0.0.0.0).

Click the "Save" button, it will be valid when display "Save successful".

4) GB28181

Switch: Set whether to activate GB28181.

Time Synchronization: Enable/Disable time synchronization

Stream Type: Set stream type (default main stream, secondary stream optional)

Signing Time (in seconds): 3600, range 5-65535

Heartbeat Time (seconds): 60, range 1-65535

Register ID: 34020000001320000001

Register User Name: IPC

Register Password: 12345678

Equipment Ownership: Users can add their own

Administrative Regions: Users can add their own

Alarm Zone: Users can add their own

Equipment Installation Address: Users can add their own

Local SIP Port: 5060 Range 0-65535

GB28181 Server Address: IP address of the computer

Server SIP Port: 5060 Range 0-65535

Server ID: 34020000002000000001

Click on the "Save" button, it will be valid when display "Save successful".

5) SRT

SRT Port: Set the SRT port (default 9000, 0-65535 optional)

SRT Password: Set SRT password

SRT Password Length: Set the SRT password length (default 0, 16, 24, 32 optional)

Click the "Save" button, and the prompt message "Parameters saved successfully! It will take effect after restarting!"

6) RTSP

Enable RTSP: Enable/Disable RTSP

RTSP Authentication: Set RTSP authentication, default off, on optional

Click the "Save" button, and the prompt message "Save successfully! Modify RTSP authentication parameters will take effect after restarting the device!" will be displayed. After setting, restart the camera to take effect.

4.2.6 System Configuration

1) Device Properties

Device Name: Set the device name (Default Camera-1, user can add their own).

Device ID: Set the device ID (default 1, read-only).

System Language: Set the system language (default Simplified Chinese, English optional).Need to re-login after modify and save the setting.

Click on the "Save" button, it will be valid when display "Save successful".

2) System Time

Date Format: Set the date format (YYYY-MM-DD default year - month - day, MM-DD-YYYY namely Month - Day - Year, DD-MM-YYYY date - month - year Optional).

Date Separator: set the date separator (default '/',',','-' Optional).

Time Zone: Set the time zone (default UTC+08:00, other time zones optional).

Time Type: Set the time types (default 24 hours, optional 12 hours).

Enable NTP: Enable/disable NTP

Update Interval: Set the NTP server automatic updated time interval. Valid after setting NTP server synchronization (default one day, 2-10 days Optional).

NTP Server Address or Domain Name: Set NTP server address or domain name (default time.nits.gov). Valid after setting NTP server synchronization.

NTP Server Port: Sets the NTP server port (default 123). Valid after setting NTP server synchronization.

Click on the "Save" button, it will be valid when display "Save successful".

3) User Management

Select Users: Set the user type (the default administrator, User 1, User 2 optional)

User Name: Set the user name (Select User Administrator default admin; select a common user1 default user1; to select a common user 2 default user2; user can modify their own)


Password: Set a password (Select User Administrator default admin; select a common user1 default user1; to select a common user 2 default user2; user can modify their own).

Password Confirmation: Confirm the input passwords are the same or not.

4) Version Update

The version information displayed on the page is read-only version and cannot be modified by the user. It is the same as the version information in the menu. The version information of different device models is different.

Update File: Click "Browse..." in the pop-up window and select the upgrade file; click the "Upgrade" button, the upgrade dialog box will pop up. After successfully update, device will automatically reboot. (Note: Make sure that the device power and network can work during update, if not, the upgrade will fail.)

 **Caution**

- After the version upgrade is completed, you need to restore the factory default values

a, restore the factory default through web configuration;

b, restore the factory default value through the menu;

c, remote control shortcut Button *#6 restore factory default;

Choose one of the above three methods, in which the IP account and password of “method a” are also restored to the default.

5) Restore Factory Setting

Click "Restore Factory Defaults" button and choose “yes” or “no” on pop-up window, then the device will restart automatically and restore factory setting.

6) Reboot

Click "Reboot" button and choose “yes” or “no” on the pop-up window, then the device will restart automatically.


4.2.7 Logout

Click "Logout"; and select "Yes" or "No" on pop-up window. If choose “Yes”, you will exit the current page and return to the user login interface again.

4.2.8 Tracking Function Configuration

1. Enter into the management interface after login, next to select “enter into tracking interface” where you can turn on/off the tracking function.

2. At the right top is the PTZ management interface where you can set tracking zones, and at the bottom right is tracking configuration interface, show as below screenshot.

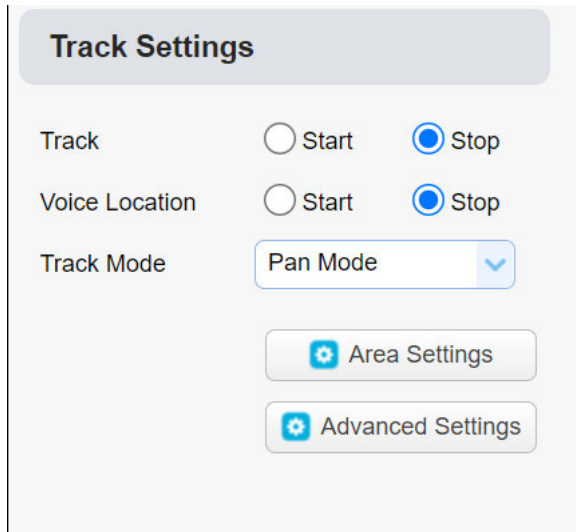

Auto Framing: Built in face detection algorithm, it can automatically detect participants to provide the optimal framing.

Voice Tracking: Voice localization and tracking system is used to trace the voice source and the lens will move according to the speaker's position and capture the corresponding image.

The camera has two image switching modes:

Movie Mode: In this mode, when user change tracking target from A to B, the transition screen will be "Close-up target A → Panoramic Image → Close-up target B"

Pan Mode: In this mode, when tracking target is shifted from A to B, the transition image will be continuous close-up image.

Zone Setting: Users can set PiP (picture-in-picture) and shield partial tracking zones (maximum 10 shielding zones). When set the zones, first you need to select the enable box, next to select the zones (Background is in yellow), at last frame the zones with mouse on the left space.

5. Serial Port Communication Control

In normal working state, you can control the camera through RS232/RS485 (VISCA IN) cable. The parameter of RS232 is as below:

Baud rate: 2400/4800/9600/115200/second

Start Bit: 1 bit;

Data Bit: 8 bit;

Stop Bit: 1 bit;

Verification Bit: None.

After power on, the camera will have a brief tour and then back to the center position.

The zoom lens is pulled to the farthest position, and then pulled back, after that self-test is completed.

5.1 VISCA Protocol List

5.1.1 VISCA Protocol List

| Ack/Completion Message | | |
|-------------------------------|-----------------------|--|
| | Command packet | Remark |
| ACK | z0 41 FF | Returned when the command is accepted. |
| Completion | z0 51 FF | Returned when the command has been executed. |

z = device address + 8

| Error Messages | | |
|-----------------------|-----------------------|--|
| | Command packet | Remark |
| Syntax Error | z0 60 02 FF | Returned when the command format is different or when a command with illegal command parameters is accepted. |
| Command Buffer Full | z0 60 03 FF | Indicates that two sockets are already being used(executing two commands) and the command could not be accepted when received. |

| | | |
|------------------------|---|--|
| Command Canceled | z0 6y 04 FF(y: Socket No.) | Returned when a command which is being executed in a socket specified by the cancel command is canceled. The completion message for the command is not returned. |
| No Socket | z0 6y 05 FF(y: Socket No.) | Returned when no command is executed in a socket specified by the cancel command, or when an invalid socket number is specified. |
| Command Not Executable | z0 6y 41 FF(y: Execution command Socket No. Inquiry command: 0) | Returned when a command cannot be executed due to current conditions. For example, when commands controlling the focus manually are received during auto focus. |

5.1.2 Camera Control Command

| Command | Function | Command Packet | Remark |
|------------|----------------|----------------------------|----------------------|
| AddressSet | Broadcast | 88 30 0p FF | p: Address setting |
| IF_Clear | Broadcast | 88 01 00 01 FF | I/F Clear |
| CAM_Power | On | 8x 01 04 00 02 FF | Power ON/OFF |
| | Off | 8x 01 04 00 03 FF | |
| CAM_Zoom | Stop | 8x 01 04 07 00 FF | |
| | Tele(Standard) | 8x 01 04 07 02 FF | |
| | Wide(Standard) | 8x 01 04 07 03 FF | |
| | Tele(Variable) | 8x 01 04 07 2p FF | p = 0(low) - 7(high) |
| | Wide(Variable) | 8x 01 04 07 3p FF | |
| | Direct | 8x 01 04 47 0p 0q 0r 0s FF | pqrs: Zoom Position |
| CAM_Focus | Stop | 8x 01 04 08 00 FF | |
| | Far(Standard) | 8x 01 04 08 02 FF | |
| | Near(Standard) | 8x 01 04 08 03 FF | |

| Command | Function | Command Packet | Remark |
|--------------------|-----------------|--|---|
| | Far(Variable) | 8x 01 04 08 2p FF | p = 0(low) - 7(high) |
| | Near (Variable) | 8x 01 04 08 3p FF | |
| | Direct | 8x 01 04 48 0p 0q 0r 0s FF | pqrs: Focus Position |
| | Auto Focus | 8x 01 04 38 02 FF | |
| | Manual Focus | 8x 01 04 38 03 FF | |
| | One Push mode | 8x 01 04 38 04 FF | |
| | One Push Triger | 8x 01 04 18 01 FF | One Push Triger |
| CAM_Zoom Focus | Direct | 8x 01 04 47 0p 0q 0r 0s 0t 0u 0v 0w FF | pqrs: Zoom Position tuvw: Focus Position |
| CAM_AF Sensitivity | High | 8x 01 04 58 01 FF | Focus sensitivity Setting |
| | Normal | 8x 01 04 58 02 FF | |
| | Low | 8x 01 04 58 03 FF | |
| CAM_AF Zone | Front | 8x 01 04 AA 00 FF | Focus Region Setting |
| | Beting | 8x 01 04 AA 01 FF | |
| | Meeting | 8x 01 04 AA 02 FF | |
| | Education | 8x 01 04 AA 03 FF | |
| | Moving | 8x 01 04 AA 04 FF | |
| | Middle | 8x 01 04 AA 05 FF | |
| CAM_WB | Auto | 8x 01 04 35 00 FF | |
| | 3000K | 8x 01 04 35 01 FF | |
| | 4000k | 8x 01 04 35 02 FF | |
| | One Push mode | 8x 01 04 35 03 FF | |
| | 5000k | 8x 01 04 35 04 FF | |
| | Manual | 8x 01 04 35 05 FF | |

| Command | Function | Command Packet | Remark |
|---------------------|------------------|----------------------------|--|
| | 6500k | 8x 01 04 35 06 FF | |
| | 3500K | 8x 01 04 35 07 FF | |
| | 4500K | 8x 01 04 35 08 FF | |
| | 5500K | 8x 01 04 35 09 FF | |
| | 6000K | 8x 01 04 35 0A FF | |
| | 7000K | 8x 01 04 35 0B FF | |
| | One Push Trigger | 8x 01 04 10 05 FF | One Push WB Trigger(Enabled during One Push WB mode) |
| CAM_AWB Sensitivity | Low | 8x 01 04 A9 00 FF | WB Sensitivity Setting |
| | Normal | 8x 01 04 A9 01 FF | |
| | High | 8x 01 04 A9 02 FF | |
| CAM_RGain | Reset | 8x 01 04 03 00 FF | Manual Control of R Gain |
| | Up | 8x 01 04 03 02 FF | |
| | Down | 8x 01 04 03 03 FF | |
| | Direct | 8x 01 04 43 00 00 0p 0q FF | pq: R Gain |
| CAM_Bgain | Reset | 8x 01 04 04 00 FF | Manual Control of B Gain |
| | Up | 8x 01 04 04 02 FF | |
| | Down | 8x 01 04 04 03 FF | |
| | Direct | 8x 01 04 44 00 00 0p 0q FF | pq: B Gain |
| CAM_AE | Full Auto | 8x 01 04 39 00 FF | Automatic Exposure mode |
| | Manual | 8x 01 04 39 03 FF | Manual Control mode |
| | Shutter priority | 8x 01 04 39 0A FF | Shutter Priority Automatic Exposure mode |

| Command | Function | Command Packet | Remark |
|----------------|---------------|-------------------------------|---------------------------------------|
| | Iris priority | 8x 01 04 39 0B FF | Iris Priority Automatic Exposure mode |
| | Bright | 8x 01 04 39 0D FF | Bright mode |
| CAM_Shutter | Reset | 8x 01 04 0A 00 FF | Shutter Setting |
| | Up | 8x 01 04 0A 02 FF | |
| | Down | 8x 01 04 0A 03 FF | |
| | Direct | 8x 01 04 4A 00 00 0p 0q FF | pq: Shutter Position |
| CAM_Iris | Reset | 8x 01 04 0B 00 FF | Iris Setting |
| | Up | 8x 01 04 0B 02 FF | |
| | Down | 8x 01 04 0B 03 FF | |
| | Direct | 8x 01 04 4B 00 00 0p 0q FF | pq: Iris Position |
| CAM_Gain Limit | Reset | 8x 01 04 0C 00 FF | Gain Limit Setting |
| | Up | 8x 01 04 0C 02 FF | |
| | Down | 8x 01 04 0C 03 FF | |
| | Gain Limit | 8x 01 04 2C 0p FF | p: Gain Positon |
| CAM_Bright | Reset | 8x 01 04 0D 00 FF | Bright Setting |
| | Up | 8x 01 04 0D 02 FF | |
| | Down | 8x 01 04 0D 03 FF | |
| | Direct | 8x 01 04 4D 00 00 0p 0q FF | pq: Bright Positon |
| CAM_ExpComp | On | 8x 01 04 3E 02 FF | Exposure Compensation ON/OFF |
| | Off | 8x 01 04 3E 03 FF | |
| | Reset | 8x 01 04 0E 00 FF | Exposure Compensation Amount Setting |
| | Up | 8x 01 04 0E 02 FF | |
| | Down | 8x 01 04 0E 03 FF | |

| Command | Function | Command Packet | Remark |
|------------------------|----------|-------------------------------|---|
| | Direct | 8x 01 04 4E 00 00 0p 0q FF | pq: ExpComp Position |
| CAM_Back Light | On | 8x 01 04 33 02 FF | Back Light |
| | Off | 8x 01 04 33 03 FF | Compensation |
| CAM_WDRS trength | Reset | 8x 01 04 21 00 FF | WDR Level Setting |
| | Up | 8x 01 04 21 02 FF | |
| | Down | 8x 01 04 21 03 FF | |
| | Direct | 8x 01 04 51 00 00 00 0p FF | p: WDR Level Positon |
| CAM_NR | 2D | 8x 01 04 53 0p FF | P=0-7 0:OFF |
| | 3D | 8x 01 04 54 0p FF | P=0-8 0:OFF |
| CAM_Gamm a | | 8x 01 04 5B 0p FF | p = 0 – 4 0: Default 1: 0.45 2: 0.50 3: 0.55 4: 0.63 |
| CAM_Low- Light Mode | ON | 8x 01 04 2D 01 FF | Low-Light Mode Setting |
| | OFF | 8x 01 04 2D 00 FF | |
| CAM_Gain | | 8x 01 04 4C 00 00 0p 0q FF | pq: 0-20 |
| CAM PresetSpeed | | 8x 01 01 0p FF | p: 1-10 |
| CAM_Flicker | OFF | 8x 01 04 23 00 FF | OFF |
| | 50HZ | 8x 01 04 23 01 FF | 50HZ |
| | 60HZ | 8x 01 04 23 02 FF | 60HZ |
| CAM_Apertu re | Reset | 8x 01 04 02 00 FF | Aperture Control |
| | Up | 8x 01 04 02 02 FF | |
| | Down | 8x 01 04 02 03 FF | |

| Command | Function | Command Packet | Remark |
|----------------------|----------|-------------------------------|--|
| | Direct | 8x 01 04 42 00 00 0p 0q FF | pq: Aperture Gain |
| CAM_Picture effect | B&W-Mode | 8x 01 04 63 04 FF | Picture effect Setting |
| | OFF | 8x 01 04 63 00 FF | |
| CAM_Memory | Reset | 8x 01 04 3F 00 pq FF | pq: Memory Number(=0 to 254) Corresponds to 0 to 9 on the Remote Commander |
| | Set | 8x 01 04 3F 01 pq FF | |
| | Recall | 8x 01 04 3F 02 pq FF | |
| CAM_LR_Reverse | On | 8x 01 04 61 02 FF | Image Flip Horizontal ON/OFF |
| | Off | 8x 01 04 61 03 FF | |
| CAM_Picture Flip | On | 8x 01 04 66 02 FF | Image Flip Vertical ON/OFF |
| | Off | 8x 01 04 66 03 FF | |
| CAM_Color Saturation | Direct | 8x 01 04 49 00 00 00 0p FF | P=0-E 0:60% 1:70% 2:80% 3:90% 4:100% 5:110% 6:120% 7:130% 8:140% 9:150% 10:160% 11:160% 12:180% 13:190% 14:200% |
| CAM_IDWrite | | 8x 01 04 22 0p 0q 0r 0s FF | pqrs: Camera ID (=0000 to FFFF) |
| SYS_Menu | ON | 8x 01 06 06 02 FF | Turn on the menu screen |
| | OFF | 8x 01 06 06 03 FF | Turn off the menu screen |
| IR_Receive | ON | 8x 01 06 08 02 FF | IR(remote commander)receive On/Off |
| | OFF | 8x 01 06 08 03 FF | |

| Command | Function | Command Packet | Remark |
|----------------------|-------------------------------|-------------------------------|--|
| CAM_Setting Reset | Reset | 8x 01 04 A0 10 FF | Reset Factory Setting |
| CAM_Brightn ess | Direct | 8x 01 04 A1 00 00 0p 0q FF | pq: Brightness Position |
| CAM_Contra st | Direct | 8x 01 04 A2 00 00 0p 0q FF | pq: Contrast Position |
| CAM_Flip | OFF | 8x 01 04 A4 00 FF | Single Command For Video Flip |
| | Flip-H | 8x 01 04 A4 01 FF | |
| | Flip-V | 8x 01 04 A4 02 FF | |
| | Flip-HV | 8x 01 04 A4 03 FF | |
| CAM_VideoS ystem | Set Camera video system | 8x 01 06 35 00 0p FF | P: 0~E Video format 0: 4KP30, 1: 4KP25, 2: 1080P30, 3: 1080P25, 4: 1080P29.97 |
| Pan_tiltDrive | Up | 8x 01 06 01 VV WW 03 01 FF | VV: Pan speed 0x01 (low speed) to 0x18 (high speed) WW: Tilt speed 0x01 (low speed) to 0x14 (high speed) YYYY: Pan Position ZZZZ: Tilt Position |
| | Down | 8x 01 06 01 VV WW 03 02 FF | |
| | Left | 8x 01 06 01 VV WW 01 03 FF | |
| | Right | 8x 01 06 01 VV WW 02 03 FF | |
| | Upleft | 8x 01 06 01 VV WW 01 01 FF | |
| | Upright | 8x 01 06 01 VV WW 02 01 FF | |

| Command | Function | Command Packet | Remark |
|----------------------|------------------|--|--|
| | DownLeft | 8x 01 06 01 VV WW 01 02 FF | |
| | DownRight | 8x 01 06 01 VV WW 02 02 FF | |
| | Stop | 8x 01 06 01 VV WW 03 03 FF | |
| | AbsolutePosition | 8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF | |
| | RelativePosition | 8x 01 06 03 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF | |
| | Home | 8x 01 06 04 FF | |
| | Reset | 8x 01 06 05 FF | |
| Pan-tilt LimitSet | Set | 8x 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF | W:1 Up Right 0:DownLeft YYYY: Pan Limit Position(TBD) |
| | Clear | 8x 01 06 07 01 0W 07 0F 0F 0F 07 0F 0F 0F FF | ZZZZ: Tilt Limit Position(TBD) |

5.1.3 Inquiry Command

| Command | Command Packet | Return Packet | Remark |
|------------------|----------------|---------------|--------------|
| CAM_PowerIn q | 8x 09 04 00 FF | y0 50 02 FF | On |
| | | y0 50 03 FF | Off(Standby) |

| Command | Command Packet | Return Packet | Remark |
|----------------------|----------------|----------------------|----------------------|
| CAM_ZoomPosInq | 8x 09 04 47 FF | y0 50 0p 0q 0r 0s FF | pqrs: Zoom Position |
| CAM_FocusAFModeInq | 8x 09 04 38 FF | y0 50 02 FF | Auto Focus |
| | | y0 50 03 FF | Manual Focus |
| | | y0 50 04 FF | One Push mode |
| CAM_FocusPosInq | 8x 09 04 48 FF | y0 50 0p 0q 0r 0s FF | pqrs: Focus Position |
| CAM_AFSensitivityInq | 8x 09 04 58 FF | y0 50 01 FF | High |
| | | y0 50 02 FF | Normal |
| | | y0 50 03 FF | Low |
| CAM_AFZoneInq | 8x 09 04 AA FF | y0 50 00 FF | Front |
| | | y0 50 01 FF | Beting |
| | | y0 50 02 FF | Meeting |
| | | y0 50 03 FF | Education |
| | | y0 50 04 FF | Moving |
| | | y0 50 05 FF | Middle |
| CAM_WBModeInq | 8x 09 04 35 FF | y0 50 00 FF | Auto |
| | | y0 50 01 FF | 3000K |
| | | y0 50 02 FF | 4000K |
| | | y0 50 03 FF | One Push Mode |
| | | y0 50 04 FF | 5000K |
| | | y0 50 05 FF | Manual |
| | | y0 50 06 FF | 6500K |
| | | y0 50 06 FF | 6500K |
| | | y0 50 07 FF | 3500K |

| Command | Command Packet | Return Packet | Remark |
|---------------------------|----------------|-------------------------|----------------------|
| | | y0 50 08 FF | 4500K |
| | | y0 50 09 FF | 5500K |
| | | y0 50 0A FF | 6000K |
| | | y0 50 0B FF | 7000K |
| CAM_AWBSe nsitivityInq | 8x 09 04 A9 FF | y0 50 00 FF | Low |
| | | y0 50 01 FF | Normal |
| | | y0 50 02 FF | High |
| CAM_RGainIn q | 8x 09 04 43 FF | y0 50 00 00 0p 0q FF | pq: R Gain |
| CAM_BGainIn q | 8x 09 04 44 FF | y0 50 00 00 0p 0q FF | pq: B Gain |
| CAM_AEMod elInq | 8x 09 04 39 FF | y0 50 00 FF | Full Auto |
| | | y0 50 03 FF | Manual |
| | | y0 50 0A FF | Shutter priority |
| | | y0 50 0B FF | Iris priority |
| | | y0 50 0D FF | Bright |
| CAM_Shutter PosInq | 8x 09 04 4A FF | y0 50 00 00 0p 0q FF | pq: Shutter Position |
| CAM_IrisPosI nq | 8x 09 04 4B FF | y0 50 00 00 0p 0q FF | pq: Iris Position |
| CAM_Gain LimitInq | 8x 09 04 2C FF | y0 50 0p FF | p: Gain Positon |
| CAM_ BrightPosiInq | 8x 09 04 4D FF | y0 50 00 00 0p 0q FF | pq: Bright Position |
| CAM_ExpCo mpModelInq | 8x 09 04 3E FF | y0 50 02 FF | On |
| | | y0 50 03 FF | Off |
| CAM_ExpCo | 8x 09 04 4E FF | y0 50 00 00 0p 0q | pq: ExpComp Position |

| Command | Command Packet | Return Packet | Remark |
|---------------------------|----------------|----------------------|--|
| mpPosInq | | FF | |
| CAM_BacklightModelInq | 8x 09 04 33 FF | y0 50 02 FF | On |
| | | y0 50 03 FF | Off |
| CAM_WDRStrengthInq | 8x 09 04 51 FF | y0 50 00 00 00 0p FF | p: WDR Strength |
| CAM_NRLevel(2D) Inq | 8x 09 04 53 FF | y0 50 0p FF | P: 2DNRLLevel |
| CAM_NRLevel(3D) Inq | 8x 09 04 54 FF | y0 50 0p FF | P:3D NRLevel |
| CAM_FlickerModelInq | 8x 09 04 55 FF | y0 50 0p FF | p: Flicker Settings(0: OFF, 1: 50Hz, 2:60Hz) |
| CAM_ApertureInq | 8x 09 04 42 FF | y0 50 00 00 0p 0q FF | pq: Aperture Gain |
| CAM_PictureEffectModelInq | 8x 09 04 63 FF | y0 50 00 FF | Off |
| | | y0 50 04 FF | B&W |
| CAM_MemoryInq | 8x 09 04 3F FF | y0 50 0p FF | p: Memory number last operated. |
| SYS_MenuModelInq | 8x 09 06 06 FF | y0 50 02 FF | On |
| | | y0 50 03 FF | Off |
| CAM_LR_ReverseInq | 8x 09 04 61 FF | y0 50 02 FF | On |
| | | y0 50 03 FF | Off |
| CAM_PictureFlipInq | 8x 09 04 66 FF | y0 50 02 FF | On |
| | | y0 50 03 FF | Off |
| CAM_ColorSaturationInq | 8x 09 04 49 FF | y0 50 00 00 00 0p FF | p: Color Gain setting 0h (60%) to Eh (130%) |
| CAM_IDInq | 8x 09 04 22 FF | y0 50 0p FF | p: Camera ID |
| IR_ReceiveInq | 8x 09 06 08 FF | y0 50 02 FF | On |

| Command | Command Packet | Return Packet | Remark |
|---------------------|----------------|----------------------------------|--|
| | | y0 50 03 FF | Off |
| CAM_BrightnessInq | 8x 09 04 A1 FF | y0 50 00 00 0p 0q FF | pq: Brightness Position |
| CAM_ContrastInq | 8x 09 04 A2 FF | y0 50 00 00 0p 0q FF | pq: Contrast Position |
| CAM_FlipInq | 8x 09 04 A4 FF | y0 50 00 FF | Off |
| | | y0 50 01 FF | Flip-H |
| | | y0 50 02 FF | Flip-V |
| | | y0 50 03 FF | Flip-HV |
| CAM_GammaInq | 8x 09 04 5B FF | y0 50 0p FF | p: Gamma setting |
| CAM_VersionInq | 8x 09 00 02 FF | y0 50 ab cd mn pq rs tu vw FF | ab cd : vender ID (0220) mn pq : model ID rs tu: ARM Version vw: reserve |
| VideoSystemInq | 8x 09 06 23 FF | y0 50 0p FF | P: 0~E Video format 0: 4KP30, 1: 4KP25, 2: 1080P30, 3: 1080P25, 4: 1080P29.97 |
| Pan-tiltMaxSpeedInq | 8x 09 06 11 FF | y0 50 ww zz FF | ww: Pan Max Speed zz: Tilt Max Speed |

| Command | Command Packet | Return Packet | Remark |
|----------------|----------------|-------------------------------------|--|
| Pan-tiltPosInq | 8x 09 06 12 FF | y0 50 0w 0w 0w 0w 0z 0z 0z 0z FF | www: Pan Position zzzz: Tilt Position |

Note: [x] in the above table represents the address of the device to be operated, [y]=[x + 8].

5.2 Pelco-D Protocol Command List

| Function | Byte1 | Byte2 | Byte3 | Byte4 | Byte5 | Byte6 | Byte7 |
|------------|-------|---------|-------|-------|-----------|------------|-------|
| Up | 0xFF | Address | 0x00 | 0x08 | Pan Speed | Tilt Speed | SUM |
| Down | 0xFF | Address | 0x00 | 0x10 | Pan Speed | Tilt Speed | SUM |
| Left | 0xFF | Address | 0x00 | 0x04 | Pan Speed | Tilt Speed | SUM |
| Right | 0xFF | Address | 0x00 | 0x02 | Pan Speed | Tilt Speed | SUM |
| Upleft | 0xFF | Address | 0x00 | 0x0C | Pan Speed | Tilt Speed | SUM |
| Upright | 0xFF | Address | 0x00 | 0x0A | Pan Speed | Tilt Speed | SUM |
| DownLeft | 0xFF | Address | 0x00 | 0x14 | Pan Speed | Tilt Speed | SUM |
| DownRight | 0xFF | Address | 0x00 | 0x12 | Pan Speed | Tilt Speed | SUM |
| Zoom In | 0xFF | Address | 0x00 | 0x20 | 0x00 | 0x00 | SUM |
| Zoom Out | 0xFF | Address | 0x00 | 0x40 | 0x00 | 0x00 | SUM |
| Focus Far | 0xFF | Address | 0x00 | 0x80 | 0x00 | 0x00 | SUM |
| Focus Near | 0xFF | Address | 0x01 | 0x00 | 0x00 | 0x00 | SUM |
| Stop | 0xFF | Address | 0x00 | 0x00 | 0x00 | 0x00 | SUM |

| Function | Byte1 | Byte2 | Byte3 | Byte4 | Byte5 | Byte6 | Byte7 |
|------------------------------|-------|---------|-------|-------|-----------------|----------------|-------|
| Set Preset | 0xFF | Address | 0x00 | 0x03 | 0x00 | Preset ID | SUM |
| Clear Preset | 0xFF | Address | 0x00 | 0x05 | 0x00 | Preset ID | SUM |
| Call Preset | 0xFF | Address | 0x00 | 0x07 | 0x00 | Preset ID | SUM |
| Query Pan Position | 0xFF | Address | 0x00 | 0x51 | 0x00 | 0x00 | SUM |
| Query Pan Position Response | 0xFF | Address | 0x00 | 0x59 | Value High Byte | Value Low Byte | SUM |
| Query Tilt Position | 0xFF | Address | 0x00 | 0x53 | 0x00 | 0x00 | SUM |
| Query Tilt Position Response | 0xFF | Address | 0x00 | 0x5B | Value High Byte | Value Low Byte | SUM |
| Query Zoom Position | 0xFF | Address | 0x00 | 0x55 | 0x00 | 0x00 | SUM |
| Query Zoom Position Response | 0xFF | Address | 0x00 | 0x5D | Value High Byte | Value Low Byte | SUM |

5.3 Pelco-P Protocol Command List

| Function | Byte1 | Byte2 | Byte 3 | Byte 4 | Byte5 | Byte6 | Byte 7 | Byte 8 |
|--------------------|-------|---------|--------|--------|-----------|------------|--------|--------|
| Up | 0xA0 | Address | 0x00 | 0x08 | Pan Speed | Tilt Speed | 0xAF | XOR |
| Down | 0xA0 | Address | 0x00 | 0x10 | Pan Speed | Tilt Speed | 0xAF | XOR |
| Left | 0xA0 | Address | 0x00 | 0x04 | Pan Speed | Tilt Speed | 0xAF | XOR |
| Right | 0xA0 | Address | 0x00 | 0x02 | Pan Speed | Tilt Speed | 0xAF | XOR |
| Upleft | 0xA0 | Address | 0x00 | 0x0C | Pan Speed | Tilt Speed | 0xAF | XOR |
| Upright | 0xA0 | Address | 0x00 | 0x0A | Pan Speed | Tilt Speed | 0xAF | XOR |
| DownLeft | 0xA0 | Address | 0x00 | 0x14 | Pan Speed | Tilt Speed | 0xAF | XOR |
| DownRight | 0xA0 | Address | 0x00 | 0x12 | Pan Speed | Tilt Speed | 0xAF | XOR |
| Zoom In | 0xA0 | Address | 0x00 | 0x20 | 0x00 | 0x00 | 0xAF | XOR |
| Zoom Out | 0xA0 | Address | 0x00 | 0x40 | 0x00 | 0x00 | 0xAF | XOR |
| Stop | 0xA0 | Address | 0x00 | 0x00 | 0x00 | 0x00 | 0xAF | XOR |
| Focus Far | 0xA0 | Address | 0x01 | 0x00 | 0x00 | 0x00 | 0xAF | XOR |
| Focus Near | 0xA0 | Address | 0x02 | 0x00 | 0x00 | 0x00 | 0xAF | XOR |
| Set Preset | 0xA0 | Address | 0x00 | 0x03 | 0x00 | Preset ID | 0xAF | XOR |
| Clear Preset | 0xA0 | Address | 0x00 | 0x05 | 0x00 | Preset ID | 0xAF | XOR |
| Call Preset | 0xA0 | Address | 0x00 | 0x07 | 0x00 | Preset ID | 0xAF | XOR |
| Query Pan Position | 0xA0 | Address | 0x00 | 0x51 | 0x00 | 0x00 | 0xAF | XOR |

| | | | | | | | | |
|---------------------------------------|------|---------|------|------|-----------------------|----------------------|------|-----|
| Query Pan Position Response | 0xA0 | Address | 0x00 | 0x59 | Value High Byte | Value Low Byte | 0xAF | XOR |
| Query Tilt Position | 0xA0 | Address | 0x00 | 0x53 | 0x00 | 0x00 | 0xAF | XOR |
| Query Tilt Position Response | 0xA0 | Address | 0x00 | 0x5B | Value High Byte | Value Low Byte | 0xAF | XOR |
| Query Zoom Position | 0xA0 | Address | 0x00 | 0x55 | 0x00 | 0x00 | 0xAF | XOR |
| Query Zoom Position Response | 0xA0 | Address | 0x00 | 0x5D | Value High Byte | Value Low Byte | 0xAF | XOR |

6. Maintenance and Troubleshooting

6.1 Camera Maintenance

- 1) If the camera will not be used for a long time, please turn off the power switch.
- 2) Use a soft cloth or lotion-free tissue to clean the camera body.
- 3) Use a soft dry lint-free cloth to clean the lens. If the camera is very dirty, clean it with a diluted neutral detergent. Do not use any type of solvent or harsh detergent, which may damage the surface.

6.2 Unqualified Applications

- Do not shoot extremely bright objects for a long period of time, such as sunlight, ultra-bright light sources, etc...
- Do not operate in unstable lighting conditions, otherwise the image may flicker.
- Do not operate close to powerful electromagnetic radiation, such as TV or radio transmitters, etc...

6.3 Troubleshooting

● **No image**

1. Check whether the power cord is connected, voltage is OK, POWER lamp is lit.
2. Check whether the camera can “self-test” after startup (camera will do a brief pan-tilt tour and return to the home position, or if preset 0 is set, the camera will return to the preset 0 position).
3. Check that the HDMI cable is connected correctly.
 1. If HDMI, make sure that the destination device is accessing the HDMI port that you plugged into.
 2. If SDI, make sure that the destination device is accessing the SDI port that you plugged into.

● **Abnormal display of image**

1. Check setting of rotary dial on rear of camera. Be sure to use a resolution and refresh rate that is supported by your software.

● **Image is shaky or vibrating.**

1. Check whether camera is mounted solidly or sitting on a steady horizontal and level surface.
2. Check the building and any supporting furniture for vibration. Ceiling mounts are often affected by building vibration more than wall mounts.
3. Any external vibration that is affecting the camera will be more apparent when in tele zoom (zoomed in) setting.

Copyright Notice

The entire contents of this manual may not be cloned, copied or translated in any way without the explicit permission of the company. Product specifications and information referred to in this document are for reference only and as such are subject to updating at any time without prior notice