


Mounting Road Tubeless Tires Page 1

How to mount tubeless tires on American Classic Road Tubeless wheels.

- IMPORTANT: American Classic Road Tubeless wheels MUST use tubeless specific tires to be run tubeless. If you use a standard clincher tire, you must use a tube as the bead size is too small for tubeless application. Rims have been tested with Hutchinson and Maxxis tubeless tires. Maxxis Padrone tires are more difficult to mount and require extra soap, see Step 3 below.
- Tools Needed: A Cup, Liquid Soap, Water, a Small Rag, Tubeless Sealant and a Sealant Injector (recommended)
- Before starting, your rim should be taped with a layer of AC fiber tape covering the spoke holes and two layers of 22mm AC Road Tubeless
 amber colored tape. All new AC wheelsets come taped and with valves in the box.
- Do not use a tire lever at any point during installation.

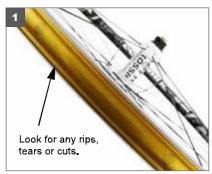

1. Inspect clear amber colored tape to make sure it will hold air and seal against the tire bead.



2. Insert red valve stem with rubber O-ring into the tire well



A. Use the plastic contoured spacer to protect the rim from the nut.



B. Firmly press valve base into rim with your thumb and finger tighten knurled nut.

Tire Preparation: Very Important!

3. BEFORE you put the tire on the rim, use soap, a little water and a rag to heavily lather up the edges of the tire (tire bead), both inside and out. Also lather up the inside of rim, on the tape. Use plenty of soap, it will help the beads



slide over the hooks and seat correctly!

Very Important!

When starting to install the first tire bead, **start at the rim seam**, directly across from the valve, and work toward the valve.

When the bead is becoming tight, hard to install or slippery, use a dry rag for extra grip. Once the bead is over the sidewall, make sure it is sitting at the bottom of the rim tire well. Repeat to get remaining tire bead onto rim.

Do <u>not</u> use a tire lever at any point during tire installation.



OK



BAD

4. Spread the beads apart at the valve, to make sure the air will enter between them. You should <u>not</u> see the red valve base.

Inflation Tips:

Some tires require a quick shot of air to "catch" the bead. You may need to use a compressor. Sometimes the valve core needs to be removed to allow a quicker shot of air.

There is a trick for difficult tires called a "bicycle tire seater." These can be made with a stout string wrapped around the tire tread and tightened, or a ratcheting strap. (Not included)

Pump air into tire.

5 Lines are art and a series of the series o

5. After the beads catch, finish inflating the tire. Do not exceed the manufacturer's maximum air pressure rating. (PSI/Bar)

NOTE:

If the beads do not seat and you have followed the previous instructions, it is possible that your tire will not work. Some tires will not install as the bead diameter is too small and will not go over the bead barb.

Continue to Page 2.



Mounting Road Tubeless Tires Page 2

How to mount tubeless tires on American Classic Road Tubeless wheels.

6. Slowly let air out of tire. The tire should stay seated. Sometimes the bead sticks and rolls over the barb (not enough soap) and will not stay seated at first. If the beads are not seated at this point, return to Step 3 and use more soap.

If most of the bead is seated (meaning you may have a small section that did not seat completely), you are now ready to install sealant. There are two options for putting sealant into the tire. Start by removing the valve core.

NOTE: We recommend using 0.5 oz ~ 1 oz. (15ml - 30ml) of sealant per wheel



After air has been let out of tire and beads are still seated, unthread and remove valve core.



A. Recommended: Attached sealant injector to valve, pinch injector tube, pour sealant into injector, release tube and push plunger.



B. Sealant bottles often come with a funnel style cone cap that can be used if you do not have an injector.



7. Reinstall the valve core. Hand tighten only, do <u>not</u> use a wrench or pliers.



8. With the valve core installed, pump air back into the tire and seat the tire beads.

Inflation:

Some tires require a quick shot of air to "catch" the bead. You may need to use a compressor. Repeat the method that worked for you in Step 4.

Make sure the beads are fully seated. Seating may take more air than you will use when riding. Do not exceed the tire manufacturer's maximum air pressure rating. (PSI/Bar)



9. Once the beads are seated and the tire is holding air with sealant inside, you will need to shake the wheel evenly to spread the sealant in the tire until any small air leaks are sealed. Shake in many directions.

TIPS:

When both tires have been mounted and sealed, you will need to ride them. We recommend riding 1-10 miles staying close to your shop/home to make sure the tires are setup correctly and ready for any longer rides.

Some tires may need to re-inflated several times before they are completely seated and sealed. Riding the wheels evenly spreads the sealant in the tire and fills in any small gaps in the bead seat.

REMINDER:

It is a good practice to carry a spare tube and tire boot in case of a large puncture or tear the sealant cannot fill.