




OFFICINA  
NICOLAZZI  
DAL 1960



BRIDGE TAP  
Art: Z1419

## Specifications

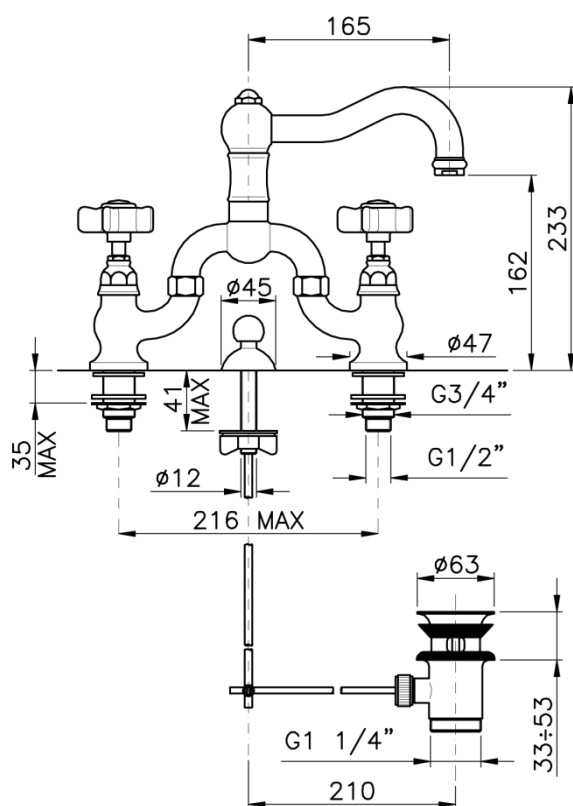

### Available replacement handles:



El Capitan Handle



-78 Mont Blanc Handle



-78A Mont Blanc Antique Crackle



-78B Mont Blanc Black

- Handmade in Italy since 1960
- 1/4 Turn valves handmade at Nicolazzi Factory
- Lead Free Brass Compliant to AZ/NZS 3718
- Suitable even and uneven pressure
- Handles are interchangeable



WaterMark  
WM22315  
AS/NZS3662

Canterbury Sink & Tap Co.

Max/Min Operating  
Pressure: 100/500kPa

OFFICINA  
NICOLAZZI  
DAL 1960

## Important Notice    Model : Z1419

---

### **CAREFULLY READ THROUGH THESE INSTRUCTIONS BEFORE INSTALLATION AND USE OF ALL TAP WARE AND WALL VALVES**

#### **INSTALLATION and WARRANTY INSTRUCTIONS**

#### **TECHNICAL INFORMATION**

All flexible hoses are designed and manufactured for use with water in exposed locations only. Do not expose to household cleaners, chlorine, chloride, hydrochloric acid or other corrosive chemicals.

All connections with threads M10x1 male must be hand tighten. Do not over tighten. Over tightening may cause damage to the hose.

All tap ware washers and o-rings are designed and manufactured for use with water. Do not expose to household cleaners, chlorine, chloride, hydrochloric acid or other corrosive chemicals.

Our tap ware is designed for use with the temperatures and pressures listed below:

- minimum cold water supply 10 °C
- maximum hot water supply 62 °C
- minimum pressure 100 kPa
- maximum pressure 500 kPa
- maximum fixing torque value = 13.6 Nm

Please note: The recommended pressure for best performance is between 270 kPa and 420 kPa. More pressure than 420 kPa or less pressure than 270 kPa may affect the diverting action in side spray tap ware.

Do not use any Nicolazzi tap ware with sulphurous water.

The minimum temperature for all tap ware is 10 degrees Celsius . Below 10 degrees Celsius will void the warranty.

When available, filter systems must be placed between hot and cold supply lines and the tap ware. Improper use or non-use of filters may make diverting tap ware with hand sprays perform poorly.

Don't modify the tap ware and their components.

Use only original spare parts if there are replacements to be ordered. Installation must be made by authorized plumbers or installers. Improper installation or diagnosis of problems is not covered by the warranty. Yearly maintenance of cleaning and flushing is recommended.

Operation and use of any tap ware or wall valve that do not conform to these technical instructions will void the warranty.

# Installation Instructions Model : Z1419


## 1 Preparation

### Tap body




#### Preparation

- Flush out the pipework to remove any foreign matter.
- The hot supply should be on the left when viewed from the front of the fitting.
- Assemble the bridge spout (A) with the pillar taps (B).

**Note :** It is not necessary to fully tighten the two hexagonal nuts on the bridge spout at this stage, as this will be done later in the process.

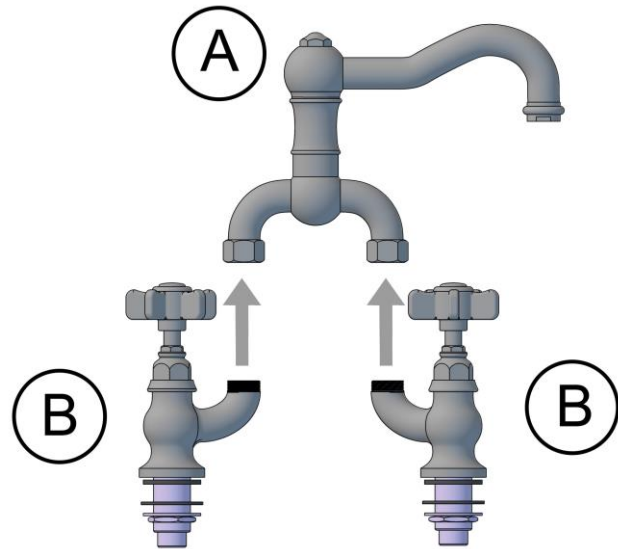


- ## 2
- Position the tap hole spacing at **200mm**, centre to centre, on the wash basin. MAX spacing: **216mm**.
  - Tap cut out hole sizes : Maximum **32mm** diameter.
  - Under side clearance : Maximum **35mm**

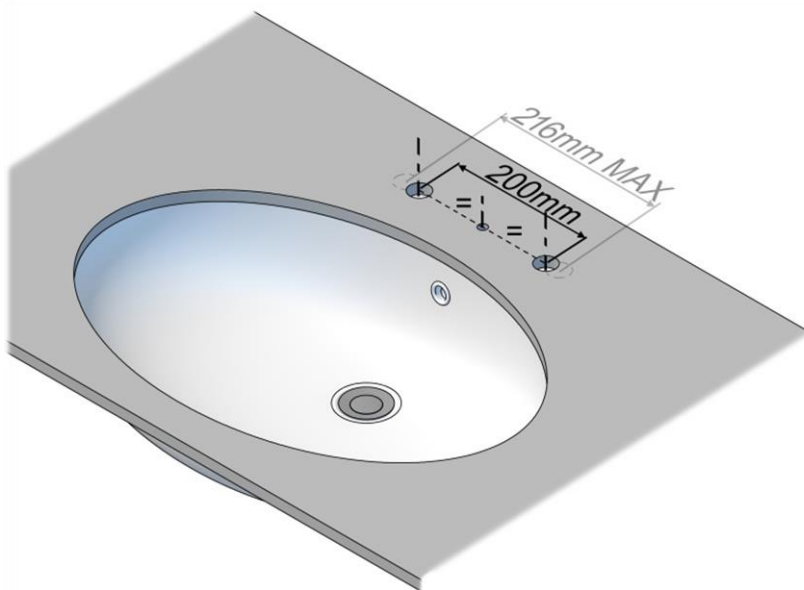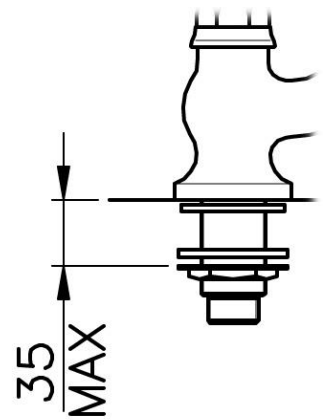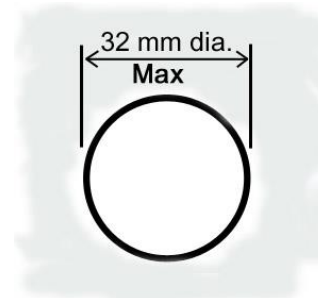

#### Pop-up dome fitment

- Centre the pop-up dome hole, midway between the tap cut out holes.
- Maximum hole size: **15mm**
- Under side clearance : **41mm**

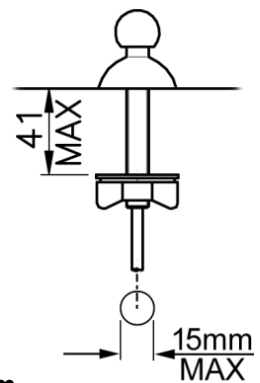


Continue.....


## Installation Instructions

## Model : Z1419

- 1
- Install the pop-up waste body top section **1**, and waste body bottom section **4**, to the basin as shown.
  - Ensure that the top seal **2**, and bottom seal **3**, are installed correctly, to ensure proper functioning of the pop-up waste system and prevent any water leakage.

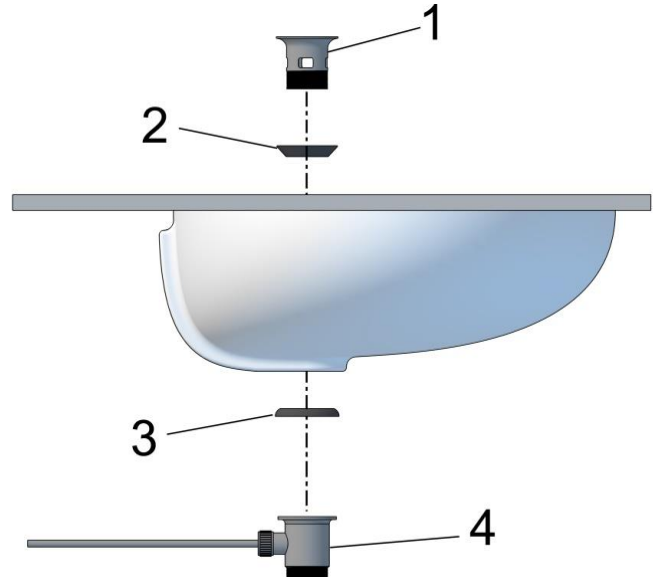

- 2
- On top of the basin counter, fit the pop-up dome **5**, into the cut out hole.
  - From under the basin counter, feed the rubber washer **6**, over the thread section of the pop-up dome, followed by the lock nut with disc **7**.

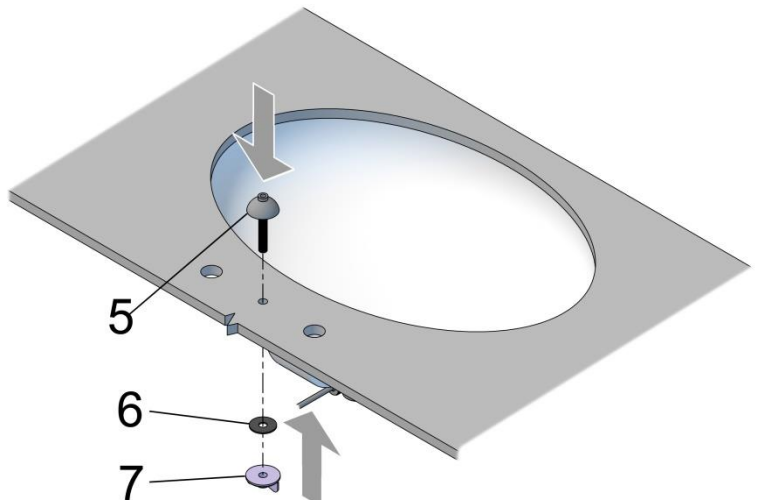

- 3
- Tighten the rubber washer using the lock nut and disc, up against the underside of the basin counter top.


- **Note:** Hand tighten only, **DO NOT** over tighten!




Continue.....

## Installation Instructions      Model : Z1419

- 4** ▪ Feed the tap thread sections into the cut out holes on the wash basin counter top, placing the rubber washers **8**, between the tap section bases and the upper surface of the wash basin counter top.

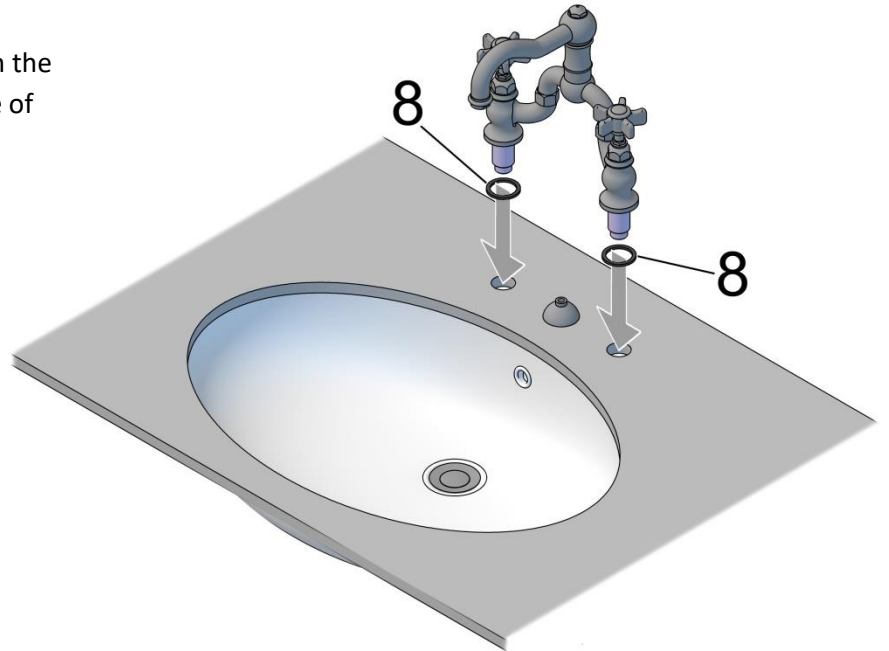


- 5** ▪ Under the wash basin counter top, stack the supplied rubber washer **9**, above the  $\frac{3}{4}$ " stainless steel disc **10**, and feed them onto the tap thread sections.
- Screw the mounting nuts **11**, onto the tap threads sections.
  - Feed the rubber washer **8**, and  $\frac{3}{4}$ " stainless steel disc **10**, to the underside of the wash basin counter top.

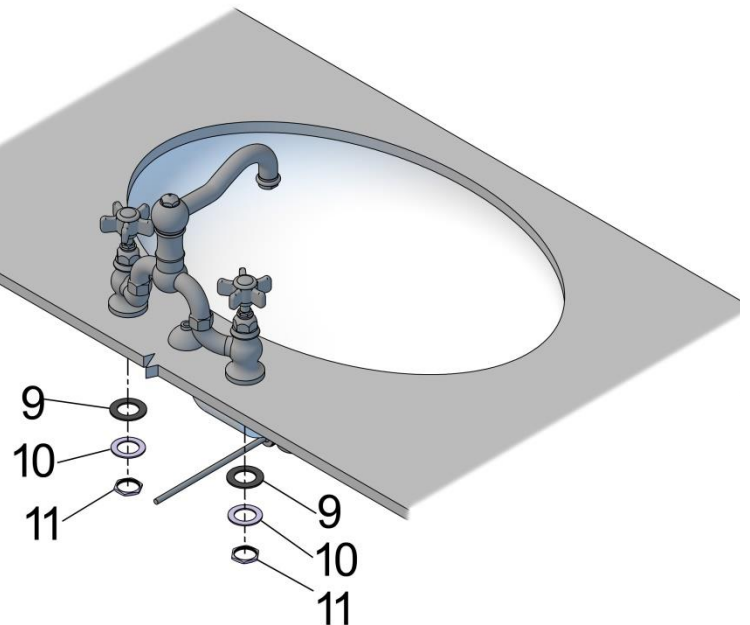


Continue.....

## Installation Instructions Model : Z1419


- 6**
- Make sure that the two pillar taps are correctly aligned. Next under the wash basin, tighten the two mounting nuts using a suitable spanner or smooth jawed shifter.
  - Screw tight the hexagonal nuts of the bridge spout (A) on the pillar taps (B).

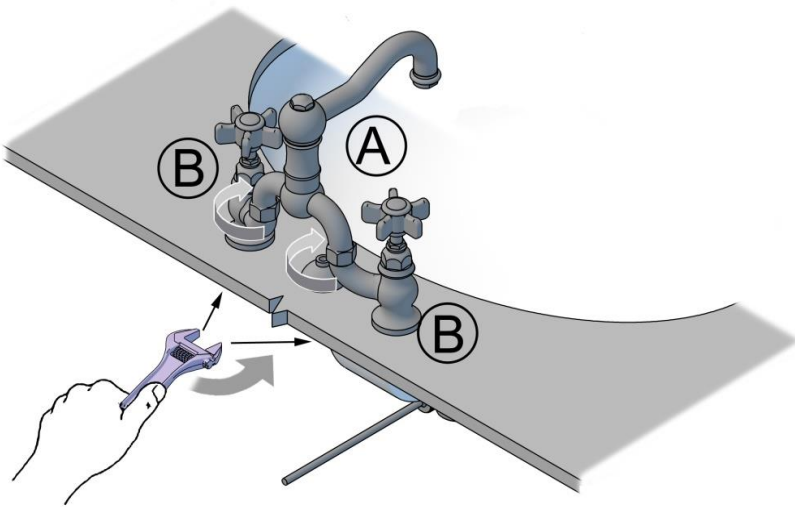

- 7**
- Install the vertical waste pop-up rod 12, by feeding it through the hole in the top of the tap body.
  - Feed the bottom end of the vertical pop-up rod onto the articulated joint 13, located on the horizontal waste pop-up rod.
  - Adjust the length of the vertical pop-up rod to ensure the proper working of the pop-up stopper.
  - Ensure that the locking screw on the articulated joint is firmly secured.

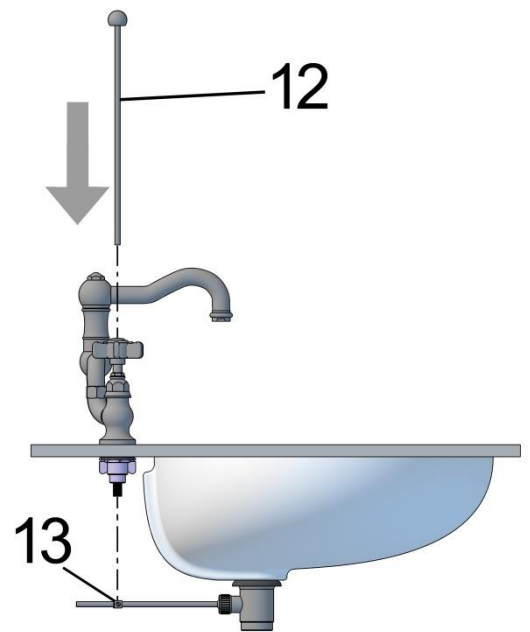


- 8**
- Connect hot and cold water supplies to the flexi tail hoses.
  - Ensure all connections are firmly tightened.

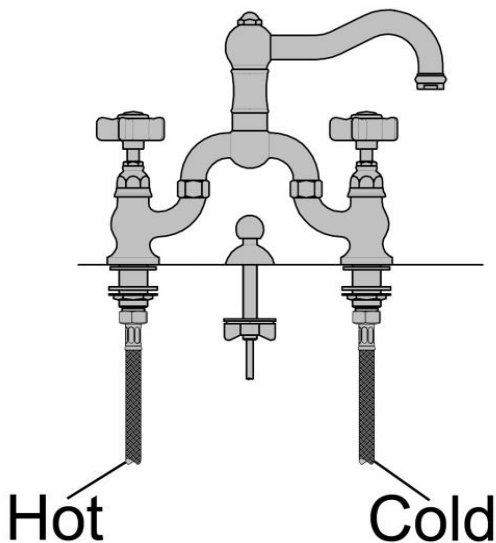

### Before use

- Turn on the Hot and Cold supplies to the tap.
- Maximum temperature for Hot water supply to the tapware is 62 °C.
- Minimum recommended pressure is 100 kPa — Maximum recommended pressure is 500 kPa.
- Check the installation carefully for leaks.
- If further building work is to be carried out in the vicinity of the tapware, it should be covered to prevent paint, adhesive, etc. from damaging the surface.

# Spare Parts list Model : Z1419

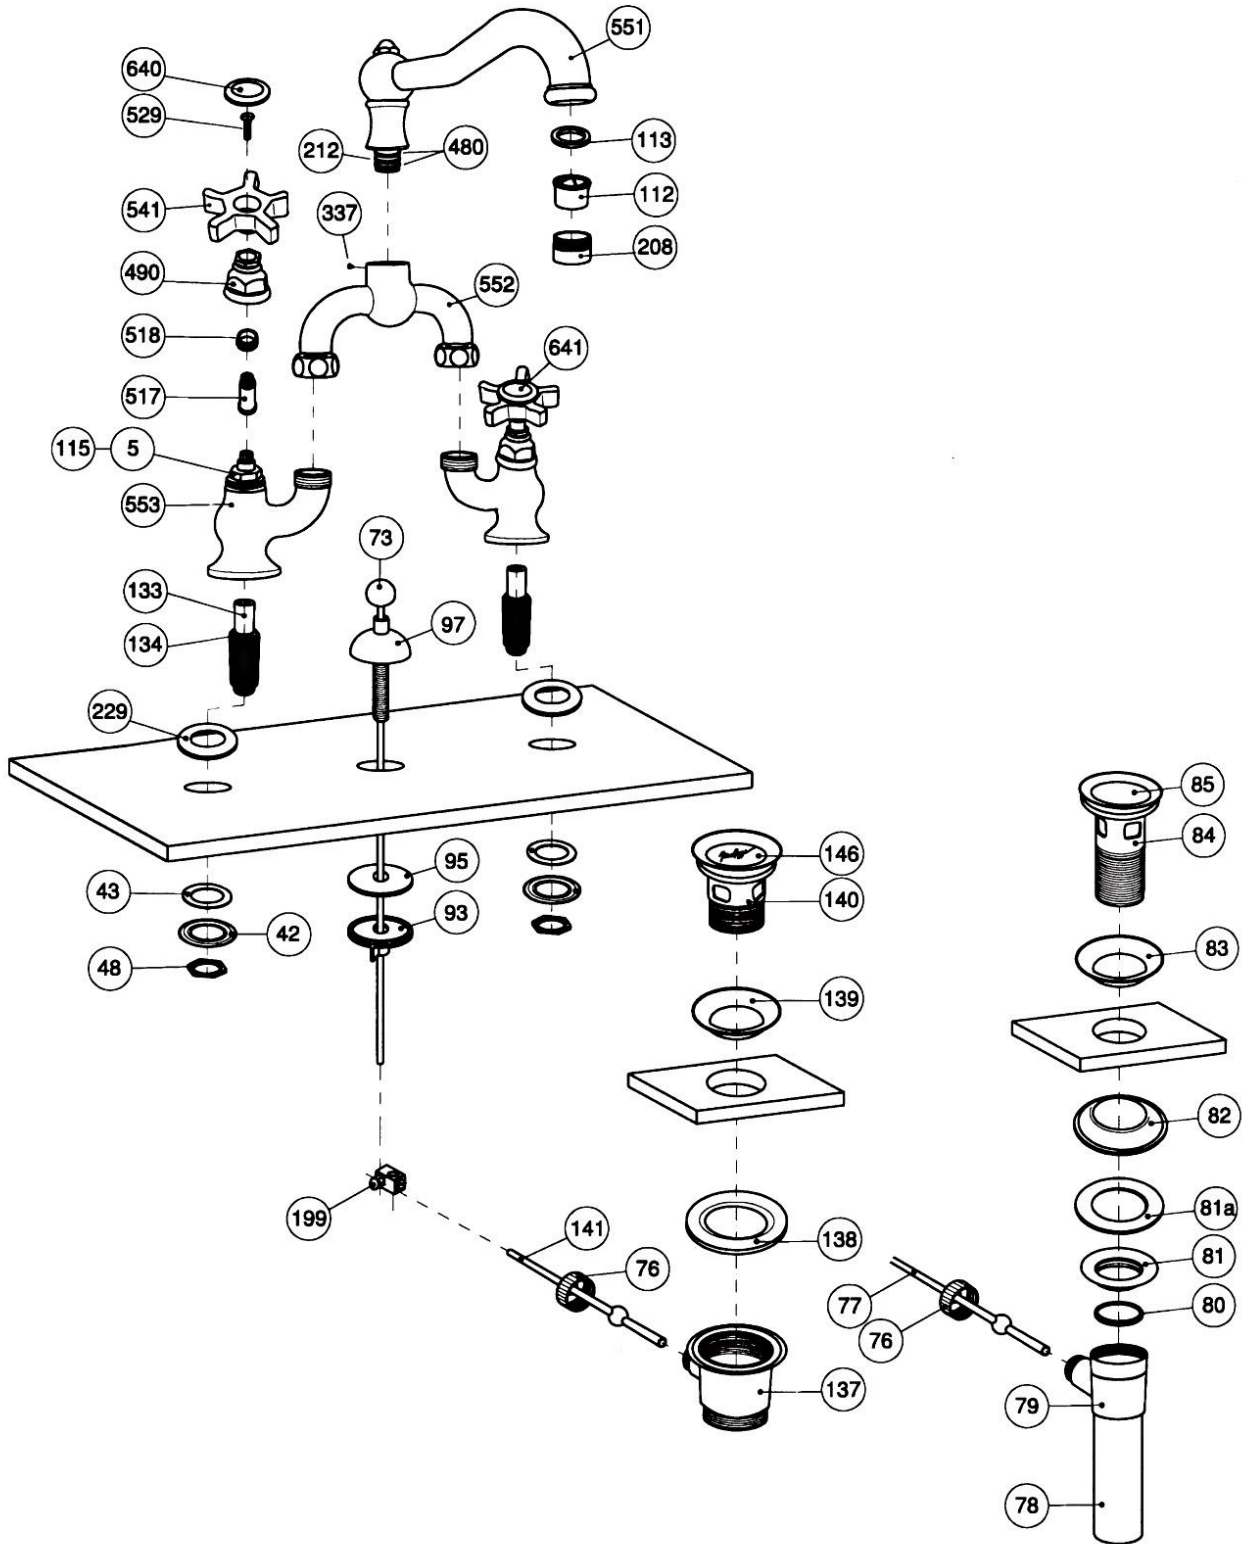

## Spare Parts list Model : Z1419

Pos.	Descrizione	Description	Cod.
5	Vitone ceramic disc	Ceramic disc valve	C7075
42	Disco inox 3/4"	Stainless steel disc 3/4"	C 7250.34
43	Guarnizione gomma 45x27x2	Rubber washer 45x27x2	C 7582
48	Controdado ottone G 3/4"	Brass lock nut G 3/4"	C 7260.34
73	Asta comando scarico con pomolo	Pop-up rod with knob	C 7308
76	Calotta zigrinata	Knurled nut	CSA C 7322 / C 7324
77	Asta con sfera	Rod with ball	CSA C 7324
78	Canotto	Pipe	CSA C 7324
79	Corpo scarico	Waste body	CSA C 7324
80	Guarnizione tenuta	Seal washer	CSA C 7324
81	Dado con flangia	Nut with flange	CSA C 7324
81A	Guarnizione	Washer	CSA C 7324
82	Guarnizione conica	Conical washer	CSA C 7324
83	Guarnizione sotto piletta	Under drain washer	CSA C 7324
84	Piletta	Drain	CSA C 7324
85	Tappo	Stopper	CSA C 7324
93	Controdado 12/19W con disco	Lock nut 12/19W with disc	C 7231
95	Guarnizione gomma 12x38x2	Rubber washer 12x38x2	C 7231
97	Cappuccio bombato	Rounded cap	C 7231
112	Aeratore 24x1	Aerator 24x1	C 7086
113	Guarnizione per aeratore 24x1	Washer for aerator 24x1	C 7086
115	Vitone ceramic disc sinistro	Ceramic disc valve left	C 7075SX
133	Sede	Seat	C 2517/2
134	O-ring Ø12.42x1.78	O-ring Ø12.42x1.78	C 7586.48
137	Corpo scarico 1 1/4"	Waste body 1 1/4"	C 7322
138	Guarnizione corpo scarico	Waste body washer	C 7322
139	Guarnizione sotto piletta	Under drain washer	C 7322
140	Piletta	Drain	C 7322
141	Asta con sfera	Rod with ball	C 7322
146	Tappo	Stopper	C 7321/1
199	Snodino per asta scarico	Articulated joint for pop-up waste rod	C 7332
208	Aeratore (M24x1)	Aerator (M24x1)	C 7083
212	O-ring Ø13.6x2.7	O-ring Ø13.6x2.7	C 7586.52
229	Guarnizione gomma 42x33x3	Rubber washer 42x33x3	C 7583.3
337	Vite M4x5	Screw M4x5	C 7546
480	Anello Ø19,6 H.2,9	Ring Ø19,6 H.2,9	C 7593.1
490	Coprivitone con premistoppa Dames Anglaises	Cover valve with nut Dames Anglaises	C 7223
517	Asta per coprivotone Dames Anglaises	Rod for head valve Dames Anglaises	C 7225
518	Anello teflon Ø 13 - Ø 15.4 h.6.5	Teflon ring Ø13 - Ø15.4 h.6.5	C 7627/6
529	Vite 3/16" x 10	Screw 3/16" x 10	C 7550/316
541	Corpo maniglia serie Dames Anglaises	Body only Dames Anglaises handle	C 7618/1
551	Bocca a colonna per gruppo ponte	Column spout for bridge faucet	C 7442
552	Crocera standard	Standard Cross	C 7429
553	Corpo laterale gruppo a ponte	Side body for bridge faucet	C 1419/1
640	Placchetta per maniglia "Caldo"	Plate for handle with indication "Hot"	C 7672P
641	Placchetta per maniglia "Freddo"	Plate for handle with indication "Cold"	C 7672P




## Care and Maintenance Instructions Model : Z1419


### Removing and replacing a handle

MODEL SHOWN :Z1419

- 1 ▪ Loosen and unscrew the retaining flange **A**, from the tap body.

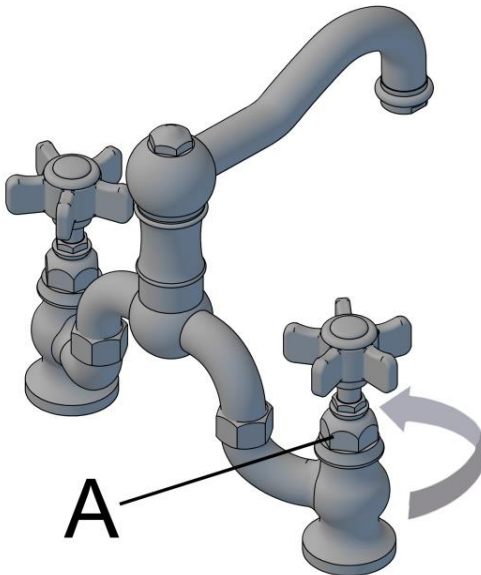

- 2 ▪ Once totally loose, simply remove the handle from cartridge spline.

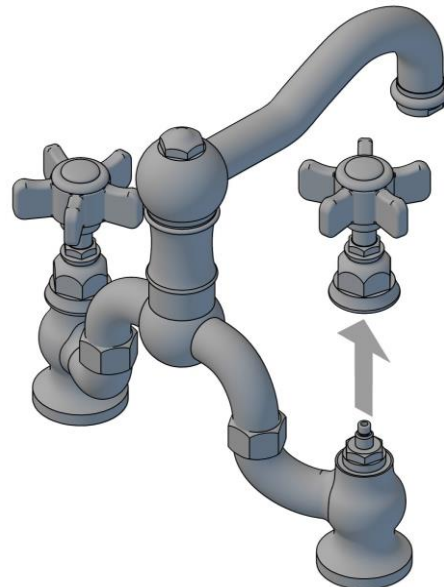

- 3 ▪ To reassemble, reverse the disassembly procedure, given above.  
▪ The retaining flange only needs to be hand tight.

**NOTE: DO NOT USE A SHIFTER TIGHTEN BY HAND ONLY !**

Do not over tighten as this could damage the ceramic cartridge!

**NOTE:** At any time, should the handle feel loose, retighten the retaining flange.

See our video: <https://youtu.be/PUBD3GHgg58>

#### Available replacement handles:

- El Capitan Handle
- 78 Mont Blanc Handle
- 78A Mont Blanc Antique Crackle
- 78B Mont Blanc Black

## Care and Maintenance Instructions Model : Z1419


### MAINTENANCE FOR ONE HOLE/TWO LEVER TAP WARE WITH TWO LEVER DESIGN

#### INSTRUCTIONS FOR REPLACEMENT OF THE HOT OR COLD CARTRIDGE

Do not replace the cartridge if there is low flow or no flow. Low flow or no flow is caused by obstruction or kinking of supply hoses.


1

- Turn off the hot and cold supply lines to the tap set. (Not shown).
- Remove the handle and retaining flange. Refer to "Removing and replacing a handle" section, page 7.

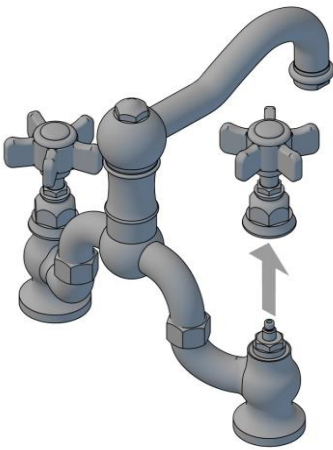


2

- Remove the cartridge with a smooth jawed 17mm shifter.

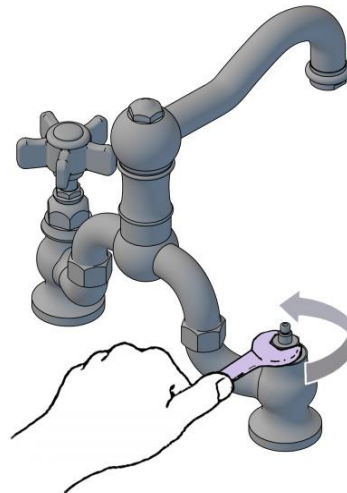


3

- Install new cartridge.
- Secure the cartridge with a smooth jawed shifter.

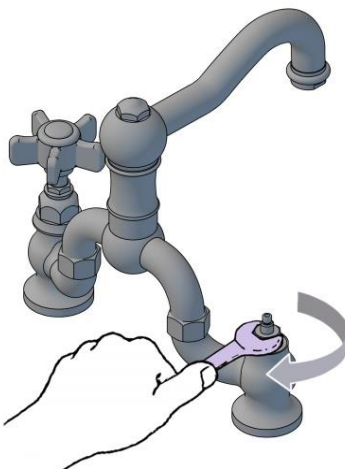

4

- Install lever and retaining flange. **DO NOT USE A SHIFTER TIGHTEN BY HAND ONLY!**
- Turn on supply line and test for leaks. (Not shown).

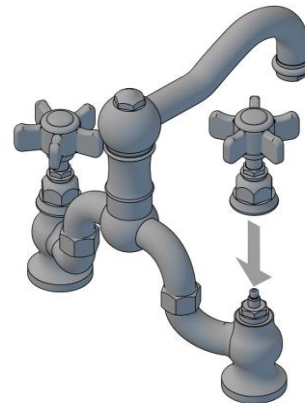

**Note:** Do not over tighten as this could damage the ceramic cartridge!

Continue.....


## Care and Maintenance Instructions Model : Z1419

### LOW FLOW OR NO FLOW TROUBLESHOOTING INSTRUCTIONS

Current bathroom taps have a max flow rate of 7 Litres per minute from the aerator and the hand spray.

If you are experiencing low flow from the spout: **Do not change the cartridge**

- Unscrew and clean the aerator -1
- Check the supply lines for kinks or obstructions-2
- Make sure the supply line stops are fully on. (Not shown.)

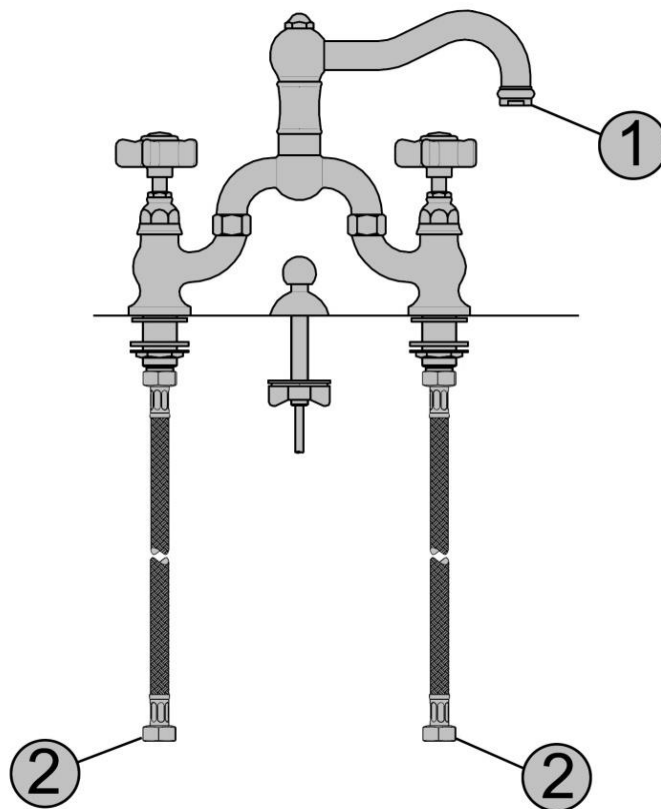

## Care and Maintenance Instructions Model : Z1419

---

### Care of external finishes

Nicolazzi products are all authentic finishes that have not been coated with any product. After each use, pat the fixture down to remove any excess water. This will prevent any water spotting or mineral build-up. Use only soft liquid soap and water to clean the surface. Use a soft brush to clean any gaps. Avoid any products that have ammonia or alcohol like Windex, Jif or Ajax. These products can damage the finish leaving black or white spots. Never use on abrasive products on tap ware or this will void the warranty.

Live Finishes DO NOT carry a warranty as they are living finishes and will change over time.

Raw Brass, Brush Brass (To make the brass lighter again rub the brass tap with lemon juice, this will lighten the dark colouring).

Shiny Brass, Polished Nickel has an ageing process and will tarnish over time.

Tuscan Brass is a living finish and also carries NO warranty. It will lighten with use. To extend the life of the finish, apply Bruno's Wax by patting it on, letting it dry and patting it off. Never rub or buff this finish.

**WARNING:** The use of cleaning products not recommended might irreparably harm the surfaces of the tap, which in such cases are not covered by our warranty.

### Lime scale build up

The tap is fitted with an aeration device in the Hot/Cold water outlet.

This may need occasional cleaning especially in hard water areas.

This is accomplished by unscrewing the outlet in a counter clockwise direction, dismantling and leaving the inner screen mesh immersed over night in vinegar