


USER GUIDE

Before assembling, be sure you have all parts and hardware.



BALANCE POSITION

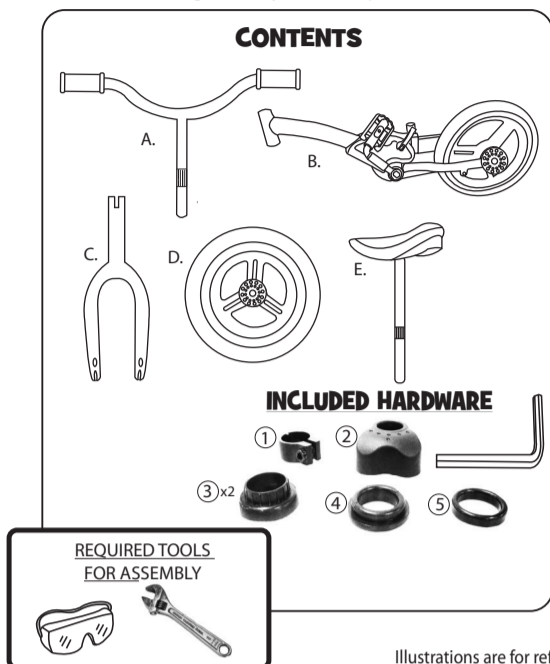

BIKE POSITION

Illustrations are for reference only. Styles may vary from actual contents.

IMPORTANT

- Read entire instructions carefully before assembling and riding this product.
- Keep these instructions for future reference.
- To prevent serious injury, children must not use the equipment until completely assembled.
- It is the responsibility of the parent to verify the bike has been properly assembled, and the child is properly trained and instructed in use of the bike before riding.
- This product is intended for outdoor domestic family use only.
- Periodically check that all fasteners and components are securely tightened.
- Do not attempt to modify or repair this product. For help contact Little Tikes Consumer Service.

WARNING: Adult assembly required. Choking hazard to children under 3 years – contains small parts prior to assembly.

WARNING: TO AVOID SERIOUS INJURY OR DEATH:

- Failure to properly assemble and maintain your bike could result in serious injury or death.
- Always wear a properly fitted helmet when riding this bike.
- Do not ride at night or in the dark.
- Do not ride in wet conditions.

SAFETY WARNINGS

WARNING:

READ AND FOLLOW ALL INSTRUCTIONS TO ENSURE A SAFE RIDE. Failure to read and understand all information in this manual increases risk of injury due to falls or other incidents. Riding a bike takes skill and must be learned under adult supervision. By riding this bike, users risk serious injury or death from collisions, falls or loss of control.

PARENTS: For your child's safety, it is your responsibility to ensure your child fully understands all warnings, cautions and instructions in this manual prior to riding the bike. Parental supervision is required at all times while your child is riding the bike. This unit is not a toy. Periodically review the information in this manual with young riders. Before each use, inspect the bike for any damage, and do not allow children to ride the bike if it is broken or damaged in any way. Properly maintain the bike in accordance with the instructions. Do not make modifications to the bike.

RIDER'S RESPONSIBILITY

WARNING:


NOT FOR USERS UNDER THE AGE OF 2. NOT FOR CHILDREN WITH A BODY MASS OF MORE THAN 23 KG. DO NOT EXCEED THE WEIGHT LIMIT OF 50 LBS (23 KG) - including backpacks and other heavy items when riding. Exceeding the weight limit could injure the rider and damage the unit. Keep this product away from children under the age of 2 and remember that this product is only intended for use by persons who are, at minimum, comfortable and competent while riding the unit.

- Check and understand the laws of bicycle usage in your area before riding.
- Before each ride, check that all bolts are secure and no components of the unit are broken.
- Periodically review this information and make sure that you and the rider understand all safety warnings and instructions.
- Do not let others ride until they have read this entire manual.
- Only one rider is permitted at a time.
- There are many different types of bicycles and each are designed for different uses. Make sure you know the type of bike you have purchased and do not exceed its service limitations.
- Be sure to check and fully understand the bicycle classifications set forth, including size of the unit that is proper for the rider to insure good control when riding.

CHILDREN'S BIKES: These bikes are intended for use by children in safe areas with riding surfaces that are in good condition and free of traffic. Children must always ride within their abilities under parental supervision and should wear a safety helmet and other safety gear at all times.

WARNING: AS WITH ALL MECHANICAL COMPONENTS, THE BICYCLE IS SUBJECTED TO WEAR AND HIGH STRESSES. DIFFERENT MATERIALS AND COMPONENTS MAY REACT TO WEAR OR STRESS FATIGUES IN DIFFERENT WAYS. IF THE DESIGN LIFE OF A COMPONENT HAS BEEN EXCEEDED, IT MAY SUDDENLY FAIL, POSSIBLY CAUSING INJURIES TO THE RIDER. ANY FORM OF CRACK, SCRATCHES OR CHANGE OF COLORING IN HIGHLY STRESSED AREAS INDICATE THAT THE LIFE OF THE COMPONENT HAS BEEN REACHED AND SHOULD BE REPLACED.

CAUTION: ALWAYS WEAR A PROPERLY FITTED HELMET WHEN YOU RIDE YOUR BICYCLE. DO NOT RIDE AT NIGHT. AVOID RIDING IN WET CONDITIONS.

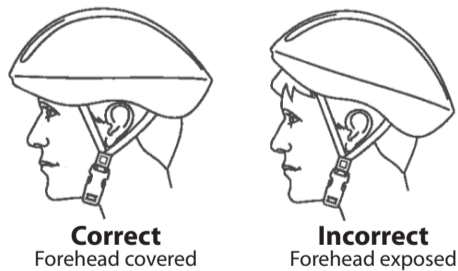

WARNING:

READ AND FOLLOW THESE RULES OF THE ROAD

In the interest of safe cycling, make sure you read and understand the owner's manual. In this manual you will find **DANGER, WARNING, CAUTION, IMPORTANT** or **NOTICE**. These are important signal words telling you to pay special attention to that text as rider safety is involved. **DANGER** and **WARNING:** Pay special attention to these since failure to do so could result in injury or death to the rider or others. **CAUTION:** If not followed, these instructions could result in injury, or mechanical failure or damage to the bicycle. **NOTE** or **NOTICE** or **IMPORTANT:** These specify something that is of special interest. **CAUTION** Before you ride the bicycle, check the brake and other parts of the bike. Make sure all parts are tightened, assembled correctly and working properly.

SAFETY WARNINGS

Take your first ride in a large, open, level area. If you have a problem, check the assembly instructions and follow the maintenance procedures in this book. If you do not feel comfortable with your skills in assembling or adjusting the bike, please take it to a professional bike repairman.

- Adult Supervision Required.
- Protective equipment should be worn.
- Not to be used in traffic.
- Not intended for use on public roads.

WARNING:

1. The condition of the riding surface is very important. If the surface is wet, or has sand, leaves, small rocks or other loose debris on the surface where you plan to ride, carefully decrease the speed of the bicycle and ride with extra caution. It will also take a longer time and more distance to stop. Apply the brake earlier than normal and with less force, rear brake followed by the front brake, if equipped, to help keep the bicycle from sliding or falling.
2. Also wear shoes when riding a bicycle and avoid loose fitting clothes. Long sleeves, long pants, gloves, eye protection, a good helmet, elbow and knee pads are recommended. Helmet use is required by law in many states and is always a good idea.
3. **CAUTION: WET WEATHER WARNING:** Check your brakes frequently. The ability to stop is critical. Pavement can be slippery in wet weather so avoid sharp turns and allow more distance for stopping. Brakes may become less efficient when wet. Leaves, loose gravel and other debris on the road can also affect stopping distance. **DO NOT RIDE IN WET CONDITIONS.** Vision and control are impaired, creating a greater risk of accidents and injury.
4. **CAUTION:** A bicycle rider's best defense against accidents is to be alert to road conditions and traffic in the area. Do not wear anything that restricts your vision or your hearing. Ride at a safe speed. Watch for cars.
5. When riding, **ALWAYS WEAR A CPSC APPROVED BIKE HELMET.**

6. Never carry passengers or packages. This is dangerous and it makes the bicycle harder to control.
7. Always be alert. Animals or people may dart in front of you. Give pedestrians the right-of-way. Don't ride too close to pedestrians, and don't park your bicycle where it can get in the way of foot or vehicle traffic.
8. Never stunt ride or jump on your bike. Avoid head-on impacts with curbs and other fixed objects.
9. Do not ride your bicycle if the chain cover is not attached, or if any of the bicycle's mechanical systems are not functioning properly.
10. If any components become loose while riding, **STOP!!** Immediately and tighten or bring to a mechanic for repair.

BEFORE RIDING:

Your new bike was assembled and tuned in the factory and then partially disassembled for shipping. The following instructions will enable you to prepare your bicycle for years of enjoyable cycling. For more details on inspection, maintenance and adjustment of any parts of the bicycle, please refer to the relevant sections in this manual. **If you have questions about your ability to properly assemble this bicycle, please consult a professional bicycle mechanic before riding.**

WARNING:

TO AVOID INJURY, THIS PRODUCT MUST BE PROPERLY ASSEMBLED BEFORE USE. WE STRONGLY RECOMMEND THAT YOU REVIEW THE COMPLETE ASSEMBLY GUIDE AND PERFORM CHECKS SPECIFIED IN THE OWNER'S MANUAL BEFORE RIDING.

NECESSARY TOOLS:

- 5/6mm hex wrench (included)
- 6" adjustable wrench (NOT included)

SAFETY WARNINGS

BEFORE EVERY RIDE:

Just a minute spent before each ride can significantly improve your safety and the enjoyment of your ride. So, **each time** before you ride, make a habit of performing the following safety checks.

- Stand in front of the bicycle facing rearward and hold the front wheel securely between your legs. Try to twist the handlebars and verify that they do not move. Then pull the handlebars up, trying to lift the bike. There should be no movement of these components.
- Try to push the front wheel from side to side in the fork and confirm that it feels right and will not wobble. Lift the front wheel up by the handlebars and strike the wheel downward with the heel of your hand and confirm that it is tight. Spin the front wheel and confirm that it does not wobble or contact the fork or brake pads.
- Try to lift, push down on and twist the seat to confirm that it is tight.
- Look at the connections of the pedal to the crank arm. The pedal should feel firm.
- Apply your brake(s) and make sure that they feel firm to the touch, and then spin the wheel(s). Apply the brakes. They should stop the wheel(s).

Now, put on your **bicycle safety helmet** and enjoy your ride. Your safety is well worth **just a minute**. Also, be sure to read and follow the warnings and instructions in the Assembly, Maintenance and other sections of this manual.

MAINTENANCE

Regularly examine all parts for wear or damage before use.

- Before each ride, check for cracks or other damage to the bike.
- Check all hardware such as bolts, nuts, cables, fasteners and other parts to ensure they are secure and properly assembled. If you hear any rattling from loose parts, the unit is damaged and should not be used.
- Immediately replace any damaged, missing, or badly worn parts with original equipment.
- Only use parts and accessories approved by the manufacturer and included with the product at the point of sale. Other accessories are not approved for use with the bike and could damage the unit or cause injury to the rider.

MAINTENANCE CHECKLIST

Before every ride:

- Check wheel and pedal tightness
- Check brake operation
- Make sure all fasteners are tightened

After every ride:

- Quick wipe down with damp cloth
- #### Monthly:
- Check brake adjustment (if applicable)
 - Check tire wear
 - Check that wheels are true
 - Check hub, head set and crank bearings for looseness
 - Check pedals and handlebars are tight
 - Check seat and seat post are tight and comfortably adjusted
 - Check frame and fork are true
 - Check all nuts and bolts are tight

COASTER BRAKE

It is not necessary to assemble any part of your coaster brake, but it is important to understand how your coaster brake works.


OPERATION:

Push the pedals backward to move the chain backward. The chain activates the coaster mechanism that is inside the rear hub. As you push the pedals backward with increasing force, the braking action of the coaster increases. If your bicycle has a caliper brake(s) in addition to the coaster brake, always use the coaster brake as the main brake to stop the bike.

FITTING THE RIDER TO THE BICYCLE

To determine the correct size of bicycle for the rider:

- Straddle the assembled bike with feet shoulder width apart and flat on the ground.
- There must be at least 1 inch (2.5 cm) of clearance (1) between the highest part of the top tube (2) and the crotch of the rider with tires properly inflated.
- The minimum leg-length for the rider is the highest part of the top tube plus one inch (3).

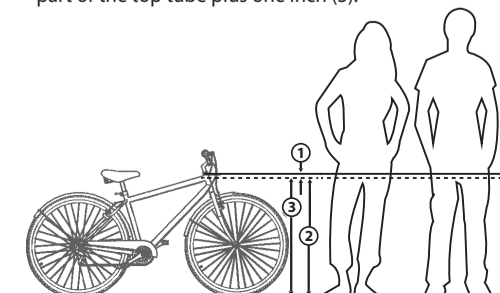


(Bike shown for reference only.)




TIP: a storage location for the Allen wrench can be found on the back side of the chain case, so it's always at the ready.


ASSEMBLY

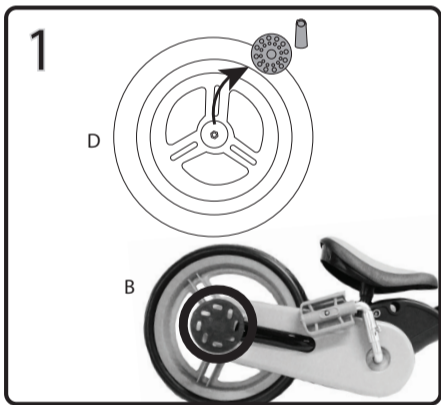


Remove and discard the wheel nut protectors on the front (D) and rear (B) wheels.

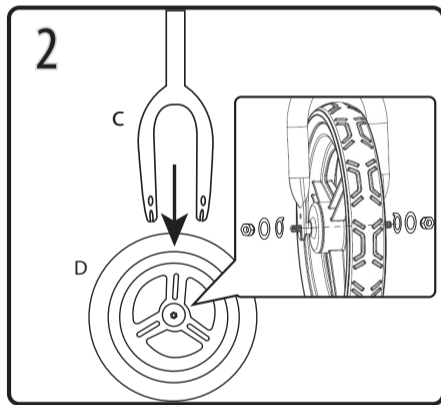


Remove the nut, washer and metal pin from each side of the wheel (D), then insert the fork (C) over the wheel. Replace a metal pin, a washer and a nut, in that order, to each side of the wheel.

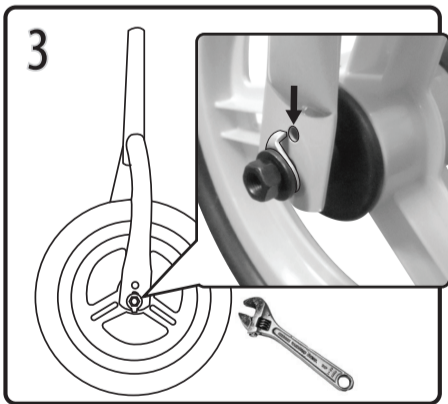


Insert the metal pin into the hole above the axle on the fork. Do the same for the other side. Then, tighten the nuts with a wrench (not included) to secure the fork in place.

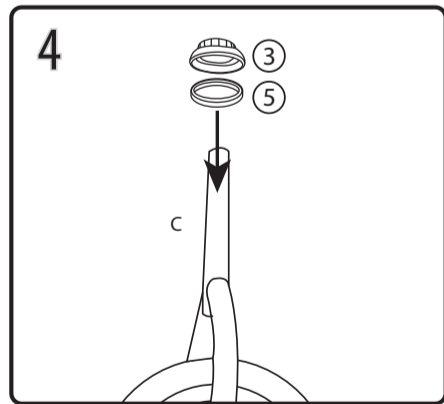

Slide bearing (5) and bearing cup (3) over the top of the fork (C).

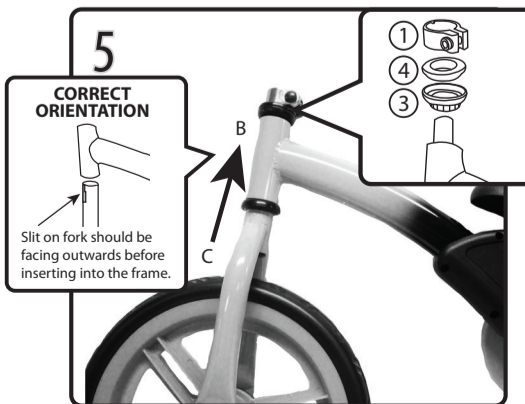


Slide the fork (C) into the bottom of the frame (B). Then, slide the bearing cup (3), bearing (4) and clamp (1) over the top and onto the frame.

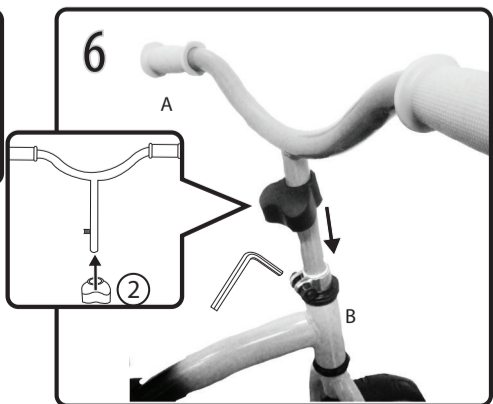

Insert the clamp protector (2) into the handlebar (A). Insert the handlebar into the frame (B). Adjust the height of the handlebar and tighten the clamp with the Allen wrench. Then, lower the clamp protector over the clamp.

ASSEMBLY CONTINUED

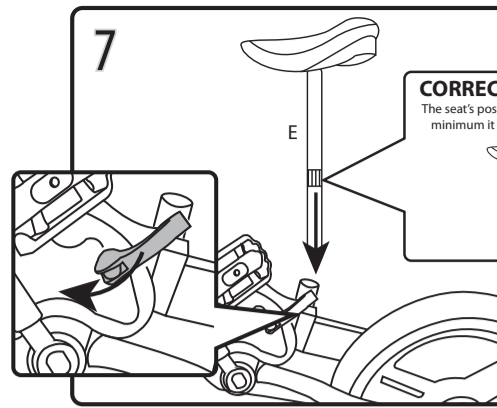

CORRECT PLACEMENT
The seat's post has a mark to indicate the minimum it should go into the frame.

Open the seat clamp on the frame (B) and insert the seat (E). Adjust the height of the seat and then close the clamp to lock in place.




If the seat moves while the seat clamp lever is in the locked position, unlock the lever, tighten the thumb nut (as indicated by arrow), then relock the lever.

BIKE POSITION


RIGHT PEDAL



Unhook the right pedal from the clip.

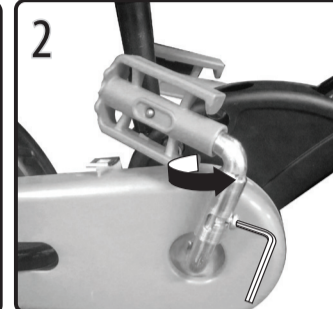


Rotate the pedal arm out until it locks in place.
TIP: If the pedal arm is tight and won't rotate, loosen the screw 1/4 turn with the Allen wrench. Tighten after rotating pedal arm.

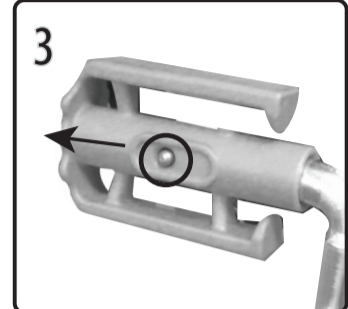


Push in the button on the center of the pedal to slide it out so that the pedal can rotate.


LEFT PEDAL

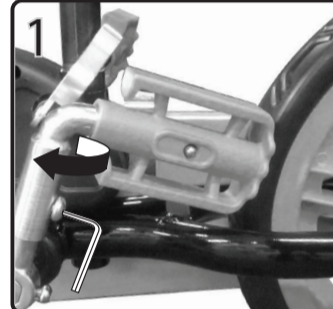

Rotate the pedal arm out until it locks in place.
TIP: If the pedal arm is tight and won't rotate, loosen the screw 1/4 turn with the Allen wrench. Tighten after rotating pedal arm.

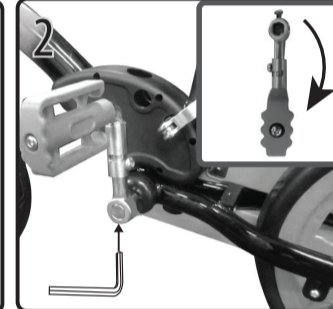


Use the Allen wrench to loosen the bolt 3 full turns. Remove the pedal arm and rotate 180 degrees. Then, reattach the arm and tighten the bolt.

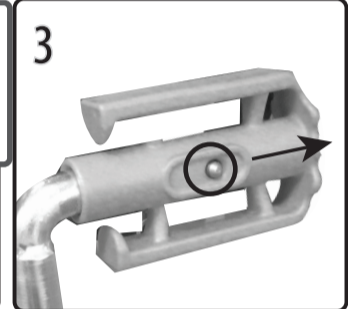


Push in the button on the center of the pedal to slide it out so the pedal can rotate.

BALANCE POSITION

RIGHT PEDAL

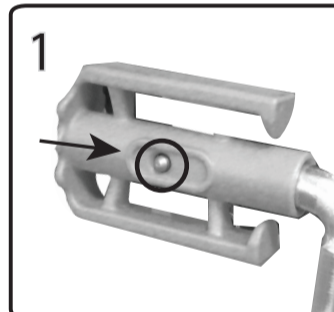

Slide in the pedal until the buttons snaps back in place.

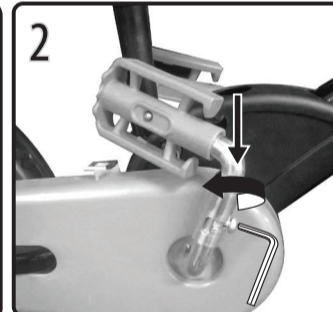

Loosen the screw 1/4 turn with the Allen wrench. Push down the pedal arm and rotate into the frame. Then, tighten the screw.




Lock the pedal into the clip.


TROUBLESHOOTING: If the rear wheel gets stuck when going in reverse after locking the pedal into the clip, follow the below steps:

1. Unhook the pedal from the clip.
2. Rotate the pedal arm out until it locks into place.
3. Rotate the pedal forward about 45 degrees.
4. Rotate back and lock pedal into the clip.


LEFT PEDAL

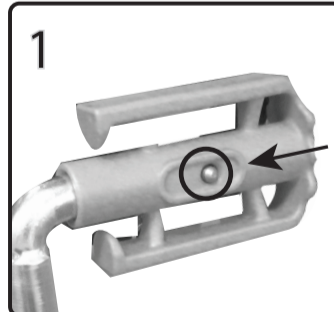

Slide in the pedal until the buttons snaps back in place.

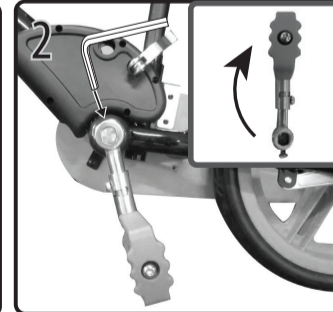

Use the Allen wrench to loosen the bolt 3 full turns. Remove the pedal arm and rotate 180 degrees. Then, reattach the arm and tighten the bolt.

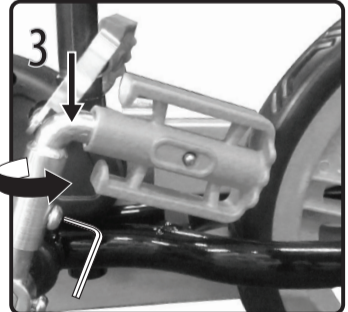

Loosen the screw 1/4 turn with the Allen wrench. Push down the pedal arm and rotate into the frame. Then, tighten the screw.

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. U.S.A. and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. Outside U.S.A. and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please keep this manual as it contains important information.



Printed in China
1119-2-C
Little Tikes Consumer Service
2180 Barlow Road Hudson, Ohio 44236
U.S.A.
1-800-321-0183

© The Little Tikes Company, an MGA Entertainment company.
LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton
Keynes, MK8 0ES, Bucks, UK
0800 521 558

MGA Entertainment (Netherlands) B.V.
Klipperak 201, 2411 ND Bodegraven, NL
Tel: +31 (0) 172-758 038
E-mail: klantenservice@mga.com



Imported by MGA Entertainment
Australia Pty Ltd
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676