

KEEP FOR FUTURE REFERENCE

SERVICE MANUAL



908 W. Main • P.O. Box 368
Laurel, MT USA 59044
800-548-7341 (phone)
406-628-8231 (phone)
406-628-8354 (fax)
www.WPG.com

 **INTENDED FOR USE BY SKILLED
TECHNICAL PROFESSIONALS • READ
AND UNDERSTAND BEFORE SERVICING**



**1 SCFM
NOMINAL AIRFLOW
SINGLE VACUUM SYSTEM
DC-VOLTAGE POWER SYSTEM
WITH MANUAL VALVE**

Stock number: 36110



TABLE OF CONTENTS

BEFORE SERVICING LIFTER	2
SERVICE SCHEDULE	2
SERVICE FEATURES	3
SERVICE PROCEDURES.....	4
AIR FILTER MAINTENANCE – 1 OZ BOWL SIZE	4
Filter Service Procedure.....	4
VACUUM PUMP MAINTENANCE – MODEL DV1032102	6
Replacing the Diaphragm.....	6
Replacing the Head Assembly.....	6
VACUUM SWITCH ADJUSTMENT.....	7
REPLACEMENT PARTS.....	8

BEFORE SERVICING LIFTER



Disconnect battery before servicing lifter.



Disconnect the electrical connectors (figs. 1A-C).

Service personnel must read and understand the lifter's *OPERATING INSTRUCTIONS* – especially the “INSPECTIONS AND TESTS” and “MAINTENANCE” sections – before servicing the vacuum lifter. Many of the following discussions assume knowledge of the *OPERATING INSTRUCTIONS*.

Note: Wiring and/or hose-routing diagrams are provided in the final section of this SERVICE MANUAL for reference when servicing or troubleshooting the lifter.


SERVICE SCHEDULE

Service must be performed whenever a deficiency is indicated by routine inspections or tests. Follow the “INSPECTIONS AND TESTS” section of the *OPERATING INSTRUCTIONS*. Any service warranted must be performed before resuming normal operation of the lifter.

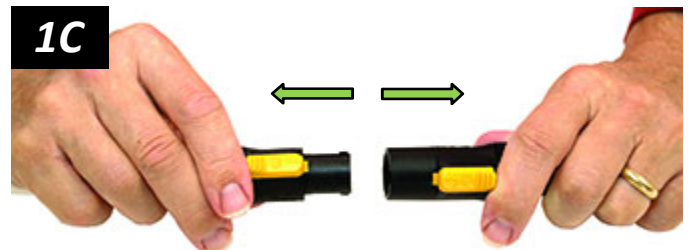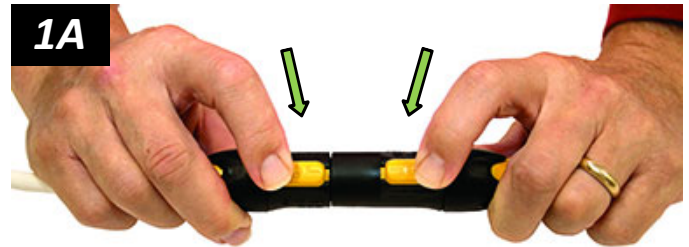

SERVICE FEATURES

Components shown here are underlined> on their first appearance in each section to follow.

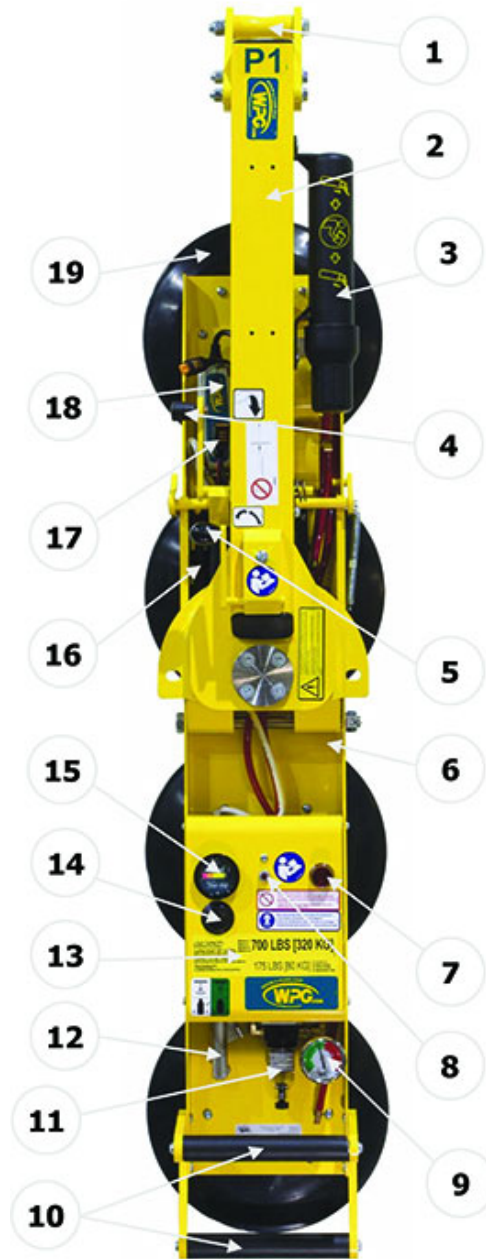

P11104DC shown (component locations vary among models)

- | | | |
|----------------------------|--|--|
| 1 LIFT POINT | 8 BATTERY TEST BUTTON | 14 LOW VACUUM WARNING BUZZER
(optional) |
| 2 LIFT BAR | 9 VACUUM GAUGE | 15 BATTERY GAUGE |
| 3 INSTRUCTIONS CANISTER | 10 CONTROL HANDLES | 16 BATTERY |
| 4 TILT RELEASE LEVER | 11 AIR FILTER | 17 BATTERY CHARGER |
| 5 ROTATION RELEASE LEVER | 12 VALVE HANDLE | 18 VACUUM RESERVE TANK |
| 6 PAD CHANNEL | 13 Enclosure with VACUUM PUMP
and VACUUM SWITCH | 19 VACUUM PAD |
| 7 LOW VACUUM WARNING LIGHT | | |

SERVICE PROCEDURES

AIR FILTER MAINTENANCE – 1 OZ BOWL SIZE

! *Inspect each air filter regularly, and service when necessary.*

Immediately remove liquid or other contaminants found in the filter bowl (A in fig. 1A), to prevent contact with the filter element (C in fig. 2A).

⊘ *Never use bowl drain (circled in fig. 1A) to remove liquid, because this could cause air leak.*

Replace the filter element whenever:

- It has an overall dirty appearance.
- There is a noticeable increase in the time required to attain full vacuum.

Filter Service Procedure



1) Unscrew the bowl (item A in fig. 1A) from the body (item B in fig. 1A) of the air filter.

Note: To protect air-line fittings from damage, hold the body while turning the bowl.

2) Determine whether the filter element (item C in fig. 2A) needs to be replaced (see above).

- *If so, proceed to step 3.*
- *If not, remove any liquid or contaminants from the bowl; clean the old bowl seal (see step 4 on next page) with mild soap and water; and skip to step 6.*

3) Carefully unscrew the element holder (item D in fig. 3A) and remove all internal parts (fig. 3B).

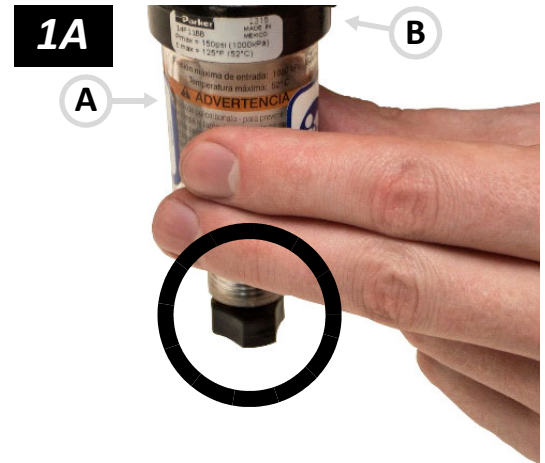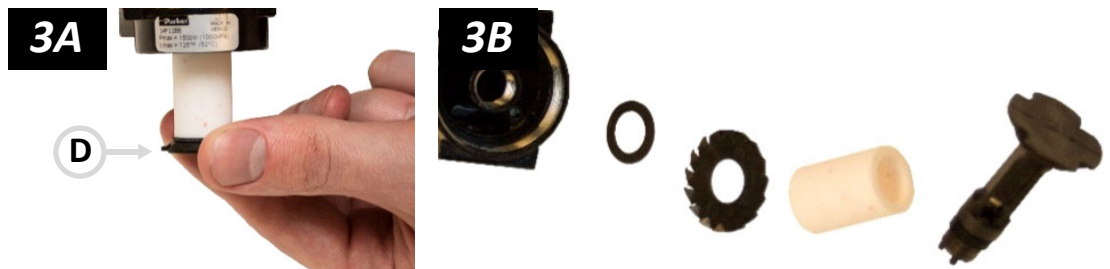

SERVICE PROCEDURES

- 4) Identify the parts in the Filter Element Kit (#16134), including the element (item A in fig. 4A), element holder (B), lubricant (C), deflector (D), element gaskets (E), bowl seal (F). Then dispose of the corresponding old parts.



- 5) Place the new element gaskets, element and deflector on the element holder as shown in fig. 5A. Then screw the assembly back into the filter body.



Note: Tighten gently – finger-tight.

- 6) Clean the bowl, using mild soap and water only.

Caution: Do not use any other cleaning agents.

- 7) Lubricate the new or cleaned bowl seal using a mineral-based oil or grease, such as that provided in the filter element kit.

Caution: Do not use synthetic oils, such as esters, and do not use silicones.

Then place the bowl seal around the rim of the bowl.

- 8) Screw the bowl back into the body. Hand-tighten only.

Caution: Do not contaminate the filter element with lubricant from the bowl seal.

Perform the “Vacuum Test” to be certain the air filter does not leak (see “INSPECTIONS AND TESTS: TESTING” in the lifter's *OPERATING INSTRUCTIONS*).

Note: Repeat this procedure for any other filter of the same type.

SERVICE PROCEDURES


VACUUM PUMP MAINTENANCE – MODEL DV1032102



**Disconnect power source
before proceeding.**

If the vacuum pump takes too long to attain full vacuum, replace the diaphragm or the head assembly as necessary to obtain acceptable pump performance (see “REPLACEMENT PARTS”).

Caution: Do not overtighten the head screws, because this may damage the threads in the pump body.

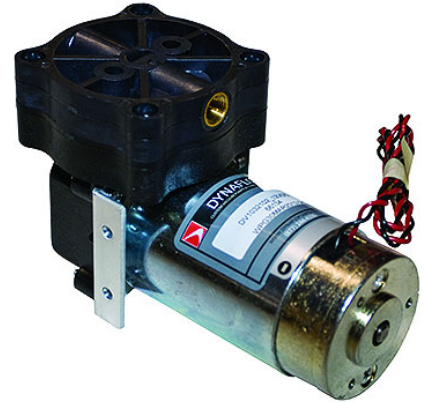


Replacing the Diaphragm

- 1) Remove the four head screws (item 1 in fig. 1A) and lock washers (item 2), and remove the head assembly (item 3).
- 2) Remove the diaphragm retaining screw (item 4), diaphragm (item 5), rubber O-ring (item 6) and flat washer (item 7). Be sure to note the diaphragm orientation for reassembly.
- 3) Replace the flat washer, rubber O-ring, diaphragm and diaphragm retaining screw.
- 4) Reverse these steps to reassemble the pump.

Replacing the Head Assembly¹

- 1) Remove the hose fittings from the head assembly, and carefully clean the threads. Be sure to note the fitting locations for reassembly.
- 2) Remove the four head screws (item 1 in fig. 1A), lock washers (item 2) and head assembly (item 3).
- 3) Replace the head assembly (reverse *step 2*).
- 4) Reinstall the hose fittings, using an appropriate thread sealant.

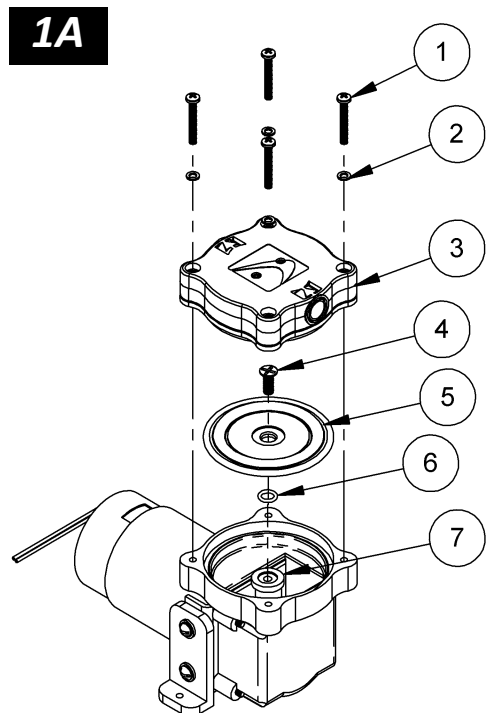

- 1 HEAD SCREW
- 2 LOCK WASHER
- 3 HEAD ASSEMBLY (#66197AA)
- 4 DIAPHRAGM RETAINING SCREW
- 5 DIAPHRAGM (#66197AM)
- 6 RUBBER O-RING
- 7 FLAT WASHER

1..... **Caution:** Depending on the product, the head assembly (3) may be rotated to an orientation different from the one shown. When removing the head assembly, always take note of its orientation and install it the same way during reassembly.

SERVICE PROCEDURES

VACUUM SWITCH ADJUSTMENT

The vacuum switch turns the vacuum pump on and off as needed to maintain sufficient vacuum for lifting the maximum load weight, as shown on the vacuum gauge (see “OPERATION: To ATTACH THE PADS TO A LOAD: Reading the Vacuum Gauge” in *OPERATING INSTRUCTIONS*).¹

If the switch is adjusted correctly, the pump turns off only *after* vacuum becomes sufficient for lifting; and turns on again *before* vacuum becomes insufficient for lifting.² Adjust the vacuum switch when necessary:




Lifting capacity decreases whenever vacuum switch is adjusted to maintain lower vacuum level.

- 1) Use the 1/4" open-end wrench provided to turn the adjustment screw (circled in fig. 1A) about 1/6th turn at a time:

- To *increase* the vacuum level maintained by the lifter, turn the screw *counterclockwise* (fig. 1B).
- To *reduce* the vacuum level maintained by the lifter, turn the screw *clockwise* (fig. 1B).

- 2) Recheck pump activity in relation to the vacuum level.³ Continue to make incremental adjustments until the vacuum switch is functioning correctly.

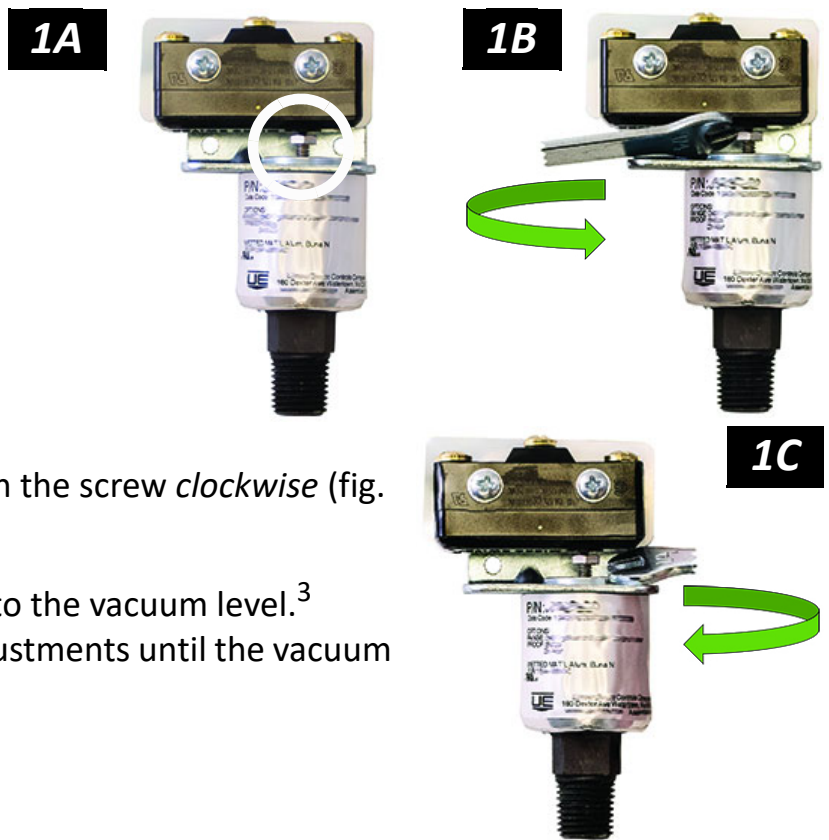

1..... The low vacuum warning light turns on and off along with the vacuum pump, to signal a vacuum loss. If the warning light does not turn on, replace the bulb.

2..... In order to observe lifter functions while vacuum is decreasing, it may be necessary to create a controlled leak in the vacuum system.

3..... In order to test the adjustment accurately, release the vacuum pads completely before reattaching them to a test surface.

REPLACEMENT PARTS

Stock No.	Description	Qty.
93220	Vacuum Pump – Diaphragm Type – 1-SCFM [28 liters/minute] – 12 V DC (DynaFlo)	1
93215	Air Filter/Vacuum Control Valve w/Handle and Fittings (for MRT4)	1
93214	Vacuum Control Valve w/Handle and Fittings (for other models)	1
66197AM	DynaFlo Pump Diaphragm Kit	1
66197	DynaFlo Pump Head Assembly	1
65211	Check Valve – 1/8 NPT	1
64752	Audio Alarm – 5-15 V DC – Panel Mount (for optional low vacuum warning buzzer)	1
64716	Battery Charger – 0.8 Amp – 240 V AC – Australian Type	1
64715	Battery Charger – 0.8 Amp – 240 V AC	1
64714	Battery Charger – 0.8 Amp – 100 / 120 V AC	1
64707AU	Battery Charger – 1 Amp – 240 V AC – Australian Type (for FL1-DC)	1
64706EU	Battery Charger – 1 Amp – 240 V AC (for FL1-DC)	1
64702US	Battery Charger – 1 Amp – 100 / 120 V AC (for FL1-DC)	1
64664	Battery – 12 V DC – 7 Amp-Hours	1
64590	Battery Gauge	1
64460	Circuit Breaker – 15 A	1
64283	Bulb – 13 V – Bayonet (for low vacuum warning light)	1
64251	Red Indicator Light – 12 V DC (aka, low vacuum warning light)	1
64236	Vacuum Switch – 1/4 NPT	1
64230	Roller-Lever Switch	1
64200	Push-Button Switch (for battery test button)	1
59086NC	Battery Connector – Twin Lead – DC / 1 SCFM	1
54392NC	Battery Connector – Twin Lead (for FL1, Powr-Frame, MT and MT1)	1
54390NC	Power Lead	1
20270	1/4" [6.4 mm] Open-End Wrench (for adjusting vacuum switch)	1
16134	Filter Element Kit (for 1 oz [30 ml] bowl size air filter)	1
15910	Vacuum Gauge – 1/8 NPT – CBM Type	1

See lifter's **OPERATING INSTRUCTIONS** for additional parts.

**SERVICE ONLY WITH IDENTICAL REPLACEMENT PARTS,
AVAILABLE AT WPG.COM OR THROUGH AN AUTHORIZED WPG DEALER**


WIRE LEGEND: CONTROLLED BY WIRING SYMBOLS DRAWING EXCEPT AS NOTED AND BELOW.
 LINE STYLES AND WIDTHS FOR WIRE UNLESS NOTED OTHERWISE.
 --- 14AWG --- N/A
 --- 16AWG --- 16AWG
 --- 20AWG --- 20AWG

TYPE: **STANDARD**
 DIRECTORY: H:\Working\STD\705-DCP\UECN 3011\705-W01 [D-W01]
 THIS DRAWING IS THE PROPERTY OF **WOOD'S POWR-GRIP CO., INC.** LAUREL, MONTANA U.S.A.
 IT IS LOANED WITH THE UNDERSTANDING THAT NEITHER IT NOR ANY INFORMATION CONTAINED THEREIN WILL BE COPIED, PUBLISHED OR TRANSMITTED TO OTHERS WITHOUT EXPRESS WRITTEN PERMISSION.



NOTES:
 1) 16AWG OR 20AWG WIRE, BASED ON VACUUM PUMP USED.

1 SCFM DC VACUUM PACKAGE
 N/A
 PIEZOELECTRIC BUZZER WIRING DIAGRAM
 D705-W01 [D-W01]

DRAWN: L. RENNER
 DATE: 06/04/2003
 CHECKED: *dl*
 APPROVED: *Allen*
 SCALE: NONE
 REV: 4
 ECN NUMBER: 3011
 DATE: 11/14/2012
 BY: RAS
 EST. WEIGHT: N/A

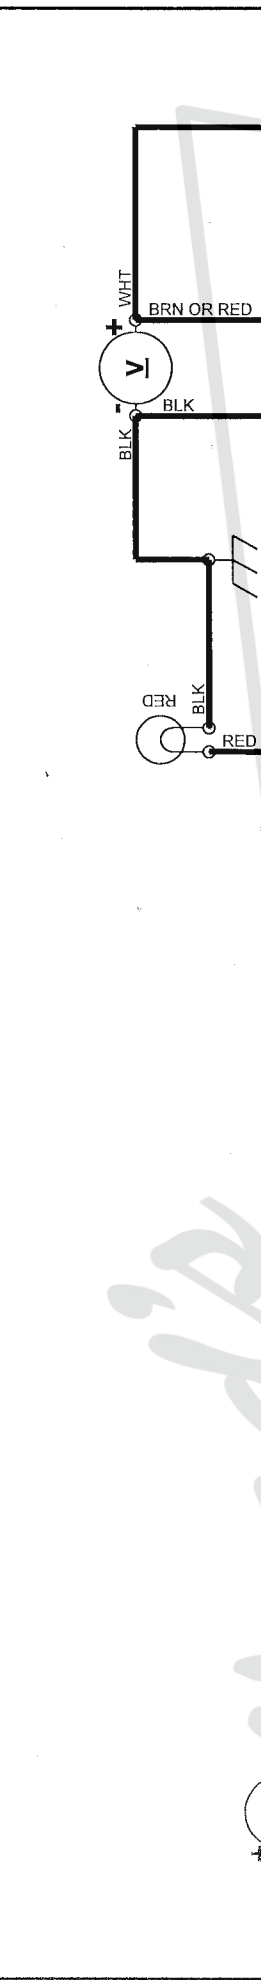

TOLERANCES: CONTROLLED BY STANDARD D105C001 EXCEPT AS NOTED AND LISTED BELOW.		FILE DIRECTORY: 705- W04 [W04]	
DECIMAL X.XX ± N/A	ANGULAR X° ± N/A	TYPE: STANDARD	
FRACATIONAL X/XX ± N/A	Ø 1" ± N/A	THIS DRAWING IS THE PROPERTY OF WOOD'S POWER-GRIP CO., INC. LAUREL, MONTANA U.S.A.	
Ø X.XXX ± N/A	Ø 1" ± N/A	INFORMATION CONTAINED HEREIN WILL BE COPIED, PUBLISHED OR TRANSMITTED TO OTHERS WITHOUT EXPRESS WRITTEN PERMISSION.	
Ø X.XXX ± N/A	Ø 1" ± N/A	1 SCFM DC VACUUM PACKAGE	
UNITS: INCHES (MILLIMETERS). DO NOT SCALE.	DATE: 10/10/2016	N/A	
PRODUCT MANAGER: KEITH B.	CHECKED: <i>al</i>	CHARGER WIRING SCHEMATIC	
	APPROVED: <i>amr</i>	D705-W04 [W04]	
		SIZE: A	SCALE: NONE
		REVISION: 01.A	ECN NUMBER: 4151
		ECN DATE: 10/10/2016	ECN BY: JAC
			EST. WEIGHT: N/A

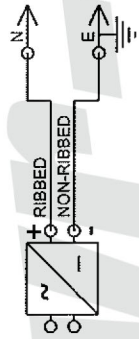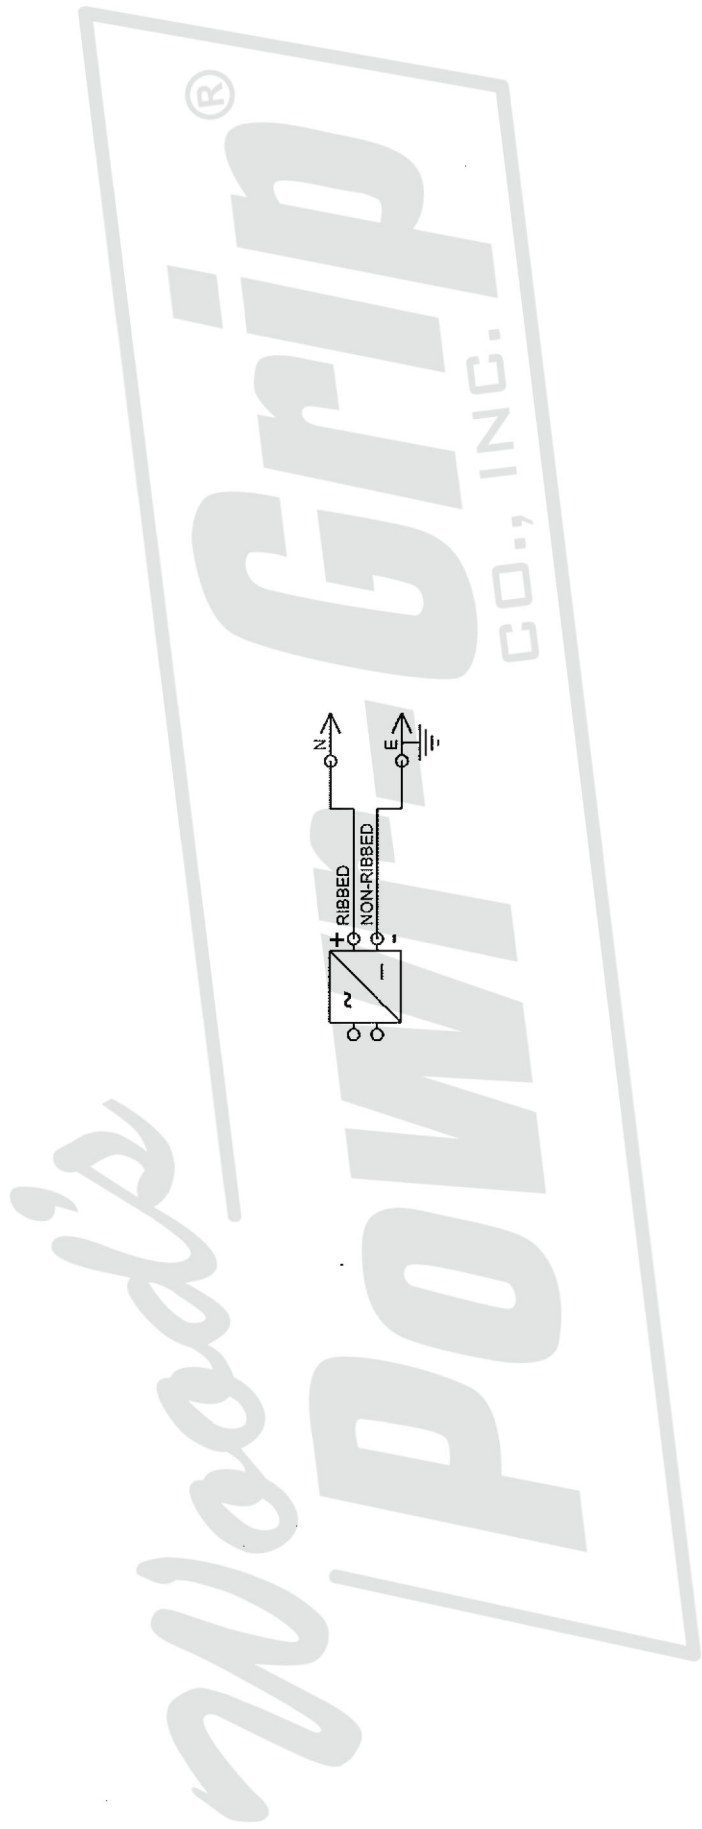

FILE DIRECTORY:
STANDARD

705-W06 [W06]

THIS DRAWING IS THE PROPERTY OF WOOD'S POWER-GRIP CO., INC. LAUREL, MONTANA U.S.A. IT IS LOANED WITH THE UNDERSTANDING THAT NEITHER IT NOR ANY INFORMATION CONTAINED THEREIN WILL BE COPIED, PUBLISHED OR TRANSMITTED TO OTHERS WITHOUT EXPRESS WRITTEN PERMISSION.



1 SCFM DC VACUUM PACKAGE

N/A

1 SCFM DC VACUUM SYSTEM WIRING SCHEMATIC, POWERCON D705-W06 [W06]

SIZE: A	SCALE: NONE	REVISION: 02.A	ECN NUMBER: 4170	ECN DATE: 11/02/2016	ECN BY: JAC	EST. WEIGHT: N/A
---------	-------------	----------------	------------------	----------------------	-------------	------------------

WIRE LEGEND: CONTROLLED BY WIRING SYMBOLS DRAWING EXCEPT AS NOTED AND BELOW.

LINE STYLES AND WIDTHS FOR WIRE UNLESS NOTED OTHERWISE.

PRODUCT MANAGER: KEITH B.

CHECKED: [Signature]


APPROVED: [Signature]

DATE: 10/27/2016

NOTE #1: 16AWG



NOTES:
(1) 16 AWG OR 20 AWG WIRE, BASED ON VACUUM PUMP USED.

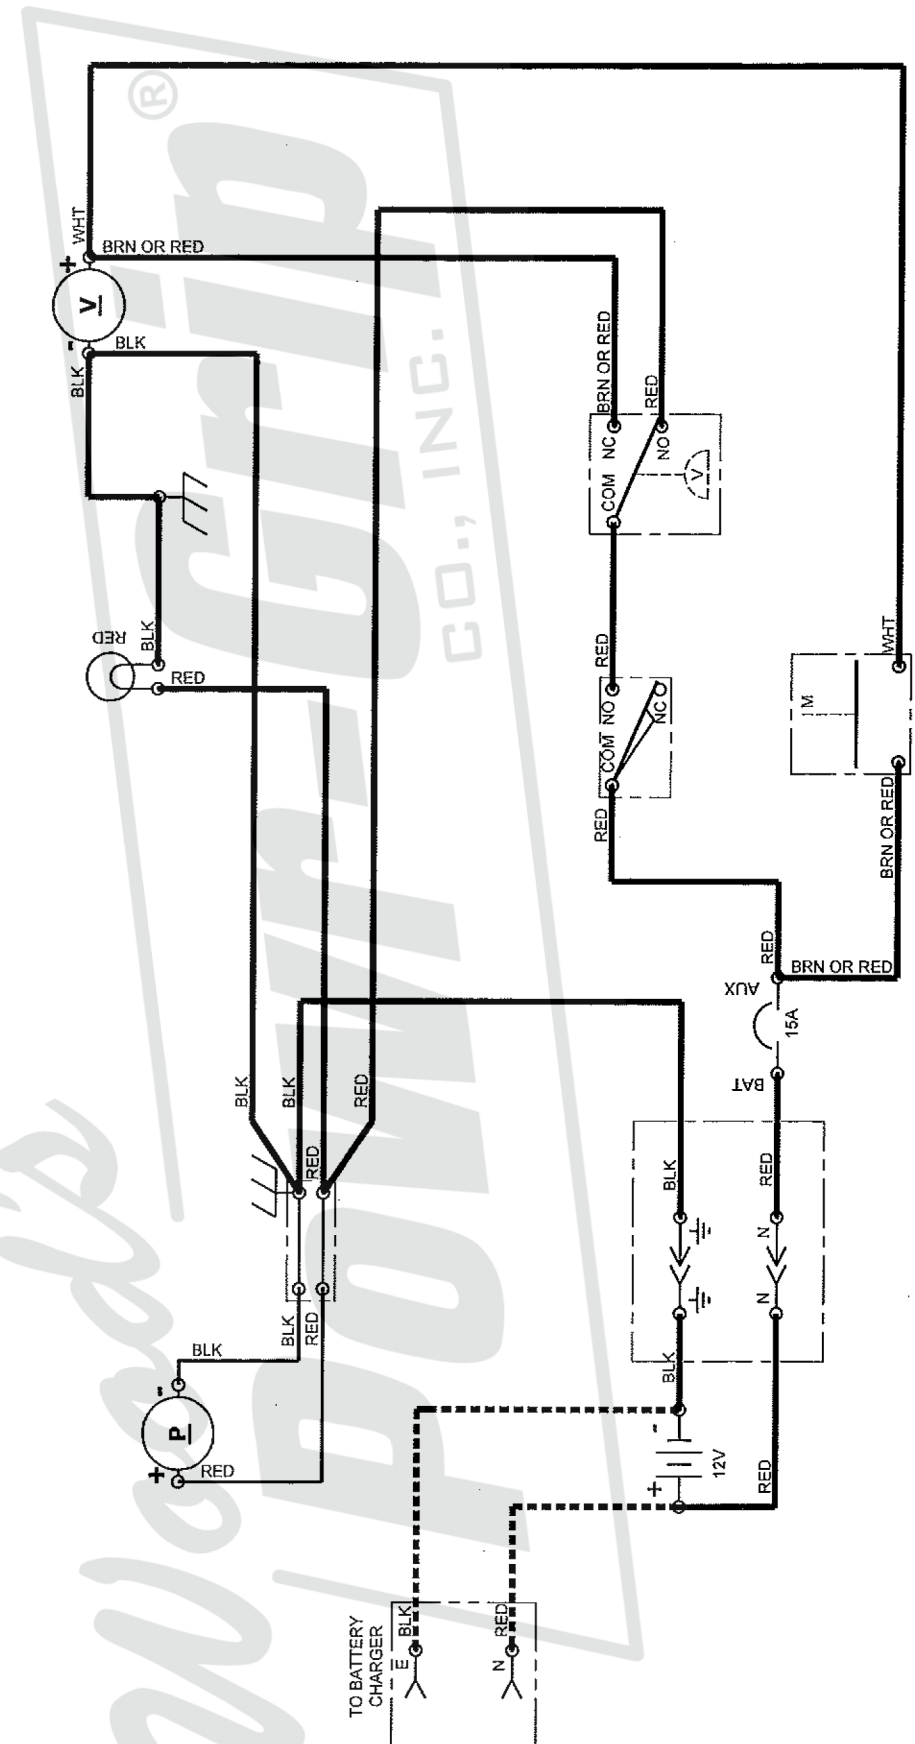

FILE DIRECTORY:
FILE (SHEET):

TYPE:
STANDARD

835-W01 [W01]

WIRE LEGEND: CONTROLLED BY
WIRING SYMBOLS DRAWING
EXCEPT AS NOTED AND BELOW.

LINE STYLES AND WIDTHS FOR
WIRE UNLESS NOTED OTHERWISE.

..... N/A 18AWG
..... N/A 16AWG

PRODUCT MANAGER:
SEAN E.

DATE:
08/15/2016

CHECKED:
SE

APPROVED:
SEAN

REVISION: ECN NUMBER: ECN DATE:

SCALE: NONE 02.A 4161 10/13/2016

SIZE: A

ECN BY: CCH

EST. WEIGHT: N/A

700LB MANUAL-ROTATOR/FILTER

N/A

SVS DC VACUUM PACKAGE WIRING SCHEMATIC

D835-W01 [W01]

THIS DRAWING IS THE PROPERTY OF **WOOD'S POWR-GRIP CO., INC.**
IT IS LOANED WITH THE UNDERSTANDING THAT NEITHER IT NOR ANY
INFORMATION CONTAINED THEREIN WILL BE COPIED, PUBLISHED OR
TRANSMITTED TO OTHERS WITHOUT EXPRESS WRITTEN PERMISSION.
WPG
LAUREL, MONTANA
U.S.A.



NOTES:
1) 16AWG OR 20AWG WIRE, BASED ON VACUUM
PUMP USED.

