## **Wine Bottle Probe**

# 1. Feature Descriptions



- A wine bottle probe monitors the true wine temperature instead of the cabinet air temperature.
- The cabinet temperature is controlled and regulated by an air probe so that the cooling system will operate most efficiently.
- Helps ensure that your wine collection will not be damaged.

# 2. System Connection





- 1) Insert the rubber cork into a wine bottle neck that is filled with clean water. Make sure there is no leak.
- 2) Connect the probe connector to the panel connector.

## 3. Controller Program


- 1. Press and hold the **SET** +  $\triangledown$  keys until the " $^{\circ}$ C" or " $^{\circ}$ F" flashes, then release the keys.
- 2. Press and hold again the **SET**  $+ \forall$  keys until the **Pr2** is displayed, then release the keys.
- 3. Press the up key \( \text{\texts} \) to scroll to \( \text{P3P} \) within 10 sec; then press the "SET" key to display its value.
- 5. Use the up key  $\triangle$  or down key  $\forall$  to change its value to Y within 10 sec.
- 6. Press the "SET" key to store the new value and the display will flash 3 times.
- 7. Then **O3** will be displayed; press the "**SET**" key to display its value.
- 8. Use down key  $\forall$  to change its value to  $\mathbf{0}$  within 10 sec.
- 9. Press the "**SET**" key to store the new value and the display will flash 3 times.
- 10. Press the up key A to scroll to **Lod** within 10 sec; press the "**SET**" key to display its value.
- 11. Use up key \(\textstyre{\rm to}\) to change its value to \(\textstyre{\rm P3}\) within 10 sec.
- 12. Press the "**SET**" key to store the new value and the display will flash 3 times.
- 13. To exit: Press **SET** + **up** keys or wait 15sec without pressing a key.

### **Enable bottle probe:**


PARAMETER	DESCRIPTION	VALUE
P3P	Third probe presence	Υ
O3	Third probe calibration	0
Lod	Controller display	P3

#### Disable bottle probe:

PARAMETER	DESCRIPTION	VALUE
P3P	Third probe presence	n
O3	Third probe calibration	0
Lod	Controller display	P1

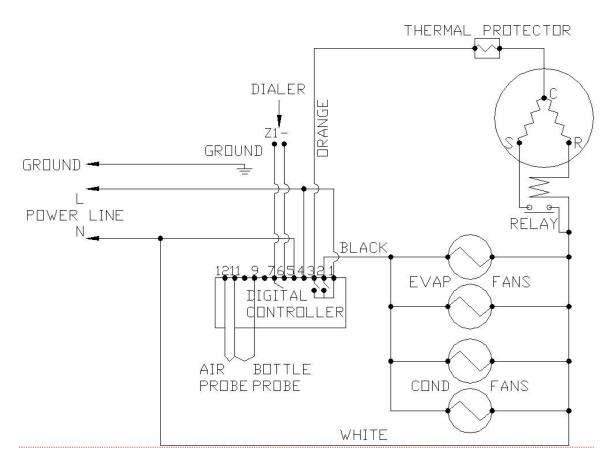

1500-2500 System Bottle Probe Wiring Diagram

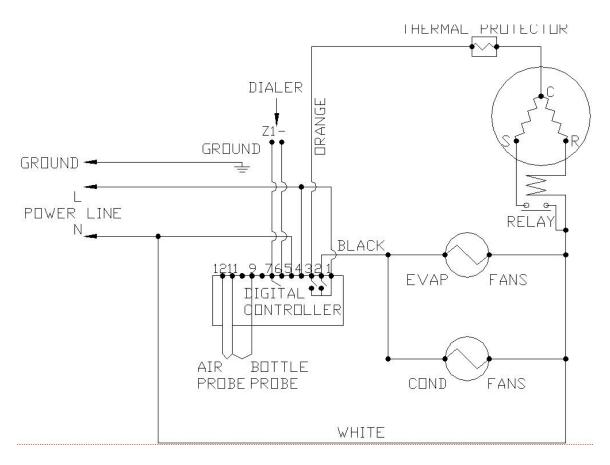

3500-8500 System Bottle Probe Wiring Diagram