

# OMNI-C Counter



**Counter for flow transmitters:**

- Piston
- Dynamic diaphragm
- Rotor
- Turbine
- Gear
- Screw
- Calorimetry
- MID
- Vortex

- Simple totalisation
- Simple filling counter with programmable end signal
- Control switchover at present value
- Automatic, dynamic change of display unit and decimal places in the graphics display
- Antivalent outputs
- Simple guided menu via graphics display

## Characteristics

The totaliser of the OMNI flow rate system enables a totalisation or measurement of consumption for all HONSBERG device families (for fluids and gases) with which the OMNI system is compatible; this is independent of the input signal, pulse or analogue input, and of the measurement process.

Simple filling control is also possible. Here, the counter can be set to count upwards or downwards.

When the preset point is reached, a switching signal is emitted which is available in antivalent form to two outputs.

Resetting can be carried out by means of a signal input or also by a programming ring.

The state of the counter is indicated in an LCD display with only four digits. Here, the number of decimal places and the unit displayed is continuously matched to the current state of the counter. In this case, the smallest value which can be displayed is 0.001 ml (= 1 µl), and the largest is 9999 m³. The counter therefore has 13 places, of which the four most significant are displayed at any one time. The display resolution at all times is therefore at least 1 per thousand of the displayed value, or better, and this generally exceeds the accuracy of the connected flow transmitter. The non-displayed digits of the counter are in that case irrelevant to the accuracy of the measurement.

The automatic dynamic changeover of units in the display in relation to the state of the counter makes the value easy to read in spite of a display with only four digits. In addition, user configuration of the counter is unnecessary.


In addition to the totalised value, the present flow rate can be displayed.

## Technical data


<b>Counter range</b>	0.000 ml to 9999 m³ with automatic setting of the decimal places and of the applicable unit.
----------------------	---

<b>Switching outputs (Pin 4 + 5)</b>	<b>signal</b>	2 x pushpull output, max. 100 mA, resistant to short circuits and polarity reversal, antivalent states, configurable on the device as a wipe or edge signal
<b>Counter signal (Pin 2)</b>	<b>reset</b>	Input 18..30 V resistant to short circuits and reversed polarity PIN 2, wiper signal, positive or negative edge can be selected locally

## Wiring

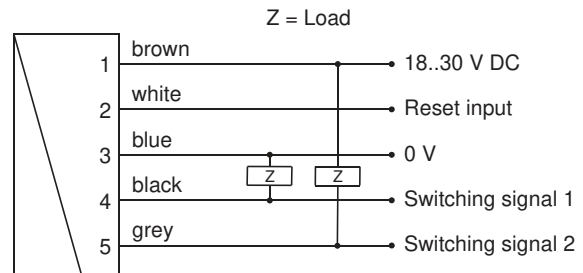

Connection example: PNP NPN



Before the connecting the supply voltage, it must be ensured that this corresponds with the data sheet! The use of shielded cabling is recommended

Sensor connection to OMNI-C-TA, see dimensions.

## Handling and operation

### Installation

For assembly, please observe the handling instructions for the different device versions.

After assembly, it is possible to move the sensor head to the most optimal reading position opposite the sensor part using its rotating function.

### Programming

On the display, the counter indicates the state of the totaliser as a value and unit. The units ml, L, m<sup>3</sup> are set automatically.

For operation as a totaliser, no configuration by the user is necessary.

To use the other functions, configuration may be required. This is carried out using the programming ring located on the device.



The annular gap of the programming ring can be turned to positions 1 and 2. The following actions are possible:



**Set to 1 = continue (STEP)**  
**Set to 2 = modify (PROG)**

**Neutral position between 1 and 2**

The ring can be removed to act as a key, or turned through 180 ° and replaced to create a programming protector.

Operation is by dialogue with the display messages, which makes its use very simple.

The control display of the present flow rate depends on the metering range of the selected flow transmitter, and has already been set appropriately in the factory (ml/min, l/min, l/h, m<sup>3</sup>/h).

It is activated by turning the ring to position 1

After 10 seconds, the display automatically returns to the totaliser mode.

For operation as a preset counter, the following must be set:

1. The preset point
2. The type of output signal ("Preset has been reached"):  
Signal edge / wiper pulse  
width of the wiper pulse, if required
3. The unit of the preset point:  
(ml, litre, m<sup>3</sup>).

Starting from the normal display (total and unit), if 1 (Step) is selected repeatedly, then the counter shows the following information:

- Normal display is total and unit (e.g. litre)
- Display of present value (e.g. l/min)
- Preset point incl. type of switching output.
- Code

The code gives access to various input levels into which parameters can be entered (so that this does not occur inadvertently, the code must be entered!).

#### Code 111:

- Gate time (available only for sensors which transmit frequency)
- Filter time
- Direction of count (pos / neg)
- Unit for switching value reset point
- Decimal place for switching value / reset point
- Switching type for switching value (edge / wiper signal)
- Pulse duration (for wiper signal)
- Reset method (manual / via signal)

#### Code 100:

- Manual reset for totaliser

The detailed flow chart for operation is available in the "Operating instructions for OMNI-C".

**Combination examples**

<b>Vortex</b> CF..	
<b>Calorimetric</b> F.. (separate data sheet)	
<b>Calorimetric</b> FG.. (separate data sheet)	
<b>Calorimetric</b> FIN..	
<b>Magnetic inductive</b> FIS.. (separate data sheet)	
<b>Piston</b> HD.. HR.. MR..	
<b>Magnetic inductive</b> MID1..	
<b>Panel mounting</b> OMNI-TA (separate data sheet)	
<b>Rotor</b> RR..	
<b>Turbine</b> RT..	
<b>Screw</b> VHS..	

<b>Gear</b> VHZ..	
<b>Dynamic diaphragm</b> XF..	