


HOW TO CHANGE THE SEAT, SEAT COVER ELECTRONICS DAMPER

[Click for the Video Guide](#)




How to change the SEAT, SEAT COVER ELECTRONICS DAMPER

1. Open the cover base

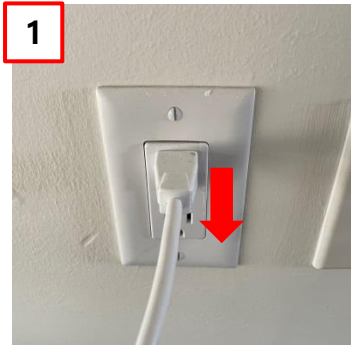

① Unplug the cord

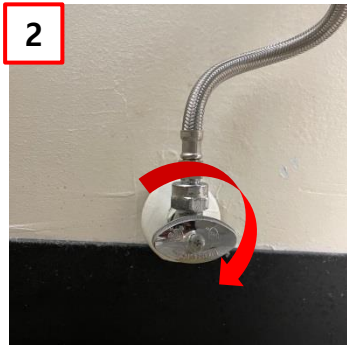


② Close the water valve clockwise



③ Unscrew the 2 screws at the back using a Philips head driver.



④ Detach the cover base by pulling it to the arrow direction as above.

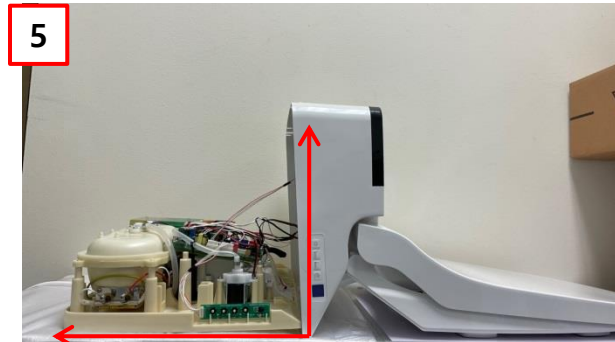


⑤ Make sure that the degree between the ground and the cover base is shown as in the above picture to avoid any wire damage.



[Click for the Video Guide](#)

How to change the SEAT, SEAT COVER ELECTRONICS DAMPER

2. Detach the Exterior unit from the base

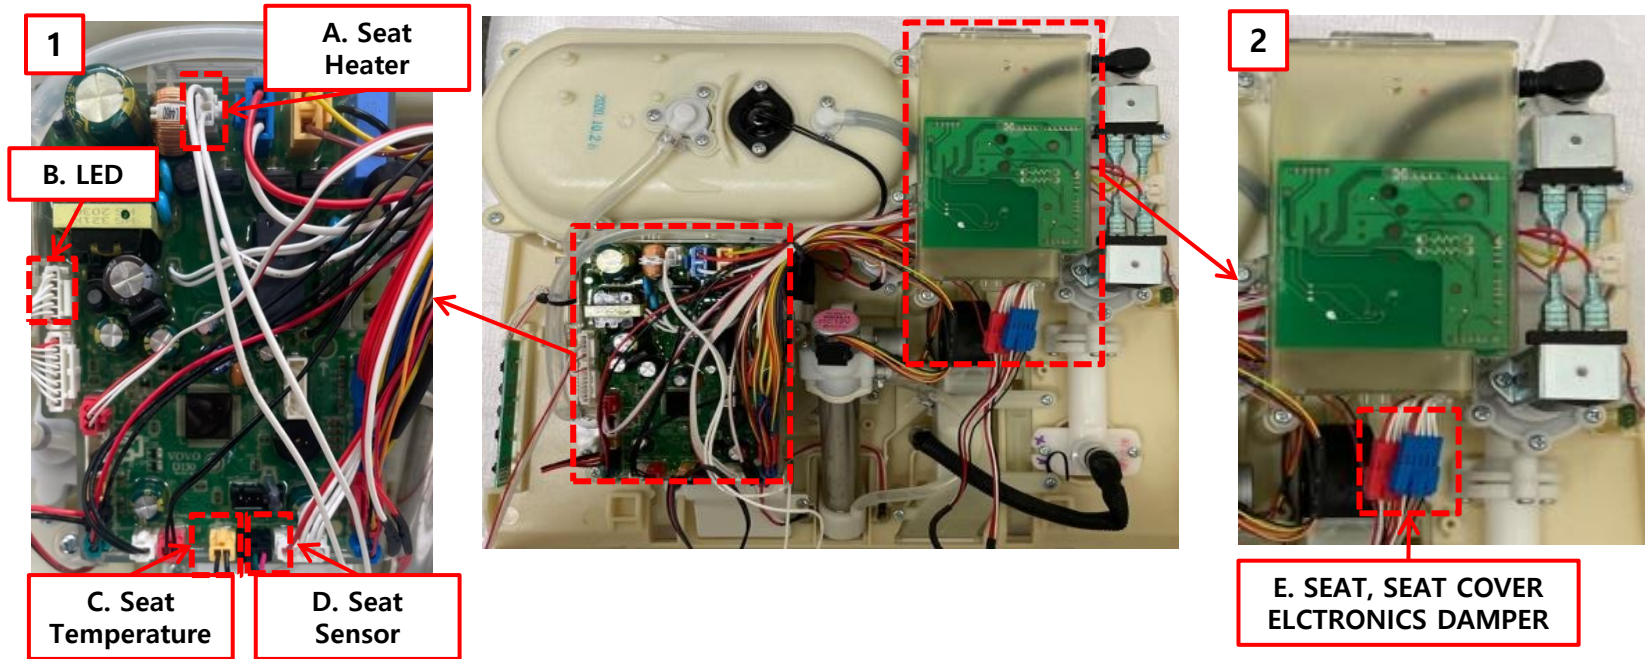

① Disconnect the below harness with MAIN PCB and detach the it from the exterior unit

- A. Seat Heater
- B. LED
- C. Seat Temperature
- D. Heated Seat


② Detach SEAT, SEAT COVER ELECTRONICS Harness

How to change the SEAT, SEAT COVER ELECTRONICS DAMPER

3-1. Change the SEAT, SEAT COVER ELECTRONICS DAMPER



- ① Place the exterior cover as the photo
* Attention to the degree on how it is opened

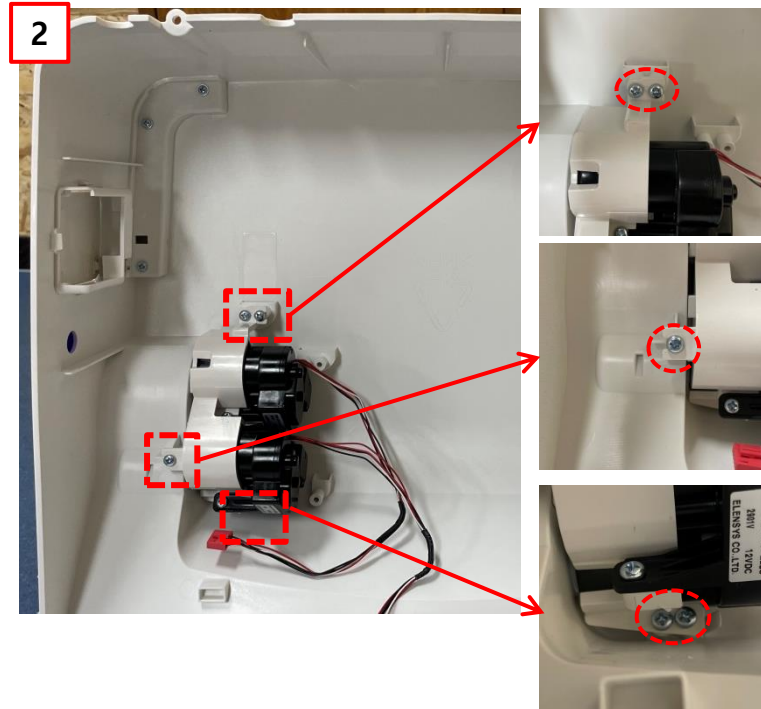


- ② Unscrew the 5 screws inside the cover base

How to change the SEAT, SEAT COVER ELECTRONICS DAMPER


3-2. Change the SEAT, SEAT COVER ELECTRONICS DAMPER



① Detach the SEAT, SEAT COVER ELECTRONICS DAMPER in the direction as the photo.

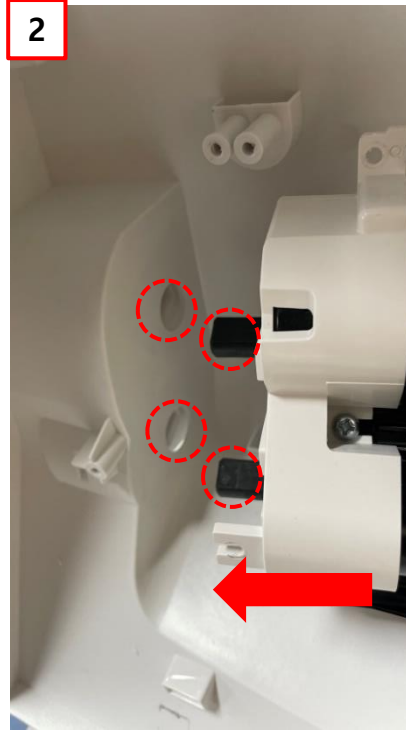

② Insert the new SEAT, SEAT COVER ELECTRONICS DAMPER in the same angle as the SEAT and the SEAT COVER hole in the direction as the photo

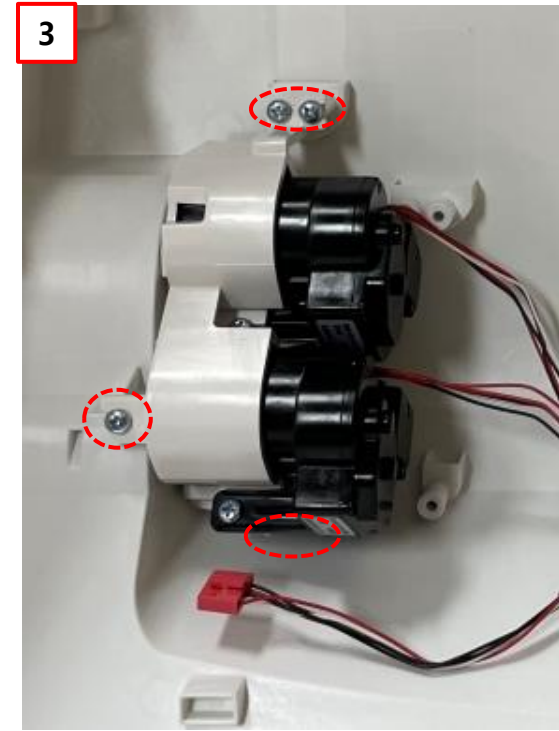

③ Screw the 5 screws back to its original place


How to change the SEAT, SEAT COVER ELECTRONICS DAMPER

4. Reattach the exterior unit and the base



① Place the exterior unit and the base like the photo.

* Attention to the degree of the both part.

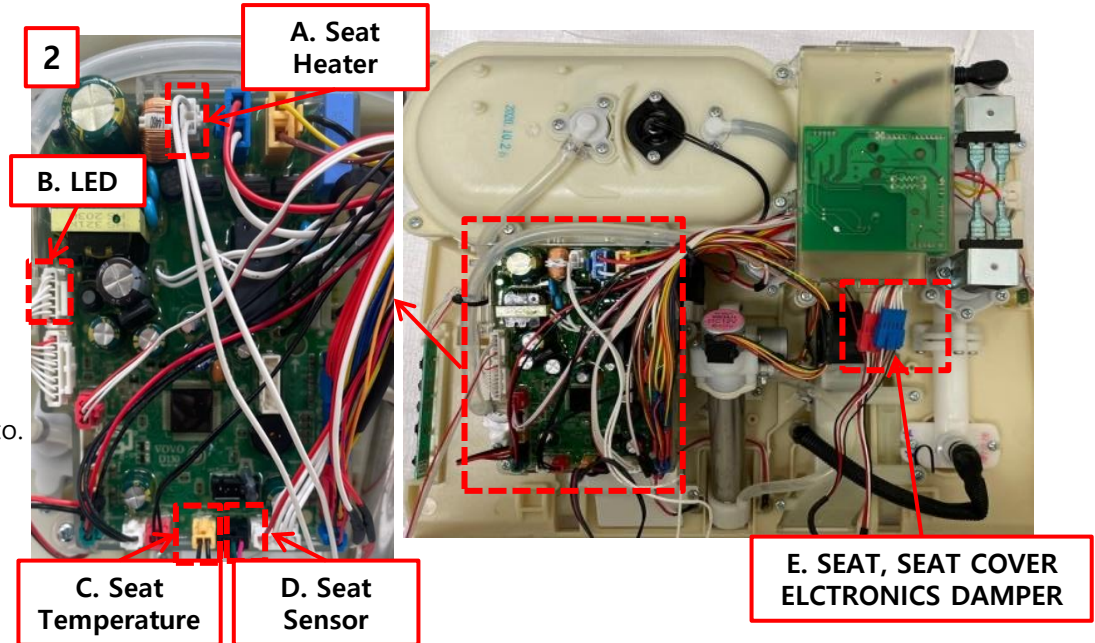

② Connect the below harness with MAIN PCB as in the photo

A. Seat Heater

E. SEAT, SEAT COVER ELECTRONICS DAMPER


B. LED

C. Seat Temperature

D. Seat Sensor

How to change the SEAT, SEAT COVER ELECTRONICS DAMPER

5. Close the Cover Base

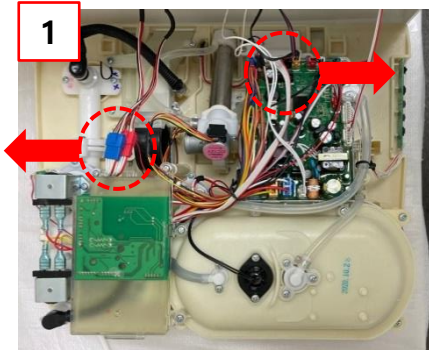


① Organize all the wires in the directions as above not to interfere the nozzle movement.




② Close the cover base in the arrow direction as above.



③ Push down using your palms as above to hear clicks.

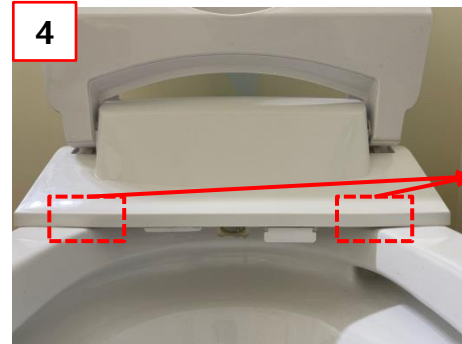

④ Check whether the cover base is assembled perfectly. If you heard clicks, it's perfectly done.

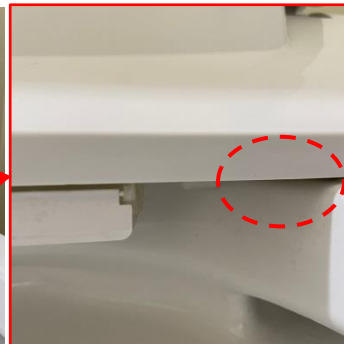

⑤ Screw the 2 screws back using a Phillips head driver.



[Click for the Video Guide](#)