



Golden Tee PGA TOUR Clubhouse Edition Standard Model Kit Install Guide

CONTENTS

Contents.....	1
PGA Tour Cabinet Components.....	2
Leg Leveler Adjustment.....	2
Warnings and Notices.....	3
Mount Main Screen Display.....	6
Dedicated Ethernet Setup.....	9
Dedicated Wifi Setup.....	10
Registration.....	11
General Cabinet Maintenance.....	12
Care and Cleaning of Rubber Bumper.....	12
Titan Air Filter.....	12
Care and Cleaning of Cooling Fans and Vents.....	12
Trackball Maintenance.....	12

NOTE

**PLEASE RETAIN ORIGINAL SHIPPING BOX FOR SERVICE AND REPAIR.
Some game features will not be available if the unit is not properly registered to ITNet.**

PGA TOUR CABINET COMPONENTS

Golden Tee PGA TOUR Clubhouse Edition – Standard Model

- (1) PGA TOUR Clubhouse Edition Pedestal Cabinet with Wi-Fi
- (1) Golden Tee PGA TOUR Edition Standard Kit

MAKE SURE YOUR HDTV IS 55" and 4K.

Shipped inside a plastic parts bag attached to the front of the cabinet:

- (1) AC Power Cord for Pedestal Cabinet (10 Feet)
- (1) HDMI Cable (15 Feet)

LEG LEVELER ADJUSTMENT

Once your game is in position at the location, it is necessary to adjust the leg levelers. The leg levelers will help stabilize the game on an uneven floor, and help it from moving or shifting during game play. The game is shipped with the two front and two rear leg levelers installed. Adjust the levelers as necessary to level and stabilize the game.

Use one $\frac{3}{4}$ -inch open ended wrench and one $\frac{5}{8}$ -inch open ended wrench to adjust the leg levelers.

The $\frac{3}{4}$ inch nut must be cracked and loosened to allow the leveler to move up and down. Use the $\frac{5}{8}$ -inch wrench to hold the leveler in place while using the $\frac{3}{4}$ -inch wrench to unlock the locking nut. After the locking nut is loosened, adjust the leg leveler to the desired position. Once the levelers are positioned so that the game is steady, lock the $\frac{3}{4}$ -inch nut in place on any levelers that were adjusted.

WARNINGS AND NOTICES

NOTICE

- This game is intended to be operated for amusement purposes only. It is not to be operated in violation of any federal, state, or local laws or regulations. As the owner and/or operator of this game you are responsible for its operation in compliance with such laws and regulations. The factory settings for this game may require adjustment to comply with the laws and/or regulations in the jurisdiction where the game is located. It is the sole responsibility of the operator to determine what laws and/or regulations are applicable and to make any adjustments to the game before operating it for its intended purpose.
- This guide and the information contained within is subject to change without notice.

WARNING

- Use of unauthorized parts or making any unauthorized modifications will void the warranty and may result in the game operating in an unsafe or incorrect manner.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- This cabinet is not suitable for installation in an area where a water jet would be used. The cabinet must not be cleaned by a water jet.

WARRANTY, REPAIR, AND RETURN POLICY

- 90-day warranty on all electronic components. All warranty periods begin on the date of purchase from Incredible Technologies, Inc.
- There is a minimum \$75.00 service charge for all non-warranty repairs or returns.
- For all servicing, return to Incredible Technologies, Inc.
- ANY non-factory repair or attempted repair voids warranty.

RETURN MERCHANDISE AUTHORIZATION

- All returned merchandise must have a Return Merchandise Authorization (RMA) number marked clearly on the outside of the package.
- You must obtain all RMA numbers from Incredible Technologies. Please have the product's Cabinet Identification Device number available when calling for an RMA number.
- Merchandise returned without an RMA number will not be accepted.
- Warranty may be void if serial number or security labels are tampered with or removed. **Opening the System Box will void your warranty.**
- Advance replacement hardware will be shipped to the customer address on file unless specified otherwise.
- Advance replacement hardware will be billed to the customer until Incredible Technologies, Inc. receives the returned merchandise, at which time a credit will be issued.
- All repairs and/or replacements will ship as soon as possible after receipt or request (subject to availability).

PAYMENT FOR AND STORAGE OF REPAIR MATERIALS

Materials sent to IT for repair must be paid for according to current price schedules and in a reasonable time. Storage fees for repaired equipment will be charged at a rate of \$50.00 (Fifty US Dollars) per calendar month or fraction thereof after 90 (Ninety) days from notice to the customer that the repairs are complete. IT reserves the right to resell repaired equipment to cover accumulated storage charges when the accumulated storage charge reaches 100% (One Hundred Percent) of the repaired items' then-current replacement cost.

- Read these instructions
- Keep these instructions
- Heed all warnings
- Follow all instructions
- Do not use this apparatus near water
- Clean only with dry cloth
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

DO NOT expose the apparatus to dripping and splashing. DO NOT put objects filled with liquids, such as vases on the apparatus.

CAUTION

The motherboard is provided with a replaceable lithium battery. There is a danger of explosion if a battery is incorrectly replaced. Replace the battery only with the same or equivalent type.

WARNING

- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The apparatus shall be connected to a mains socket outlet with a protective earthing connection. Substitute cords may not provide adequate fault protection. Only use the power cord supplied with this product or an Incredible Technologies, Inc. authorized replacement.
- The mains plug or an appliance coupler must remain readily operable.
- Use of unauthorized parts or making any unauthorized modifications will void the warranty and may result in the game operating in an unsafe or incorrect manner.
- This Pedestal Cabinet is not suitable for installation in an area where a water jet would be used. The cabinet must not be cleaned by a water jet.

MOUNT MAIN SCREEN DISPLAY

Position the Showpiece cabinet in front of a 4K HDTV. Incredible Technologies recommends a 4K HDTV from 55" or larger. You will need to supply a 4K HDTV digital display for the game's main monitor, and an appropriate stand or wall mount. Be sure that the stand or wall mount is UL listed.

The HDTV can be mounted to a wall or another viable stand. There are many different types of wall mounts available through retail, wholesale and Internet outlets.

The wall mount you select **must** be UL listed. Be sure that the top of the Showpiece cabinet has at least 24" clearance in all directions. Insufficient clearance may result in damage to your display or player injury.



- Connect Game AC power cord from HDTV AC power input (rear of cabinet) to an AC Power source.
- Turn on game using the cabinet power switch located next to AC power cord on the back of cabinet.

HDMI Connection

Locate the HDMI Port on the rear of the cabinet and connect the HDMI Cable from the HDMI Port to the rear of the 4K HDTV.



HDMI Port

Use the HDMI Port on the back of the cabinet to connect an HDMI Cable to the rear of the 4K HDTV.

Online Configuration

To access the online features in your new IT game, you must have a network with Internet access. Following are the two methods for bringing your game online. Make sure you have already setup the basic connections for your game.

Dedicated Ethernet

If your computer Internet connection point (router and modem) is close to your game cabinet, the easiest method is to connect an Ethernet cable (not included) from the router to the rear of the Titan system box.



Ethernet Port

Use the Ethernet Port on the back of the cabinet to connect an Ethernet Cable to your Ethernet Output.


1. Plug in the Ethernet cable to the Ethernet port on the back of the cabinet.
2. Plug in the opposite end of the cable to the Ethernet port on the router.

DEDICATED ETHERNET SETUP

You can either use Ethernet or Wifi to setup online access. Wifi Setup is on the following page.

Use the red button above the cup holders to access the Menus.

1. Navigate to **ITNet Settings>Connection Tests** and select **Force Call to ITNET**.
2. The screen reads: **Call Was Successful Adjustables Could Not Sync**
3. You are now connected to ITNET. The game is online but still needs to be registered with a subscription to access all online features.
4. Please see Registration on page 11 for details about registering the game to access all online features.

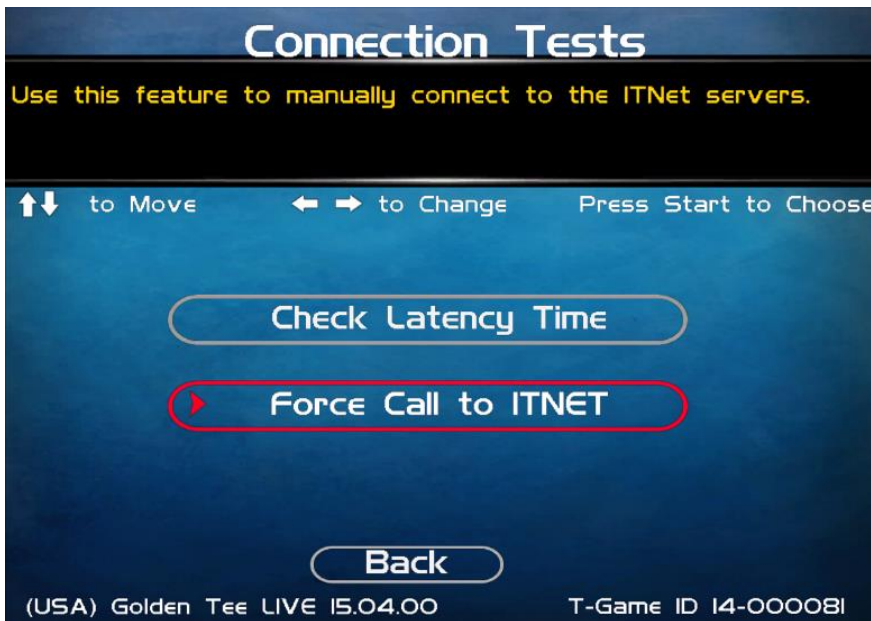

Force Call to ITNET

DEDICATED WIFI SETUP

You can either use Ethernet or Wi-fi to setup online access. Ethernet Setup is on the previous page.

Use the red button above the cup holders to access the Menus.


1. Navigate to **ITNet Settings>Communication Settings**.
2. Select **Configure Wifi Settings**.
3. Select **Scan**. The game scans available Networks to find yours.

Note: If your Network is not found it is possible to manually enter the name of your Network by selecting **Add Network** at the bottom of the list of available Networks.

4. Enter Password. Then select **Done**. (It will take anywhere from 30 seconds to four minutes for the game to connect to the Wi-Fi Network.) If no connection is made after four minutes, the attempt automatically times out.

Note: In the event of a failed connection, reboot the machine.

5. Please see Registration on page 11 for details about registering the game to access all online features.

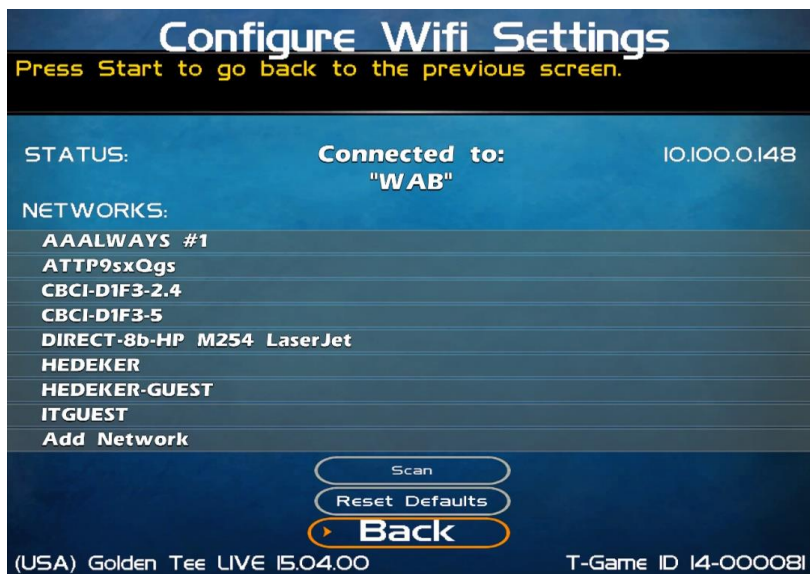

Configure WiFi Settings

REGISTRATION

Each cabinet comes equipped with Wifi and Ethernet connectivity capability. This will allow you to maximize your playing experience with additional game modes, features and exclusive tournaments that will update weekly.

Note: *Your online subscription is FREE until Golden Tee PGA TOUR 2023 is released.*
To access online features, please **Register** after you have **setup Wifi/Ethernet**.

To register your game, scan the QR Code or visit:
https://amusement.itsgames.com/pga_clubhouse_edition_registration



GENERAL CABINET MAINTENANCE

Games that are in good working condition, with clear monitors, clean control panels and working trackballs will make more money than a machine in poor condition. It is worth your time and attention to protect your investment with a little common care. Every week clean the display and wipe down the control panel to bring back that new game look. Test the trackball and buttons regularly to make sure they are playing properly. And perhaps most important, make sure the coin mechanisms and bill acceptors are in good working order. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent or equivalent.

CARE AND CLEANING OF RUBBER BUMPER

The rubber bumper on the front of the cabinet's control panel is made from durable nitrile rubber. Clean it using a mild soap and water solution or blue window cleaner.

TITAN AIR FILTER

The Titan System Box comes equipped with an external electrostatic air filter. This filter is held in place by a metal bracket, attached to the system box. The filter prevents debris from entering the system box and damaging the electronic components. A clogged filter will impede airflow, thus building up unwanted heat which can cause damage to your hardware. Be sure to check this filter at least once a month. Remove the filter by sliding it out of its housing. Shake off excess dirt and if necessary clean it with soap and water. Be sure the filter is completely dry before reinstalling the filter.

CARE AND CLEANING OF COOLING FANS AND VENTS

The hardware that runs Golden Tee PGA TOUR Edition is quite sophisticated, and many of the chips and processors will get hot very quickly. Like your desktop PC, the Golden Tee PGA TOUR Edition hardware needs adequate ventilation to work properly. Dust and dirt can be a major cause to overheating and will lead to costly repairs. At least once a month, check to make sure the cabinet and system box fans are working and free of dust and debris. Use a vacuum to clear all the ventilation holes on the cabinet as well.

TRACKBALL MAINTENANCE

The trackball will require periodic maintenance to assure optimum performance. In most cases the inside of the trackball simply needs to be cleaned of any accumulated dust and debris.

See the videos on IT's website on how to remove, clean and replace a trackball:

<https://amusement.itsgames.com/service/instructions>

