



Square Faceplate Digital Bluetooth Knob

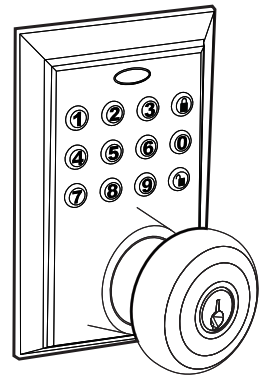

Model 8832001S  
8832101S  
8832301S  
8832401S

Package Includes:


- 1 - Exterior Faceplate
- 1 - Interior Faceplate
- 1 - User Guide
- 2 - Keys
- 1 - Strike Plate
- 1 - Mounting Plate
- 1 - Latch
- 1 - 3/8" Screws
- 2 - 5/16" Screws
- 2 - 1" Screws
- 5 - 3/4" Screws
- 2 - Mounting Post

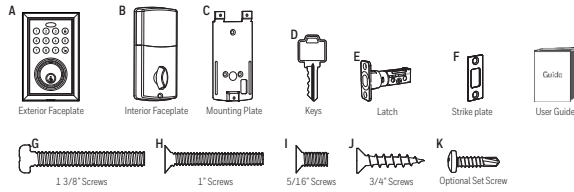

Please carefully check the above list to confirm all items have been received. If any items are missing, please contact Consumer Assistance. (See page for contact information)


Read this manual carefully before installing and operating!

1 Installation Overview

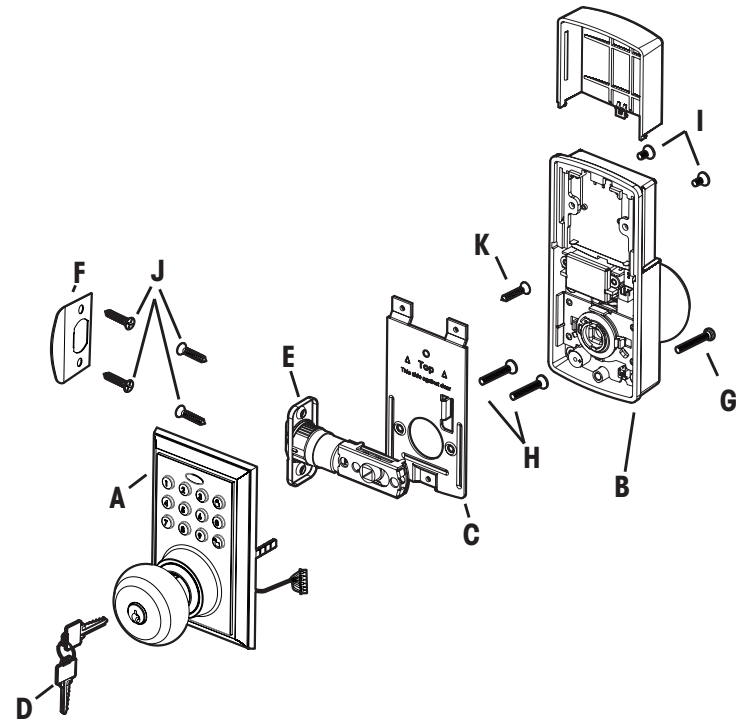


**DO NOT RETURN TO STORE!**  
If any parts are missing or damaged, please call Customer Service Toll free at 1-800-860-1677 (Toll Free, M-F 7am - 5pm PST).


2 Preparing Door

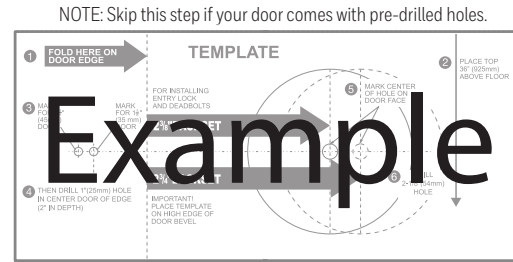


Refer to Template included for Door Prep Instructions

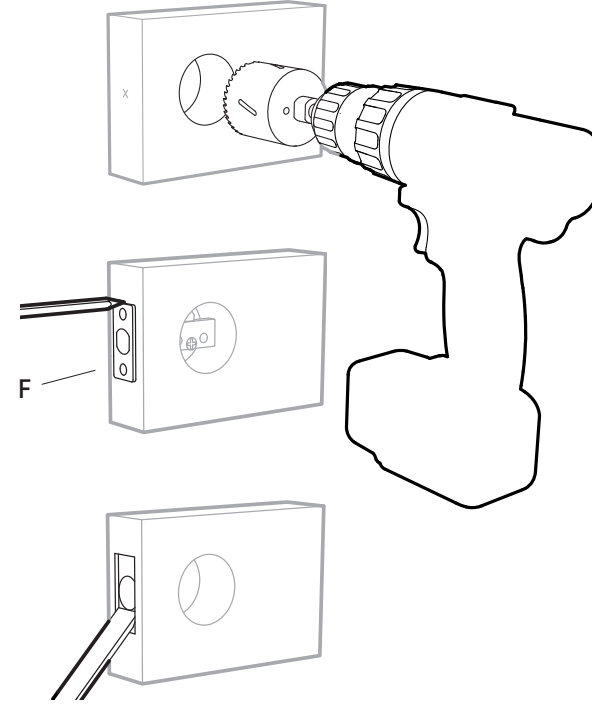


3 Install Enclosed Latch and Strike Plate

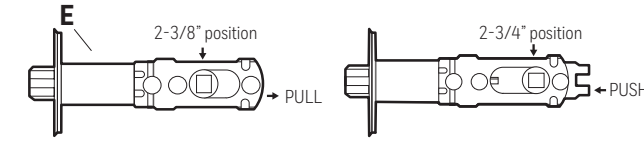



TO CONVERT FROM 2-3/8" (60mm) BACKSET TO 2-3/4" (70mm) BACKSET  
1. Hold latch with numbers facing forward and thumb pressing on the latch.  
2. Pull or Push the extension plate to the required size.

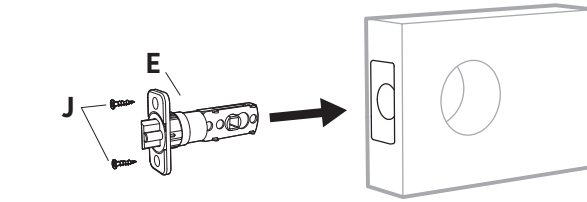


Strike Plate

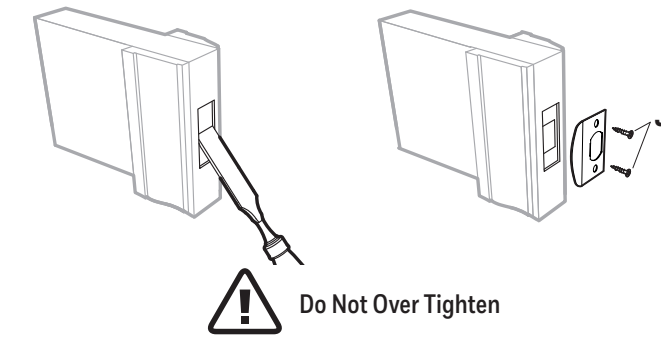

4 Install Exterior Assembly

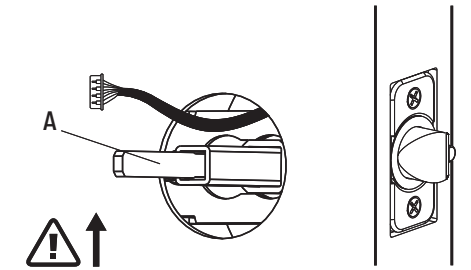
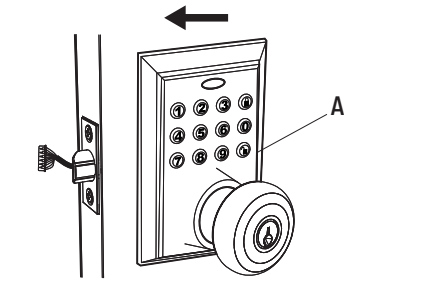


Check that the Rubber Gasket is secured on the Exterior Assembly. Insert the Exterior Assembly onto the door with the tailpiece going through the Latch Set in the VERTICAL POSITION. Route the Control Wire through the door above the Latch Set.

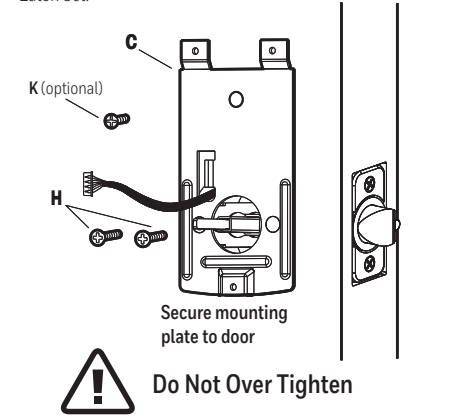

5 Install Interior Assembly


Work with the door open

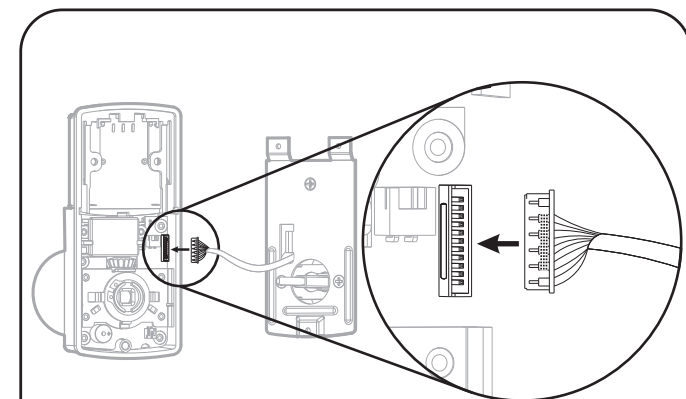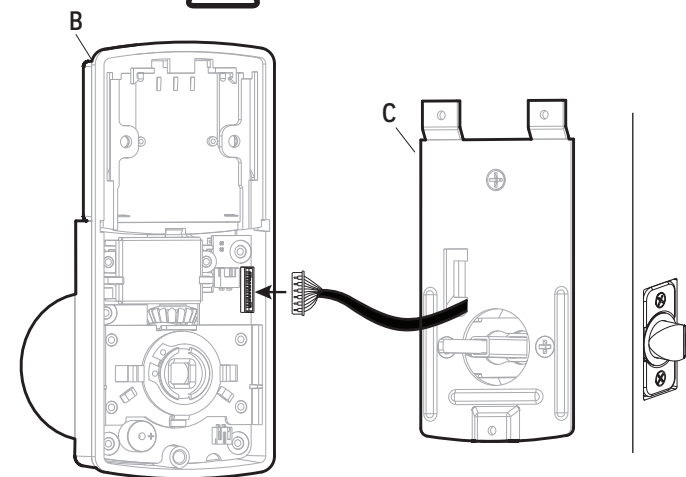


NOTE: Make sure the connector dots line up with the dots on the wire

6 Install Interior Assembly

NOTE: Make sure the Knob is in the correct position. Be careful not to pinch the control wire when assembling

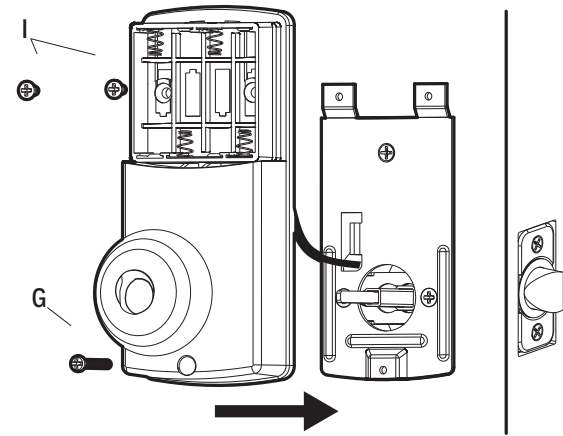


Test the lock

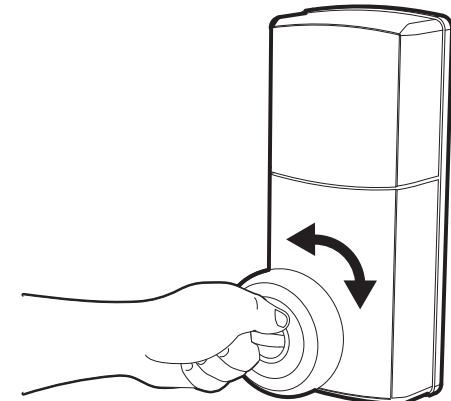

Lock and unlock using the knob make sure the latch is opening and closing easily. If not, go back to step 2 and ensure you followed the steps

7 Install Batteries and Cover

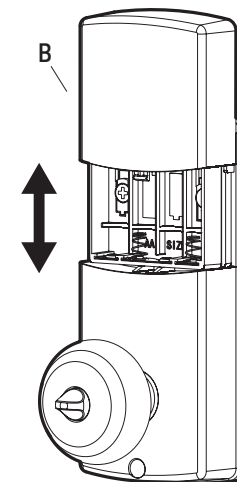


This Electronic lock requires (4) High Quality AA Alkaline batteries. When all 4 batteries are installed in the correct position, you should hear 2 beeps and the keypad will illuminate blue.

NOTE: Do not touch the Keypad until the light turns off. Do not use rechargeable batteries or non-alkaline batteries.

8 Testing Operation

Test the lock button with door open

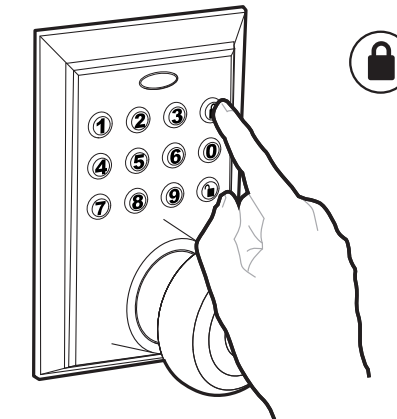

Test unlocking  
Press 1-2-3-4




Before Opening Door  
Let Motor Complete Cycle

Congratulations, You have Installed the Honeywell BLE Electronic Knob (8832001S, 8832101S, 8832301S, 8832401S) Turn Sheet over for Programing Instructions.

## Programming Instructions




Download the Honeywell Lock App from the APP store or Google Play

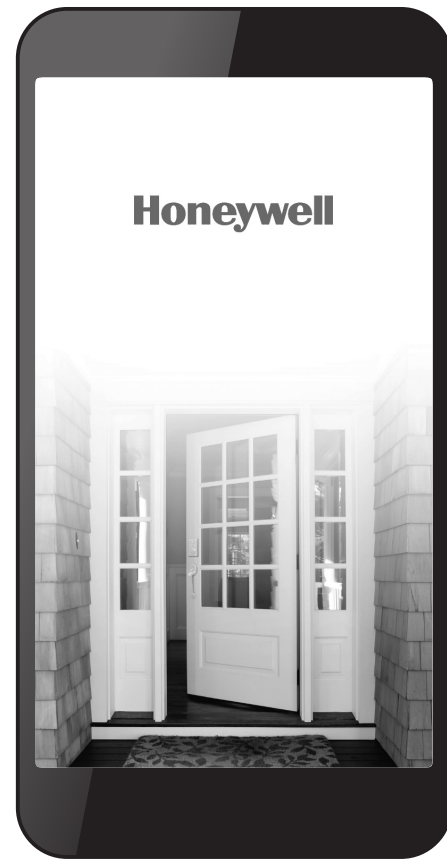


### 1 Register an Account

1. Press "Register" on the login screen
2. Enter your phone number and preferred password

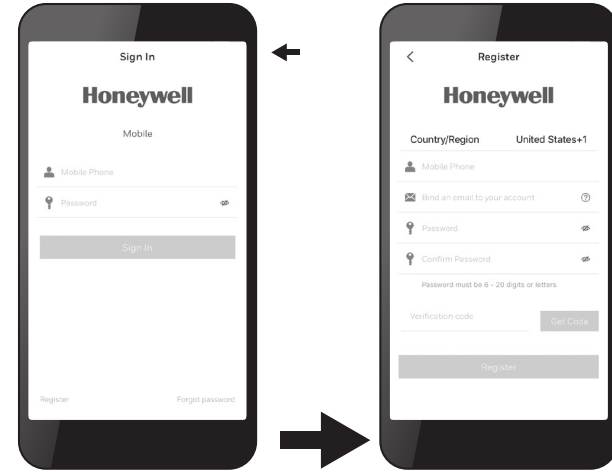


3. Press "Get Code" and enter the verification code received via text msg in the required field
4. Success! Use the selected phone # and password to log into your Honeywell Lock App

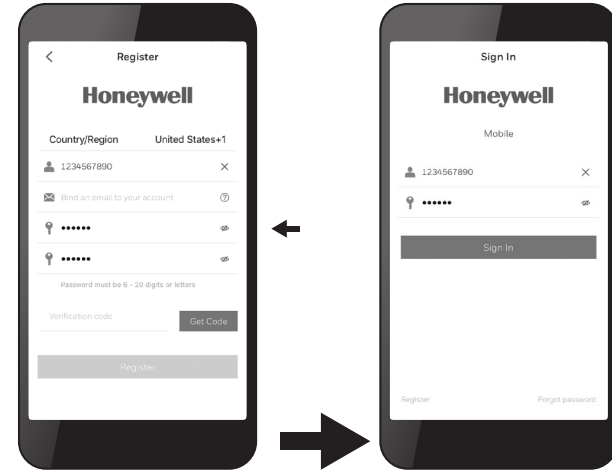

### 2 Add a Lock

**Press Any Key on the Keypad to Wake up Lock. The Keypad Must be Lit in order to add the Lock.**


1. Press the "+" on the lock screen
2. Select Door Lock
3. Press the "+" next to the lock you wish to add
4. Success! Name your Lock and enjoy

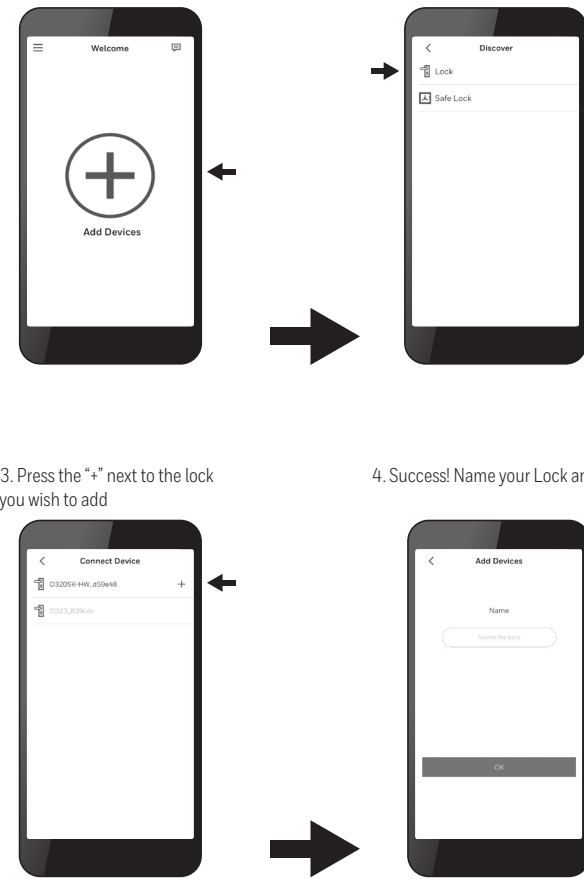

### 3 Change Admin Passcode


Passcode can be used to unlock from keypad

1. Press the settings gear in the top right of the lock screen
2. Select Admin Passcode from the setting list
3. Confirm your APP Account Password
4. Set your new 6-digit Admin Passcode

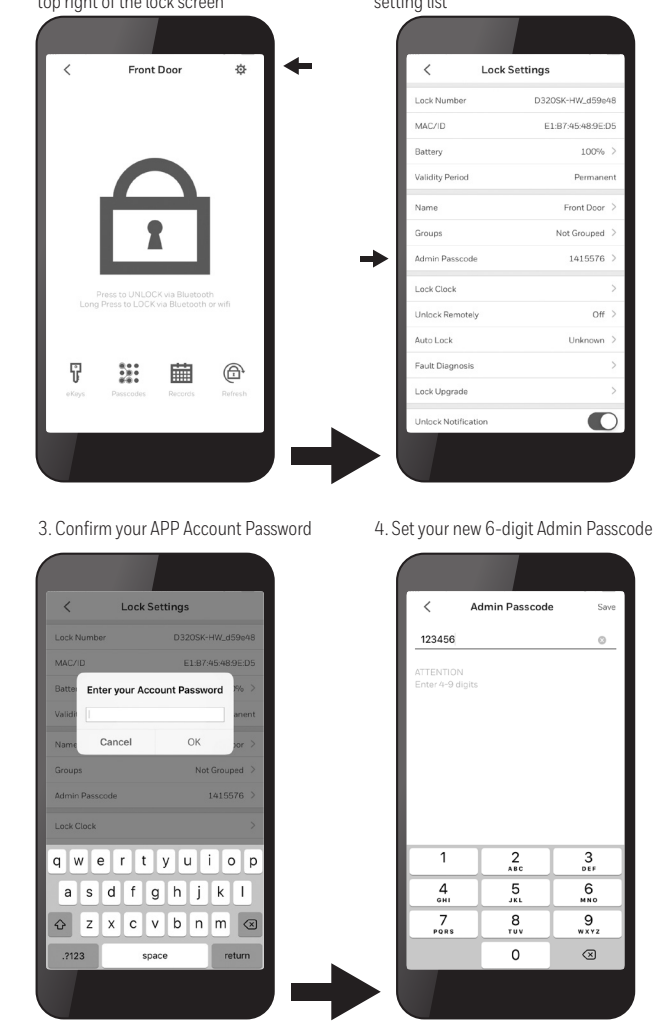


### 4 Locking and Unlocking via APP

Tap the Lock Icon to unlock door

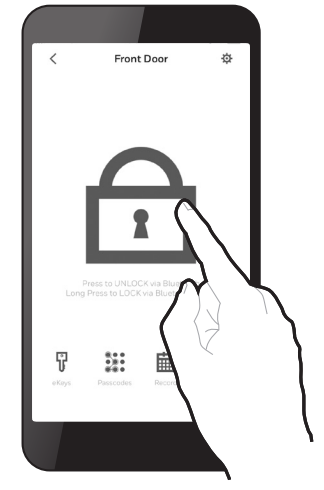

Hold the Lock Icon to lock door

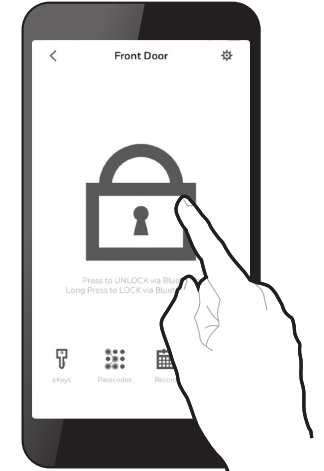

### 5 Creating and Sending eKeys

1. On the Lock Screen select the eKey Icon
2. Select SEND eKEYS
3. Select Validity Period (Timed, Permanent, etc.)
3. Enter the recipients Phone # and Name. Hit send to confirm



### 6 Creating Custom Passcodes


1. On the Lock Screen select the Passcode Icon
2. Select GENERATE PASSCODES
3. Select "Customized" and select the duration or toggle permanent. Press Generate.
4. Enter the desired 4-9 digit passcode



### 7 Additional Programming Functions

You can also use the APP to make these changes

- TURN ON/OFF AUTO LOCK FUNCTION**
- Input the Admin Passcode
  - 🔒 - Green light and beep
  - 5
  - 🔒
  - Input time (20 - 900 seconds, and 00 to turn off)
  - 🔒 - Green light and beep
- VACATION MODE**
- Input the Admin Passcode
  - 🔒 - Green light and beep
  - 10
  - 🔒
  - 1
  - 🔒 - Green light and beep
- DISABLE VACATION MODE**
- Press 🔒 button for 3 seconds
  - Input the Admin Passcode
  - 🔒 - Green light and beep
- SOUND OFF**
- Input the Admin Passcode
  - 🔒 - Green light and beep
  - 6
  - 🔒
  - 1
  - 🔒 - Green light and beep
- SOUND ON**
- Input the Admin Passcode
  - 🔒 - Green light and no beep
  - 6
  - 🔒
  - 2
  - 🔒 - Green light and beep
- Restore Factory Settings**
- Press the reset button on the PCB board until you hear one beep. Release, and then three seconds later you will hear a second beep after three seconds. This indicates that the lock has been reset to the Factory Settings. (Remove cover, The reset button is located inside the back panel, See image below)

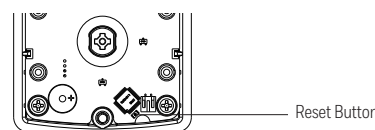

### Troubleshooting

Issue	Solution
Lock will not function electronically.	<ul style="list-style-type: none"> <li>Check that all batteries are fresh high quality Alkaline Batteries</li> <li>Check for proper polarity (+/-) of all batteries</li> <li>Check that the Control Wire is attached to the Interior Assembly</li> </ul>
Lock gives error signal when opening or locking and Latch will not extend or retract completely when closed.	<ul style="list-style-type: none"> <li>Unlock door using Key or Interior Knob</li> <li>While door is open, check that the Latch operates smoothly</li> <li>Check for proper alignment of the strike plate, adjust as needed to assure there is no binding against the Latch</li> </ul>
The Latch is sticking.	<ul style="list-style-type: none"> <li>Installation screws of the lock may be too tight and have to be loosened</li> <li>Remove Interior Assembly</li> <li>Slightly loosen the Mounting Plate screws</li> <li>Lock and unlock using the Key</li> <li>Reattach Control Wire and Interior Assembly</li> </ul>
The Keypad is not working.	<ul style="list-style-type: none"> <li>Application may be overriding the Keypad programming</li> <li>Check and see if the App has been connected to the lock</li> <li>Open the App and check the locks' setting to view/change the Administrator Code</li> </ul>
The App is unable to connect to a lock.	<ul style="list-style-type: none"> <li>Bluetooth is off, smart device is not compatible, or the lock may not be activated</li> <li>Contact customer assistance regarding compatibility issues, but iPhone 5 and later models, and most Android devices are compatible</li> <li>Turn Bluetooth on, and ensure the lock is activated by pressing a keypad button on the physical lock until you see the icon to add the lock</li> </ul>
eKeys will not send.	<ul style="list-style-type: none"> <li>Only registered users of the App can receive eKeys. Ensure that whoever is receiving the eKey has a registered account, and their information is entered correctly</li> <li>Ensure you are connected to wifi, and that the smart device is updated</li> </ul>
The default Keypad Passcode is not working.	<ul style="list-style-type: none"> <li>If you have connected to the lock with the App, then the default Passcode is invalid, and is replaced with a new Passcode generated by the App, which should be changed</li> </ul>
Forgotten Password.	<ul style="list-style-type: none"> <li>On the home screen select the Forgot Password option, then select the account type that was registered, and follow the prompts to create a new Password</li> </ul>
Latch is not locking in inclement weather.	<ul style="list-style-type: none"> <li>Push or pull door to direct latch</li> <li>Re-adjust latch for smoother operations</li> </ul>

### CONSUMER ASSISTANCE

EMAIL: LHLPCustomerService@LHL.Pinc.com WEBSITE: www.honeywellsafes.com  
 ADDRESS: Consumer Assistance Dept. L.H. Licensed Products, Inc. 860 East Sandhill Avenue Carson, CA 90746 USA  
 TELEPHONE: US/Canada 1-800-860-1677 Ext. 1801 (Toll Free)  
 Mexico 01-800-288-2872 After English voice recording stops you must then enter 800-860-1677 to complete your call. (Toll Free)  
 Australia 0011-800-5325-7000 (Toll Free)  
 Germany/New Zealand 00-800-5325-7000 (Toll Free)  
 Other Countries XX\*-310-323-5722 (Toll Charges Apply)  
 XX\*-Dial U.S. Country Code first  
 CALL CENTER HOURS: US/Canada 8am - 5pm (Pacific\*\*) Mon - Fri (Subject to change)  
 CALL BACK HOURS: Other Countries 8am - 5pm (Pacific\*\*) Mon - Fri (Subject to change)  
 Pacific\*\* - Local time in Los Angeles, CA, USA  
 \* Insert correct Country Code  
 \*\* Local Time based on Los Angeles California USA  
 INTERNATIONAL CALL BACK HOURS:  
 If you need to speak with a consumer assistant and cannot contact us during the Call Center hours above, please send an email or leave a telephone message, including your Name, Telephone Number and the best time for us to contact you during the Call Back hours above and we will make our every effort to contact you and help answer any of your questions or concerns.

### Limited Lifetime Mechanical and Finish Warranty / 1 Year Limited Electronics Warranty

This product comes with a limited lifetime mechanical and finish warranty and a one year limited electronics warranty to the original residential consumer against defects in material and workmanship under normal use as long as the original residential purchaser occupies the residential premises upon which the product was originally installed.


**ORIGINAL RESIDENTIAL CONSUMER**  
 This warranty is not transferable, and applies to the original purchaser only, as long as the original purchaser occupies the residential premises upon which the product(s) was originally installed. Proof of purchase (original sales receipt) and ownership must accompany all warranty claims.  
 All non-homeowner purchasers (including purchasers for industrial, commercial and business use) are not covered under the terms of this warranty.

**WHAT IS NOT COVERED**  
 This warranty is null and void if the product was used for purposes for which it was not designed. This warranty DOES NOT COVER normal wear and tear of parts or damage resulting from any of the following: negligent use, misuse or abuse of the product, or use contrary to or in violation of written instructions provided by L.H. Licensed Products, Inc. Further, this warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. This warranty DOES NOT COVER scratches, abrasions, deterioration due to the use of paints, solvents or use of cleaners containing abrasives, alcohol or other solvents, whether performed by a contractor, service company, or yourself. This warranty DOES NOT COVER product(s) used in commercial applications, used in common area applications, disassembly, repair or alteration by anyone other than L.H. Licensed Products, Inc., improper installation or exposure to extremes of heat or humidity. This warranty DOES NOT COVER any losses, injuries to persons or loss of property, general damages or costs, and shipping and freight expenses required to return product(s) to L.H. Licensed Products, Inc. L.H. Licensed Products, Inc. shall not be liable for any indirect, incidental or consequential damages of any nature relating to this lock. L.H. Licensed Products, Inc. is also not responsible for costs associated with removing or reinstalling the product.

**ADDITIONAL TERMS**  
 L.H. Licensed Products, Inc. does not authorize any person to create for it any obligation or liability in connection with the Product. L.H. Licensed Products, Inc.'s maximum liability here under is limited to the original purchase price of the Product. No action arising out of any claimed breach of this warranty by L.H. Licensed Products, Inc. may be brought by the original residential purchaser more than one (1) year after the cause of action has arisen.

**AUSTRALIAN CONSUMER LAW**  
 Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or repair for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**REGULATORY COMPLIANCE**  
 This product complies with standards established by following regulatory bodies:  
 - Federal Communications Commission (FCC)  
 FCC  
 This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference, and  
 (2) This device must accept any interference, including interference that may cause undesired operation.  
**IMPORTANT!** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



The Honeywell Trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product.  
 www.honeywellsafes.com