



Dekala Kids Alarm

(STC-001-S)

Instructions

Please read the instructions carefully before use and keep it with proper storage
(V2.0)

-Scan QR Code to Download User Manual-



Precaution

Please read this manual carefully before using the product and keep it in a safe place for future reference.

***For the first use of STC-001-S, remove the pull tab on the battery compartment and then connect the adapter to turn on the alarm clock.**

Feel free to contact us if you need further assistance, our troubleshooting team will get back to you ASAP.

Official Website : www.dekalastore.com

Email: info@dekalastore.com

Content

1. Product	02
1-1. Product Introduction	02
1-1-1. Front View	02
1-1-2. Back View	02
1-1-3. Bottom View	03
1-2. Features	04
1-3. Accessory List	04
2. App Operations	04
2-1. Download App	04
2-2. Mobile Phone Connect to 2.4GHz WiFi	05
2-3. Make Alarm Clock Enter into WiFi Connecting Mode	06
2-4. Connect Device to App	06
2-5. App Usage	08
2-5-1. Home Page	08
2-5-2. Screen Display Setting	09
2-5-3. Light Setting	09
2-5-4. Alarm Clock Setting	09
2-5-5. Other Setting	12
3. Button Operations	12
3-1. Three Operating Modes	12
3-1-1. NORMAL Mode	13
3-1-2. SET Mode	14
3-1-3. LOCK Mode	14
3-2. Setting	15
3-2-1. Time & 12/24-hour Clock Setting	15
3-2-2. Wake-up Function	16
3-2-3. Fall-asleep Function	18
3-2-4. Play Function	20
3-2-5. Nap Function	22
3-2-6. Volume Adjustment	24
3-2-7. Night Light/Display Brightness Adjustment	24
4. Specification	25
5. Notes	25
6. FAQ	26

Product

Product introduction

1. Front view

Snooze/Night Light Switch

Night Light


Display



2. Back view

Speaker

Micro USB input

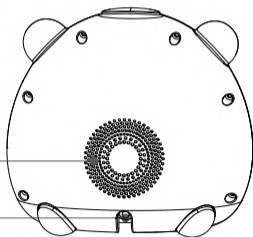

3. Bottom view

LOCK mode (Lock buttons of alarm clock to avoid misuse by kids.)

NORMAL mode
(Normal working state.)

SET mode (Set time, wake alarm, play alarm, sleep alarm, nap alarm.)

Dimmer/Time
(LOCK & NORMAL mode: Adjusting display brightness; SET mode: Time setting.)

RESET (Restore initial setting)

Volume adjustment

Nap (NORMAL mode: Turn on/off nap alarm; SET mode: Set nap alarm.)


Wake up (NORMAL mode: Turn on/off wake alarm; SET mode: Set wake alarm.)

Play (NORMAL mode: Turn on/off play alarm; SET mode: Set play alarm.)

Night light brightness adjustment

Coin-cell battery
(Coin-cell battery preserves basic memory functions if power off.)

Fall-Asleep (NORMAL mode: Turn on/off sleep alarm; SET mode: Set sleep alarm.)

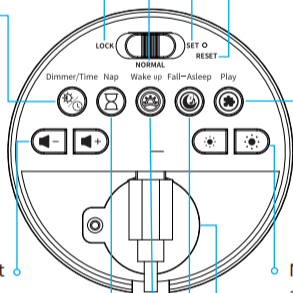

Features

- This alarm clock has been specially designed for children. It lets children who do not fully understand the concept of time know when it is time to go to bed or get up.
- Unlike most children's alarm clocks, this smart alarm clock can be controlled remotely from your mobile phone, making it even more convenient and smart.
- Four separate alarm clocks for waking, playing, sleeping and napping, enough to meet the needs of everyday life.
- The snooze function may be even more important for kids. Press the snooze button and it will ring again nine minutes later (up to 5 times of snooze).
- 7 light colours, 5 light effects, 10 music, 3 sound effects, 6 cute expressions to change at will. Choose your child's favourite combination with him or her!
- Automatic time calibration when connecting to Wi-Fi, Time-Display system can be switch between duodecimal hour system (12-hour clock) and military time (24-hour clock).
- When accompanied by a night light and a sleep-sound machine, the child will soon fall asleep peacefully and soundly till the bright morning came.


Accessory List



Alarm clock



User guide



Adapter



Charging cable

App Operations

Download App

Download "Smart Life" from App Store / Google Play or Scan the QR code, sign up and log in.



Mobile Phone Connect to 2.4GHz WiFi

Connect your smart phone to a 2.4 GHz WiFi network during setup

① If you're connecting your Dekala Kids Alarm Clock directly to your router's WiFi network, it's important to understand that your smart phone must connect to the same WiFi network as the alarm clock during setup.

(**Note:** Once the alarm clock is successfully connected to WiFi, your phone can use other networks at will, without having to be connected to the same WiFi as the alarm clock.)

② Your alarm clock can only connect to a 2.4 GHz WiFi network. Many routers broadcast WiFi networks in both 2.4 GHz and 5 GHz bands, so your phone might connect to the 5 GHz WiFi band. During setup, connect your phone to your 2.4 GHz WiFi network, then connect your Kids Alarm Clock to that same 2.4 GHz WiFi network.

Find your 2.4 GHz WiFi network name and password

Your phone might connect to your 5 GHz WiFi network most of the time. If you're not sure about how to find the 2.4 GHz WiFi network:

① Look on your WiFi router label.

Many routers have a label that shows the WiFi network name, which is also called an SSID.

Your 2.4 GHz network name might have a 2, 2.4, or 2G at the end. Your 5 GHz network name might have a 5 or 5G at the end. If you changed your WiFi settings, then check the place where you saved your custom settings.

② If your WiFi network name or SSID doesn't indicate whether it's 2.4 GHz or 5 GHz, ask your internet service provider (ISP) or the person who set up your WiFi router or refer to the video below to find the answer (scan the QR code).



Split WiFi into dual band 2.4GHz & 5GHz

Connect your phone to a 2.4 GHz network

① Turn on your phone's WiFi.


② Select a 2.4 GHz WiFi network.

This is commonly indicated by a 2, 2.4, or 2G at the end of the network name.

③ If prompted, enter the password for the network.

Make Alarm Clock Enter into WiFi Connecting Mode

- ① Plug in to power, the flashing "📶" indicates the device is now under Wi-Fi connecting mode;
- ② If "📶" stays solid or hidden, Long-press "🔊" till "📶" flashes to enter Wi-Fi connecting mode.



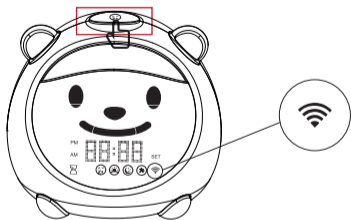


Connect Device to App


Note:

- ① Turn on GPS location, Wi-Fi(2.4 GHz only) and bluetooth on your smartphone before connecting device to your Wi-Fi(2.4GHz only);
- ② Please make sure the alarm clock has entered the **WiFi Connecting Mode**(please refer to the previous point - **Make Alarm Clock Enter into WiFi Connecting Mode**) - the flashing Wi-Fi icon shows the device is ready to connect to Wi-Fi (2.4GHz only).


- ① Open up "Smart Life" app, Click on "Go to add";
- ② If the add page does not pop up, click "Add Device";
- ③ Click on "Add";

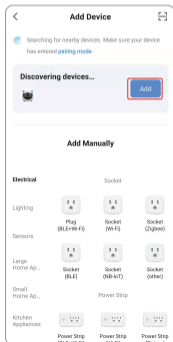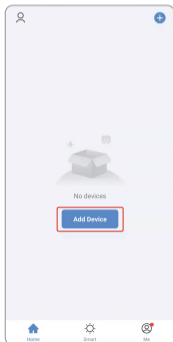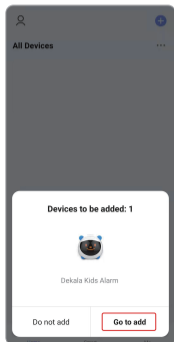


④ Type in the 2.4 GHz Wi-Fi password and click on **"Next"**(make sure the smartphone and Smart Life app are both connected to 2.4 GHz Wi-Fi);

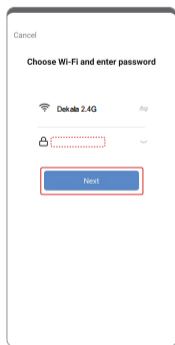


⑤ After the device has successfully connected to your 2.4GHz Wi-Fi, click **"Next"**;

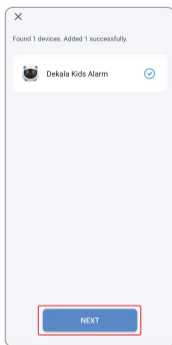

⑥ You can re-name the device after it successfully connected to your 2.4 GHz Wi-Fi, click on **"Done"** to complete the Wi-Fi setup process;

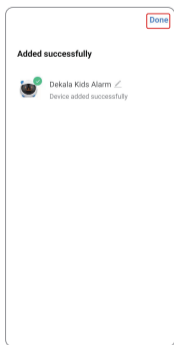


⑦ You can see the added device, click **"Dekala Kids Alarm"** enter to Home Page.

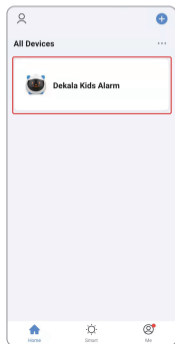


App Usage

1. Home Page

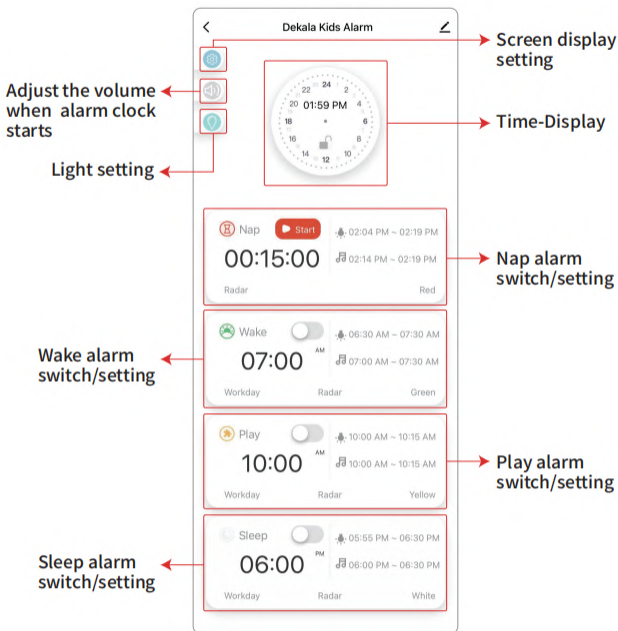

2. Screen Display Setting

- 1 Click "⚙️" to enter the detailed settings;
- 2 Device automatically calibrates with real time after successful Wi-Fi connection, you can also manually calibrate the time and switch between duodecimal hour system (12-hour clock) and military time (24-hour clock) on the App.

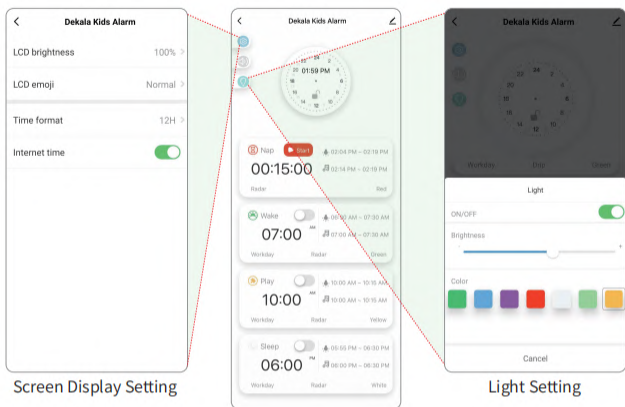

3. Light Setting



- 1 Click "💡" to enter light setting page;
- 2 You are able to turn on/off light, select color and adjust brightness.

4. Alarm Clock Setting

Note:

There are 4 alarms in total (wake, play, sleep, nap), and the way of setting 4 alarms is the same. Set alarm clocks by buttons to refer to Page 15.

Take Wake alarm clock as a demonstration on App.

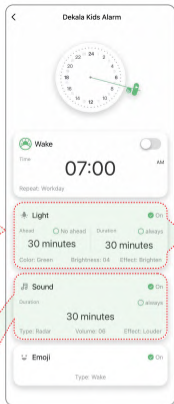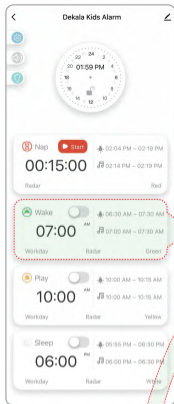

① Alarm Light Setting

Selectable between "Ahead" and "No ahead" (Light turns on before the alarm time).

- **Ahead** Select the lighting-alarm time range (5-120 minutes);



- **No ahead** The light is not turned on before the alarm time.



Selectable between "Duration" and "always"

- **Duration** Select the lighting-alarm time range (5-120 minutes); (eg: Alarm automatically turns off when 30 minute time's up)



- **Always** The light turns off until you operate it.




② Alarm Sound Setting

Selectable between "Duration" and "always"

- **Duration** Select the sound alarm time range (5-120 minutes) (eg: Alarm automatically turns off when 30-minute time's up)



- **always** The alarm stops until you operate it.




Note: 8 functions can be adjusted


Note: 6 functions can be adjusted

③ Alarm Emoji Setting

You can activate/deactivate the alarm emoji and choose different type emoji.




Emoji view

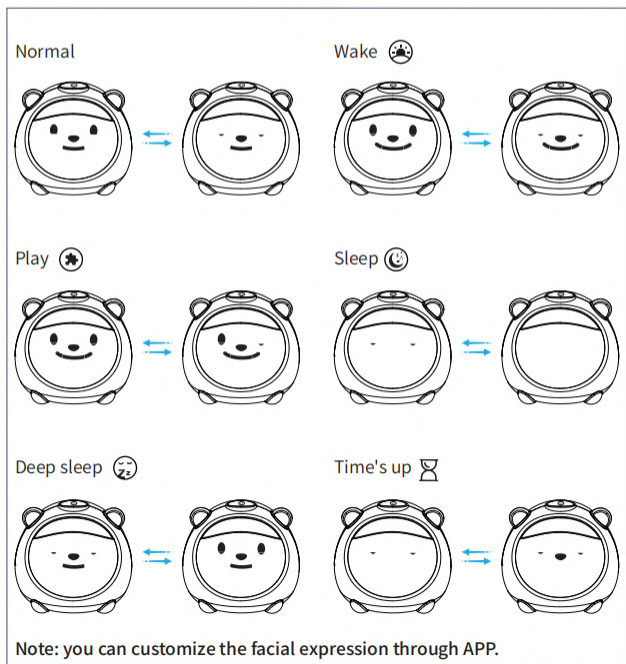

5. Other Setting


Click "✎" to enter detailed setting.

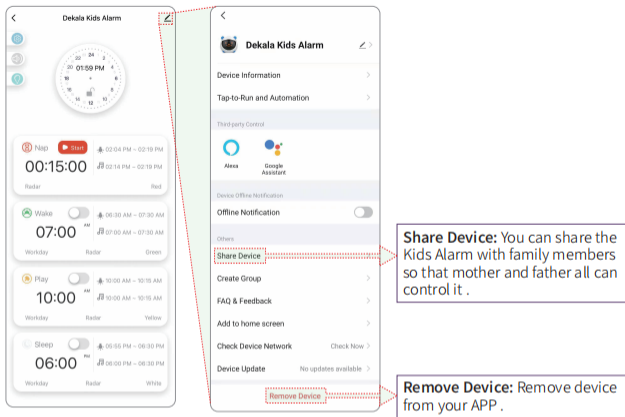

Button Operations

Three Operating Modes


There are 3 modes for Dekala Kids Alarm: LOCK Mode , NORMAL Mode and SET Mode .



SET Mode

Under SET Mode :


Only under this mode Nap / Wake / Play / Fall Asleep functions can be setted .



NORMAL Mode

Under NORMAL Mode :

All buttons work and Nap / Wake / Play / Fall Asleep can be turned on/off .




LOCK Mode

Under LOCK Mode :

Only Snooze and Dimmer/Time buttons work. Other buttons are locked(Avoid misuse by kids)

1. NORMAL Mode

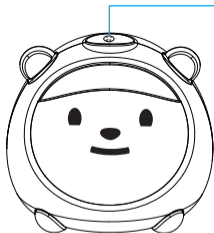

Snooze Function



- ① If Nap / Wake / Play / Fall Asleep alarm is not working, press "⌚" to turn on/off night light;
- ② If alarm is working, press "⌚" to snooze.

Display brightness adjustment



Press "☀️" to adjust or turn off the brightness.

Nap Function




- ① Start: press "⌚", the countdown starts and the "⌚" icon appears;
- ② Stop: press "⌚" again, the countdown stops and the "⌚" icon disappears.

Wake up Function



- ① ON: press "☀️", the wake-up time displays; the "☀️" icon flashes for 3 seconds and then the display returns to the normal time display;
- ② OFF: press "☀️" again, and the "☀️" icon disappears.

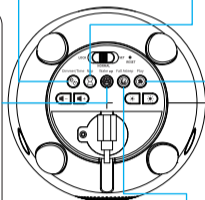

(Toggle the switch to NORMAL position)

Play Function



- ① ON: press "▶️", the play time displays; the "▶️" icon flashes for 3 seconds and then the display returns to normal time display;
- ② OFF: press "▶️" again, and the "▶️" icon disappears.

Fall-asleep Function



- ① ON: press "🌙", the fall-asleep time displays; the "🌙" flashes for 3 seconds and then the display returns to the normal time display;
- ② OFF: press "🌙" again, and the "🌙" icon disappears.

2. SET Mode

Time Setting



- 1 Press "🕒" to enter into setting ;
- 2 Press "⏪/⏩" to adjust setting ;
- 3 Press "🕒" again to set next parameter .

Nap Setting




- 1 Press "🕒" to enter into setting ;
- 2 Press "⏪/⏩" to adjust setting ;
- 3 Press "🕒" again to set next parameter .

Wake-up setting



- 1 Press "☀️" to enter into setting ;
- 2 Press "⏪/⏩" to adjust setting ;
- 3 Press "☀️" again to set next parameter .

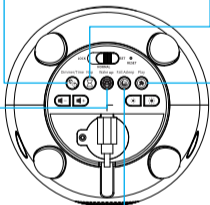

Play setting



- 1 Press "⚙️" to enter into setting ;
- 2 Press "⏪/⏩" to adjust setting ;
- 3 Press "⚙️" again to set next parameter .

(Toggle the switch to SET mode)


Fall-asleep setting



- 1 Press "🌙" to enter into setting ;
- 2 Press "⏪/⏩" to adjust setting ;
- 3 Press "🌙" again to set next parameter .

***After the setting completed, toggle the switch to NORMAL mode.**

3. LOCK Mode

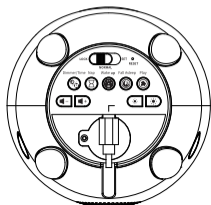

Under LOCK mode, most keys are temporarily locked.

Only following features still work:

☉ - Adjuste display brightness.

When alarm is working:


☹ - Snooze 9 minutes. (Snooze 5 times at most);

When alarm is not working:


☹ - Turn on/off night light.

Setting


1. Time& 12/24-hour Clock Setting

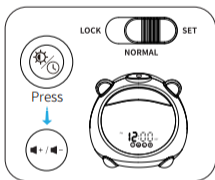


- ① Toggle the switch to **SET mode** ;
- ② Press "☉" to **set Hour** ;
- ③ Press "◀+ / ▶-" to **adjust number** .

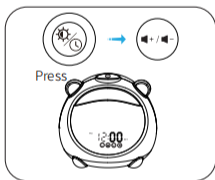

- ① Press "☉" again to **set Minute** ;
- ② Press "◀+ / ▶-" to **adjust number** .

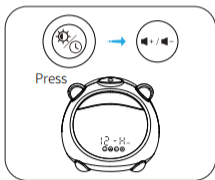


- ① Press "☉" again to **set 12/24-hour clock** ;
- ② Press "◀+ / ▶-" to **choose** ;
- ③ Press "☉" finally to **finish the setup**

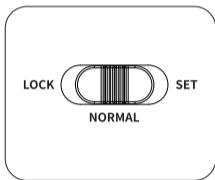


After the setting is completed, toggle the switch to NORMAL or LOCK.

2. Wake-up Function

(1) Wake-up alarm setting

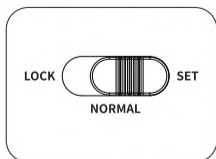


Toggle the switch to **SET mode**;

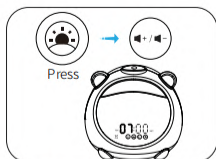

- ① Press "☀️🕒" to **set Hour** ;
- ② Press "🔊/🔊-" to **adjust number**;




- ① Press "☀️🕒" again to **set Minute**;
- ② Press "🔊/🔊-" to **adjust number**;

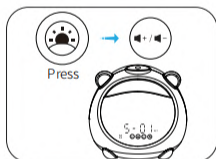



- ① Press "☀️🕒" again to **set Sound**;
 - ② Press "🔊/🔊-" to **adjust type**;
- *10 sound effects: S-01~S-10.
Sound OFF: S-00.



- ① Press "☀️🕒" again to **set Volume**;
 - ② Press "🔊/🔊-" to **adjust level**;
- *10 adjustable volume levels: U-01~U-10.

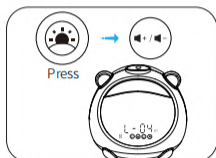

- ① Press "☀️🕒" again to **set Night Light Brightness**;
 - ② Press "🔊/🔊-" to **adjust level**;
- *The light color: Green (Light colours can be selected in the app).
5 adjustable brightness levels: L-01~L-05.
Light OFF: L-00.

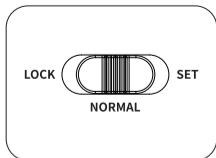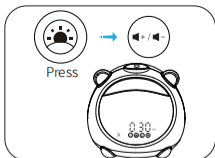


Light turns on prior to the alarm time:


- ① Press "👤" again to **set Minute**;
 - ② Press "🔊+ / 🔊-" to **adjust number**;
- * Select the lighting-alarm time rang (5-120 minutes) If you set it to 0 minute, the light will not turn on prior to the alarm time.
- ③ Press "👤" finally to **finish the setup**;

After the setting is completed, toggle the switch to NORMAL or LOCK mode.

(2) Alarm ON/OFF/stop/snooze

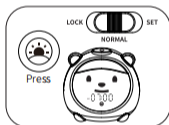


ON : ① toggle the switch to **NORMAL mode** ;
 ② press "👤" to **turn on the Wake alarm**; (the set wake-up alarm time and "👤" icon in the display flashes for 3 second) ;

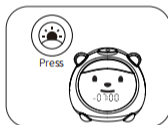

OFF: press "👤" again to **turn off the Wake alarm**; (the "👤" icon disappears.)




Stop: when the alarm clock starts, press "👤" to **stop the Wake alarm** ;
 *The alarm clock will automatically stop after 30 minutes if no response. This will not affect its operation in the next day.
 (Note: Automatic alarm stop time can be adjusted on the App.)

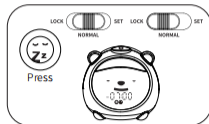


Snooze: in LOCK and NORMAL mode, when the alarm clock starts, press "Zz" to **snooze and starts again in 9 minutes** (Snooze 5 times at most).

3. Fall-asleep Function


(1) Fall-asleep function setting

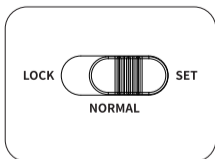


Toggle the switch to **SET** mode;

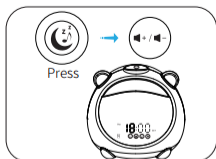


- 1 Press "🌙🕒" to **set Hour**;
- 2 Press "🔊/🔊-" to **adjust number**;

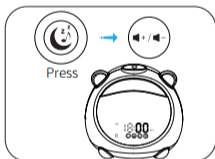


- 1 Press "🌙🕒" again to **set Minute**;
- 2 Press "🔊/🔊-" to **adjust number**;

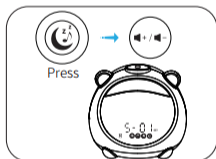



- 1 Press "🌙🕒" again to **set Sound**;
 - 2 Press "🔊/🔊-" to **adjust type**;
- *10 sound effects: S-01~S-10.
Sound OFF: S-00.

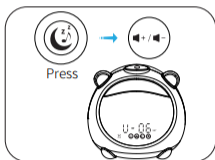

- 1 Press "🌙🕒" again to **set Volume**;
 - 2 Press "🔊/🔊-" to **adjust level**;
- *10 adjustable volume levels: U-01~U-10.

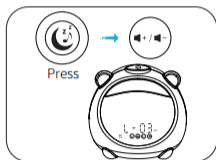

- 1 Press "🌙🕒" again to **set Night Light Brightness**;
 - 2 Press "🔊/🔊-" to **adjust level**;
- *The light color: White (Light colours can be selected in the app).
5 adjustable brightness levels: L-01~L-05.
Light OFF: L-00.

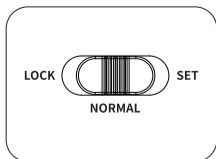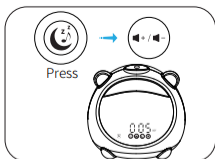

Light turns on prior to the alarm time:

- ① Press "☾" again to **set Minute**;
 - ② Press "⏪+ / ⏩-" to **adjust number**;
- * Select the lighting-alarm time rang (5-120 minutes) If you set it to 0 minute, the light will not turn on prior to the alarm time.
- ③ Press "☾" finally to **finish the setup**;

After the setting is completed, toggle the switch to NORMAL or LOCK mode.


(2) Fall-asleep ON/OFF/stop/Snooze



- ON :** ① toggle the switch to **NORMAL mode** ;
- ② press "☾" to **turn on the Sleep alarm**; (the set sleep alarm time and "☾" icon in the display flashes for 3 second);




OFF: press "☾" again to **turn off the Sleep alarm**; (the "☾" icon disappears.)

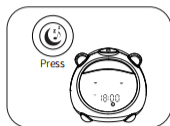

Stop: when the alarm clock starts, press "☾" to **stop the Sleep alarm** ;


*The alarm clock will automatically stop after 30 minutes if no response. This will not affect its operation in the next day. (Note: Automatic alarm stop time can be adjusted on the App.)

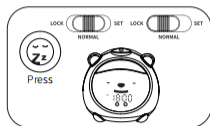


Snooze: in LOCK and NORMAL mode, when the alarm clock starts, press "Zz" to **snooze and starts again in 9 minutes** (Snooze 5 times at most).

4. Play Function


(1) Play function setting

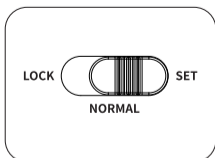


Toggle the switch to **SET mode**;

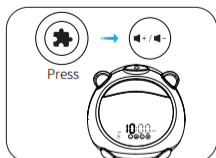


- ① Press "⚙️" to **set Hour** ;
- ② Press "🔊/🔊-" to **adjust number**;

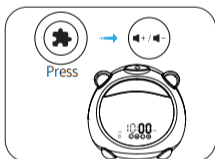


- ① Press "⚙️" again to **set Minute**;
- ② Press "🔊/🔊-" to **adjust number**;

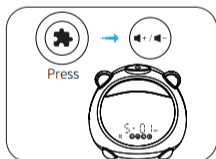



- ① Press "⚙️" again to **set Sound**;
 - ② Press "🔊/🔊-" to **adjust type**;
- *10 sound effects: S-01~S-10.
Sound OFF: S-00.

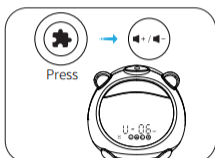

- ① Press "⚙️" again to **set Volume**;
 - ② Press "🔊/🔊-" to **adjust level**;
- *10 adjustable volume levels: U-01~U-10.

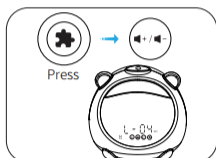

- ① Press "⚙️" again to **set Night Light Brightness**;
 - ② Press "🔊/🔊-" to **adjust level**;
- *The light color: Yellow (Light colours can be selected in the app).
5 adjustable brightness levels: L-01~L-05.
Light OFF: L-00.

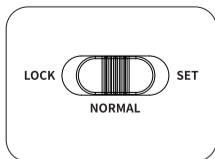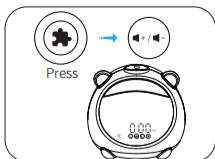


Light turns on prior to the alarm time:

- ① Press "⚙️" again to **set Minute**;
- ② Press "🔊 / 🔊-" to **adjust number**;
- * Select the lighting-alarm time rang (5-120 minutes) If you set it to 0 minute, the light will not turn on prior to the alarm time.
- ③ Press "⚙️" finally to **finish the setup**;

After the setting is completed, toggle the switch to NORMAL or LOCK mode.

(2) Play alarm ON/OFF/stop/delay

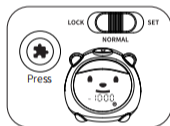

- ON :** ① toggle the switch to **NORMAL mode** ;
- ② press "⚙️" to **turn on the Play alarm**; (the set Play alarm time and "⚙️" icon in the display flashes for 3 second);



OFF: press "⚙️" again to **turn off the Play alarm**; (the "⚙️" icon disappears.)



Stop: when the alarm clock starts, press "⚙️" to **stop the Play alarm** ;


*The alarm clock will automatically stop after 15 minutes if no response. This will not affect its operation in the next day. (Note: Automatic alarm stop time can be adjusted on the App.)




Snooze: in LOCK and NORMAL mode, when the alarm clock starts, press "Zz" to **snooze and starts again in 9 minutes** (Snooze 5 times at most).

5. Nap Function


(1) Nap function setting

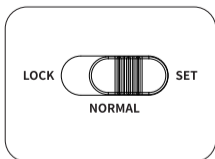


Toggle the switch to **SET mode**;

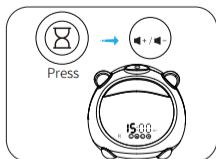


- ① Press "⌚" to **set Minute** ;
- ② Press "🔊/🔊-" to **adjust number**;
(Select countdown range:0-99 minutes.)

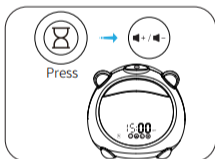


- ① Press "⌚" again to **set Second**;
- ② Press "🔊/🔊-" to **adjust number**;

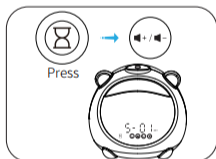


- ① Press "⌚" again to **set Sound**;
- ② Press "🔊/🔊-" to **adjust type**;
*10 sound effects: S-01~S-10.
Sound OFF: S-00.

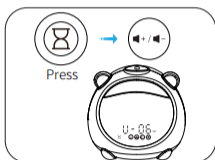

- ① Press "⌚" again to **set Volume**;
 - ② Press "🔊/🔊-" to **adjust level**;
- *10 adjustable volume levels: U-01~U-10.

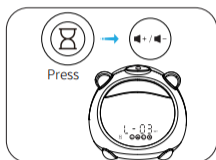


- ① Press "⌚" again to **set Night Light Brightness**;
- ② Press "🔊/🔊-" to **adjust level**;
*The light color: Red (Light colours can be selected in the app).
5 adjustable brightness levels: L-01~L-05.
Light OFF: L-00.
- ③ Press "⌚" finally to **finish the setup**.

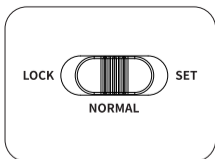


After the setting is completed, toggle the switch to NORMAL or LOCK mode.

(2) Nap ON/OFF

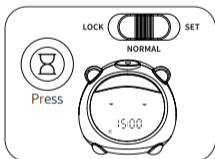


ON : ① toggle the switch to **NORMAL mode** ;
 ② press "⌚" to **turn on the Nap alarm**;

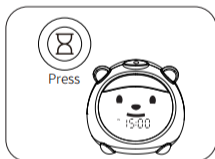


OFF: press "⌚" again to **turn off the Nap alarm**; (the "⌚" icon disappears.)

(3) Nap pause/resume

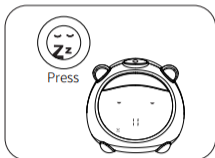

Pause: when the nap function is enable, press "Zz" to **pause the nap alarm** ;

*If the pause time lasts longer than the setting time, the countdown will automatically stop.

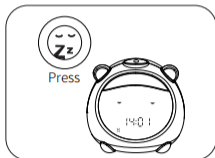


Resume: press "Zz" again to **resume the nap alarm**.

6. Volume Adjustment

When the alarm is activated in NORMAL mode or SET mode, the volume can be adjusted.


- ① NORMAL mode: When the alarm is sounding, press " ◀+ / ▶- " to adjust the volume. Note: Under LOCK mode, volume can not be adjusted.
- ② SET mode: When setting the alarm, volume can be adjusted. (Set the volume refer to page 22.)

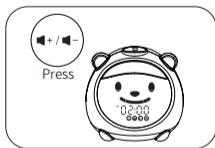

7. Night Light/Display Brightness Adjustment

① Adjust Night Light Brightness

When the alarm is activated in NORMAL mode , press " ☀ / ☀ " to adjust the night light brightness. Under LOCK mode, night light only can be turned on/off, brightness of night light can not be adjusted.




② Adjust Display Brightness


When the alarm is activated in NORMAL mode or LOCK mode, press " ☀ " to adjust the display brightness.

5 brightness levels: 10%-40%-70%-100%-OFF;

The default brightness setting: 100%

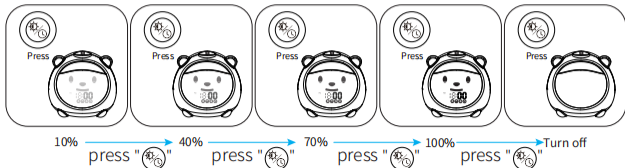

Specification

Product name	Dekala Kids Alarm
Product size	103*104*102mm
Product weight	168g
Material	PC+ABS+Silica gel for children
Child Lock	support
Light	Warm white + RGB
Volume	10 levels
Stereo speaker	2W 8Ω
Power input	5V 1A
Snooze time	9MIN
Maximum snooze times	5times
Coin-cell battery	CR2032
Certification	

Notes

- Place the product on a stable, horizontal, and non-smooth surface.
- Do not disassemble the product as it is composed of fragile components.
- Do not use the product in rooms where the temperature is below 0°C or above 40°C.
- Please wipe the product with a soft cloth.
- Do not use abrasive cleansers, cleansing pads or cleansers such as alcohol or acetone, as this may damage the surface of the product.

1. Why can't I turn the alarm clock on ?

Connect the adapter to activate the alarm clock for the first use.

2. Does the alarm clock need to be connected to the adapter all the time to work ?

The STC-001-S model does not have a built-in battery, so it needs to be connected to a power supply via USB all the time.

3. Why didn't the alarms go off ?

Check the display to confirm there is a wake up alarm icon in the normal mode. Then press the wake up alarm button to check if the set alarm time is correct or the sound is set to S-00.

4. Can the light color be changed ?

The light colors can be changed, but you need to change it in the app. (There are 7 different colors in total.)

5. How many kinds of sound effect are there and can I change it ?

There are 10 kinds of sound effect can be changed.