

DIAMOND WHEEL WEIGHTS MOUNTING TOOLS INSTRUCTION


DOC #15-2082

WARRANTY + SERVICE 888.960.0364
PARTS 888.960.0361



DIAMONDMOWERS.COM

WHEEL WEIGHT MOUNT TOOLS INSTRUCTION

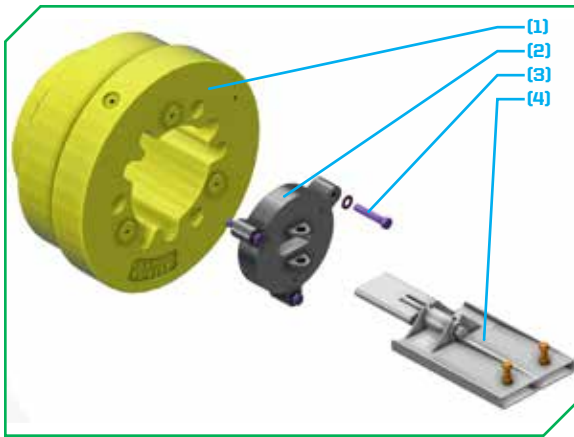


FORK TOOL WITH INSERT


⚠ WARNING

Wheel weights are heavy and can cause severe injury or death. Use appropriate safety practices to avoid injury.


- Place the insert tool (2) (part #24-0444) into the wheel weight (1) and slide it in until it is fully seated.

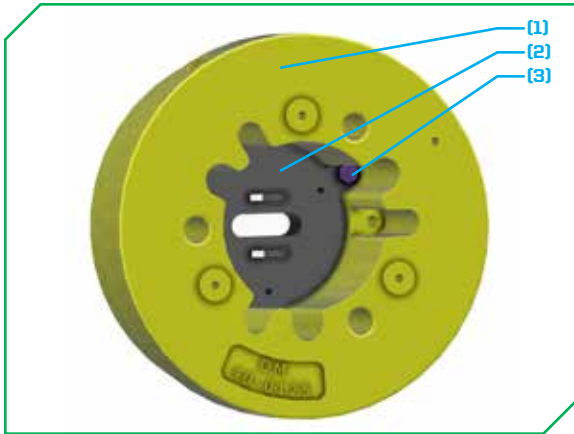

- Secure the insert tool (2) to the wheel weight (1) with the supplied hardware (3).
 - Hardware (3) consists of (3) bolts (part #11-2130) and (3) flat washers (part #11-0070).
- Slide the forks of your forklift together in the center of their adjustment.

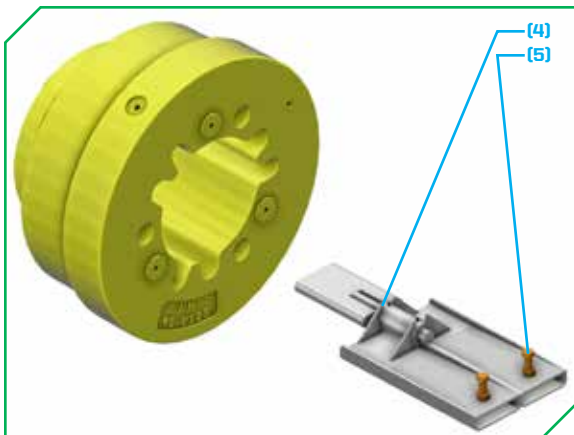

- Slide the fork tool (4) (part #24-0118) onto the forklift forks until fully seated.
 - Secure the fork tool (4) in place by tightening down the tension bolts (5).
- Drive the fork tool's (4) front spade into the slot in the center of the insert tool (2), and lift the wheel weight (1) / insert tool (2) assembly off of the ground.
- Center the wheel weight (1) on the rim, and secure it in place with its supplied hardware at the (3) mounting locations (6) provided on the wheel weight (1).
 - **NOTE:** The fork tool (4) allows the wheel weight (1) to be rotated for easier installation.
 - Torque the hardware securing the wheel weight (1) to the rim to the specified torque values in your parts book or operator's manual.


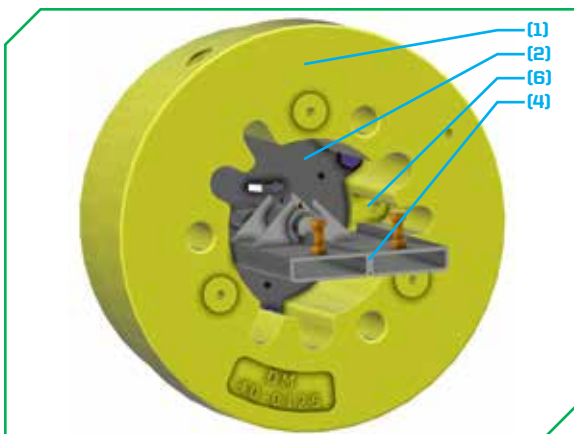


- Back the fork tool (4) out of the insert tool (2), and remove the insert tool (2) with its hardware (3) from the wheel weight (1).
 - **NOTE:** This process may be repeated for additional / subsequent wheel weights (1).

⚠ WARNING

Failure to center and secure wheel weight(s) to the rim will result in failure and extreme damage.

WHEEL WEIGHT MOUNT TOOLS INSTRUCTION

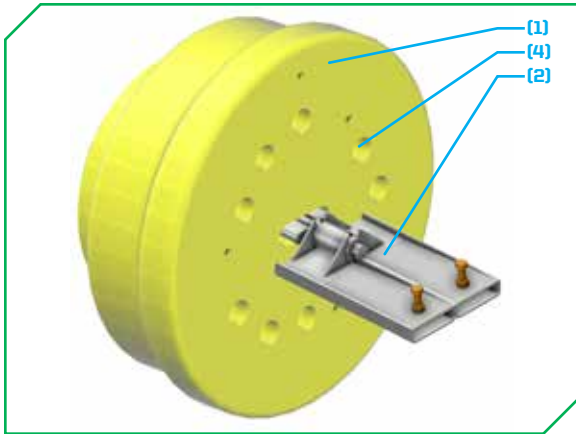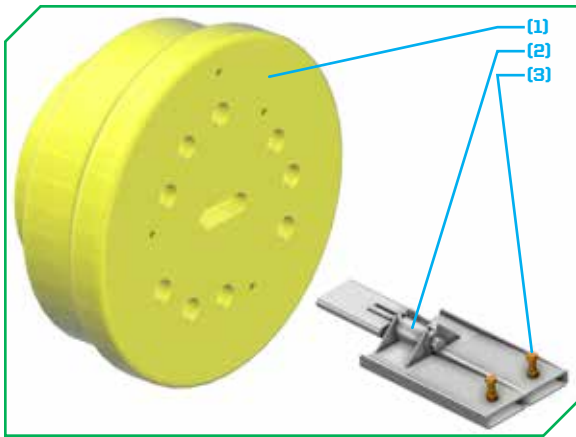

FORK TOOL ONLY

⚠️ WARNING

Wheel weights are heavy and can cause severe injury or death. Use appropriate safety practices to avoid injury.

- Slide the forks of your forklift together in the center of their adjustment.
- Slide the fork tool ⁽²⁾ onto the forklift forks until fully seated.
 - Secure the fork tool ⁽²⁾ in place by tightening down the tension bolts ⁽³⁾.
- Drive the fork tool's ⁽²⁾ front spade into the slot in the center of the wheel weight ⁽¹⁾ and lift it off of the ground.
- Center the wheel weight ⁽¹⁾ on the rim, and secure it in place with its supplied hardware at the mounting locations ⁽⁴⁾ provided on the wheel weight ⁽¹⁾ that match the hole pattern on your rim.
 - **NOTE:** The fork tool ⁽⁴⁾ allows the wheel weight ⁽¹⁾ to be rotated for easier installation.
 - Torque the hardware securing the wheel weight ⁽¹⁾ to the rim to the specified torque values in your parts book or operator's manual.
- Back the fork tool ⁽⁴⁾ out of the wheel weight ⁽¹⁾.
 - **NOTE:** This process may be repeated for additional / subsequent wheel weights ⁽¹⁾.

⚠️ WARNING

Failure to center and secure wheel weight(s) to the rim will result in failure and extreme damage.