



INFLATABLE STAND UP  
PADDLE BOARD

---

User manual



## WARNING

For your own safety and that of your equipment, make sure to take the following precautions. Failure to follow warning notices and instruction may result in property damage, serious injury or death.

## GENERAL INFORMATION

---

This manual has been compiled to help you operate your Inflatable Stand Up Paddle Board (SUP) with safety and pleasure. It contains details of the SUP, the equipment supplied, and information on their operation. Please read it carefully and familiarize yourself with the SUP before using it. Save these instructions for future reference.

## SAFETY

---


There is a risk of serious injury or death from drowning. Paddling can be dangerous and physically demanding. Respect the natural force of water and use your common sense when paddling. The user of this product acknowledges, understands, and assumes the risks involved in paddle sports. Observe the following warning labels and safety standards carefully whenever using this product.

- **Never paddle alone**
- **Always use the safety leash that connects you to the board**
- **Only paddle in good weather**
- **Pay attention to changes in the weather**

# WARNING LABEL INSTRUCTIONS

---

## MANDATORY INSTRUCTIONS

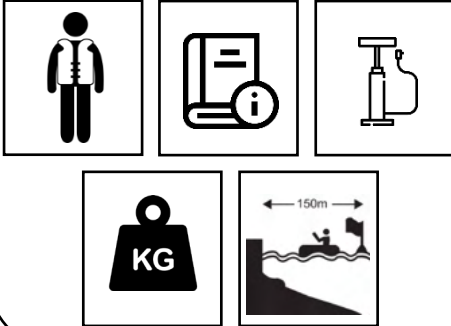

- Always wear a life jacket or personal floating device.
- Read this user manual before first time use
- Fully inflate the SUP to the recommended level
- Follow of the max load capacity
- Keep a safe distance to shore (150 m)


## PROHIBITION INSTRUCTIONS



- Do not use in rivers with strong currents
- Do not use in breaking waves
- Not suitable for children 12 years and below

# SUP OVERVIEW

---

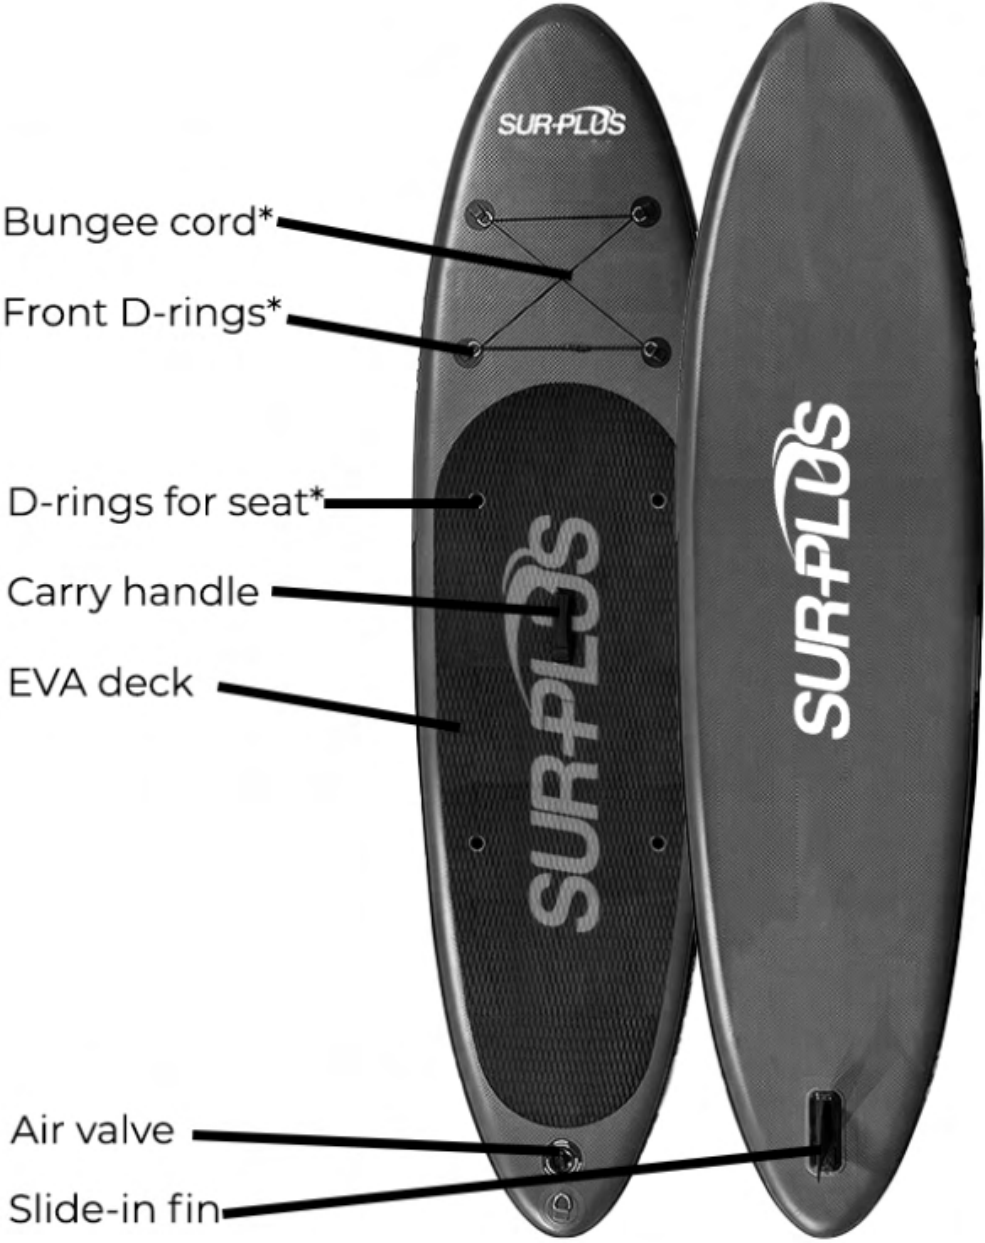

\*Actual configuration may vary upon different models.

# PACKAGE CONTET

---


1x Paddleboard  
1x Paddle  
1x Hand pump  
1x Fin

# INSTRUCTION FOR ASSMBLY AND DISASSEMBLY


---

## ASSEMBLY

1. Choose a clean and smooth surface and unroll the paddleboard  
**IMPORTANT! Store the paddleboard at a minimum of 20°C for 24 hours before inflation**
2. Connect the pump hose to the gauge housing and secure it tightly

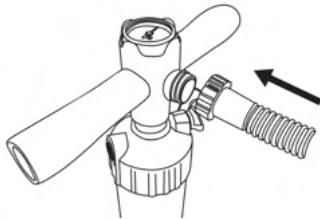

3. Open the valve cap by twisting counterclockwise. Remove any debris, sand or dirt before releasing.
4. Push valve button in and turn counterclockwise 90 degrees till it pops up and is in the "OUT" position.
5. Insert the pump hose and twist it 45 degrees clockwise to lock it in place. Inflate until you reach the required pressure.

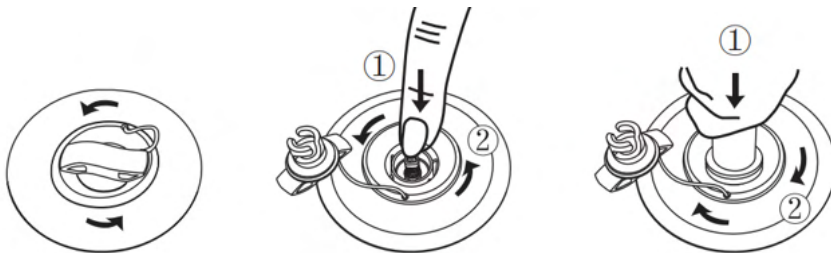

## PRECAUTION AND TIPS


- Electric Pumps can be used to inflate board up to 80-90%. However, the remaining pressure required should be achieved by using the hand pump to avoid over-inflation.
- Do not use air compressors as this voids warranty of board.
- A small amount of air can leak out after 2-3 days. In which case, pump it up to the correct pressure
- Before long trips, ensure the board has been inflated and has maintained pressure for a minimum of 24 hours.



12PSI minimum for proper board operation and 15PSI maximum. Over inflation will void your warranty.  
**Prolonged exposure to sunlight can reduce the lifespan of the paddleboard. Do NOT leave the paddleboard in direct sunlight for more than 1 hour after use.**


## SLIDE-IN FIN.

- Once the board is inflated, slide in the large fin to its base and insert the push-in pin.

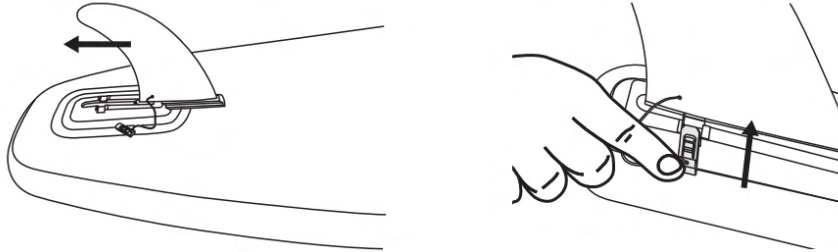


## DISASSEMBLY

1. Remove the slide-in fin from its base
2. Open the valve cap by twisting counterclockwise. Remove any debris, sand, or dirt before releasing.
3. Push valve button in and turn clockwise to lock it in "DOWN" position.

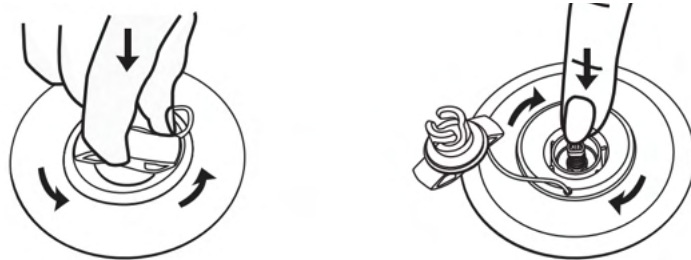

4. Roll your board nose to tail, pushing all the air out as you roll.
5. When all the air is pressed out; close the valve cap and tighten in clockwise direction to lock in place.

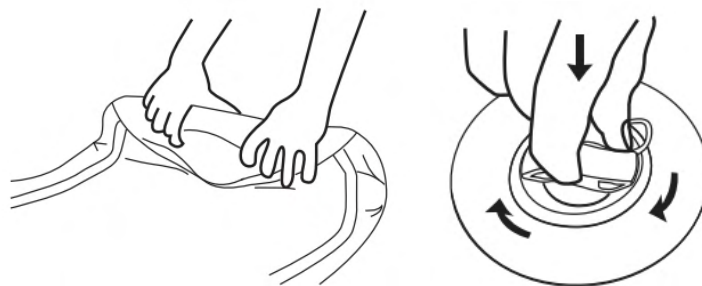

# MAINTENANCE TIPS

---


These are general tips for extending the lifespan and condition of your paddleboard.

- Always rinse the paddleboard with freshwater use
- Allow the paddleboard to completely dry before folding
- Use a mild soap for cleaning, never strong detergents
- Store the paddleboard in a dry, cool environment, preferably folded into the SUP bag provided
- Never leave the paddleboard inflated in direct sunlight for more than 1 hour after use

## HOW TO FIX A LEAKING VALVE


Use the provided air valve spanner to tighten the valve.

1. Inflate your paddleboard to max air pressure (1 bar / 15psi)
2. Put the air valve spanner into the valve and turn clockwise to tighten the valve

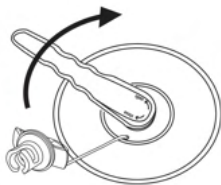


## RE-INSTALL OR REPLACE VALVE

1. Deflate your paddleboard completely
2. Remove the dust cap and insert the air valve spanner in the valve and twist counterclockwise to remove the valve.

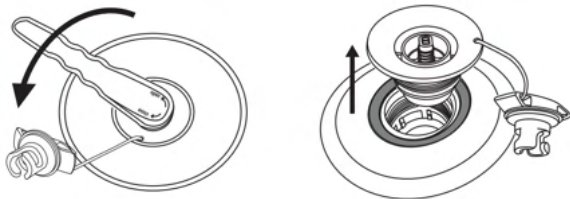

3. Check the rubber ring to make sure that it is in the correct position, tight around the valve without any debris.

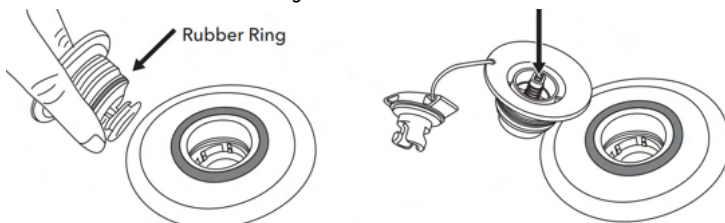

4. Make sure the pin spring is functional and does not have any cracks. Also make sure there are no strings from the stitching material in the way.
5. Fit the valve back into the paddleboard. Note that the bottom piece is not attached to anything
6. Align all threads and twist to tighten. Do this by hand first and then use the air valve spanner to tighten.



# WARRANTY

---

Surplus warrants this product to be free from major defects in material or workmanship to the original purchaser for a period of five (5) years from the date of purchase. This warranty is subject to the following limitations.

1. The warranty is valid only when this product is used for normal recreational activities and does not cover products used in rental or school operations.
2. A Surplus reseller will make the final warranty determination, which may require inspection and/or photos of the equipment, which clearly show the defect(s). If necessary, this information must be sent to the Surplus reseller with prepaid postage.
3. If a product is deemed to be defective by the Surplus reseller, the warranty covers the repair or replacement of the defective product only. Surplus will not be responsible for any costs, losses, or damages incurred as a result of loss or misuse of this product.
4. This warranty does not cover damage caused by misuse, abuse, neglect, normal wear and tear including, but not limited to punctures, damage due to excessive heat exposure, damage caused by improper handling and storage, damage caused by use in waves or shore break, board breakage caused by filling or crashing in surf conditions, or damage caused by anything other than defects in material and workmanship.
5. DO NOT exceed maximum load capacity.
6. This warranty is void if any unauthorized repair, change or modification has been made to any part of the equipment.
7. The warranty for any repaired or replacement equipment is good from the date of the original purchase only.
8. The original purchase receipt must accompany all warranty claims. The name of the reseller and date of purchase must be clear and legible.
9. There are no warranties that extend beyond the warranty specified here in.