


User's Manual for Depository Safe DX Series

Read all instructions before using this safe.

WARNING

- For security purposes, change the factory default code as soon as possible.
First factory default code is: 168
Second factory default code is: 12345678
- Test registered pin code a few times before closing the door.
- Avoid leaving the safe door open and unattended; it will allow unauthorized individuals to reprogram the safe gaining full access to the safe and its contents.
- Store emergency keys in a secure place; NOT inside of the safe.
- Be careful when opening and closing the depository slot.
- Keep children away from safe; they should not play with or around the safe at anytime.
- Note: Barska is not responsible for any installation damages and any lost or stolen contents.

PARTS OF THE SAFE

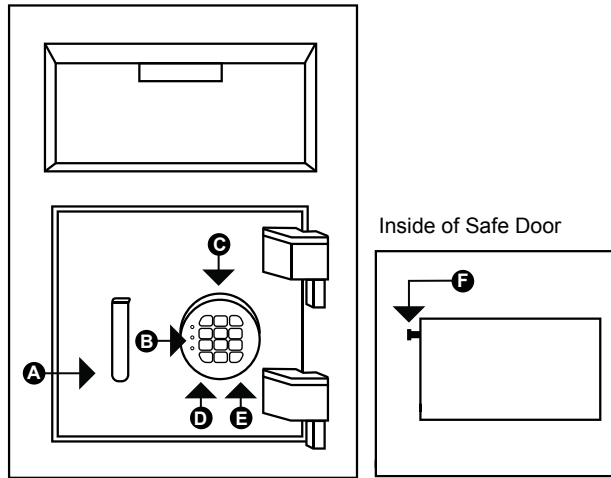

Inside of Safe Door

Actual model may vary

- A. Handle
- B. Indicator Lights
- C. Key Pad
- D. Battery Compartment
(Located behind key pad)
- E. Emergency Key Access
(Located behind key pad)
- F. Initialization Button

BATTERY & KEY ACCESS

Push down on button located under the key pad and turn keypad cover counter clockwise.


DO NOT pull on the wires or touch the electronic components.

Install Battery

Insert one new 9V alkaline battery into the battery compartment and restore keypad cover.

Key Access

Insert access key into key slot and turn clockwise to open safe.

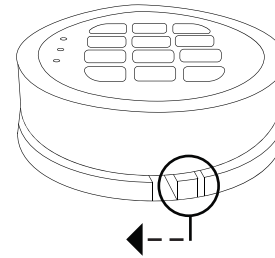

PIN CODE REGISTRATION

Safe retains 2 pin codes

- First factory default code is: 168
- Second factory default code is: 12345678

Changing First Pin Code

1. Open Safe with either Pin Code or Emergency Key.
2. Press initialization button located inside of the safe, lock will beep twice and yellow indicator light will be lit.
3. Enter desired Pin Code (1-8 Digits) then press “*” button. 2 short beeps will be heard and yellow indicator light will disappear.
4. Use the handle to extend the safe bolts and enter registered pin code then press “#” button.

If safe can be opened registration was successful, if safe doesn't open registration was unsuccessful, please follow steps in [Pin Code Registration](#) to register Pin Code.

Changing Second Pin Code

1. Open Safe with either Pin Code or Emergency Key.
2. Press “00” on the keypad, then press the initialization button located on the inside of the safe, lock will beep twice and yellow indicator light will be lit.
3. Enter second desired Pin Code (1-8 Digits) then press “*” button. 2 short beeps will be heard and yellow indicator light will disappear.
4. Use the handle to extend the safe bolts and enter registered pin code then press “#” button.

If safe can be opened registration was successful, if safe doesn't open registration was unsuccessful, please follow steps in [Pin Code Registration](#) to register Pin Code.

OPENING AND CLOSING SAFE WITH PIN CODE

Safe can only be opened with emergency keys.

Open

1. On the key pad enter in either of the registered Pin Codes and press and release “ # ” to confirm.
2. Turn the handle to the unlocked position and pull safe door open.

Close

Close the safe door and turn the handle to the locked position.

DUAL PIN CODE ACCESS

This feature will require entering both Pin Codes to access the safe.

Enabling Dual Pin Code Access

Enter “ * # 00 # ” followed by Pin Code & “ # ” button.

Disable Dual Pin Code Access

To disable Dual Pin Code Access enter “ * # 11 # ” followed by Pin Code 1 & “ # ” button, then enter Pin Code 2 & “ # ” button.

LOCK OUT MODE

- If wrong code is entered 3 times safe will be in lock out mode.

Lock Out Mode: Cannot use any functions on the safe for 15 min, please leave batteries plugged into safe and wait 15 min for insert key to unlock safe.

LOW BATTERY WARNING

If red indicator light is constantly lit while accessing and using the safe, this indicates that the batteries are low, please replace battery as soon as possible.

Note: Safe may still be opened in low battery state depending on the voltage. If safe cannot be opened please use emergency key. All registered Pin Codes remains saved.

CARE AND MAINTENANCE

- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent from falling and causing damage or injury.
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service.
- DO NOT use chemicals or cleaning agents to clean the safe.

MOUNTING INSTRUCTIONS

The safe may be mounted down to the floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

Floor Mounting

- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete).
- Measure the location of the pre-set drill holes; mark their exact position onto the floor.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.



1 YEAR LIMITED WARRANTY

Safe

BARSKA warrants this new safe to be free of original defects in material and/or workmanship under normal use for a period of twelve (12) months from the date product is received by purchaser. This warranty does not include damage caused by improper installation or maintenance. Damage from misuse, abuse, accident (such as dropping), normal wear and tear, fire, flood, or acts of nature. Damage from service or repairs other than those performed by BARSKA. Labor, cost and shipping charges for the removal and replacement of defective parts beyond the initial twelve-month warranty period. All transportation and shipping charges. Removing or altering the seal under any circumstances will automatically void the warranty.

This warranty is limited to original purchaser and is not transferable. This warranty applies only to products purchased in the United States.

Please email info@barska.com or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns. The RMA number must appear on the outside of the shipping package. Product must be packed carefully and sturdily in its original packaging to prevent damage in transit and returned freight pre-paid to:

BARSKA OPTICS
Repair Department
855 Towne Center Drive
Pomona, CA 91767

Please include all of the following when returning BARSKA products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
2. Purchase receipt or Proof of Purchase. (Original/Copy)
3. A brief explanation of the defect.
4. A Check/Money Order of \$60.00 to cover inspection, shipping and handling.
*Please allow 6-8 weeks for delivery.

BARSKA will examine and test returned product and repair or replace defective part(s) or units with new part(s) or a new unit if necessary within the warranty period. Purchaser is required to remit \$60.00 to BARSKA for return shipping and handling at time product is returned. If repair is required after warranty period expiration, purchaser will be charged for replacement parts and return shipping.

BARSKA® Optics shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA® Optics warranties.