


User's Manual for Digital Keypad Biometric Safe

Read all instructions before using this safe.

WARNING

- Safe can be opened by either Fingerprint, PIN code, and/or Override Keys.
- When you start using the safe register both Fingerprint and PIN code.
- Register at least two different fingerprints and test a few times before closing the safe door.
- Avoid leaving safe door open and unattended; it will allow unauthorized individuals to add their fingerprints and/or reprogram the safe, gaining full access to the safe and the contents.
- Test the Override Keys and store them in a secure place, NOT inside of the safe.
- To maximize the security and performance of the safe, test registered fingerprints every 6 months.

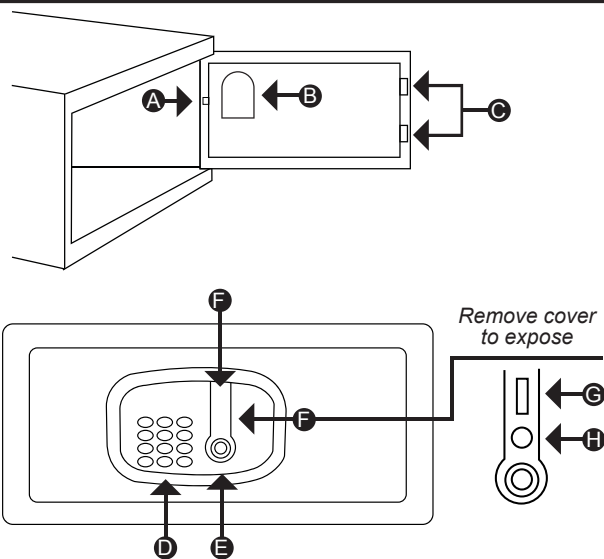


- A. LED Light
- B. Battery Compartment
- C. Bolts
- D. Keypad
- E. Fingerprint Scanner
- F. Cover
- G. USB Port
(Manufacture Use Only)
- H. Override Key Access

GETTING STARTED

1. Remove all accessories that come with safe.
2. Open safe door and remove the battery cover.
3. Insert 4 AA batteries, pay attention to the polarity of the batteries and put the battery cover into place.
4. Remove the corner guard from the safe door. See diagram

Note: Do not mix new and old batteries. Do not use rechargeable batteries or any other type of non-alkaline battery.

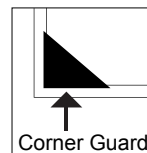

OVERRIDE KEY

To unlock the safe using override key, remove the override key cover, insert the keys and turn counter clockwise to retract the bolt. The safe will be unlocked.

Test the override keys and store the keys properly. Please note do not store the override key inside the safe.

FINGERPRINT REGISTRATION

You will be able to program 20 fingerprints.

1. When door open and bolt is retracted, press "CLEAR CLEAR" on keypad and you will see "PrOC" on the screen, press "LOCK" on keypad. The fingerprint scanner will light up to start fingerprint registration process.
2. Put your fingerprint on scanner firmly and you will hear beep then you can release, repeat 3 times, you will see "dONE" on the display and follow by the number. Now your fingerprint is registered. The number is showing how many fingerprints are registered. If the display show "Error", the registration is not success, please repeat the registration process.

Safe can program up to 20 fingerprints. The screen will show "Full" when there are 20 registered fingerprints.

TEST REGISTERED FINGERPRINT

1. With the safe door open, press "LOCK" to have the bolt extended in lock position.
2. Press your fingerprint on scanner to wake up the scanner, and press registered fingerprint on scanner, the bolt will be retracted and display shows "OPEN", "OPENEd"

DELETE REGISTERED FINGERPRINTS

When safe unlock, input "CLEAR CLEAR 763 LOCK" on keypad. ALL the registered fingerprints are deleted.

PIN CODE REGISTRATION

You will be able to program one pin code. (Pin Code can be 3-6 digits, Default Pin code: 123456)

You will be able to change the pin code by repeating below registration process.

Factory default pin code is 123456, please follow following procedure to register new pin code. The old pin code will be over-write after you register new pin code.

1. When door open and bolt is retracted, input "CLEAR CLEAR 68 LOCK" on keypad, and you will see "NEU" on the screen.
2. Input new 3-6 digits pin code and press "LOCK", the bolt will be extended, you will see "CLOSEd" on the screen. Now your pin code is registered.

TEST REGISTERED PIN CODE

1. With the safe door open, press "LOCK" to have the bolt extended in lock position.
2. Input pin code on the keypad, the bolt will be retracted and display shows "OPEN" and "OPENEd".

UNLOCK THE SAFE

1. With Pin Code: press the pin code on the keypad, the bolt will be retracted and display shows "OPEN" and "OPENEd".
2. With Fingerprint: press your fingerprint on scanner to wake up the scanner, and press registered fingerprint on scanner, the bolt will be retracted and display shows "OPEN", "OPENEd"

When you enter the wrong code or wrong fingerprint, the display will show "Error"

LOCK THE SAFE

The safe can be unlocked by Press "LOCK" or press any finger on fingerprint scanner.

1. With the keypad: Please hold the door closed and press "LOCK". The bolt will be extended and safe is locked, the display shows "CLOSE" and "CLOSEd".
2. With the Fingerprint: Please hold the door closed and press any finger on fingerprint scanner. The bolt will be extended and safe is locked, the display shows "CLOSE" and "CLOSEd".

SOUND OPTION

When the safe is open and bolt is retracted,

Sound Off

Press " CLEAR CLEAR 0530 LOCK", the display shows "dONE", now the Sound is off

Sound On

Press " CLEAR CLEAR 0531 LOCK", the display shows "dONE", now the Sound is on

LOCK OUT MODE

If the wrong pin code is entered 4 times safe will enter lock out mode.

User will need to wait 15 min to use safe again; or user can open safe with override key.

LOW BATTERY WARNING

With safe locked you can push on keypad and press "LOCK" key; it will show BA-LO.

Means safe battery is low and should be changed as soon as possible.

CARE AND MAINTENANCE

- To maximize the security and performance of the safe, keep Fingerprint Scanner clean; use a dry cloth to remove any smudges or prints off the Fingerprint Scanner after each use
- Test registered fingerprints and PIN code every 6 months
- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock
- Secure safe in a proper area to prevent from falling and causing damage or injury
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service
- DO NOT use chemicals or cleaning agents to clean the safe

MOUNTING INSTRUCTIONS

The safe may be mounted to a wall or floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection

Wall Mounting

Do not mount the safe without anchoring to the wall

- Find the studs in the wall, at your desired location. Most studs are 16 inches or 24 inches apart

- Check the wall for concealed wires or pipes
- Measure the location of the pre-set drill holes; mark their exact position onto the wall ensuring that the studs or anything else behind will not interfere
- Drill the appropriate size holes for the anchors you are using
- Carefully press the anchor into the holes at this time
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely

Floor Mounting

- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete)
- Measure the location of the pre-set drill holes; mark their exact position onto the floor
- Drill the appropriate size holes for the anchors you are using
- Carefully press the anchor into the holes at this time
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely



1 YEAR LIMITED WARRANTY

Safe

BARSKA warrants this new safe to be free of original defects in material and/or workmanship under normal use for a period of twelve (12) months from the date product is received by purchaser. This warranty does not include damage caused by improper installation or maintenance. Damage from misuse, abuse, accident (such as dropping), normal wear and tear, fire, flood, or acts of nature. Damage from service or repairs other than those performed by BARSKA. Labor, cost and shipping charges for the removal and replacement of defective parts beyond the initial twelve-month warranty period. All transportation and shipping charges. Removing or altering the seal under any circumstances will automatically void the warranty.

This warranty is limited to original purchaser and is not transferable. This warranty applies only to products purchased in the United States.

Please email info@barska.com or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns. The RMA number must appear on the outside of the shipping package. Product must be packed carefully and sturdily in its original packaging to prevent damage in transit and returned freight pre-paid to:

BARSKA OPTICS
Repair Department
855 Towne Center Drive
Pomona, CA 91767

Please include all of the following when returning BARSKA products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
2. Purchase receipt or Proof of Purchase. (Original/Copy)
3. A brief explanation of the defect.
4. A Check/Money Order of \$40.00 to cover inspection, shipping and handling.
*Please allow 6-8 weeks for delivery.

BARSKA will examine and test returned product and repair or replace defective part(s) or units with new part(s) or a new unit if necessary within the warranty period. Purchaser is required to remit \$40.00 to BARSKA for return shipping and handling at time product is returned. If repair is required after warranty period expiration, purchaser will be charged for replacement parts and return shipping.

BARSKA® Optics shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA® Optics warranties.