

## USERS GUIDE

**K5304- G2009**

---



## Content

|  |    |
|--|----|
| Introduction .....                       | 3  |
| 1. Dimensions .....                      | 4  |
| 1.1 Material and color .....             | 4  |
| 2. Function and button definition .....  | 5  |
| 2.1 Function description .....           | 5  |
| 2.2 Display area .....                   | 5  |
| 2.3 Button definition .....              | 6  |
| 3. User reminder .....                   | 6  |
| 4. Installation instructions .....       | 7  |
| 5. Operation introduction .....          | 7  |
| 5.1 Power on/off .....                   | 7  |
| 5.2 User interface .....                 | 7  |
| 5.3 Speed .....                          | 8  |
| 5.4 Trip/ODO .....                       | 8  |
| 6. Error code .....                      | 10 |
| 7. User setting .....                    | 11 |
| 7.1 Preparation before startup .....     | 11 |
| 7.2 General setting .....                | 11 |
| 7.2.1 Wheel size setting .....           | 12 |
| 7.2.2 Speed limit setting .....          | 12 |
| 7.2.3 Backlight brightness setting ..... | 13 |
| 7.2.4 Metric and imperial setting .....  | 13 |
| 7.3 Power-on Password Setting .....      | 14 |
| 7.4 Restore Default Settings .....       | 14 |
| 7.5 Exit setting .....                   | 15 |
| 8. FAQ and Answers .....                 | 15 |
| 9. Quality Warranty And Coverage .....   | 15 |
| Appendix 1: Error Code .....             | 16 |



## Introduction


Dear users, in order to better operate your e-bike, please carefully read the manual of K5304 G2009 display before use. We will tell you every detail of display in the simplest language, including the installation and setting of hardware and the normal use of the display. At the same time, it helps you solve the possible confusion and obstacles.

## 1. Dimensions

### 1.1 Material and color

K5304 product housing is made of aluminum alloy and tempered glass material, and the color is black matte. The material of the housing is allowed to be used normally at the temperature of  $-40\text{ }^{\circ}\text{C}$  to  $80\text{ }^{\circ}\text{C}$ , and good mechanical properties can be guaranteed.

Figure and dimension drawing (unit: mm)

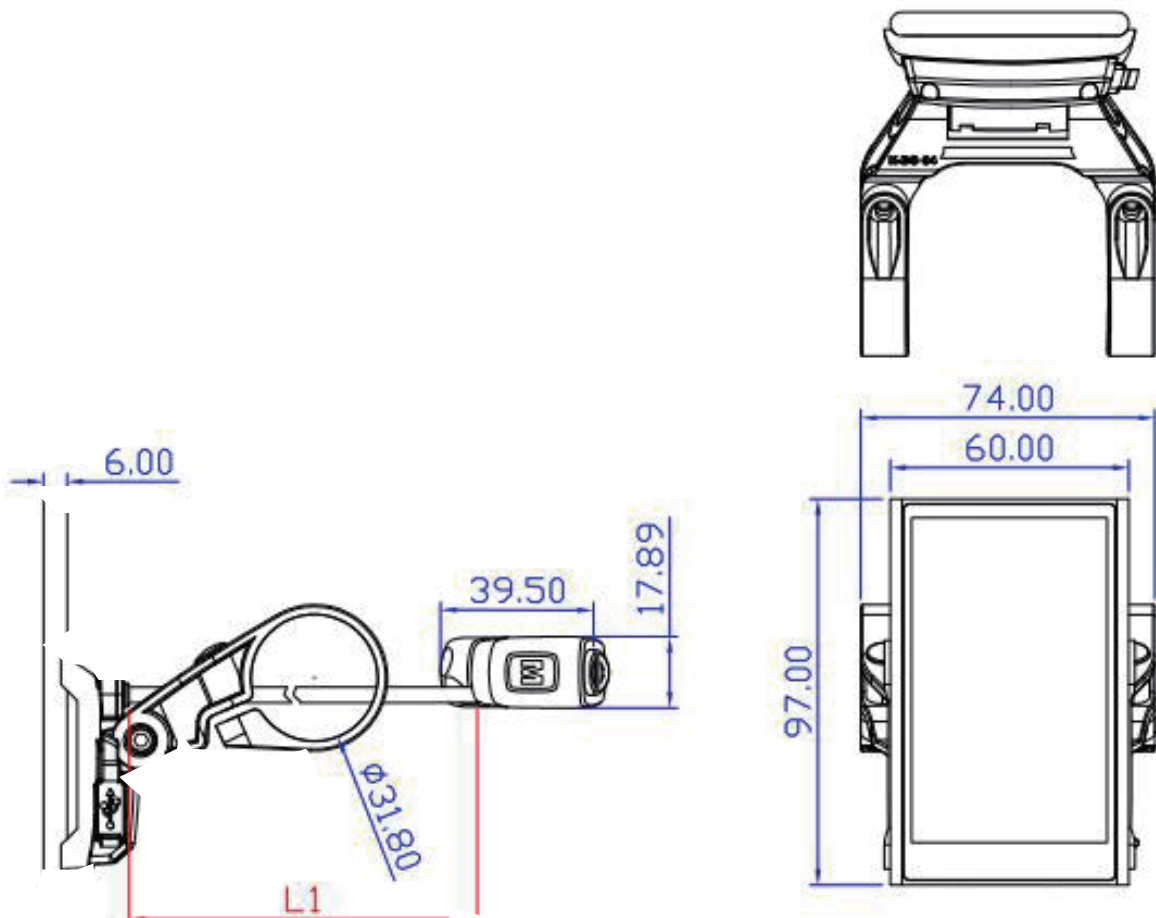

## 2. Function and button definition


### 2.1 Function description

K5304 provides you with a variety of functions and displays to meet your riding needs.

K5304 displays:





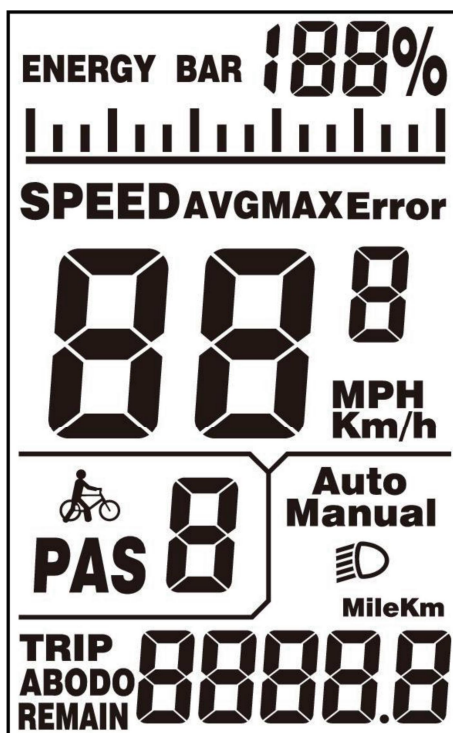

- ◆ Battery capacity
- ◆ Speed (including real-time speed display, maximum speed display and average speed display),
- ◆ Distance (including trip and ODO),
- ◆ 6KM/H
- ◆ Backlight turn on ( Boot normally on/Backlight Level: 1/ Adjustable Range: 1~3/)
- ◆ Error code
- ◆ Multiple setting parameters


### 2.2 Display area



K5304 display fully

## 2.3 Button definition

The main body of the button is made of PC material, and the button part is made of soft silicone material, all in black. There are three buttons on the K5304 display. Including power on/mode button , plus button  and minus button . In the following description  button is replaced by the text **【MODE】**.  button is replaced by the text **【UP】**.  button is replaced by the text **【DOWN】**

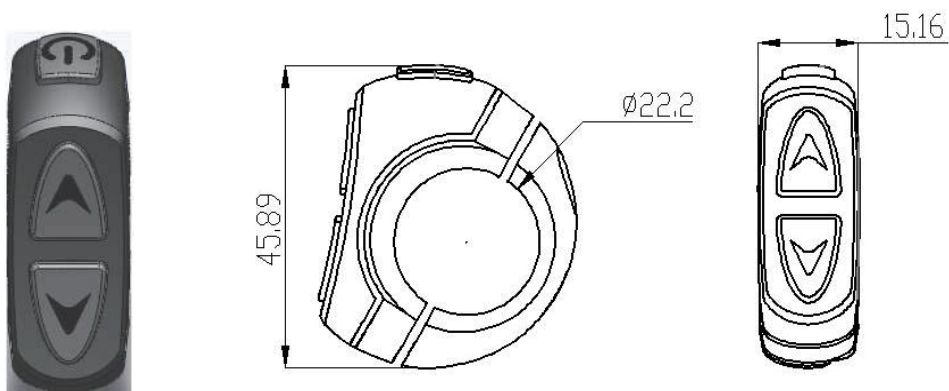

## 3. User reminder

Pay attention to safety during use. Do not plug and unplug the display when it is powered on.



Avoid bumping the display as much as possible.



The film used for the display is a waterproof film. Please do not tear it off to avoid affecting the waterproof performance of the display.



Please do not change the background parameter setting of the display at will, otherwise the normal riding cannot be guaranteed.



When the display cannot be used normally, it shall be sent for repair as soon as possible.

## 4. Installation instructions

Fix the display on the handlebar and adjust the appropriate angle of view. When the e-bike is powered off, the display can be completed by inserting the connector of the display and the connector corresponding to the controller.


## 5. Operation introduction

### 5.1 Power on/off

Long press **【MODE】** button, the instrument starts to work and provides the working power supply of the controller. In the power on state, long press **【MODE】** button to turn off the power supply of the e-bike. In the power off state, the display no longer uses the power supply of the battery, and the leakage current of the display is less than 1uA.

If the e-bike is not used for more than 10 minutes, the display will power off automatically.


### 5.2 User interface

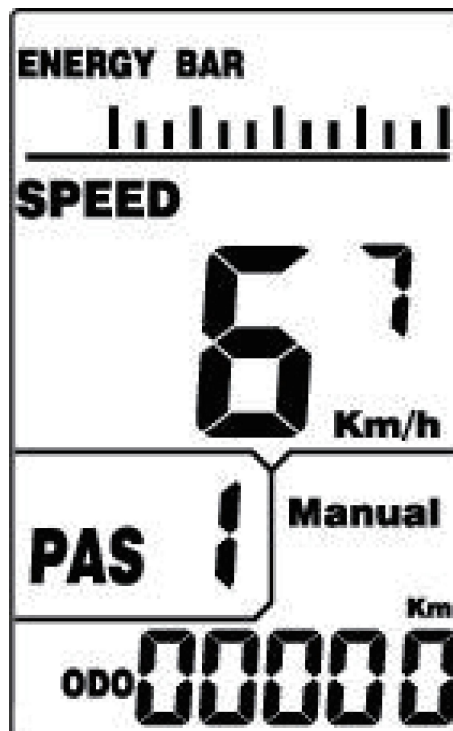

User Interface


## 5.3 Speed

Press the **[mode]** button to enter the speed switching interface, and speed (real-time speed), AVG (average speed) and max (maximum speed) are displayed respectively, as shown in the figure:

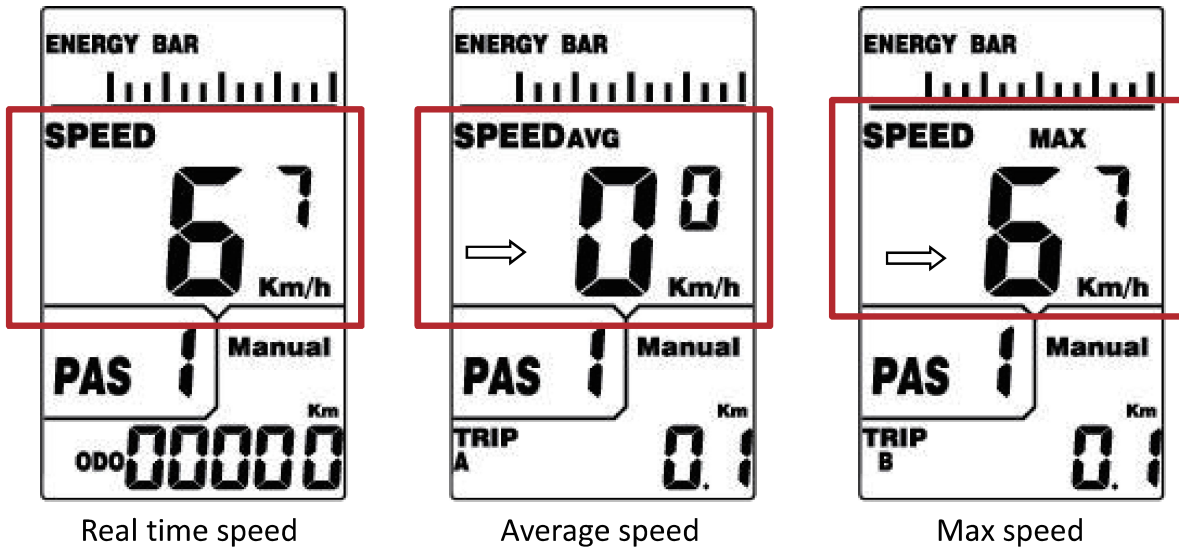


## 5.4 Trip/ODO

Press the **[mode]** key to switch the mileage information, and the indicate is: TRIP A(single trip) → TRIP B (single trip)→ ODO (cumulative mileage),as shown in the figure:

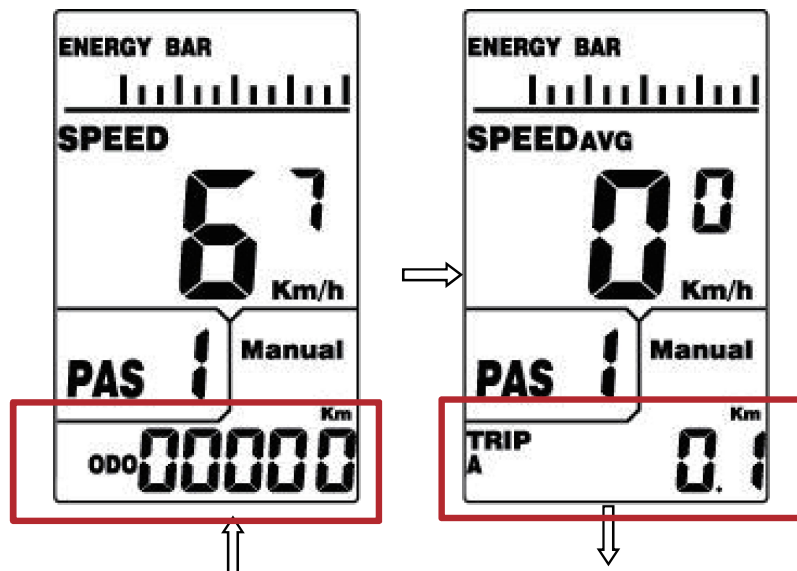




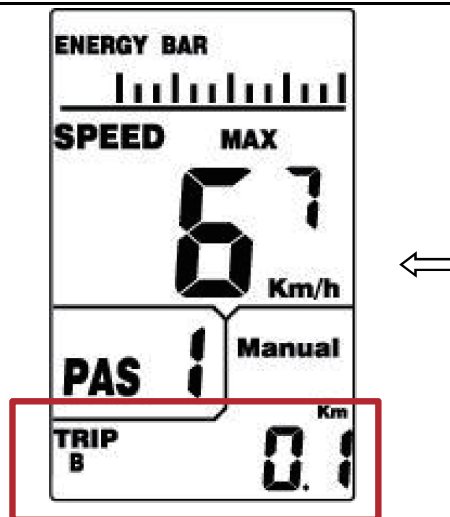

## 5.5 Walk Assist Mode


When the display is turn on, hold the [DOWN] button for 3 seconds, the e-bike will enter the state of walk assist mode. The e-bike travels at a constant speed of 6km/h. The screen will flash “WALK”.

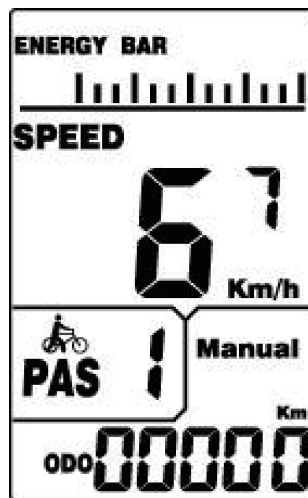


Walk interface

The walk assist mode function can only be used when the user pushes the e-bike. Do not use it when riding.


## 5.6 Headlight On/Off

Hold the [UP] button to display the interface as shown, and the icon  appears, indicating that the lights have been turned on. Long press the [UP] button again to turn off the lights.

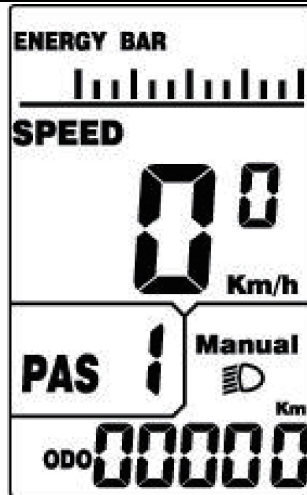

Headlight on interface

## 5.7 Battery indicator

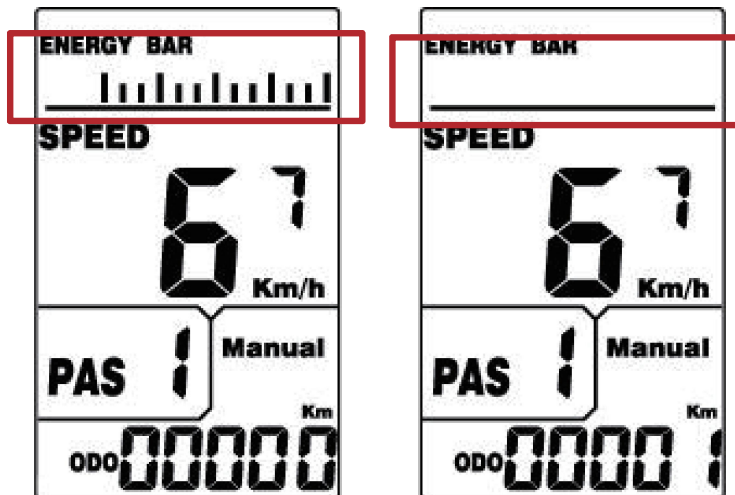

When the battery power is displayed as shown in the picture on the right, it indicates that the battery is under voltage. Please charge it in time!


## 5.8 Trip resetting

When the display is turned on and e-bike is not running, hold the [mode] and [down] buttons for 2 seconds at the same time, and the Trip(single mileage) of the display will be cleared.

## 6. Error code

When the e-bike electronic control system fails, the display will automatically display ERROR code.

For the definition of the detailed error code, see Schedule 1.

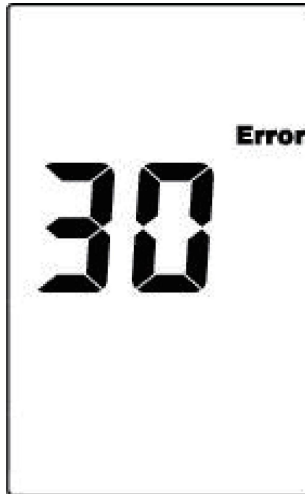

Error code interface

Only when the fault is eliminated, can exit the fault display interface, the e-bike will not continue to run after the fault occurs.

## 7. User setting

### 7.1 Preparation before startup

Ensure that the connectors are firmly connected and turn on the power supply of the e-bike.

### 7.2 General setting

Long press [MODE] button to power on the display. In the no-speed state, press and hold the [UP] and [DOWN] buttons at the same time for 2 seconds, and the display enters the set interface.

## 7.2.1 Wheel size setting

Press [UP]/[DOWN] to select the corresponding wheel diameter of the bike vehicle to ensure the accuracy of the meter speed display and mileage display. The factory default of the instrument is 28, and the settable values are: 16/18/20/22/24/26/700C/28.

Note: Adjusting the wheel diameter value will affect the calculation of real-time speed, so it is not recommended to make changes.



Wheel size setting interface

## 7.2.2 Speed limit setting

Press [UP]/[DOWN] to select the speed limit, the default speed limit of 45KM/H, adjustable range 17-45.



Speed limit setting interface

## 7.2.3 Backlight brightness setting


Enter the setting state, backlight brightness selection, press the [UP]/[DOWN] button to switch the brightness. factory default setting is 3, adjustable range 1-3.



Backlight brightness setting interface

## 7.2.4 Metric and imperial setting


Press the [UP]/[DOWN] button to switch between metric units (Km) and imperial units (mile), the default setting is imperial units.

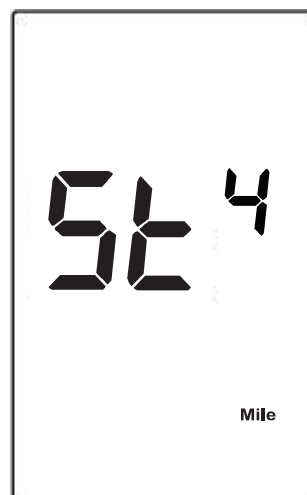


Metric/Imperial setting interface

## 7.3 Power-on Password Setting

Press and hold [UP] / [DOWN] at the same time to enter the general setting and lift it, then press and hold [MODE] / [UP] at the same time, and enter the password 1234 to enter the startup password setting interface. Long press [MODE] to confirm and exit the setting state.

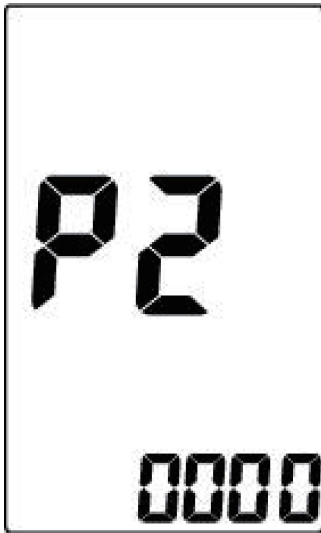


Password Interface

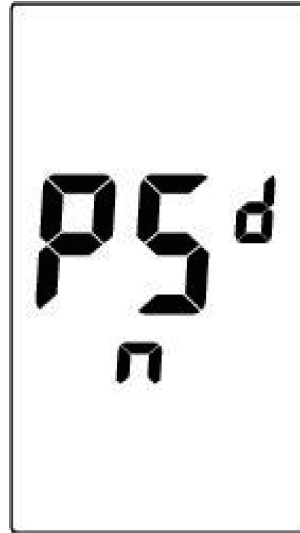

Choose interface

## 7.4 Restore Default Settings

On the home screen, press and hold [MODE] or [UP] for the same duration to restore default Settings. The password input screen is displayed, enter the password 0368 to enter the confirmation interface. Select Y and long press the [MODE] to return to the main screen. The parameters are restored to the default values.

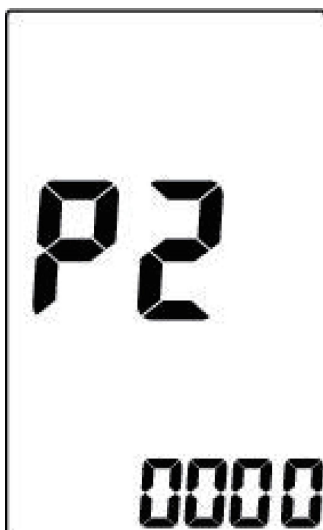

Password Interface



Choose interface

## 7.5 Exit setting

In the setting state: press MODE to confirm the input to enter the next setting; hold MODE to confirm the current setting and exit the current setting state.

The display automatically exits the setting state without any operation for 1 minute.

## 8.FAQ and Answers

Q: Why can't turn on the display?

A: Check if the battery power is turned on, the outer leakage cable is broken or not.

Q: What should I do if the display shows error code?

A: Provide order number and error code display image, contact ASOMTOM after-sales service.

## 9.Quality Warranty And Coverage

I. Warranty:

1. In the case of normal use, due to the quality problems caused by the product itself, the company will be responsible for the warranty during the warranty period.
2. The warranty: 24 months since the display out of the factory.

II. The following conditions are not covered by the warranty:

1. The casing is opened
2. Connector is broken
3. The display leaves the factory, the casing is scratched or the casing is damaged.
4. Scratch or break of the display lead wire
5. Failure or damage caused by force majeure (such as fire, earthquake, etc.) or natural disasters (such as lightning strikes)
6. Product is out of warranty.

## Appendix 1: Error Code

| Error code | Description                                      |
|------------|--|
| 21         | Current abnormal                                 |
| 22         | Throttle abnormal                                |
| 23         | Motor phase failure                              |
| 24         | Motor hall abnormal                              |
| 25         | Brake abnormal                                   |
| 26         | Controller and motor over temperature protection |
| 30         | Communication abnormal                           |



ASOIMTOM

The logo consists of the word "ASOIMTOM" in a bold, sans-serif font. The letters 'O', 'I', and 'T' are rendered in a light green color, while 'A', 'S', 'M', and 'O' are in black. A stylized green bicycle silhouette is overlaid on the green letters, with its frame and wheels passing through the 'O', 'I', and 'T'.