



GMRS RADIO USER MANUAL

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAR tests are conducted using standard operating positions accepted by FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each product are performed in positions and locations as required by the FCC.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with and accessory designated for this product or when used with and accessory that contains no metal.

To maintain compliance with FCC RF exposure guidelines hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to comply with the FCC RF exposure requirement, the antenna installation must comply with following:

Users must be fully aware of the hazards of the exposure and able to exercise control over their

RF exposure to qualify for the higher exposure limits.

Your wireless hand-held portable transceiver contains a low power transmitter. This product sends out radio frequency (RF) signals when the Push-to-Talk (PTT) button is pressed. The device is authorized to operate at a duty factor not to exceed 50%.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Thanks for your favor in our product.

This manual is helpful for you to quickly know how to use the product.

This manual is applicable to the following product:

Multi Band Transceiver

Contents

General information		Assemble Antenna	07
Preface	02	Assembling the Belt Clip	08
Disclaimer	02	LED Indicator	08
RF Radiation Information	02	Assembling the Accessories	09
RF Radiation Profile	02	Powering On/Off	10
RF Radiation Safety	03	Button Details	10
Operational Instructions and Training Guidelines	03	Side Buttons	11
EU Regulatory Conformance	03	PTT Buttons	11
		A36 menu description	12
Basic Operation And Installation			
Radio Structure	05	Care	
Radio Packing	06	Product Care	20
Button Details	06	Troubleshooting	21
Specifications	07	Optional Accessories	23
Attach Battery	07		
		Technical Information	25

Welcome to the world of Talkpod technology

Congratulations on your purchase of a high quality Talkpod product.

Your 2-way radio represents state-of-the-art high-tech engineering.

Designed for GMRS (General Mobile Radio Service) operation, this compact package is big on performance. It is a quality piece of electronic equipment, skillfully constructed with the finest components.

The circuitry is all solid-state and mounted on a rugged printed circuit board. Your two-way radio is designed for reliable and trouble-free performance for years to come.

Features

30 GMRS Channels

142 Privacy Codes (38 CTCSS / 104 DCS)

Waterproof JIS4 Standard

VOX

Selectable Call Alert (5 additional Animal Sounds on GXT1050)

NOAA Weather Radio

NOAA Weather Alert

NOAA Weather Scan

Dual Watch

Vibrate Alert

Monitor Function

Roger Beep Tone

Silent Operation

Keypad Lock

Whisper Function

SOS Siren

Power HI/LO Settings

Speaker / Microphone Jacks

Battery Meter / Battery Low Indicator

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device does not cause harmful interference, and (2) this radio must accept any interference that may cause undesired operation. To maintain compliance with FCC's RF exposure guidelines, for body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with Quanshun Communication Technology Co., Ltd. accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

| Important Notice

FCC LICENSE REQUIRED FOR GMRS OPERATION

(Only Applicable for GMRS Radio Use in the United States)

The radios operates on GMRS (General Mobile Radio Service) frequencies which require an FCC (Federal Communications Commission) license. You must be licensed prior to operating on channels 1 - 7 or 15 - 22, which comprise the GMRS channels of the radios. Serious penalties could result from unlicensed use of GMRS channels, in violation of FCC rules, as stipulated in the Communications Acts Sections 501 and 502 (amended).

You will be issued a call sign by the FCC which should be used for station identification when operating the radio on GMRS channels. You should also cooperate by engaging in permissible transmissions only, avoiding channel interference with other GMRS users, and being prudent with the length of your transmission time.

To obtain a license or ask questions about the license application, contact the FCC at 1-888-CALLFCC or go to the FCC's website: <http://www.fcc.gov> and request form 605.

Exposure To Radio Frequency Energy

IMPORTANT: Changes or modifications to this unit not expressly approved by Quanshun Communication Technology Co., Ltd could void your right to operate this unit. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust these settings inside the COMMUNICATOR to exceed those limitations. Any adjustment to your radio must be made by qualified technicians.

| General information

Preface

Thanks for your favor in our product. This manual is helpful for you to quickly know how to use the product.

This manual is applicable to the following product: A36plus, A36, YA36P, YA361, YA37, YA37V, YA37R, UV-A37, EP-UVA37, UV36, UV37

RF Radiation Profile

Radio Frequency (RF) is a frequency of electromagnetic radiation in the range at which radio signals are transmitted. RF technology is widely used in communication, medicine, food processing and other fields. It may generate radiation during use.

RF Radiation Safety

In order to ensure user health, experts from relevant industries including science, engineering, medicine and health work with international organizations to develop standards for safe exposure to RF radiation. These standards consist of:


- United States Federal Communications Commission, Code of Federal Regulations; 47CFR part 2 sub-part J;
- American National Standards Institute (ANSI)/Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992;
- Institute of Electrical and Electronic Engineers (IEEE) C95. 1 – 1999;
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998;

EU Regulatory Conformance

As certified by the qualified laboratory, the product is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC.

Please note that the above information is applicable to EU countries only.

1. Radio Structure

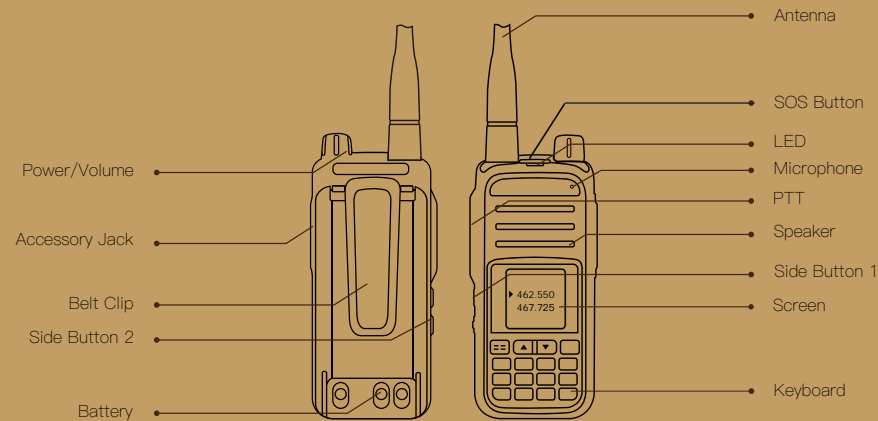

2. Radio Packing



Belt Clip x 1



Battery x 1



Strap x 1



Antenna x 1



Charger x 1

3. Button Details

NO	Icon	Name	Description
1		LED Light	Green: RX Red: TX
2		PTT	Press to Talk
3		Side Button 1	Programable Side button
4		Side Button 2	Programable Side button (Better use Long press S2 for SOS)
5		Accessory Jack	For Headsets, Program Cable
6		Power Knob	Turn clockwise to power on and increase the volume Turn counterclockwise to power off the power and decrease the volume
7		SOS button on the top	One click on SOS alarm
8		Keyboard	Multifunction keyboard

4. Specifications


Regular	
Model Name	UV37-M12B5UV3
Frequency Range	TX:136-174,220-260,390-470, 470-520MHz* RX:136-174,220-260,350-390, 390-470,470-520MHz FM broadcast:35-108MHz AM broadcast:108-136MHz
Number of channels	256 channels
Work Mode	Analog
Frequency Stability	±2.5ppm
SOS Alarm	1
Weight	210g
Size	108*52*28(mm)
Program Key	2
Battery	Standard 2000mAh, 7.4V
Antenna Impedance	50Ω
IP Rating	IP54
Working Temperature	-30°C ~ +60°C

Receive	
Receiving sensitivity	<0.20uv(12dB SINAD)
Squelch sensitivity	<0.2uV
Intermodulation anti-interference	65dB
Audio distortion	<5%
Audio power	1W
Receive current	≤380mA
Audio Response	+1 ~ -3dB
Clutter resistance	≥65dB

launch Part	
Emission current	≤1.3A
Maximum deviation frequency	≤5KHz/≤2.5KHz
Stray power	≤ 7.5uW
Adjacent channel power	≤-65dB
QT/DQT Frequency deviation	
Signal-to-noise ratio	≥-45dB/≥-40dB
Modulation sensitivity	8-12mV
Output Power	5W/2W

The above specifications are tested according to applicable standards. Due to the continuous development of technology, the above index data is subject to change without notice.


5. Attach Battery

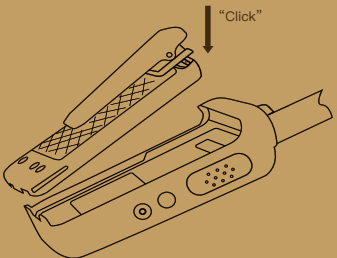

Note

- Turn off the radio before removing the battery.
- If not assembled with battery specified by Company, the radio will give alarm tone to remind you when powering on. Afterwards, it will operate normally.


6. Assemble Antenna

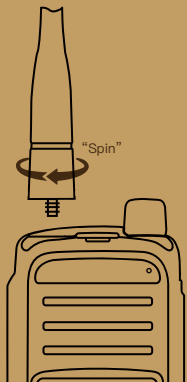


Note

Do not swing the radio when holding it by the antenna, so as to avoid lowering the performance and shortening the life span of the antenna.

7. Assembling the Belt Clip

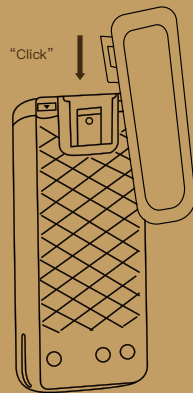


8. LED Indicator

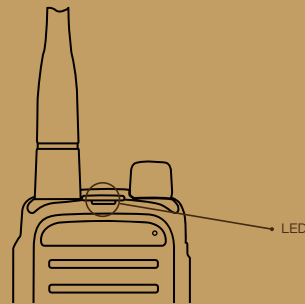

LED Status	Product Status
Steady Green	Receiving
Steady Red	Transmitting

9. Assembling the Accessories

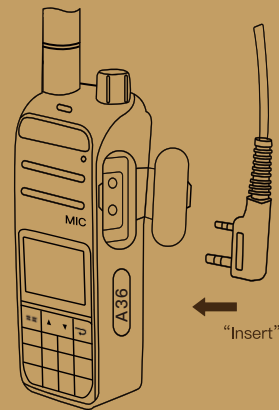


10. Powering On/Off



11. Button Details




12. Side Buttons

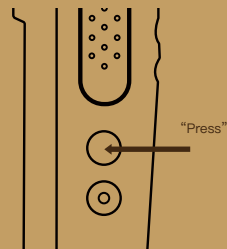

According to different models and user habits, side buttons can be set to group/member/friend selection, SOS or to broadcast current groups.

13. PTT Button

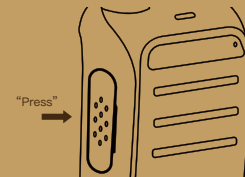

In different interfaces, press PTT button to make group call, single call, private call.

14. Multi-Band Portable Transceiver menu description

No	Function function	Secondary menu	Setting instructions
1	SQL	0, ..., 9	The lower the squelch level, the easier it is to interfere, the higher the level, the worse the sensitivity, and the setting should be moderate
2	STEP	2.50K	In the frequency mode, press the up and down keys to change the step value of the frequency
		5.00K	
		6.25K	
		10.00K	
		12.50K	
		20.00K	
		25.00K	
		30.00K	
50.00K			
3	MEMCH	000,...,256	Indicate the channel number to be stored while store channel. If 'CH' in front of number means this channel already has a channel parameter.
4	DELCH	000,...,256	Delete the channel parameters of the specified channel. If there is no CH—means that the channel has no parameters and the operation is invalid.
5	R-CTCSS	OFF	None CTCSS
		67.0HZ,...,254.1HZ	Standard CTCSS. Input standard or nonstandard CTCSS via keypad.
6	R-DCS	OFF	None DCS
		D023N,...,D754I	Standard DCS
7	T-CTCSS	OFF	None CTCSS
		67.0HZ,...,254.1HZ	Standard CTCSS. Input standard or nonstandard CTCSS via keypad.

No	Function function	Secondary menu	Setting instructions
8	T-DCS	OFF	None DCS
		D023N,...,D754I	Standard DCS
9	VOICEPRI	OFF	
		Encryption 1	
		Encryption 2	
		Encryption 3	
		Encryption 4	
10	CH-NAME	COMMOM NAME LIST	
11	TOT	30,60,...,480s	The number is from 30 to 480s, and the maximum time for PTT transmission is indicated in 30s steps.
12	SAVE	OFF	Off Battery Saving
		1	Off Battery Saving
		2	Normal Saving
13	ROGER	3	Super Saving
		OFF	Turn Off
		ON	Turn On
14	RESET	VFO	Menu back to factory setting
		ALL	Menu and channel back to factory setting

No	Function function	Secondary menu	Setting instructions
15	VOX	OFF	Turn off VOX function, transmitting without PTT pressing.
		1,2,...9	Activate the sound pressure intensity of voice control, level 1 is the most sensitive.
16	W/N	WIDE	Wide mode
		NARR	Narrow mode
17	VOICE	OFF	Turn off voice prompt
		ON	Turn on voice prompt
18	BEEP	OFF	Turn off operation prompt
		ON	Turn on operation prompt
19	LANGUAGE	ENGLISH	English
		CHINESE	Chinese
20	BCL	OFF	OFF
		ON	ON
21	ABR	ON	Background light is always on.
		5s,10s,...3min	Time between the background light ON to automatically OFF.
22	OFFSET	00.000,...,99.995	In frequency mode, the difference between the transmitting and receiving frequencies.

No	Function function	Secondary menu	Setting instructions
23	SC-REV	TO	Time scanning, the walkie-talkie pauses scanning when it detects a signal, and after staying stopped for about 5 seconds, the walkie-talkie will continue scanning even if the signal is still there.
		CO	Carrier scanning, the two-way radio pauses scanning when a channel is detected and keeps it on the same frequency until the signal disappears. There is a 2 second delay between the disappearance of the signal and the resumption of scanning to allow time for the response to begin transmission.
		SE	Search scanning, the walkie-talkie exits scanning when it detects a signal and stays at this frequency.
24	PF2		
25	PF2 LONG PRESS		
26	PF3		
27	SFT-D	OFF	In frequency mode, turn off the difference between the transmitting and receiving frequencies.
		+	In frequency mode, the TX frequency=RX frequency plus frequency difference
		-	In frequency mode, the TX frequency=RX frequency minus frequency difference
28	SCAN CTCSS		

No	Function function	Secondary menu	Setting instructions
29	SCAN DCS		
30	CDCSS SAVE MODE	ALL	ALL
		RX	Receiving
		TX	Transmitting
31	POWER ON MSG	LOGO	Photo
		VOL TAGE	Battery voltage
32	ANI NAME	NUM1...NUM60	No.1---No.50 radio. The radio name of 51-60 can be set
33	S-CODE	1,2,3...15	
34	DTMF CODE	OFF	Turn off
		BOT	Press PTT to transmitting DTMF
		EOT	Release PTT to transmitting DTMF
		BOTH	BOTH
35	AUTOLK	OFF	Turn off auto keypad lock
		5s,10s,...3min	Turn on the keypad timing automatic lock function

No	Function function	Secondary menu	Setting instructions
36	DTMFST	OFF	No DTMF prompt when press key to transmitting DTMF
		DT-ST	DTMF prompt when press key to transmitting DTMF
		ANI-ST	DTMF prompt when automatically transmitting DTM
		DT+ANI	DTMF prompt when automatically transmitting DTMF and press key to transmitting DTMF
37	SCAN ADD		
38	TONE	1000,1450,1750,2100Hz	
39	PTT-LT	0,100,...,1000	Delay time before automatic DTMF transmitting
40	MENU EXIT TIME	5,10,...60s	Control the time of menu automatically exit
41	VOX DELAY	0.5SEC.....2.0SEC	Due to the delay of the repeater, noise appears when receive instant signal.
42	RP_STE	OFF	OFF: Adjust to eliminate the tail. If want to ensure if the repeater is work or not, set OFF.
		1,2,3,4,5,...10s	
43	RPT-RL	OFF	OFF: Adjust the length of time the tail sound appears, if not needed, set it to off.
		1,2,3,4,5,...10s	

No	Function function	Secondary menu	Setting instructions
44	ANI FUNCTION	OFF	Turn off
		ON	Turn on
45	MDF-A	FREQ	A band displays as frequency in channel mode
		CH	A band displays as channel in channel mode
		NAME	A band displays as channel name in channel mode
46	MDF-B	FREQ	B band displays as frequency in channel mode
		CH	B band displays as channel in channel mode
		NAME	B band displays as channel name in channel mode
47	TX-A/B	OFF	In dual standby mode, transmitting current frequency band
		A	In dual standby mode, press PTT to transmitting A band for cross-band TX/RX
		B	In dual standby mode press PTT to transmitting B band for cross-band TX/RX

No	Function function	Secondary menu	Setting instructions
48	TDR	OFF	Turn off
		ON	Turn on
49	STE	OFF	After releasing the PTT, the radio will send a turn-off code to suppress the instant noise of the receiver.
		ON	After releasing the PTT, the radio will send a turn-off code to suppress the instant noise of the receiver.
50	AL-MOD	SITE	On-site Emergency
		SOUND	Send emergency voice
		CODE	Send emergency code
51	DISPLAY	OFF	Turn off
		ON	Turn on
52			
53			

15.Product Care



Do not pierce or scrape the product with any edged instruments or hard objects.



Keep the product far away from substances that can corrode the circuit.



Do not hold the product by its antenna directly.



Do not hold the product by its earpiece cable directly.



Attach the accessory jack cover when the product is not in use. Keep the product far away from substances that can corrode the circuit.

16.Troubleshooting

Phenomena	Analysis	Solution
Power-on Failure	The battery may be improperly installed.	Remove the battery and reassemble it.
	The battery power may be used up.	Remove or replace the battery.
	The battery is poorly connected due to dirtied or damaged battery contacts.	Clean the battery contacts.If the problem cannot be solved, contact your dealer or authorized service center for inspection and repair.
During receiving, the voice is weak, discontinuous or totally inactive.	Low battery voltage.	Recharge or replace the battery.
	Low volume level.	Increase the volume by rotating the Volume Control knob.
	The antenna may be loosened or improperly installed.	Reassemble the antenna after turning off the radio.
	The speaker may be blocked or damaged.	Clean the surface of the speaker.If the problem cannot be solved, contact your dealer or authorized service center for inspection and repair.
Unable to communicate with other members.	The frequency or signaling may be inconsistent with that of other members.	Set your TX/RX frequency and signaling to the same as that of other members.
	The channel type(digital/anaiog)may be set inconsistently.	Make sure all members are on the same digital/analog channel.
	You may be interrupted by radios using the same frequency.	Change the frequency, or adjust the squelch level.


Phenomena	Analysis	Solution
Irrelevant communication or noise is heard on the channel.	You may be interrupted by radio using the same frequency.	Change the frequency, or adjust the squelch level.
	The radio may be set with no signaling.	Set signaling for all member radios to avoid inference at the same frequency. And change the signaling settings for all portable radios at the same time.
The noise is too loud.	You may be too far away from other members.	Move towards other members.
	You may locate in an unfavorable position. For example, your communication may be blocked by high buildings or frustrated in the underground areas.	Move to an open and flat area, and restart the radio to try again.
	You may suffer from external disturbance (such as electromagnetic interference).	Stay away from equipment that may cause interference.


17. Optional Accessories


The following items are main optional accessories for the radio. For more information of other accessories, please consult your local dealer.


Note


Use the accessories specified by Company only. If not, the Company shall not be liable for any losses or damages arising out of use of unauthorized accessories.

Protective case	
	Semi-packed nylon cover / adhesive type / with oblique lanyard / small
	Semi-packed leather holster / button type / oversized iron back clip / with diagonal strap / medium
	All-inclusive leather holster / button type / thick leather pattern / with diagonal strap / large
	Wearable chest bag protector / all black
	Wearable chest bag protective cover / fluorescent strip
	Waterproof bag

Data line / write frequency line	
	Universal K head dual hole USB to serial port programming cable / N4 / N5 / D4 / B3 universal
	USB to Micro cable / OD3.8PVC / common to all series

Headset	
	2-Wire Earloop with On-MIC PTT
	2-Wire D-Ring Earphone with On-MIC PTT
	2-Wire Acoustic Tube with On-MIC PTT
	Earloop with In-line Microphone
	D-Ring Earphone with In-line Microphone
	Acoustic Tube with In-line Microphone
	3-Wire Acoustic Tube Surveillance Kit (Black)
	Rotatable ear-hook type oval clip PTT headset
	Right earhook type oval clip PTT headset
	C-type ear-hook oval clip PTT headset
Ear hook + earplug type oval clip PTT headset	

Hand microphone	
	Speaker Microphone
	Speaker Microphone With Volume Control

Power Adapter	
	Power adapter / 12V2A / GB
	Power adapter / 12V2A / European regulations
	Power adapter / 12V2A / British regulations
	Power adapter / 12V2A / Australia regulations
	Power adapter USB interface / 5V2A
	Power adapter USB interface / 5V1A
	Power adapter / 12V1A / GB
	Power adapter / 12V1A / European regulations
	Power adapter / 12V1A / British regulations
	Power adapter / 12V1A / Australia regulations

Back clip	
	2 Series / 3 Series Belt Clip / Spring Type / 7CM

18. Technical Information

Channel Type	Channel Number	Frequency (MHz)	Channel Type	Channel Number	Frequency (MHz)
462 MHz Main Channels	1	462.5500	467 MHz Main Channels	1	467.5500
	2	462.5750		2	467.5750
	3	462.6000		3	467.6000
	4	462.6250		4	467.6250
	5	462.6500		5	467.6500
	6	462.6750		6	467.6750
	7	462.7000		7	467.7000
	8	462.7250		8	467.7250
462 MHz interstitial channels	1	462.5625	467 MHz interstitial channels	1	467.5625
	2	462.5875		2	467.5875
	3	462.6125		3	467.6125
	4	462.6375		4	467.6375
	5	462.6625		5	467.6625
	6	462.6875		6	467.6875
	7	462.7125		7	467.7125