

Electric Bike Display

**EMMO
ROBIC C
User's Manual**

TABLE OF CONTENTS

1. PRODUCT NAME AND MODEL NUMBER	1
2. SPECIFICATION	1
3. APPEARANCE AND SIZE	1
4. FUNCTION OVERVIEW AND FUNCTIONAL AREAS	2
4.1 FUNCTIONAL OVERVIEW	2
4.2 FUNCTIONAL AREAS	2
4.3 BUTTON DEFINITIONS	2
5. ROUTINE OPERATION	2
5.1 POWER ON/OFF	2
5.2 DISPLAY INTERFACE SWITCHING	3
5.3 WALK BOOST MODE	3
5.4 TURNING ON/OFF LIGHTS	4
5.5 PAS LEVEL SELECTION	4
5.6 BATTERY LEVEL DISPLAY	4
5.7 ERROR CODE DISPLAY	5
6. PERSONALIZED PARAMETER SETTINGS	5
6.1 METRIC AND IMPERIAL SETTING	6
6.2 RATED VOLTAGE SETTING	6
6.3 PAS LEVEL SETTING	7
6.4 WHEEL DIAMETER SETTING	7
6.5 SPEED LIMIT SETTING	8
6.6 POWER-ON PASSWORD SETTING	8
6.7 AUTO SLEEP TIME SETTING	9
7. SHORTCUT OPERATION	10
7.1 RESTORE FACTORY SETTINGS OPERATION	10
7.2 TRIP ODOMETER RESET OPERATION	10
8. QUALITY ASSURANCE AND WARRANTY	11
8.1 WARRANTY INFO	11
8.2 WARRANTY DOES NOT COVER	11
9. WIRE CONNECTION DIAGRAM	11
9.1 STANDARD WIRE CONNECTION SEQUENCE	11
10. PRECAUTIONS	12
SCHEDULE 1: ERROR CODE DEFINITION	12
SCHEDULE 2: ERROR CODE DEFINITION	12

1. Product Name and Model Number

Smart LCD display for electric bicycle; Model: YL61F.

2. Specification

- 36V/48V power supply
- Display rated current 15mA
- Display maximum current 30mA
- Shutdown leakage current <1uA
- Supplied current to the controller 50mA
- Operating temperature -20 ~ 60°C
- Storage temperature -30 ~ 70°C

3. Appearance and Size



Figure 3-1 Physical picture of the YL61F display

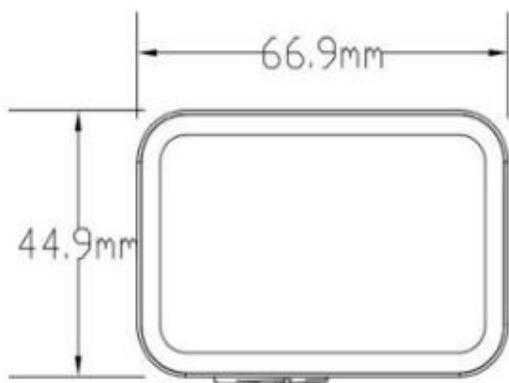


Figure 3-2 YL61F Front View Dimension

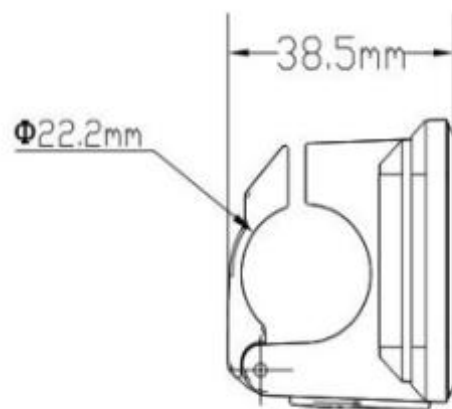


Figure 3-3 YL61F Side View Dimension

4. Function overview and Functional areas

4.1 Functional overview

The display offers a variety of features to suit your riding needs, including:

- Battery level indicator
- Pedal assist (PAS) level indicator
- Speed (current speed, maximum speed, average speed)
- Mileage display (single and total mileage)
- Walk boost mode
- Light ON/OFF
- Error code indicator
- Motor power indicator (optional)
- Cruise control indicator (optional)
- Bluetooth connection indicator (optional)
- Personalized parameter settings (e.g. wheel diameter, speed limit, battery power setting and PAS parameter setting, password setting, controller current limit setting, etc.).
- Factory default parameter recovery function

4.2 Functional areas

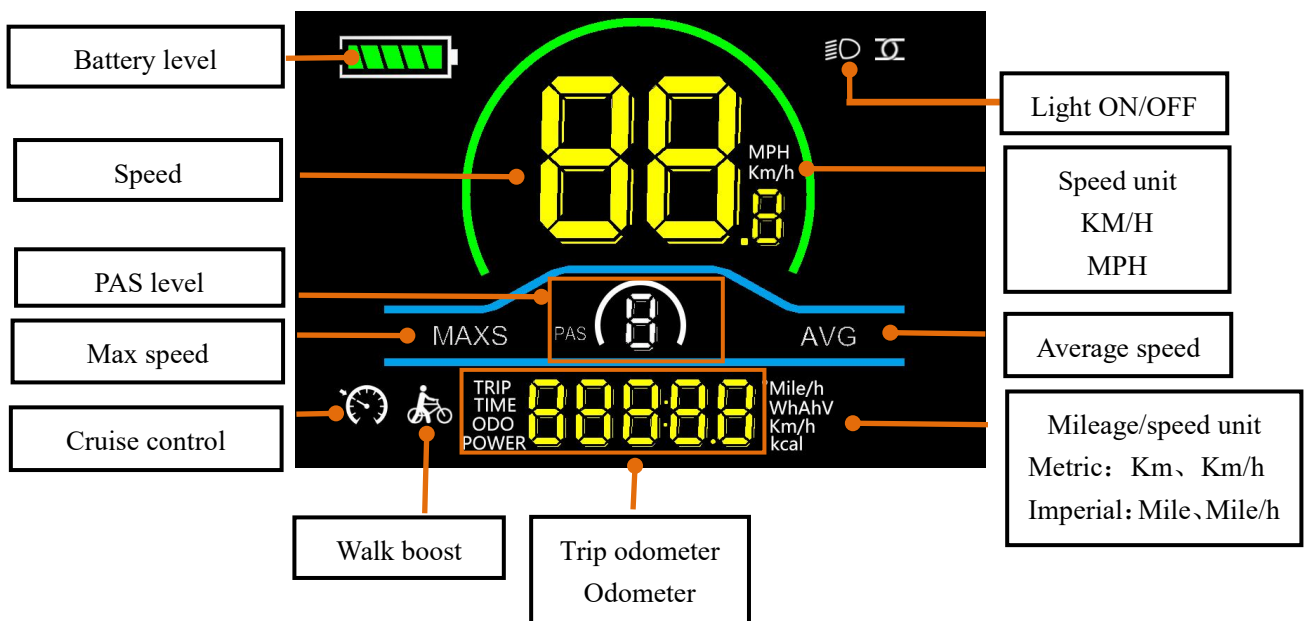






Figure 4-1 YL61F functional area distribution interface

4.3 Button definitions

The YL61F display is equipped with five buttons on the corresponding operating unit: power on/off , plus  and minus .


5. Routine operation

5.1 Power on/off

Long press  to power on/off the display. When the display is off, it will not use the battery power and the leakage current is less than 1uA.

⚠ The display will automatically shut off if it is not used for more than 10 minutes.

5.2 Display interface switching

When the display is powered on, it will show the Current Speed (km/h) and Odometer (km) by default. Short press  to switch between Odometer (km), Trip Odometer (km), Maximum Speed (km/h), and Average Speed (km/h).



Trip Odometer



Odometer



Average speed



Maximum

Figure 5-1 Display Interface Switching

5.3 Walk boost mode




Long press and hold , the electric bicycle enters the walk boost mode. The electric bicycle will walk at a fixed speed of 6 km per hour and the display shows . Release the button to stop the power output immediately and restore to the state before walk boost.



Figure 5-2 Helping to implement the display screen

 The walk boost mode can only be used when pushing the electric bicycle, please do not use it while riding.

5.4 Turning on/off lights



Long press the  to make the controller turn on the lights and display backlight becomes dim. Long press  again to make the controller turn off the lights and the backlight restore brightness.



Figure 5-3 Backlight display interface

5.5 PAS level selection



Press / to switch PAS level of electric bicycle, thus changing the motor output power.



Figure 5-4 PAS level display interface

5.6 Battery level display

The Battery level is shown as 5 bars. When the battery is full charged, all of the 5 bars lighten up. When the battery is fully depleted, the bar will begin to flash, warning the user to charge the battery as soon as possible.

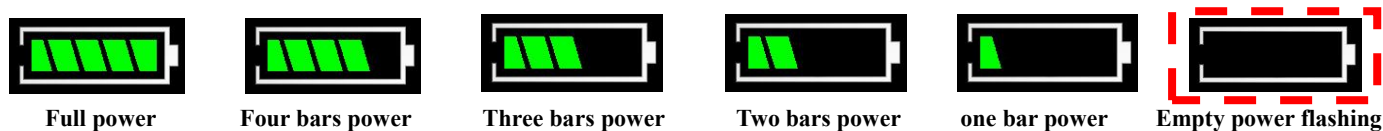


Figure 5-5 Battery Level Display Interface

5.7 Error code display

If there is a fault occurs in the electronic system of the electric bicycle, the display will automatically show an error code, see **Schedule 1** for a detailed definition of the error code.



Figure 5-6 Error Code Display

⚠ When the error code appears on the display, please troubleshoot the problem in time, the electric bicycle will not be able to drive normally after the problem occurs.












6. Personalized parameter settings

⚠ Each setting needs to be done with the bicycle stationary.

The personalized parameter setting procedure is as follows





When the display is ON and the speed shows 0,

The following options are available on the personalized parameter setting interface:

- (1) Press and hold  and  simultaneously for more than 2 seconds to enter the personalized parameter setting interface.
- (2) Press  /  to toggle between the personalized parameter setting interface, and press  to enter the parameter changing state.
- (3) Press  /  to select the parameter, long press  for addition operation, long press  for subtraction operation.
- (4) Press  to save the parameter settings and return to the personalized parameter setting interface.
- (5) Long press  to save the parameter settings and exit the personalized parameter setting interface.

6.1 Metric and Imperial setting

01P is the metric and imperial setting, 00 for metric and 01 for imperial.

Press  to enter the parameter changing state. Press the / to select the parameter and press  to save the parameter setting and return to the personalized parameter setting interface.

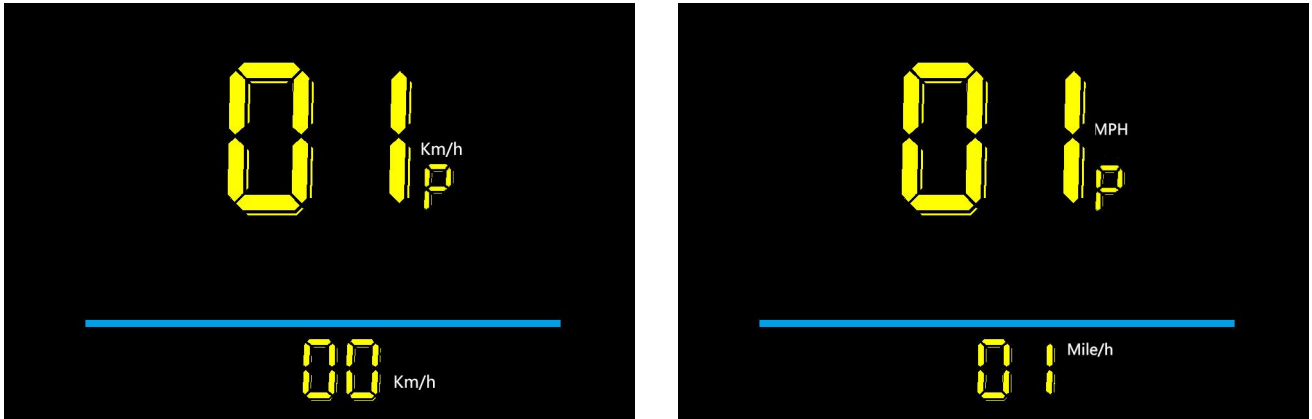


Figure 6-1 Metric and Imperial Units Setting Interface

6.2 Rated voltage setting

02P is the rated voltage setting. The available rated voltage range is: 24V, 36V, 48V.





Press  to enter the parameter changing state. Press the / to select the parameter and press  to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-2 Rated voltage setting interface

6.3 PAS level setting

03P is the Pedal assist (PAS) level setting. The available Pedal assist level settings are: 0~3, 1~3, 0~5, 1~5, 0~7, 1~7, 0~9, 1~9.




Press  to enter the parameter changing state. Press the  to select the parameter and press  to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-3 PAS level setting interface

6.4 Wheel diameter setting

04P is the wheel diameter setting. The adjustable wheel diameter range is: 16~28inch. The adjustable wheel diameter range may vary with different protocols.







Press  to enter the parameter changing state. Press the  to select the parameter and press  to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-4 Wheel diameter setting interface

6.5 Speed Limit Setting

05P is the speed limit setting. The adjustable speed limit range is: 10~100km/h or 10~41km/h. (The maximum adjustable speed limit varies by different protocols)

Press  to enter the parameter changing state. Press the  to select the parameter and press  to save the parameter setting and return to the personalized parameter setting interface.

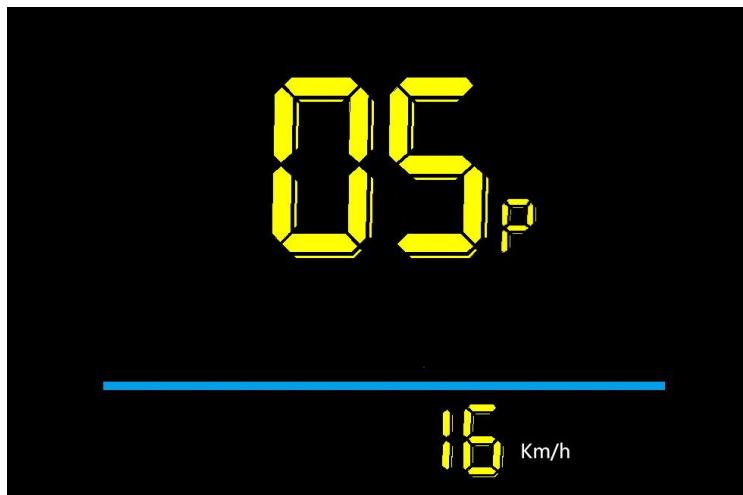


Figure 6-5 Speed limit setting interface

6.6 Power-on password setting

06P is the power-on password setting. The power-on password is not activated by default but users can activate it from setting PSd-y. The factory default password is 1212. Users can set other four-digit password.

⚠Attention !!! Please keep the password in mind after changing it, otherwise you will not be able to use the display.




Press  to enter the parameter changing state. Press the  to select the parameter. PSd-y means the power-on password is activated while PSd-n is off. Press  to confirm the mode and enter the state of setting the four digits power-on password or exit to the personalized parameter setting interface.



Figure 6-6 Power-on Password OFF interface

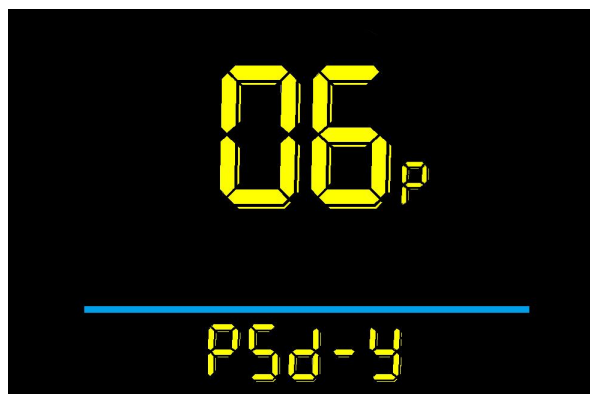


Figure 6-7 Power-on Password Activated interface

In the password setting mode, the adjustable digit will flash. Press the **+**/**-** to select the parameter and press **⏻** to save the numbers and go to the next digit setting. Long press **⏻** to save the parameter setting and return to the personalized parameter setting interface after finish setting the four digits in turn.



Figure 6-8 Power-on password setting interface

6.7 Auto Sleep Time Setting

07P is the auto sleep time setting. To save the battery power and reach higher range, this display will be turned off after it has not been used for a time. The adjustable range is: 1~60min, 00 means no auto shutdown. The factory default setting is 10 minutes.

Press **⏻** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **⏻** to save the parameter setting and return to the personalized parameter setting interface.

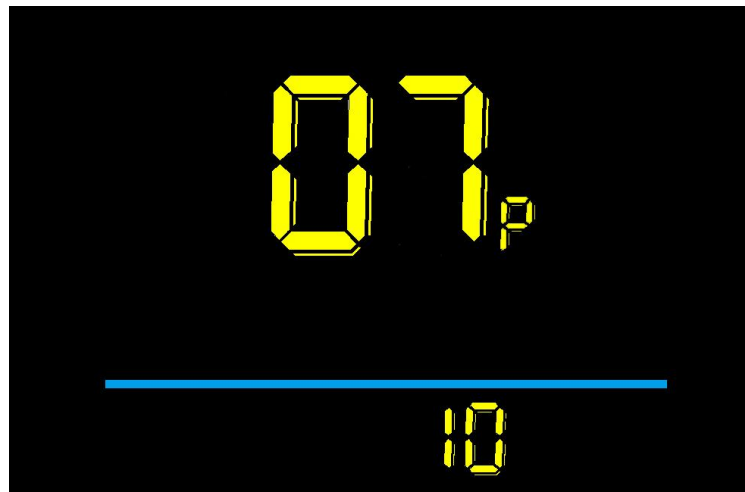


Figure 6-9 Auto Power Off Time Setting Interface

7. Shortcut operation

7.1 Restore factory settings operation

dEF is the restore factory default parameter settings. dEF-Y is to restore the factory default settings, and dEF-N is not to restore.







Enter into the main setting interface and keep the speed at 0, press and hold  and  simultaneously for 2s to enter the restore factory default setting interface. Pressing  to toggle to dEF-Y. Then after pressing  to confirm, the display will show dEF-0 for a few seconds and then automatically start to restore the factory default settings. The display will automatically exit to setting interface after the restoration.



Figure 7-1 Restore Factory Default Settings Interface

7.2 Trip odometer reset operation

The display can record trip odometer and odometer. Trip odometer is not automatically reset after turning off. The trip odometer needs to be reset manually. The odometer can not be reset.

Enter into the main setting interface and keep the speed at 0, press and hold  and  simultaneously for 2s to reset the trip odometer. The main interface will flash during the reset process.

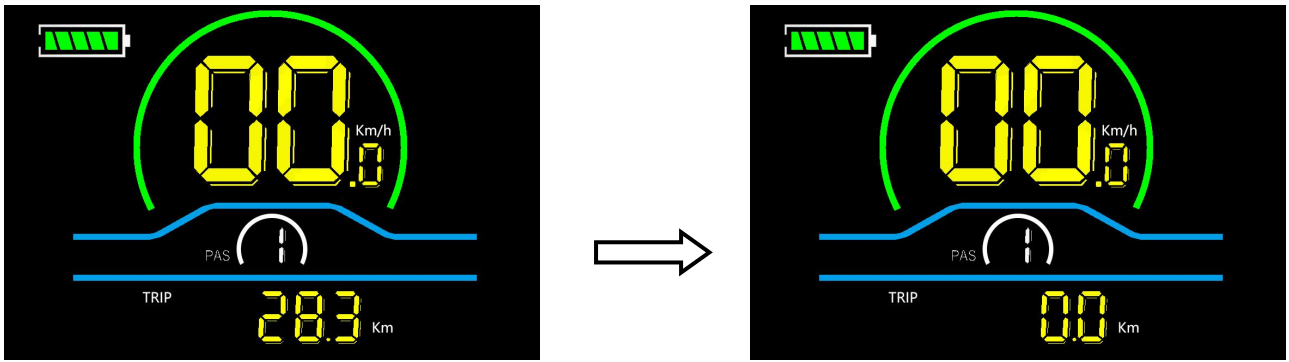


Figure 7-2 Trip Odometer Reset Interface

8. Quality Assurance and Warranty

8.1 Warranty info

● Yolín will offer a limited warranty for any failure caused by the product defects under normal use during the warranty period.


● The product is warranted for 12 months from the date out of factory.

8.2 Warranty does not cover

- The shell is opened.
- The connector is damaged.
- Scratches on the appearance after the product is out of factory.
- Scratched or broken wires
- Failure or damage caused by force majeure (e.g. fire, earthquake, etc.) or natural disaster (e.g. lightning strike, etc.)
- Out of warranty period.

9. Wire connection diagram

9.1 Standard wire connection sequence

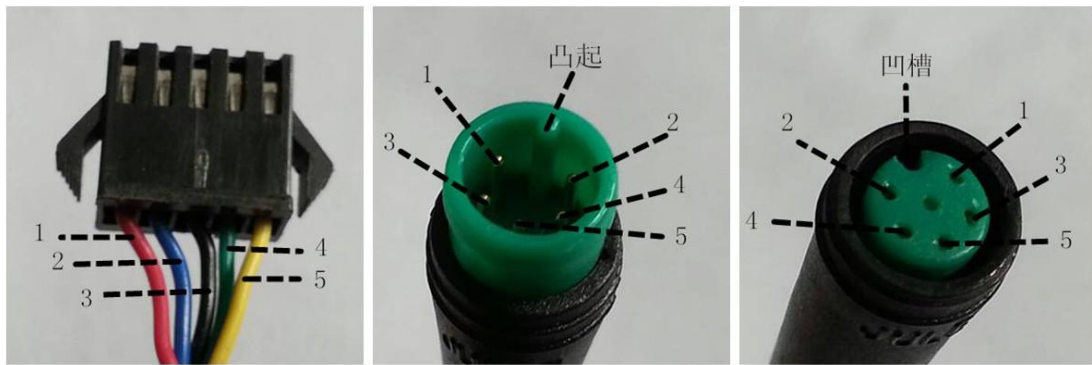

Controller connector

Display connector (Female terminal) Display connector (Male terminal)

Figure 9-1 Wire Connection Diagram

Table 9-1 Standard connector wire sequence table

Standard Wire Sequence	Standard wire color	Function
1	Red (VCC)	Display power wire
2	Blue (Kp)	Controller power wire
3	Black (GND)	Display ground wire
4	Green (RX)	Display data reception wire
5	Yellow (TX)	Display data transmit wire

■ Some models are equipped with waterproof connectors and the inside wires can not be seen.

10. Precautions

Pay attention to all the general operating when using the products and do not plug and unplug the display while it is powered on.

- ◆ Avoid bumping the display as much as possible.
- ◆ Please do not change the parameter settings at will, otherwise normal riding cannot be guaranteed.
- ◆ If display does not work properly, please send it to the repair center as soon as possible.
- ◆ There may be differences between the physical products and this manual due to normal upgrade. Please refer to the physical products.

Schedule 1: Error Code Definition

YL-05, KDS, YL-J Error codes				
Error code	Definition		Error code	Definition
E021	Current failure		E024	Hall failure
E022	Throttle failure		E025	Brake failure
E023	Motor phase failure		E030	Communication failure

Schedule 2: Error Code Definition

Bafang Error codes:				
Error code	Definition		Error code	Definition
E004	The handle does not return to its original position		E014	Temperature sensor falut in motor
E005	Throttle failure		E015	Controller temperature sensor fault
E006	Low voltage protection		E021	Speed sensor fault
E007	Overvoltage protection		E022	BMS communication failure
E008	Hall fault of motor		E023	Heading fault
E009	Motor phase line fault		E024	Headlight sensor failure
E010	High temperature protection of controller		E025	Torque sensor torque signal fault
E011	Motor high temperature protection		E026	Speed signal fault of torque sensor
E012	Current sensor fault		E030	Communication failure
E013	Battery interface temperature fault			