

Wall Mounted Eye/ Face Wash Body Spray with Recoil Hose

Installation and Maintenance Instructions

EL485




I00056_17 Jun 2024

1300 369 273 | info@enware.com.au | enware.com.au

ENWARE
A WATTS Brand

technical data

Inlet Connection	1/2" BSP (DN15)
Minimum Water Supply Line Size	DN15
Working Pressure Range	Min 100 kPa Max 500 kPa
Minimum Flow Rate	3 Lpm
Suggested Flushing Water Temperature	Tepid 16°C min - 38°C max
Activation	Push handle

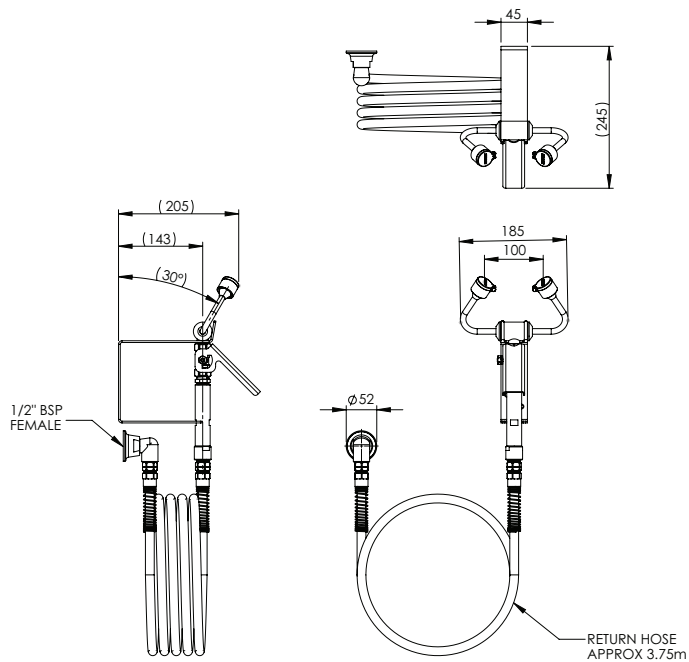

installation compliance

Before proceeding with installation ensure all operating and dimensional specifications are suitable for the intended installation.

Installation of emergency showers, eye and eye/face wash equipment shall be in accordance with AS/NZS4775 or ANSI Standard Z358.1 - whichever is applicable to the installation. To meet ANSI Z358.1 and AS4775, eye wash outlets need to be between 838mm to 1143mm from the surface where the user stands.

For use with potable water only.

Supply Lines

Installation procedures shall be in accordance with correct plumbing practices. Supply piping shall be adequately sized to meet flow requirements. If shut off valves are installed for maintenance purposes, provisions shall be made to prevent unauthorised shut off.

Ensure all supply lines are flushed thoroughly to remove debris prior to the installation of this product. Strainers (40 mesh) are recommended if debris is an ongoing problem.

Supply Pressure

A Pressure reduction valve may be required to comply with recommended maximum supply pressure.

Flushing Fluid Temperature

Flushing Fluid Temperature: Tepid.
Suggested temp range 16°C min – 38°C max.
Refer to AS4775 and ANSI Z358.1 for installation guidelines of Plumbed Eyewash Equipment.

NOTE: Enware Australia advises:

1. Due to ongoing Research and Development, specifications may change without notice.
2. Component specifications may change on some export models.

installation

1. Determine eyewash location.
The unit shall be positioned with the flushing nozzles not less than 838mm and no greater than 1143mm from the finished floor level on which the user stands, and 153mm (minimum) from the wall or nearest obstruction. **SEE IMAGE 01**
Refer to AS4775 and ANSI Z358.1 for installation guidelines of Plumbed Eyewash Equipment.
2. Set out and Rough-in:
Provide a 1/2" BSP male fitting for water inlet, allowing approximately 12mm of thread proud from finished wall.
SEE IMAGE 02
3. Fit-off:
Prior to installation, flush the line thoroughly to remove debris. Once the line is clear of debris, proceed to next step. A pressure reduction valve may be required to comply with recommended water supply pressure.
4. Apply thread tape onto the 1/2" BSP male thread on wall. Screw wall mount on and tighten firmly. **SEE IMAGE 03**
5. Apply thread sealing tape onto male thread of chrome elbow and screw to wall mount firmly. A 1/2" BSP male fitting can be screwed on loosely to the other side of the elbow to gain leverage and tighten with a spanner. Ensure the elbow is facing straight down.
SEE IMAGE 04 & 05
6. Apply thread sealing tape onto thread of hose assembly, and screw onto the elbow with a spanner. **SEE IMAGE 06**
7. Locate the bracket, and once the hand held eye wash is in the desired position, mark holes for the bracket on wall. Drill the holes and secure bracket using appropriate wall fixings/ anchors. **SEE IMAGE 07**
8. Turn water supply on and test all joints and connections for leaks. Push the handle to test for correct operation and water flow. If there is any problem refer to Troubleshooting.
9. Hook the hand trigger gun onto bracket. Flip the outlet cap back on so no dust accumulates on the outlet. Installation is now complete.

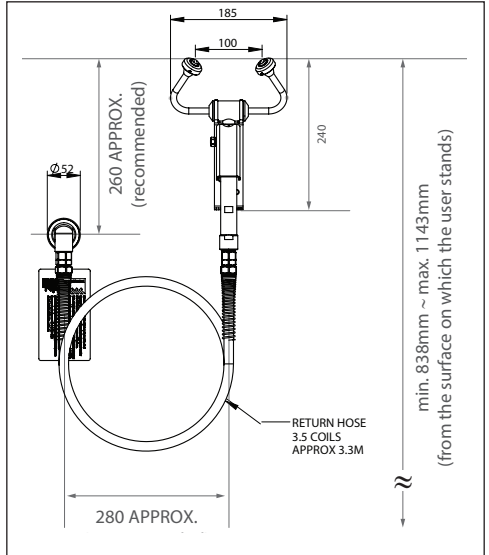


IMAGE 01



IMAGE 02

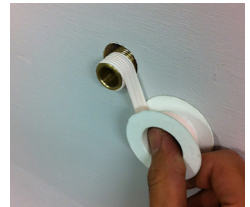


IMAGE 03



IMAGE 04



IMAGE 05



IMAGE 06



IMAGE 07

commissioning

1. Ensure all connections are tight. Make sure that handle is pulled up to "off" position. **SEE IMAGE 08**
2. Turn water on to check for leaks.
3. Activate eyewash by pushing activation handle forward. **SEE IMAGE 09**
4. Check that the water flow pattern from the eye wash outlet is as recommended. **SEE IMAGE 10**
If not, the supply water pressure may need to be checked, or the flow regulator may be blocked with debris and needs to be cleaned out. (Refer to Troubleshooting.)



IMAGE 08



IMAGE 09

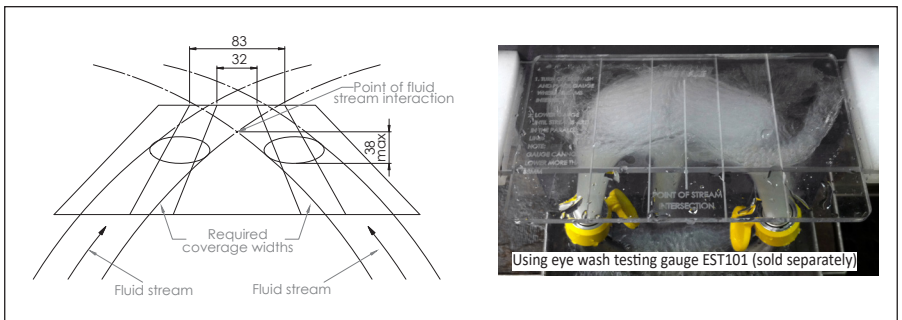


IMAGE 10



operating instructions

Instructions for all emergency equipment should be readily accessible to maintenance and training personnel.

1. To turn ON, push activation handle forward.
SEE IMAGE 11

Water starts to flow.

Leave the eyewash on the bracket to rinse the eyes.

Alternatively, to wash other parts of the body, lift the eyewash off the bracket and rinse affected areas as required. **SEE IMAGE 12**

2. To turn OFF, gently pull back activation handle.
SEE IMAGE 13
3. Flip the dust covers back on after use.



IMAGE 11



IMAGE 12


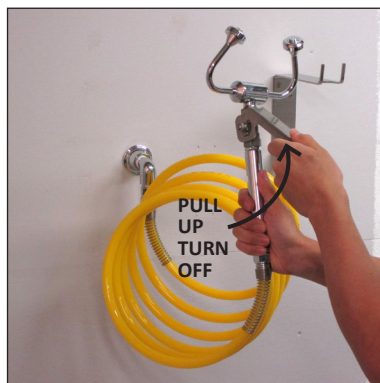


IMAGE 13

troubleshooting

PROBLEM	CAUSE	RECTIFICATION
Water runs constantly, drips or leaks from outlet	Ball valve not shut off properly	Pull up handle all the way to “off” position
	Debris fouling ball valve	Dismantle eye wash arms, and flush the line to remove debris
	Pressure is too high	Reduce water supply pressure to meet specification
No flow or low flow from outlet	Ball valve is not fully opened	Push handle to full “on” position
	Flow controller or eye wash outlet nozzle is blocked with debris	Dismantle and clean
	Pressure is too low	Increase water supply pressure to meet specification
Eyewash stream is too strong	Flow regulator has failed	Replace flow regulator
	Pressure is too high	Reduce water supply pressure to meet specification
Water discharge from thread joints, seams or fittings	O-ring is worn or damaged	Replace O-ring
	Sealant is inadequate	Dismantle and re-apply sealant, re-assemble
	Fitting is damaged	Replace damaged part

components

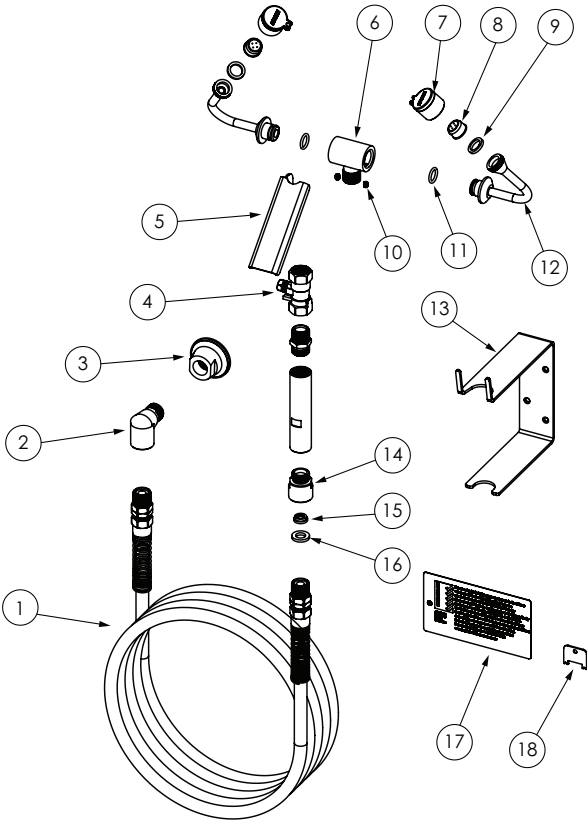

- 1 Hose assembly
- 2 Elbow
- 3 Wall mount
- 4 Ball valve 316SS
- 5 Handle 316SS
- 6 Saddle
- 7 Shrouded dust cover
- 8 Aerator insert - ablution
- 9 Rubber washer
- 10 Grub screw M5x6 SS
- 11 O-ring BS113
- 12 Eyewash arm
- 13 Bracket
- 14 Adaptor
- 15 Flow regulator 3Lpm brown M&K E
- 16 Rubber washer
- 17 Inspection tag
- 18 Aerator key anti-vandal

SPARE PARTS

DESCRIPTION	PRODUCT CODE
Outlet aerator insert, shroud and dust cap [Parts: 7,8,9]	ESP041
Anti-vandal aerator key [Parts: 18]	SP304
Trigger spray assembly [Parts: All parts excluding 1,2,3,13]	EL485TSPRAY
Hose Assembly 1/2" Nylex Self Store [Parts: 1]	ESP011
Inspection tag [Parts: 17]	ESS521
Eye Wash Sign 250mm x 250mm Poly	ESS509

service & maintenance

The eyewash needs to be activated weekly for a period long enough to verify operation and ensure the flushing fluid is available (AS4775 & ANSI Z358.1).

Note: the intent is to ensure that there is a flushing fluid supply at the head of the device, to clear the supply line of any sediment build up that could prevent fluid from being delivered to the head of the device, and to minimize microbial contamination due to sitting water. Hose condition and outlets should also be checked for damage or wear. All eyewash units shall be inspected annually to assure conformance with AS4775 & ANSI Z358.1.

The equipment should be inspected and tested annually to ensure correct operation. Aerator outlet should be dismantled with aerator key, checked for any debris, and cleaned or replaced. Hose condition and outlets should also be checked for damage or wear, and all connections and joints checked for leaks.

CLEANING

Enware Product should be cleaned with a soft damp cloth using only mild liquid detergent or soap and water. Do not use cleaning agents containing a corrosive acid, scouring agent or solvent chemicals. Do not use cream cleaners, as they are abrasive. Epoxy coated surfaces should only be cleaned with a cloth and clear water or mild detergent. Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

If re-greasing spindles always use a silicon based potable water approved lubricant such as Hydroseal 'O' Ring Lubricant or Molykote 111 silicone based grease.

AS4775 Safety Equipment Minimum Performance Checklist

- ☐ Installation shall be in accordance with proper plumbing practices. Supply piping shall be adequately sized to meet flow requirements. (Sec D1)
- ☐ All plumbed emergency equipment shall be connected to a continuous source of flushing fluid supply which may be drinking water, preserved water, preserved buffered saline solution or other medically acceptable solution manufactured acceptable solution manufactured and labelled in accordance with applicable government regulations. (Sec 4.4, 4.10, 6.7 (c)), 7.5 (b), 8.5 (b), 9.5 (b), 11.3.3 (c))
- ☐ All equipment shall be constructed of corrosion-resistant materials (Sec 4.2, 5.1) Note: The Plumbing Code of Australia does not allow the use of galvanised pipes or fittings on drinking water supply lines. AS/NZS3500.1 Sec 2.4.2(c)
- ☐ Safety equipment shall be accessible within 10 seconds of hazard. (Sec 6.6, 7.4, 8.4, 9.4)
- ☐ Safety equipment shall be located on the same level as the hazard and the path of travel shall be free of obstructions. (Sec 6.6, 7.4, 8.4, 9.4)
- ☐ Emergency equipment location shall be well illuminated and be identified by a highly visible sign complying with AS1319 visible throughout the area served by the equipment. (Sec 6.6, 7.4, 8.4, 9.4)
- ☐ Employees who may be exposed to hazardous materials shall be trained in the location and proper use of emergency equipment. (6.8, 7.6, 8.6, 9.6).
- ☐ Emergency equipment shall be activated weekly to verify operation (6.8, 7.6, 8.6, 9.6)
- ☐ Emergency equipment shall be inspected annually to ensure conformance with the requirements of AS4775. (Sec 6.8, 7.6, 8.6, 9.6)
- ☐ Eye wash equipment shall deliver flushing fluid to both eyes simultaneously at a flow rate not less than 1.5 l/min at 210kPa. The flushing fluid streams should rise to approximately equal heights and should cover the areas between the interior and exterior lines of the test gauge when lowered not more than 38mm below the fluids peak. (Sec 7.1, 9.1 (c), 7.3.1)
- ☐ The flushing fluid nozzles of eye and eye/face wash units shall be not less than 838mm and no greater than 1143mm from the surface on which the user stands and 153mm from the wall or nearest obstruction. (Sec 7.4, 8.4, 9.1 (c), 9.1 (d))
- ☐ The eye and eye/face wash operating control valve shall remain open without the use of the operator's hands. The valve shall be simple to operate and go from closed to fully open in one second or less. The valve shall be corrosion resistant. (Sec 7.2, 8.2, 9.1 (c), 9.1 (d))

ANSI Z358.1 Safety Equipment Minimum Performance Checklist

RECOMMENDED TESTING FLOW PRESSURE IS 30 psi (+.5 psi -.0 psi)

- ☐ Safety equipment shall be accessible within 10 seconds of hazard. (Sec 4.5.2, 5.4.2, 6.4.2, 7.4.2)
- ☐ Safety equipment shall be located on the same level as the hazard and the path of travel shall be free of obstructions. (Sec 4.5.2, 5.4.2, 6.4.2, 7.4.2)
- ☐ All employees subject to exposure to hazardous material should be instructed in the location and proper use of emergency equipment. (Sec 4.6.4, 5.5.4, 6.5.4, 7.5.4)
- ☐ Emergency equipment shall be activated weekly. (Sec. 4.6.2, 5.5.2, 6.5.2, 7.5.2)
- ☐ All eye wash units shall be inspected annually to assure conformance with ANSI Z358.1. (Sec. 4.6.5, 5.5.5, 6.5.5, 7.5.5)
- ☐ All plumbed emergency equipment shall be connected to a continuous source of flushing fluid supply which may be drinking water, preserved water, preserved buffered saline solution or other medically acceptable solution manufactured acceptable solution manufactured and labelled in accordance with applicable government regulations. (Sec 4.4, 4.10, 6.7 (c)), 7.5 (b), 8.5 (b), 9.5 (b), 11.3.3 (c))
- ☐ Delivery of tepid flushing fluid.* (Sec. 4.5.6, 5.4.6, 6.4.6, 7.4.5). *Suggested temperature range – above 60°F (16°C) and below 100°F (38°C)
- ☐ Emergency equipment location shall be well lit and identified with a highly visible sign. (Sec. 4.5.3, 5.4.3, 6.4.3, 7.4.3)
- ☐ Must provide a means of controlled flow to both eyes simultaneously at a velocity low enough to be non-injurious. (Sec. 5.1.1, 6.1.1, 7.1)
- ☐ Eyewash only must deliver minimum of 0.4 gallon (1.5L) per minute for 15 minutes. (Sec. 5.1.6, 7.1)
- ☐ The flushing fluid of an eyewash shall cover the areas between the interior and exterior lines of a gauge at some point less than 8 inches (20.3cm) above the eyewash nozzle. (Sec. 5.1.8, 6.1.8, 7.1)
- ☐ Outlets shall be protected from airborne contaminants. (Sec. 5.1.3, 6.1.3, 7.1)
- ☐ Flushing fluid nozzles should be 33 to 45 inches (83.8cm – 114.3cm) from floor and minimum of 6 inches (15.3cm) from wall. (Sec. 5.4.4, 6.4.4, 7.1)
- ☐ Valve shall be designed so that the flushing flow remains on without the use of the operator's hands. The valve shall be simple to operate and go from "off" to "on" in one second or less. (Sec. 5.2, 6.2, 7.2)

product warranty statement - WATTS AUSTRALIA

EFFECTIVE FROM 20 November 2023

This Warranty Statement applies to products supplied by Australian Valve Group Pty Ltd (ACN 068 227 270) (**AVG**) or Enware Pty Ltd (ACN 662 302 767) (**Enware**) (each of AVG and Enware, a Supplier) and installed within Australia.

Subject to the terms and conditions outlined in this Warranty Statement, each Supplier warrants to its customers that a product supplied by it (**Product**) will be free from all defects in material and workmanship under normal usage for the applicable Warranty Period (as set out in the Warranty Table below). The Warranty Period commences from the date of delivery of the relevant Product.

1. Conditions

The warranty provided under this Warranty Statement will not apply in respect of a Product (or any Product defect, fault or resulting damage) if:

- (a) the Product is not installed and maintained in accordance with the requirements of the applicable laws, standards and codes (including, without limitation to, the National Construction Code Volume Three – Plumbing Code of Australia, associated reference standards as applicable at the time and AS/NZS 3500);
- (b) the Product is not installed and maintained by a qualified technician in accordance with the relevant installation and operation manual and instructions; and
- (c) any Product defect, faulty or resulting damage arises from:
 - (i) failure by you or any other person to follow the relevant manual or instructions (relating to the handling, storage, installation, fitting, connection, adjustment, maintenance or repair of the Product) published or provided by the Supplier;
 - (ii) failure by you or any other person responsible for the fitting, installation, or other work on the Product to follow or conform to applicable laws, standards and codes (including, without limitation to, the AS/NZ 3500 set of Standards, all applicable State and Territory Plumbing Codes, the Plumbing Code of Australia and directions and requirements of local and other statutory authorities);
 - (iii) any parts or components not manufactured by the Supplier (or otherwise not authorised by the Supplier) are installed or combined with the Product, without the prior authorisation of the Supplier; or
 - (iv) any act or circumstance beyond our control including, without limitation to, accident, abnormal use, vandalism, fouling caused by foreign material, damage from adverse water conditions, chemical, acts of God, damage to buildings, other structures and infrastructure and loss or damage during transit or transportation of the Product, or any abuse, misuse, misapplication, improper installation or connection, or improper maintenance or alteration of the Product.

2. Make a claim

To make a claim under this Warranty Statement, you must notify the relevant Supplier in writing within 7 days of any alleged defect in the Product coming to your attention and provide the Supplier with proof of your purchase of the Product to the relevant Supplier:

- (a) If the Product is supplied by **AVG**, please contact AVG by telephone at 1800 284 287, or by email via its online portal <https://www.wattsau.com.au/support>.
- (b) If the Product is supplied by **Enware**, please complete the Product Service Request form (ENF091), which is available on request from our office (see contact details below), or online via <https://www.enware.com.au/warranty-service-form/>. All notifications and accompanying forms must be sent to Enware marked for the attention of Enware, 9 Endeavour Road, Caringbah NSW 2229. Enware can also be contacted by telephone (1300 369 273) or by email (info@enware.com.au).

On receipt of a notification from you of a claim under this Warranty Statement, the relevant Supplier may contact you requesting you provide reasonably additional evidence, information or details about your claim, or requiring that the relevant Product should be returned to the Supplier (in accordance with the Supplier's instructions) for inspection and testing.

Your failure to comply with any such request within a reasonable amount of time may result in your claim under this Warranty Statement being rejected.

3. Our responsibilities

(a) In the event that the Supplier is reasonably satisfied that there is a defect in the relevant Product within the applicable Warranty Period, the Supplier will, at its option, replace the Product, supply an equivalent product or repair the Product, free of charge. Your costs in making a warranty claim under this Warranty Statement, including any costs in relation to freight, collection, delivery and installation, are to be borne and paid by you. However, if in respect of a Product, it is indicated in the Warranty Table that labour support will be provided, and the Supplier is reasonably satisfied that a defect in the Product takes place during the period that labour support will be provided as indicated in the Warranty Table, the Supplier will bear the costs for delivery, repair and installation of the replacement Product (as applicable).

(b) TO THE EXTENT PERMITTED BY LAW AND SUBJECT TO PARAGRAPH 4 BELOW AND THE OPERATION OF THE AUSTRALIAN CONSUMER LAW:

- (i) THE WARRANTY SET OUT IN THIS WARRANTY STATEMENT IS GIVEN EXPRESSLY AND IS THE ONLY WARRANTY GIVEN BY THE SUPPLIER WITH RESPECT TO THE RELEVANT PRODUCT;
- (ii) THE SUPPLIER MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED;
- (iii) THE SUPPLIER HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE; AND
- (iv) THE REMEDY DESCRIBED IN THIS WARRANTY STATEMENT SHALL CONSTITUTE THE SOLE AND EXCLUSIVE REMEDY FOR BREACH OF WARRANTY, AND THE SUPPLIER SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS OR THE COST OF REPAIRING OR REPLACING OTHER PROPERTY WHICH IS DAMAGED IF THE PRODUCT DOES NOT WORK PROPERLY.

4. Australian Consumer Law

This paragraph 4 applies if you are a 'Consumer' (as defined in section 3 of the Australian Consumer Law (**ACL**)) and the Product or services supplied to you falls within the goods or services which, for the purposes of the ACL, are of a kind ordinarily acquired for personal, domestic or household use or consumption.

The Products and services provided by the Supplier come with guarantees that cannot be excluded under the ACL, and noting in this Warranty Statement should be interpreted as attempting to exclude, restrict or modify such guarantees or your rights under the ACL. For major failures with any services, you are entitled:

- (c) to cancel your service contract with us; and
- (d) to a refund for the unused portion, or to compensation for its reduced value.

You are also entitled to choose a refund or replacement for major failures with Products. If a failure with the Product or a service does not amount to a major failure, you are entitled to have the failure rectified in a reasonable time. If this is not done you are entitled to a refund for the Products and to cancel the contract for the service and obtain a refund of any unused portion. You are also entitled to be compensated for any other reasonably foreseeable loss or damage from a failure in the Products or service*.

5. Warranty table

*the applicable period commences on the date of delivery of the Product.

PRODUCT GROUP	PRODUCT SERIES CODES	WARRANTY PERIOD (YEARS)*	LABOUR SUPPORT (YEARS)*
Safety	ECE, EEE, ENB, EFE, EL, ENBE, EM, SELF CONTAINED AND GRAVITY FED	2	1