

ONE 4

使用說明

VORTEX

技術支援
vortexkeyboard.ts@gmail.com

顧客服務
vortexkeyboard.cs@gmail.com

官方網站
www.vortexgear.store



連接方式

藍牙 / 2.4Ghz / USB



配對藍牙裝置 (長按3秒)

- | | | |
|------|--------|-------------|
| # 3 | 藍牙裝置 1 | LED1和2閃黃燈2秒 |
| \$ 4 | 藍牙裝置 2 | LED3閃黃燈2秒 |
| % 5 | 藍牙裝置 3 | LED1和3閃黃燈2秒 |

切換連接方式

- | | | |
|---|---------|-------------|
| 1 | USB | LED1閃黃燈2秒 |
| 2 | 2.4 Ghz | LED2閃黃燈2秒 |
| 3 | 藍牙裝置 1 | LED1和2閃黃燈2秒 |
| 4 | 藍牙裝置 2 | LED3閃黃燈2秒 |
| 5 | 藍牙裝置 3 | LED1和3閃黃燈2秒 |

打開電源開關，按著Fn + 3 / 4 / 5 三秒後進入配對模式，設備端會顯示ONE4#1 / 2 / 3，按下確認後即配對完成。過程中指示燈LED1 / 2 / 3 依序顯示黃燈閃爍。

Macro說明 (支援藍芽模式Macro)

- Fn + 數字鍵區1-4 選擇編輯層，1 為原始層，2/3/4 為可編輯層，右上LED1/2/3 指示燈顯示綠/紅/黃。
- Fn + 數字鍵區0 (絕對位置) 進入編輯，LED1/2/3 指示燈會持續閃所選編輯層顏色燈，準備開始錄製。
- 選擇要編輯的鍵，該層指示燈恆亮(每個按鍵編輯長度32鍵)。
- 錄製方式，首先定義按鍵組合(例: A鍵或是FN + A)，接下來定義輸出(例: 12345678) 再按FN + 數字鍵區的. (小數點) 鍵確認，該層燈色再次閃爍。
- 錄製完成後，可以接著再錄下一個，再按著步驟4.的做法重覆即可。若不再錄製，就需要退出編程模式。按FN + 數字鍵區的0 即可退出。

電池規格：鋰電池 (3.7V 1000mAh 3.7Wh)
 工作電流：9mA——鬆開按鍵將進入待機模式
 待機電流：4mA——待機30分鐘將進入休眠模式
 休眠電流：0.7mA (藍牙將中斷連線)
 額定輸入：5V 500mA



LED 1 / 2 / 3 指示燈

- LED1綠燈：Num Lock
- LED2綠燈：Caps Lock
- LED3綠燈：Scroll Lock
- LED1紅燈：Caps與Ctrl互換
- LED2紅燈：Windows Lock
- LED3紅燈：Fn (F1-F12)主從切換

註：定義的指示燈中，若兩種皆有開啟，例如Caps Lock與Windows Lock都有亮起，則變成黃燈。

產品名稱：機械鍵盤
 產品型號：VTK-1080
 產品尺寸：
 L*W*H：44.0*13.5*3.0 cm ± 0.3

按下 Fn + P 查看電量 (需在有線模式下並開啟電源開關)

- 66%-100%：LED1,2,3 閃紅燈兩秒
- 33%-66%：LED1,2 閃紅燈兩秒
- 33%以下：LED1 閃紅燈1秒
- 低電量顯示(按任意鍵時出現)：LED2 閃紅燈
- 無法充電：LED1,2,3 依序閃紅燈

Fn 切換

僅能使用於(2 / 3 / 4 層)
 同時按住Capslock、L_Ctrl、R_Win進入Fn設定模式(閃黃燈)。這時第一個按的鍵為Fn鍵(上圖中標記位置不能設定為Fn，並且Fn層無法進行Macro)。

按下 Fn + X 查看目前頻道

- LED1= 1 LED2= 2 LED3= 4
- 頻道1：LED1 閃黃燈二秒
- 頻道2：LED2 閃黃燈二秒
- 頻道3：LED1.2 閃黃燈二秒
- 頻道4：LED3 閃黃燈二秒
- 頻道5：LED1.3 閃黃燈二秒

Fn組合鍵

WINDOWS O.S



- | | |
|-------------|--------------------------|
| F1 = 螢幕亮度 - | F11 = 音量 - |
| F2 = 螢幕亮度 + | F12 = 音量 + |
| F4 = 搜尋 | O = 指示燈開/關 |
| F5 = 語音輸入 | P = 查看電量 |
| F6 = 休眠 | M = 切換為 MAC O.S |
| F7 = 上一首 | W = 切換為 WINDOWS O.S |
| F8 = 播放/暫停 | Tab = F1-F12 主從切換 |
| F9 = 下一首 | Capslock = Caps/Ctrl 互換 |
| F10 = 靜音 | L_Windows = Windows Lock |

? / = Menu

X = 查看目前頻道

R = 按住5秒 回復當層鍵值(絕對位置)
當前層的指示LED燈亮5次

R_Alt + L_Alt = 按住5秒 重置為出廠預設值
LED1,2,3 亮紅燈5次

MAC O.S

F1-F12 不需使用Fn組合鍵



- | | |
|----------------------|--------------------------|
| F1 = 螢幕亮度 - | F10 = 靜音 |
| F2 = 螢幕亮度 + | F11 = 音量 - |
| F3 = Mission Control | F12 = 音量 + |
| F4 = Spotlight | O = 指示燈開/關 |
| F5 = 聽寫/Siri | P = 查看電量 |
| F6 = 勿擾模式 | M = 切換為 MAC O.S |
| F7 = 倒轉 | W = 切換為 WINDOWS O.S |
| F8 = 播放/暫停 | Capslock = Caps/Ctrl 互換 |
| F9 = 快轉 | L_Windows = Windows Lock |

X = 查看目前頻道

R = 按住5秒 回復當層鍵值(絕對位置)
當前層的指示LED燈亮5次

R_Alt + L_Alt = 按住5秒 重置為出廠預設值
LED1,2,3 亮紅燈5次

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

公司名稱：沃特斯有限公司
 公司地址：台北市內湖區舊宗路二段181巷14號4樓

> NCC警語

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

VORTEXKEYBOARD



TECHNICAL SUPPORT
vortexkeyboard.ts@gmail.com

CUSTOMER SERVICE
vortexkeyboard.cs@gmail.com

OFFICIAL WEBSITE
www.vortexgear.store



Product Name : Mechanical Keyboard
Model Name : VTK-1080
Product Size :
L*W*H : 44.0*13.5*3.0 cm ± 0.3

Battery : Lithium battery (3.7V 1000mAh 3.7Wh)
Working Current : 9mA — Release the key will enter into standby mode
Standby Current : 4mA — Hibernate for 30 minutes will enter into sleep mode
Sleep Current : 0.7mA (Bluetooth will be disconnected)
Rated Input Power : 5V ⚡ 500mA

Connection Bluetooth / 2.4Ghz / USB

Pairing Bluetooth devices (Press for 3 seconds)



- # 3 Device 1 LED1 and LED2
Flashes yellow light for 2 seconds
- \$ 4 Device 2 LED3
Flashes yellow light for 2 seconds
- % 5 Device 3 LED1 and LED3
Flashes yellow light for 2 seconds


Switch between paired devices

- 1 USB LED1
Flashes yellow light for 2 seconds
- 2 2.4 Ghz LED2
Flashes yellow light for 2 seconds
- # 3 Device 1 LED1 and LED2
Flashes yellow light for 2 seconds
- \$ 4 Device 2 LED3
Flashes yellow light for 2 seconds
- % 5 Device 3 LED1 and LED3
Flashes yellow light for 2 seconds

Turn on the power switch, hold down Fn + 3 / 4 / 5 for three seconds to enter pairing mode. The device will display ONE4#1 / 2 / 3, and once confirmed, the pairing is complete. During the process, LED1 / 2 / 3 indicator lights will sequentially flash yellow light.

Macro Guide (Supports Bluetooth Mode Macro)

- Fn + number keys 1-4 select the editing layer. 1 represents the base layer, while number keys 2 / 3 / 4 are editable layers. The LED1 / 2 / 3 indicator lights display green / red / yellow respectively.
 - Fn + number key 0 (Absolute position) enters editing mode. The LED1 / 2 / 3 indicator lights will continuously flash in the color of the selected editing layer, indicating readiness to begin recording.
 - Select the key to be edited. The indicator light of that layer will stay illuminated (each key editing length is 32 keys).
 - Recording process : Firstly, define the key combination (e.g., A key or Fn + A). Then, define the output (e.g., 12345678). Press Fn + "." (decimal point) key in the number key area to confirm, and the indicator light of that layer will flash again.
 - After completing the recording, you can proceed to record the next one by repeating the steps in 4.
- If you need to exit the programming mode, press Fn + number key 0 to exit.

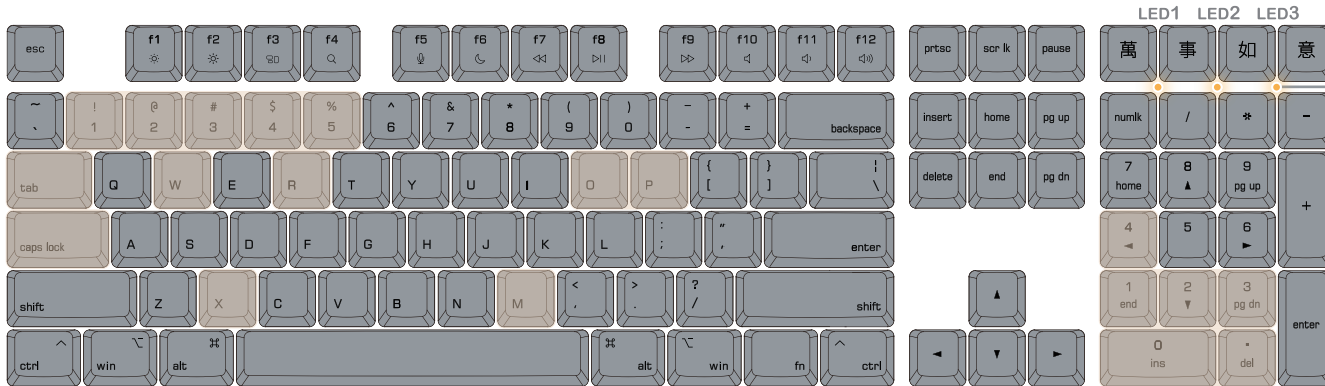

LED 1 / 2 / 3 Indicator Lights

- LED1 green light : Num Lock
- LED2 green light : Caps Lock
- LED3 green light : Scroll Lock
- LED1 red light : Caps and Ctrl swap
- LED2 red light : Windows Lock
- LED3 red light : Fn (F1-F12)
Master / Slave switch

Note:
In the defined indicator lights, if two types are both turned on, for example, Caps Lock and Windows Lock are both illuminated, it will become a yellow light.

Press Fn + P to check the battery level

Please turn on the power switch while in wired mode
66%-100% : LED1, 2, and 3 flash red light for two seconds
33%-66% : LED1 and 2 flash red light for two seconds
Below 33% : LED1 flashes red light for one second
Low battery indication
(appears when any key is pressed) : LED2 flashes red light
Unable to charge : LED1, 2, and 3 flash red light in sequence

Fn Switching

Can only be used in (2 / 3 / 4 layer)
Simultaneously press Caps Lock, L_Ctrl, and R_Win to enter Fn setting mode (flashing yellow light). At this time, the first key pressed is the Fn key (The marked keys cannot be set as the Fn key, and macro is not available in the Fn layer).

Press Fn + X to view the current channel

LED1 = 1, LED2 = 2, LED3 = 4
Channel 1 : LED1 flashes yellow light for two seconds
Channel 2 : LED2 flashes yellow light for two seconds
Channel 3 : LED1 and LED2 flash yellow light for two seconds
Channel 4 : LED3 flashes yellow light for two seconds
Channel 5 : LED1 and LED3 flash yellow light for two seconds

Fn Key Combos

WINDOWS O.S



- F1 = Screen Brightness -
- F2 = Screen Brightness +
- F4 = Search
- F5 = Voice Recognition
- F6 = Hibernate
- F7 = Previous
- F8 = Play / Pause
- F9 = Next
- F10 = Mute
- F11 = Vol -
- F12 = Vol +
- O = Indicator Lights ON / OFF
- P = Check the battery level
- M = Switch to MAC O.S
- W = Switch to WINDOWS O.S
- Tab = F1-F12 Master / Slave switch
- Capslock = Caps / Ctrl swap
- L_Windows = Windows Lock

- ?/ = Menu
- X = View the current channel
- R Hold for 5 seconds =
Restore the key values of the current layer (absolute position)
The indicator LED of the current layer will light up 5 times
- R_Alt + L_Alt Hold on for 5 seconds =
Keyboard restore to default
LED 1, 2, and 3 light up red light for 5 times

MAC O.S

F1-F12 No Fn Required



- F1 = Screen Brightness -
- F2 = Screen Brightness +
- F3 = Mission Control
- F4 = Spotlight
- F5 = Dictation / Siri
- F6 = Do Not Disturb
- F7 = Rewind
- F8 = Play / Pause
- F9 = Fast-forward
- F10 = Mute
- F11 = Vol -
- F12 = Vol +
- O = Indicator Lights ON / OFF
- P = Check the battery level
- M = Switch to MAC O.S
- W = Switch to WINDOWS O.S
- Capslock = Caps / Ctrl swap

- X = View the current channel
- R Hold for 5 seconds =
Restore the key values of the current layer (absolute position)
The indicator LED of the current layer will light up 5 times
- R_Alt + L_Alt Hold on for 5 seconds =
Keyboard restore to default
LED 1, 2, and 3 light up red light for 5 times

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Company Name : Vortexgear Co., Ltd.
Company Address : 4F., No. 14, Ln. 181, Sec. 2, Juzong Rd., Neihu Dist., Taipei City, 114709, Taiwan

VORTEX KEYBOARD