


Installation and Maintenance Manual

MRW-E

Powered Radial Winch **40.2 ST EL**

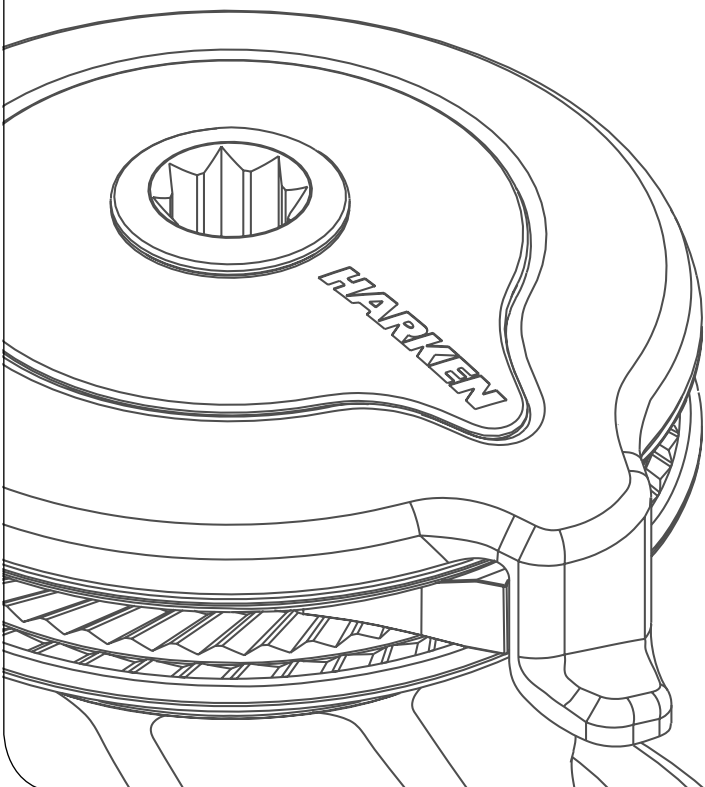

HARKEN®

| | |
|---|-----------|
| Introduction | 3 |
| Technical characteristics | 3 |
| Performance data | 3 |
| Weight | 4 |
| Maximum working load | 4 |
| Outline | 5 |
| Installation | 6 |
| Procedure 1 | 7 |
| Procedure 2 | 8 |
| Winch installation procedure | 10 |
| Positioning the self-tailing arm | 11 |
| Motor installation procedure | 11 |
| Electric wiring diagrams | 12 |
| Maintenance | 14 |
| Washing | 14 |
| Maintenance table | 14 |
| Disassembly procedure | 14 |
| Exploded view with maintenance products | 18 |
| Assembly | 19 |
| Harken® limited worldwide warranty | 20 |
| Ordering spare parts | 20 |
| Exploded view | 21 |
| Radial Winch 40.2 STA, STC, STCW EL | 21 |
| Parts List | 23 |
| Radial Winch 40.2 STA EL | 23 |
| Radial Winch 40.2 STC EL | 24 |
| Radial Winch 40.2 STCW EL | 25 |
| Exploded view | 26 |
| Radial Winch 40.2 STBBB, STCCC EL | 26 |
| Parts List | 27 |
| Radial Winch 40.2 STBBB EL | 28 |
| Radial Winch 40.2 STCCC EL | 29 |
| Exploded view | 30 |
| Horizontal electric motor 12V/24V | 30 |
| Parts List | 30 |
| Horizontal electric motor 12V/24V | 30 |

Introduction

This manual gives technical information on winch installation and maintenance, including disassembling and reassembling.

This information is DESTINED EXCLUSIVELY for specialised personnel or expert users.

Installation, disassembling and reassembling of the winch by personnel who are not experts may cause serious damage to users and those in the vicinity of the winch.

Harken® accepts no responsibility for defective installation or reassembly of its winches.

In case of doubt the Harken® Tech Service is at your disposal at techservice@harken.it

This Manual is available only in English. If you do not fully understand the English language, do not carry out the operations described in this Manual.

NOTICE

To use and understand this manual, user must refer to other documents, available on web site www.harken.com and listed below:

- The Dual Function Control Box user manual, for the use of the Dual Function Control Box.
- The Dual Function Control Box installation manual, for all details, informations, wiring schemes and warnings about its installation

Technical characteristics

| | Power ratio | Gear ratio |
|-----------|-------------|------------|
| 1st speed | 13,50 : 1 | 2,13 : 1 |
| 2nd speed | 39,90 : 1 | 6,28 : 1 |

The theoretical power ratio does not take friction into account.

Performance data

Winch 40.2 ST EL (electric)

| | horizontal motor | | | |
|----------------------|------------------|-----------|--------------|-----------|
| | 12 V (700 W) | | 24 V (900 W) | |
| | 1st speed | 2nd speed | 1st speed | 2nd speed |
| line speed (m/min)** | 23,2 | 7,9 | 28,7 | 9,8 |
| max load (Kg) | 290 | 850 | 290 | 850 |

***Line speed is measured with no load*

| | | motor nominal power (W) | | current absorption at winch MWL (A) | |
|------------------|------------|-------------------------|------|-------------------------------------|------|
| | | 12 V | 24 V | 12 V | 24 V |
| winch 40.2 ST EL | horizontal | 700 | 900 | 170 | 90 |

Weight

| | ST A EH | ST C/CW EH | ST BBB EH | ST CCC EH |
|-------------|---------|------------|-----------|-----------|
| weight (Kg) | 13,5 | 15,1 | 15,9 | 15,9 |

Versions:

A = drum in anodised aluminium

C = drum in chrome bronze

CW = chrome/white

BBB = all bronze

CCC = All-Chrome bronze

EH = horizontal electric winch

Maximum working load




WARNING!

The maximum working load (MWL) for the 40.2 ST Radial Winch is 850 Kg (1874 lb)


Subjecting the winch to loads above the maximum working load can cause the winch to fail or pull off the deck suddenly and unexpectedly during high loads causing severe injury or death.

Outline

Winch 40.2 ST EL

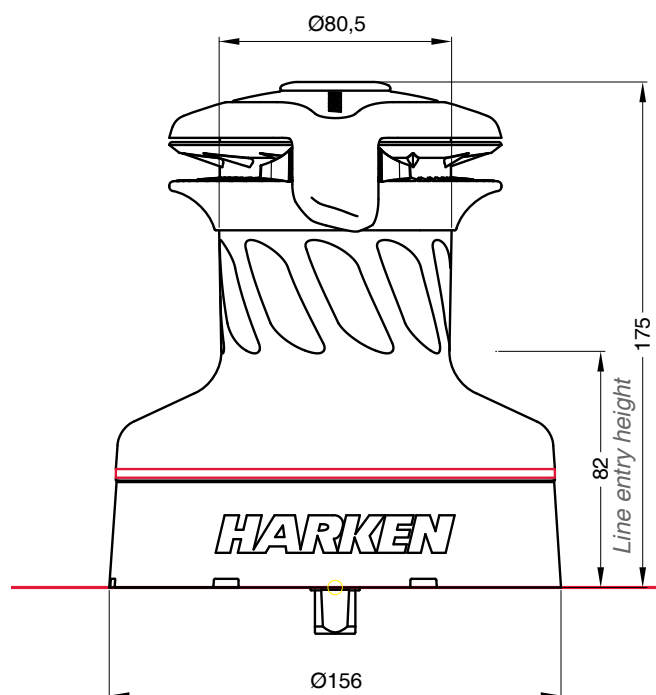

Horizontal electric motor (12 V / 24 V)

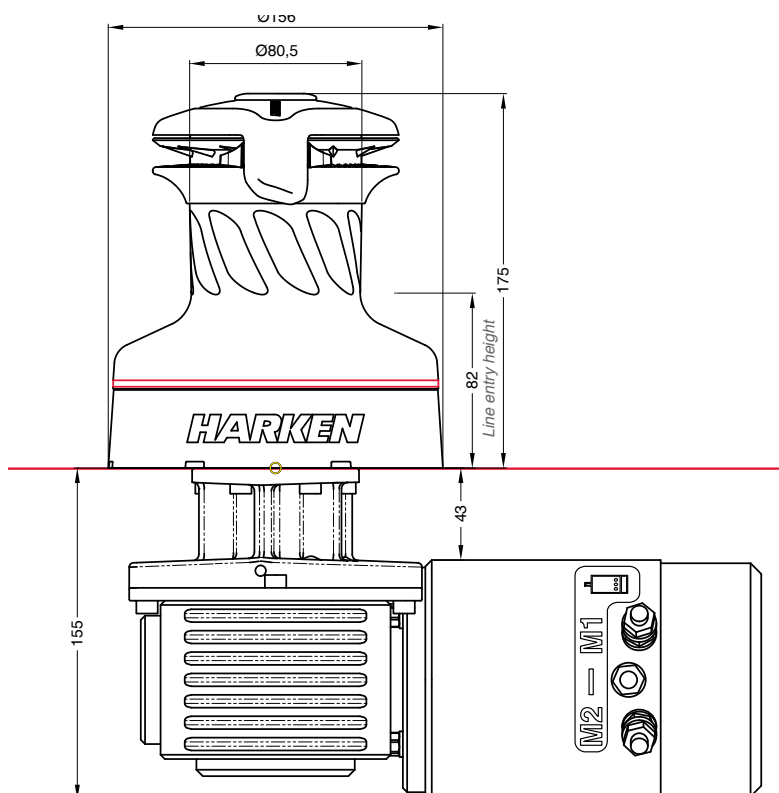

Installation

The winch must be installed on a flat area of the deck, reinforced if necessary to bear a load equal to at least twice the maximum working load of the winch.

It is the installer's responsibility to carry out all structural tests needed to ensure that the deck can bear the load.

Harken® does not supply the screws needed to install the winch since these may vary depending on the deck on which it is to be installed.

It is the installer's responsibility to choose the correct screws taking account of the loads they will have to bear.

Harken® assumes no responsibility for incorrect installation of its winches or for an incorrect choice of mounting screws.



DANGER!

Incorrect installation of the winch may cause severe injury or death. Consult the yard that built the boat in the case of doubt over the correct positioning of the winch.




WARNING!

Failure to use the correct number and type of mounting fasteners or failure to ensure the correct deck strength can result in the winch pulling off the deck suddenly and unexpectedly during high loads causing severe injury or death.



WARNING!


Verify the entry angle of the sheet. This must be 8° with tolerance of $\pm 2^\circ$, to avoid sheet overrides and damaging the winch or making the winch inoperable leading to loss of control of the boat which can lead to severe injury or death.

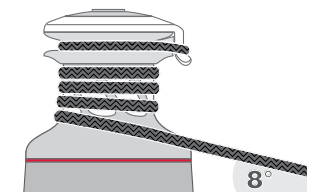

WARNING!

Mount the winch on the deck so that the drive gear is positioned where the sheet enters the winch drum.

Incorrect position of drive gear can weaken winch leading to failure which can cause an accident leading to severe injury or death.

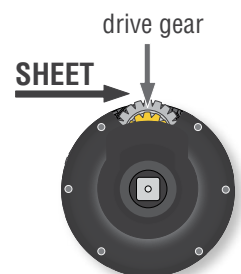

NOTICE

For winch STA, STC and STCW versions only
You can find the icon ▲ on the skirt to identify the drive gear position.



After correctly positioning the final drive gear with respect to the load, check that the motor, gearing, electrical wiring and/or hydraulic pipes can be housed below decks. To help find the optimal compromise, remember that, to make the installation of the motor easier, it can be coupled to the winch in different positions.

Once you have decided the correct mounting position for the winch on the deck and checked the space available below deck, proceed with the installation.


The winch can be installed following one of the two procedures below (Procedure 1 or Procedure 2):

Procedure 1

To install the winch you must remove the drum and use Socket Head (SH) bolts.

Tools needed:  One medium flat-bladed screwdriver

To identify the various parts, refer to the exploded view at the end of this Manual.

 Torque to apply when assembling



1. Pull out the disconnect rod n°30



2. Unscrew the central screw ($\approx 2\text{Nm}/18\text{ in-lb}$)



3. Slide off the assy socket n°28 and the cover n°29.

Pay attention to the o-ring in the socket.



4. Unscrew the three screws n°27 ($\approx 4\text{Nm}/35\text{ in-lb}$)



5. Remove the self-tailing arm n°26 by rotating and lifting it.



6. Lift off the drum n°22

Install the winch on the deck in the position you have chosen, keeping in mind the limits described on page 6 and using socket head (SH) bolts.

Procedure 2 (not pertinent for ST BBB/CCC versions)

To install the winch, remove the winch skirt and use hexagonal headed (HH) bolts.


Tools needed:  One medium flat-bladed screwdriver

To identify the various parts, refer to the exploded view at the end of this Manual.

See (paragraph on installation) the limits described on page 6 and using socket head (SH) bolts.

 Torque to apply when assembling



1. Remove the skirt n°2 with the help of the screwdriver placed as shown by the symbol 



2. Take off the base n°2



3. Position the 5 M6 hexagonal headed bolts in their holes



4. Reposition the skirt n°2 in its housing



5. Press down the skirt to position it correctly

NOTICE

Make sure the skirt is correctly clipped on to the base of the winch.

Install the winch on the deck in the position you have chosen, keeping in mind the limits described on page 6 and using hexagonal headed bolts.

Winch installation procedure


Carry out Procedure 1 or Procedure 2, then install the winch on the deck in the chosen position.

NOTICE

Before drilling the deck, check the space available below deck for the flange and the motor

A. Position the base of the winch on the deck and mark the position of the holes or use the drilling cut-out template at the point where you have decided to place the winch.

Below is a reduced scale diagram.

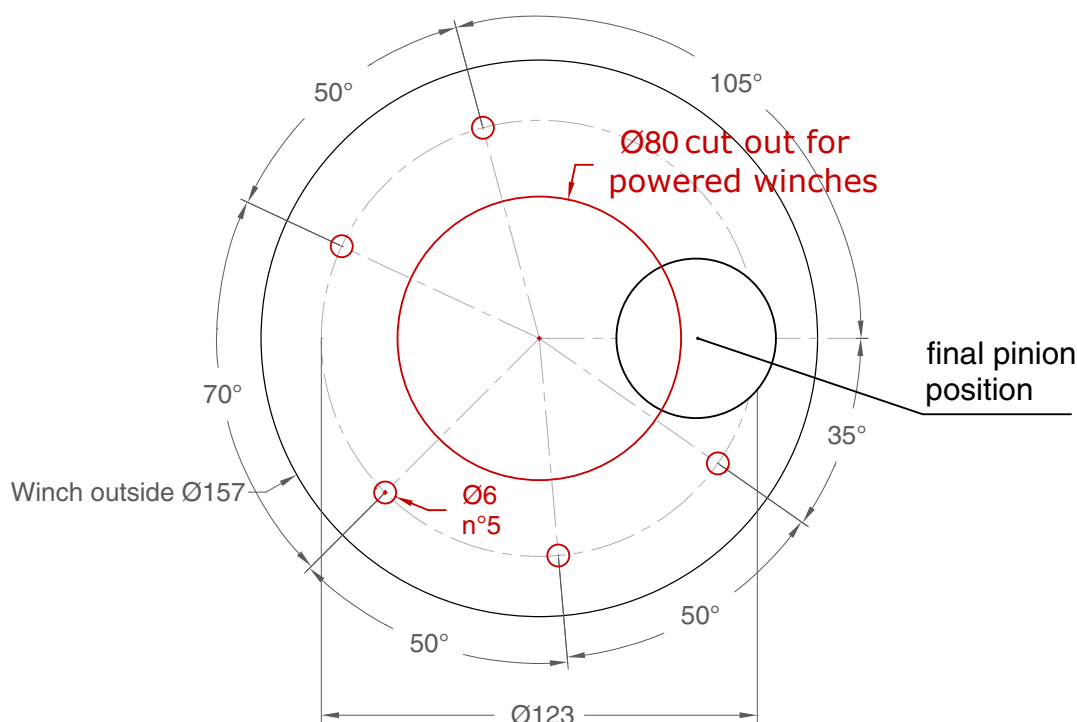

The drilling cut out template is available on the Harken® website, www.harken.com

B. Remove the winch and drill the five 6.2 mm and a 80 mm diameter holes.

C. Bolt the base of the winch to the deck using five M6 bolts (not supplied by Harken®) as described at Procedure 1 or Procedure 2, correctly chosen for the thickness and type of the boat deck. Consult the yard that built the boat in case of doubt.



WARNING!

To install the winch on the deck, use only bolts in A4 stainless steel (DIN 267 part11). Bolts made of other materials may not have sufficient strength or may corrode which can result in winch pulling off deck suddenly and unexpectedly during high loads causing severe injury or death.

NOTICE

To mount winches on the deck, do not use countersunk bolts.

D. Fill the mounting holes with a suitable marine sealant.

E. Remove the excess adhesive/sealant from the holes and base drainage channels

F. Reassemble the winch following the steps in **Procedure 1** or **Procedure 2** in the reverse order, and apply the products indicated in the section on maintenance.

NOTICE

Before closing the winch, make sure the holes and drainage channels in the base of the winch are not obstructed.

Positioning the self-tailing arm

Position the self-tailing arm so that the line leaving the winch is led into the cockpit.

Motor installation procedure




WARNING!

Make sure that the electric power is switched off before installing or carrying out maintenance on the winch.

Once you have installed the winch on the deck, proceed with motor installation. The motor can be coupled to the winch in different positions. Check the space available below deck and choose the suitable position.

Tools needed

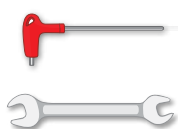

- A number five hex key
- A number six hex key (only for vertical electric motor)
- A number ten hex key (only for hydraulic motor)
- Two number thirteen wrenches



1. Position the flange (see Page 12)



2. Tighten six M6 precote coated screws
(8 Nm/ 70 in-lb)



3. Position the reduction gear and motor



4. Tighten the two screws (8 Nm/ 70in-lb).
Be sure to align the flange.

NOTICE

Before positioning the flange, check to make sure that seals (the first one is above the flange and the second one is under the flange) are seated correctly.



After winch is assembled and before sailing, test the powered winch functioning: insert the lock-in winch handle in the handle socket and check that the disconnect rod must disconnect gearbox.

Electric equipment

To guarantee greater efficiency in terms of safety and long life, for every winch model is mandatory to install the Dual Function Control Box.

To fasten the Dual Function Control Box containing solenoids to bulkhead or wall, for all installation details and for all electric wiring schemes, refer to the Dual Function Control Box manual.



WARNING!

Before installing and using the device, read carefully the Dual Function Control Box manual available on web site www.harken.com

Refer to the following chart for wire size:

Total distance between winch and battery

| Winch size | Current voltage | Under 16.4 ft AWG | Under 5 m mm ² | 16.4 - 32.8 ft AWG | 5 m - 10 m mm ² | 32.8 - 49.2 ft AWG | 10 m - 15 m mm ² | 49.2 - 65.6 ft AGW | 15m - 20 m mm ² |
|------------|-----------------|----------------------|------------------------------|-----------------------|-------------------------------|-----------------------|--------------------------------|-----------------------|-------------------------------|
| 40.2 | 12 V | 2 | 32 | 0 | 50 | 00 | 70 | 000 | 95 |
| 40.2 | 24 V | 5 | 16 | 3 | 25 | 2 | 35 | 0 | 50 |

Refer to the following chart for HCP model:

| Winch size | Current voltage | HCP model | Ampere rating |
|------------|-----------------|-----------|---------------|
| 40.2 | 12 V | HCP1717 | 80A |
| 40.2 | 24 V | HCP1717 | 80A |

NOTICE

To connect motor, attach cable terminals to clamps between nut and lock nut. Hold nut in contact with motor using a spanner and tighten other nut with second spanner. Take special care not to turn the central spindles. These instructions apply when assembling and disassembling. We recommend using a torque wrench so as to obtain a torque equal to and no greater than 10 Nm (88 in-lb).

**NOTICE**

Note that correct electrical contact sequence is:
Nut – Cable Terminal – Self-Locking Washer –
Lock Nut



Maintenance

Washing

Winches must be washed frequently with fresh water, and in any case after each use. Do not allow teak cleaning products or other cleaners containing caustic solutions to come into contact with winches and especially anodised, chrome plated or plastic parts. Do not use solvents, polishes or abrasive pastes on the logos or stickers on the winches. Do not use polishes or abrasive pastes on anodised, chromed plated or plastics surfaces. Make sure that the holes and drainage channels in the base of the winch are not obstructed so that water does not collect.

Maintenance table

Winches must be visually inspected at the beginning and end of every season of sailing or racing. In addition they must be completely overhauled, cleaned and lubricated at least every 12 months. After an inspection, replace worn or damaged components. Do not replace or modify any part of the winch with a part that is not original.

**WARNING!**

Periodic maintenance must be carried out regularly. Lack of adequate maintenance shortens the life of the winch, can cause serious injury and also invalidate the winch warranty. Installation and maintenance of winches must be carried out exclusively by specialized personnel.

**WARNING!**

Make sure that the power is switched off before installing or carrying out maintenance on the winch.

In the case of doubt contact Harken® Tech Service at techservice@harken.it

Disassembly procedure

Tools needed:



One medium flat-bladed screwdriver



A number five hex key



Brush



Rags

To identify the various parts refer to the exploded view at the end of this Manual.



Torque to be applied in assembly phase

Carry out **Procedure 1** as shown in the paragraph on winch installation and then do the following:



6. Completely unscrew the three screws n° 27 and remove the stripper arm support n°21



7. Slide out the central shaft n°19



8. Unscrew the 6 hex screws n°16
(8Nm/70 in-lb)



9. Remove the assy housing n°15
Important: washer n°12 may remain inside the drum support!



10. Remove the washer n°12



11. Remove the gear n°7



12. Remove the pawls carrier n°4



13. Remove the gear n°3



14. Remove the gear n°14



15. Remove the gear n°10



16. Remove the pawls carrier n°11



17. Remove the washer n°9

If it is necessary to replace any jaws of the winch, proceed as follows:



I. Unscrew the 4 screws n°25
($\approx 4\text{Nm}/35\text{ in-lb}$)



II. Remove the jaws n°24

Once the winch is completely disassembled, clean the parts with a degreasing that does not leave residues, proper to clean metal components; rinse plastic parts in fresh water. Once you have done this, dry the parts with cloths that do not leave residue.

Inspect gears, bearings, pins and pawls for any signs of wear or corrosion.

Carefully check the teeth of gears and ring gears to make sure there are no traces of wear.

Check the roller bearings and check there are no breaks in the bearing cages.

Replace worn or damaged components.


Carry out maintenance on components using the products listed below.

For more information on which products to use where, refer to the exploded diagram below.

Use a brush to lightly lubricate all gears, gear pins, teeth and all moving parts with grease.

Lightly lubricate the pawls and springs with oil. Do not use grease on the pawls!

Exploded view with maintenance products

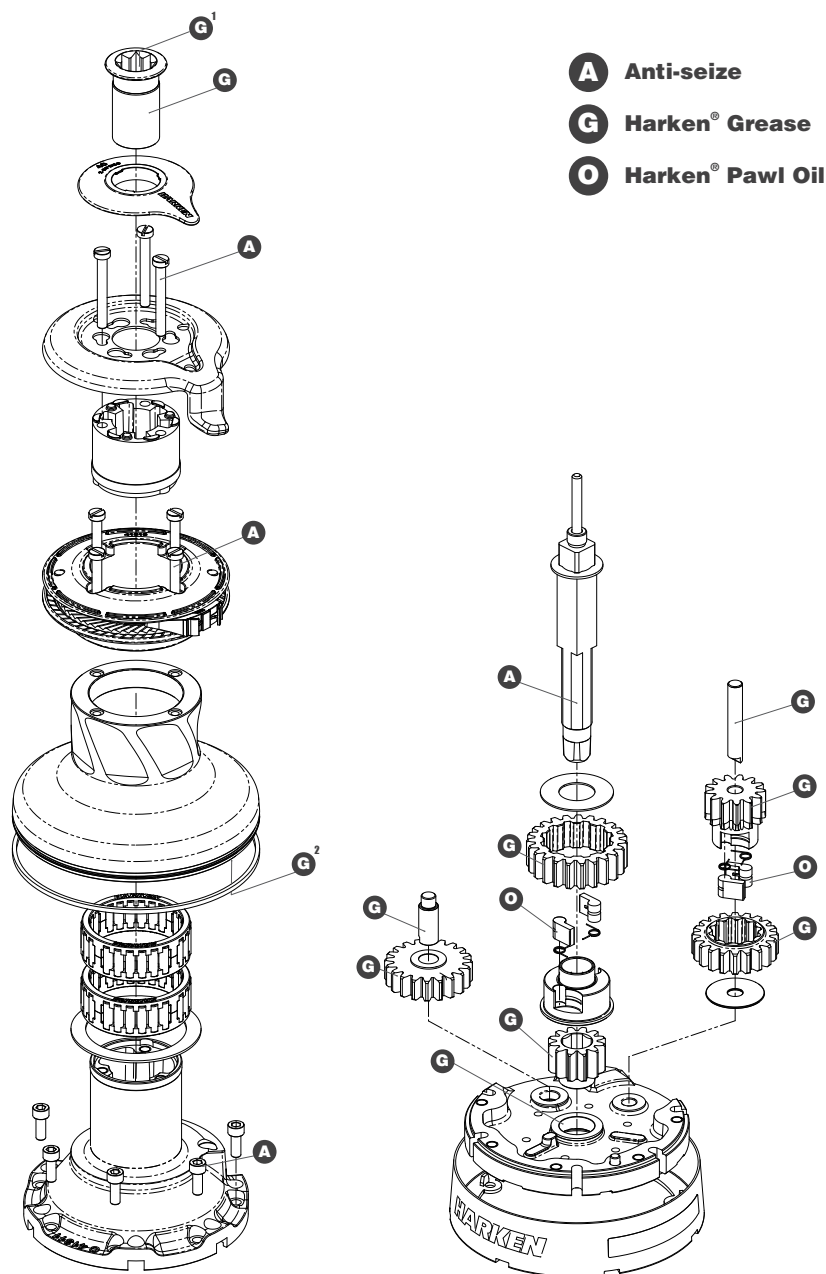

Apply Harken® grease where indicated above
 Apply Harken® grease: 1. on assy socket screw - 2. on drum gear

NOTICE

On every gear and every component that must be greased, apply Harken® grease with a brush in a proper quantity as shown below:



NOTICE

Harken® grease to apply on all teeth: do not use excessive quantity of product to void wastes. If in contact with the pawls, an excess of grease can compromise the safety of the winch.

Assembly

Make sure that the holes and drainage channels in the base of the winch are not obstructed. Assemble the winch in the reverse order of the sequence in the section of disassembly.


To tighten bolts, use the torque indicated in the disassembly procedure.



When positioning the stripper arm, align the peeler with it.




If the jaws have been disassembled, insert peeler between the two jaws, taking care that the letters TOP on the peeler are facing upwards.

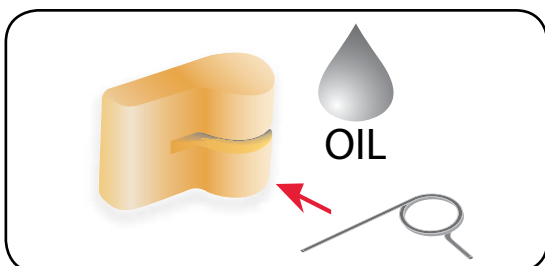

To assemble the pawls

Correctly position the spring in its housing as shown at left. Hold the spring closed and slide the pawl into its housing. Once in position, check that the pawls can be easily opened and closed with a finger.

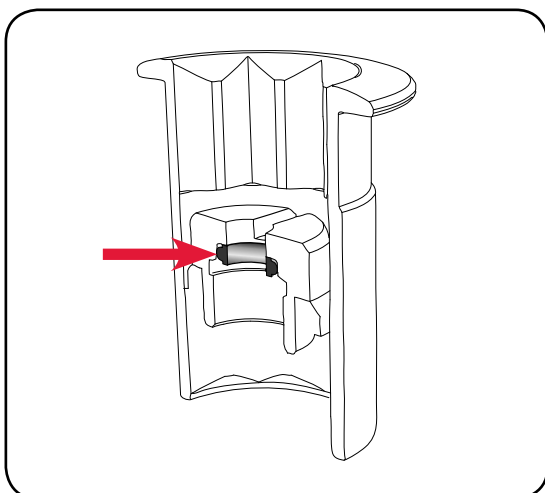

NOTICE

Before screw the central screw, check the correct position of the o-ring in the assy socket and apply Harken® grease.

In case of doubt concerning the assembly procedure contact Harken® Tech Service: techservice@harken.it

Harken® limited worldwide warranty

Refer to the Harken® Limited Worldwide Warranty in the Harken® Catalogue and on the website www.harken.com

Ordering spare parts

Spare parts can be requested from Harken® as described in the Harken® Limited Worldwide Warranty, indicating the part number in the Parts List and including the serial number of the winch for which the parts are required.

The serial number of the winch is printed on a plate on the drum support of the winch.

**Manufacturer*****Harken® Italy S.p.A.***

Via Marco Biagi, 14
22070 Limido Comasco (CO) Italy
Tel: (+39) 031.3523511
Fax: (+39) 031.3520031
Email: info@harken.it
Web: www.harken.com

- **Tech Service**
Email: techservice@harken.it
- **Customer Service**
Tel: (+39) 031.3523511
Email: info@harken.it


Headquarters***Harken®, Inc.***

1251 East Wisconsin Avenue
Pewaukee, Wisconsin 53072-3755 USA
Tel: (262) 691.3320
Fax: (262) 691.3008
Email: harken@harken.com
Web: www.harken.com


- **Tech Service**
Email: technicalservice@harken.com
- **Customer Service**
Tel: (262) 691-3320
Email: customerservice@harken.com

Exploded view

Radial Winch 40.2 STA, STC, STCW EL

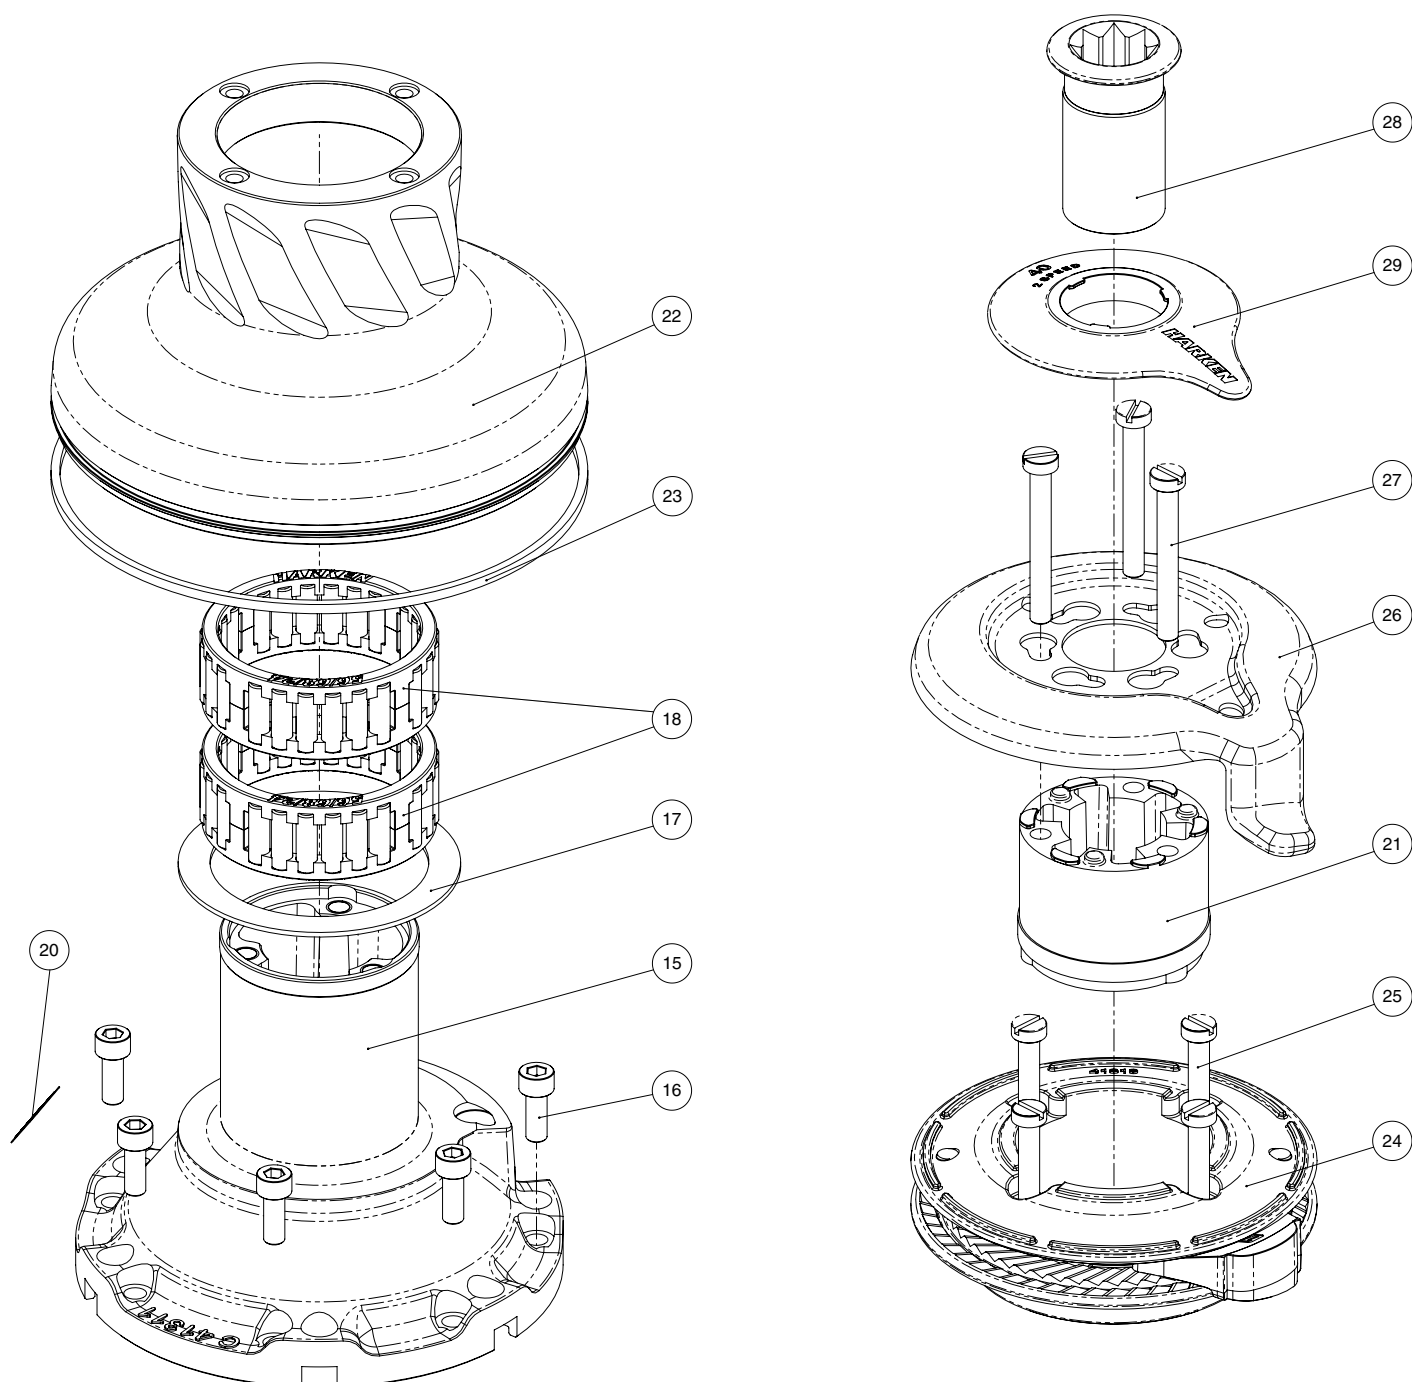

Radial Winch 40.2 STA, STC, STCW EL

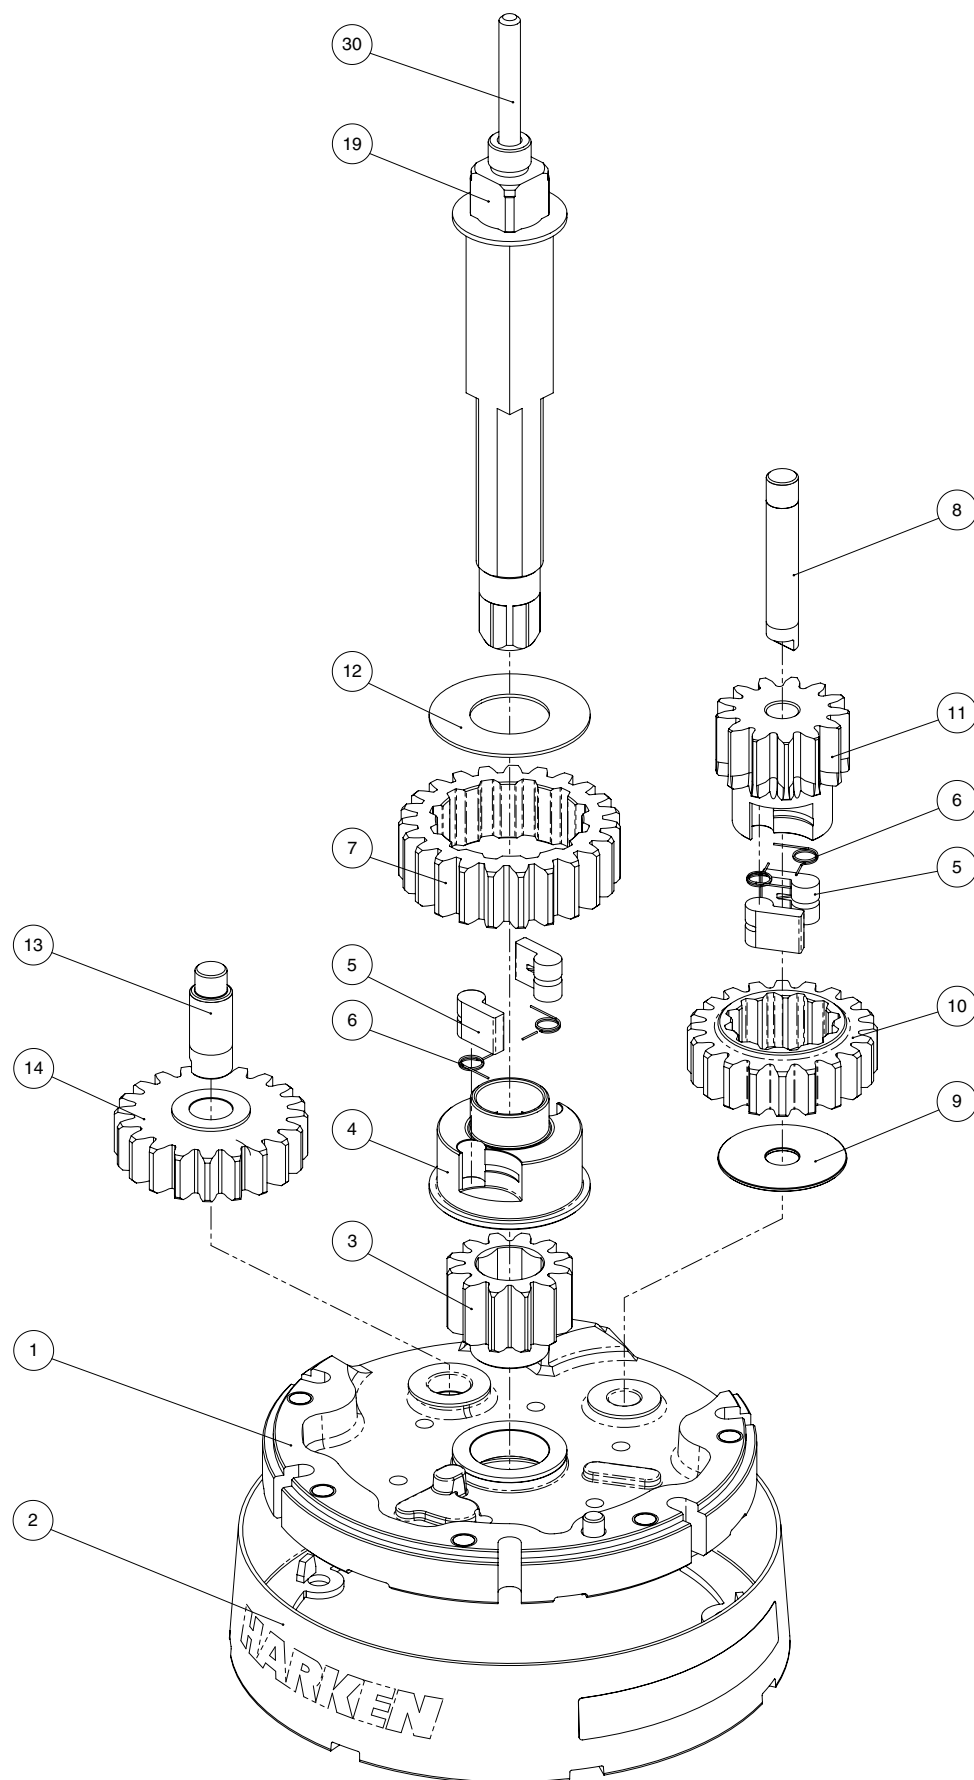

Parts List

Radial Winch 40.2 STA EL

A = drum in anodised aluminium

| Pos. | Q.ty | Code | Description | Pos. | Q.ty | Code | Description |
|------|------|------------|--------------------------|------|------|------------|------------------------------|
| 1 | 1 | A94189600 | Assy Base Winch 40 EL/HY | 18 | 2 | A74136000 | Bearing Ø56xØ68x24 |
| | 1 | S413350080 | Base W40 | 19 | 1 | A94149800 | Assy Central Shaft W40 EL/HY |
| | 1 | S4130900A7 | Roller Ø6x19 | | 1 | S413880002 | Central Shaft Pred. W40 |
| | 1 | S413960085 | Bushing Ø22xØ25x8.5 | | | | Washer Ø17.2xØ32x1.5 |
| | 1 | S413330085 | Bushing Ø9xØ11x12 | 20 | | | Winch Serial Number Sticker |
| | 1 | S413330085 | Bushing Ø12xØ14x11 | 21 | 1 | S4129400A0 | Stripper arm support |
| 2 | 1 | A94141400 | Assembly Skirt Winch 40 | 22 | 1 | S414170053 | Drum A W40 |
| | | | Skirt W40 | 23 | 1 | S281680097 | Red line |
| | | | Winch Product Sticker** | 24 | 1 | A94131800 | Assy Winch 40 Jaws |
| 3 | 1 | S413020004 | Gear Z12 | | | | Lower Jaw W35/40 |
| 4 | 1 | S413030004 | Pawls Carrier Ø8xN2 | | 1 | S413610080 | Upper Jaw W35/40 |
| 5 | 4 | S000080003 | Pawl Ø8* | | 4 | S385970001 | Peeler W20 - 40 |
| 6 | 4 | S000380001 | Pawl Spring Ø8* | | | | Spring |
| 7 | 1 | S412830041 | Gear Z23 | 25 | 4 | M0601803 | Screw UNI EN ISO 1207 - |
| 8 | 1 | S413000004 | Pin Ø9x55 | | | | M6x35 - A4 |
| 9 | 1 | S279090002 | Washer Ø36xØ9,5x1 | 26 | 1 | S414200019 | Stripper Arm W35/40 |
| 10 | 1 | S412970004 | Gear Z20 | 27 | 3 | M6007103 | Screw M6x50 UNI6107 |
| 11 | 1 | S412850041 | Pinion Z13 | 28 | 1 | A94149300 | Assy Socket W35-80 EL/HY |
| 12 | 1 | S413120002 | Washer Ø22.5xØ45x1 | | | | Socket Handle W20/80 |
| 13 | 1 | S413070004 | Pin Ø9xØ12x32.5 | | 1 | S414940085 | Washer Ø25xØ15x4 |
| 14 | 1 | A94130500 | Assy Gear Z20 | | 1 | S414930003 | Nut Screw for Disconnect Rod |
| | | | Gear Z20 | | 1 | M0679797 | O ring RC 2025 series |
| | 2 | S414900080 | Bushing Ø12xØ14x8 | 29 | 1 | S4141900A5 | Cover 2 speed W40 |
| 15 | 1 | A94141500 | Assy Housing Winch 40 | 30 | 1 | S415060002 | Disconnect Rod W40 |
| | | | Support W40 | | | | |
| | 2 | S414890080 | Bushing Ø9xØ11x7 | | | | |
| | 1 | S4130900A7 | Bushing Ø22xØ25x8.5 | | | | |
| 16 | 6 | M0635103 | Socket head screw M6x16 | | | | |
| | | | UNI5931 | | | | |
| 17 | 1 | S413150082 | Washer Ø62xØ80x1.5 | | | | |

*Available with service kit; see website www.harken.com

**Winch product sticker



Radial Winch 40.2 STC EL

C = drum in chrome bronze

| Pos. | Q.ty | Code | Description | Pos. | Q.ty | Code | Description |
|------|------|------------|---|------|------|------------|--|
| 1 | 1 | A94189600 | Assy Base Winch 40 EL/HY Base W40 | 18 | 2 | A74136000 | Bearing Ø56xØ68x24 |
| | 1 | S413350080 | Roller Ø6x19 | 19 | 1 | A94149800 | Assy Central Shaft W40 EL/HY Central Shaft Pred. W40 |
| | 1 | S4130900A7 | Bushing Ø22xØ25x8.5 | | 1 | S413880002 | Washer Ø17.2xØ32x1.5 |
| | 1 | S413960085 | Bushing Ø9xØ11x12 | 20 | | | Winch Serial Number Sticker |
| | 1 | S413330085 | Bushing Ø12xØ14x11 | 21 | 1 | S4129400A0 | Stripper arm support |
| 2 | 1 | A94141400 | Assembly Skirt Winch 40 Skirt W40 Winch Product Sticker** | 22 | 1 | S414180043 | Drum W40 C |
| 3 | 1 | S413020004 | Gear Z12 | 23 | 1 | S281680097 | Red line |
| 4 | 1 | S413030004 | Pawls Carrier Ø8xN2 | 24 | 1 | A94131800 | Assy Winch 40 Jaws Lower Jaw W35/40 Upper Jaw W35/40 |
| 5 | 4 | S000080003 | Pawl Ø8* | | 1 | S413610080 | Peeler W20 - 40 |
| 6 | 4 | S000380001 | Pawl Spring Ø8* | | 4 | S385970001 | SPRING |
| 7 | 1 | S412830041 | Gear Z23 | 25 | 4 | M0601803 | Screw UNI EN ISO 1207 - M6x35 - A4 |
| 8 | 1 | S413000004 | Pin Ø9x55 | 26 | 1 | S414200019 | Stripper Arm W35/40 |
| 9 | 1 | S279090002 | Washer Ø36xØ9,5x1 | 27 | 3 | M6007103 | Screw M6x50 UNI6107 |
| 10 | 1 | S412970004 | Gear Z20 | 28 | 1 | A94149300 | Assy Socket W35-80 EL/HY Socket Handle W20/80 |
| 11 | 1 | S412850041 | Pinion Z13 | | 1 | S414940085 | Washer Ø25xØ15x4 |
| 12 | 1 | S413120002 | Washer Ø22.5xØ45x1 | | 1 | S414930003 | Nut Screw for Disconnect Rod |
| 13 | 1 | S413070004 | Pin Ø9xØ12x32.5 | | 1 | M0679797 | O ring RC 2025 series |
| 14 | 1 | A94130500 | Assy Gear Z20 Gear Z20 | 29 | 1 | S4141900A5 | Cover 2 speed W40 |
| | 2 | S414900080 | Bushing Ø12xØ14x8 | 30 | 1 | S415060002 | Disconnect Rod W40 |
| 15 | 1 | A94141500 | Assy Housing Winch 40 Support W40 | | | | |
| | 2 | S414890080 | Bushing Ø9xØ11x7 | | | | |
| | 1 | S4130900A7 | Bushing Ø22xØ25x8.5 | | | | |
| 16 | 6 | M0635103 | Socket head screw M6x16 UNI5931 | | | | |
| 17 | 1 | S413150082 | Washer Ø62xØ80x1.5 | | | | |

*Available with service kit; see website www.harken.com

**Winch product sticker



Radial Winch 40.2 STCW EL

CW = chrome/white


| Pos. | Q.ty | Code | Description | Pos. | Q.ty | Code | Description |
|------|------|------------|--|------|------|-------------|---|
| 1 | 1 | A94189600 | Assy Base Winch 40 EL/HY Base W40 | 17 | 1 | S413150082 | Washer Ø62xØ80x1.5 |
| | 1 | S413350080 | Roller Ø6x19 | 18 | 2 | A74136000 | Bearing Ø56xØ68x24 |
| | 1 | S4130900A7 | Bushing Ø22xØ25x8.5 | 19 | 1 | A94149800 | Assy Central Shaft W40 EL/HY Central Shaft Pred. W40 |
| | 1 | S413960085 | Bushing Ø9xØ11x12 | | 1 | S413880002 | Washer Ø17.2xØ32x1.5 |
| | 1 | S413330085 | Bushing Ø12xØ14x11 | 20 | | | Winch Serial Number Sticker |
| 2 | 1 | A94141400W | Assembly Skirt Winch 40 RAL 9003 Skirt W40 RAL9003 Winch Product Sticker** | 21 | 1 | S4129400A0 | Stripper arm support |
| 3 | 1 | S413020004 | Gear Z12 | 22 | 1 | S414180043 | Drum C W40 |
| 4 | 1 | S413030004 | Pawls Carrier Ø8xN2 | 23 | 1 | S281680097 | Red line |
| 5 | 4 | S000080003 | Pawl Ø8* | 24 | 1 | A94131800W | Assy Winch 40 Jaws Lower Jaw W35/40 RAL9003 Upper Jaw W35/40 RAL9003 Peeler W20 - 40 RAL9003 SPRING |
| 6 | 4 | S000380001 | Pawl Spring Ø8* | | 1 | S413610080W | |
| 7 | 1 | S412830041 | Gear Z23 | | 4 | S385970001 | |
| 8 | 1 | S413000004 | Pin Ø9x55 | 25 | 4 | M0601803 | Screw UNI EN ISO 1207:1996 - M6x35 - A4 |
| 9 | 1 | S279090002 | Washer Ø36xØ9,5x1 | 26 | 1 | S414200019 | Stripper Arm W35/40 |
| 10 | 1 | S412970004 | Gear Z20 | 27 | 3 | M6007103 | Screw M6x50 UNI6107 |
| 11 | 1 | S412850041 | Pinion Z13 | 28 | 1 | A94149300 | Assy Socket W35-80 EL/HY Socket Handle W20/80 |
| 12 | 1 | S413120002 | Washer Ø22.5xØ45x1 | | 1 | S414940085 | Washer Ø25xØ15x4 |
| 13 | 1 | S413070004 | Pin Ø9xØ12x32.5 | | 1 | S414930003 | Nut Screw for Disconnect Rod |
| 14 | 1 | A94130500 | Assy Gear Z20 Gear Z20 | | 1 | M0679797 | O ring RC 2025 series |
| | 2 | S414900080 | Bushing Ø12xØ14x8 | 29 | 1 | S4141900A5W | Cover 2 speed W40 RAL 9003 |
| 15 | 1 | A94141500 | Assy Housing Winch 40 Housing W40 | 30 | 1 | S415060002 | Disconnect Rod W40 |
| | 2 | S414890080 | Bushing Ø9xØ11x7 | | | | |
| | 1 | S4130900A7 | Bushing Ø22xØ25x8.5 | | | | |
| 16 | 6 | M0635103 | Socket head screw M6x16 UNI5931 | | | | |

*Available with service kit; see website www.harken.com


**Winch product sticker



Radial Winch 40.2 STBBB, STCCC EL

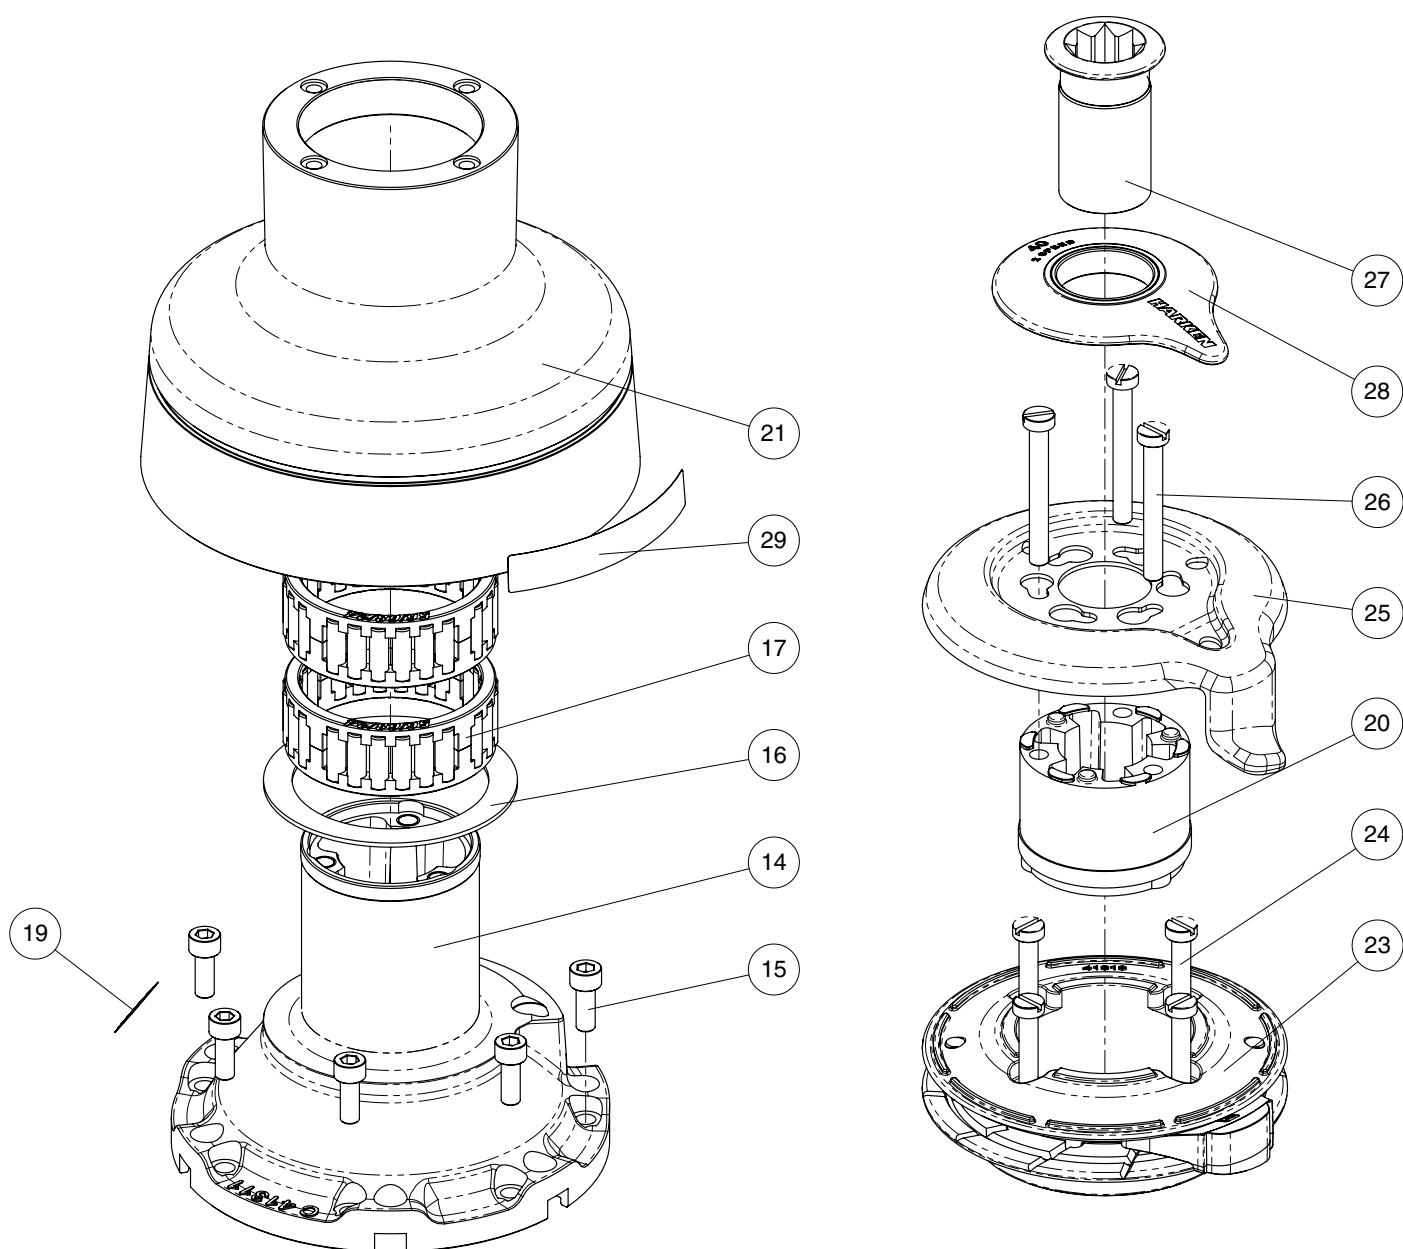

Radial Winch 40.2 STBBB, STCCC EL

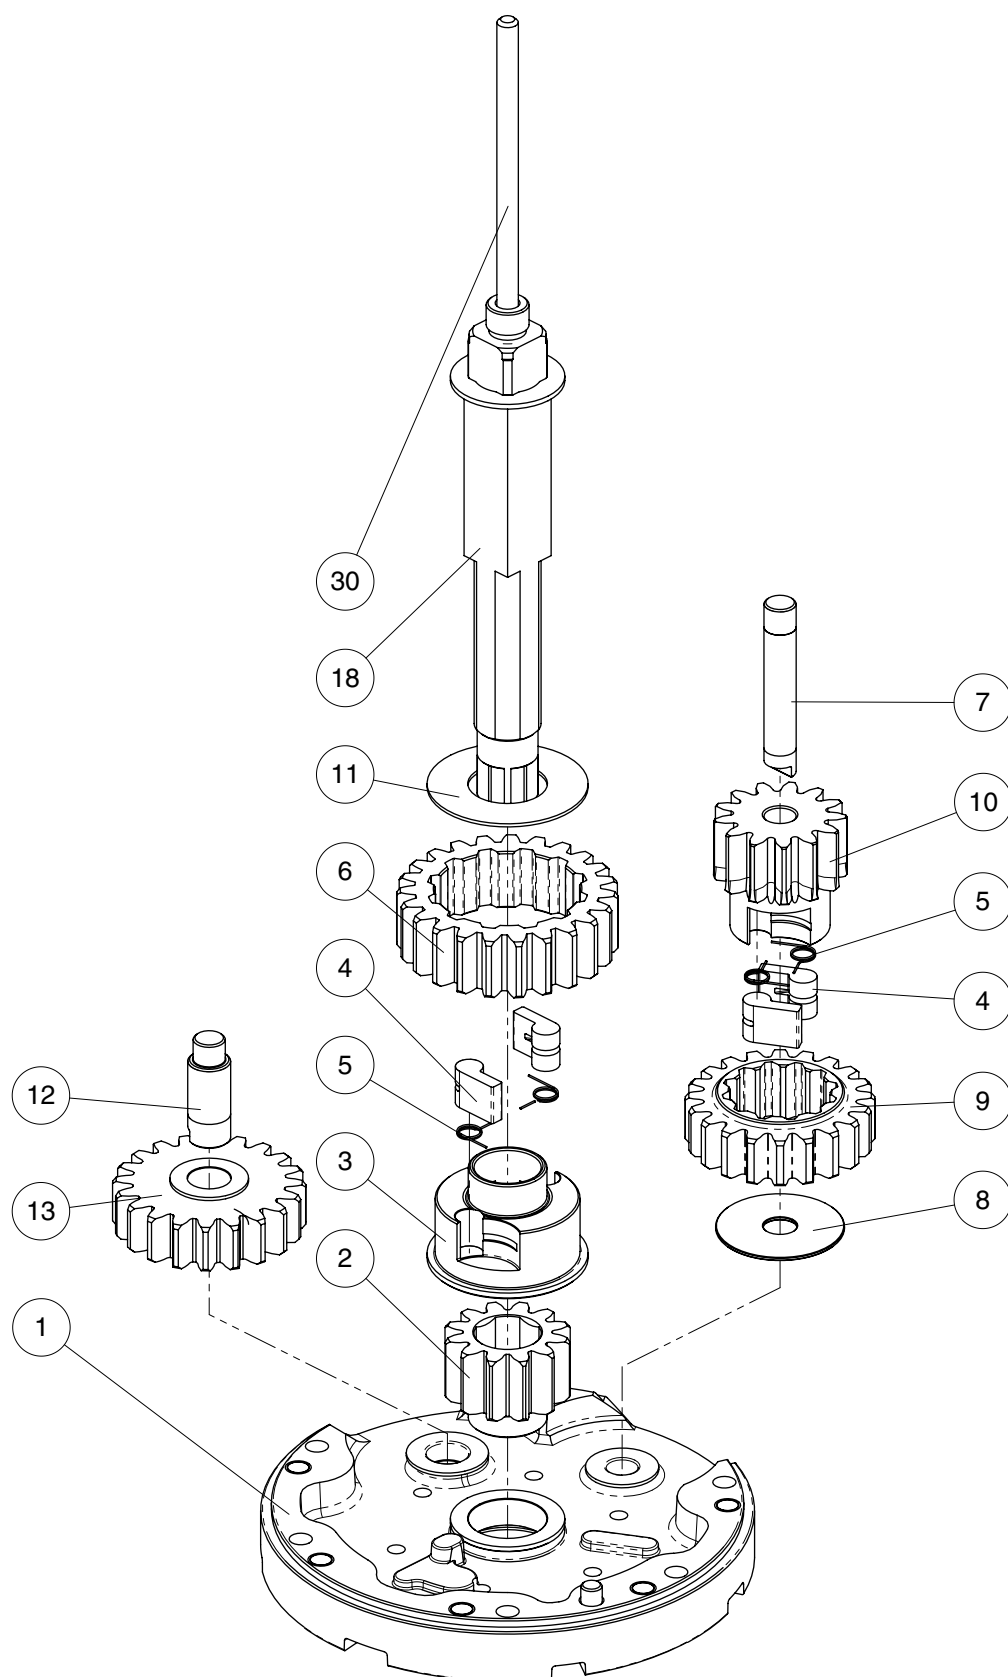

Radial Winch 40.2 STBBB EL

BBB = all bronze

| Pos. | Q.ty | Code | Description | Pos. | Q.ty | Code | Description |
|------|------|------------|--------------------------------------|------|------|------------|---|
| 1 | 1 | A96633800 | Assy base Winch 40 EL/HY Base W40 | 18 | 1 | A94149800 | Assy Central Shaft W40 EL/HY Central Shaft Pred. W40 |
| | 1 | S413350080 | Roller Ø6x19 | | 1 | S413880002 | Washer Ø17.2xØ32x1.5 |
| | 1 | S4130900A7 | Bushing Ø22xØ25x8.5 | 19 | | | Winch Serial Number Sticker |
| | 1 | S413960085 | Bushing Ø9xØ11x12 | 20 | 1 | S4129400A0 | Stripper arm support |
| | 1 | S413330085 | Bushing Ø12xØ14x11 | 21 | 1 | S688160043 | Drum W40 BBB |
| 2 | 1 | S413020004 | Gear Z12 | 22 | 1 | S281680097 | Red line |
| 3 | 1 | S413030004 | Pawls Carrier Ø8xN2 | 23 | 1 | A96932800 | Assy Jaws Winch 35/40 BBB Lower Jaw W35/40 BBB |
| 4 | 4 | S000080003 | Pawl Ø8* | | 1 | S413610080 | Upper Jaw W35/40 |
| 5 | 4 | S000380001 | Pawl Spring Ø8* | | 4 | S385970001 | Peeler W20 - 40 Spring |
| 6 | 1 | S412830041 | Gear Z23 | 24 | 4 | M0601803 | Screw UNI EN ISO 1207- M6x35 - A4 |
| 7 | 1 | S413000004 | Pin Ø9x55 | 25 | 1 | S7123000F0 | Stripper Arm W35/40 BBB |
| 8 | 1 | S279090002 | Washer Ø36xØ9,5x1 | 26 | 3 | M6007103 | Screw M6x50 UNI6107 |
| 9 | 1 | S412970004 | Gear Z20 | 27 | 1 | A94149300 | Assy Socket W35-80 EL/HY Socket Handle W20/80 |
| 10 | 1 | S412850041 | Pinion Z13 | | 1 | S414940085 | Washer Ø25xØ15x4 |
| 11 | 1 | S413120002 | Washer Ø22.5xØ45x1 | | 1 | S414930003 | Nut Screw for Disconnect Rod |
| 12 | 1 | S413070004 | Pin Ø9xØ12x32.5 | | 1 | M0679797 | O ring RC 2025 series |
| 13 | 1 | A94130500 | Assy Gear Z20 Gear Z20 | 28 | 1 | A76932600 | Cover W40 BBB |
| | 2 | S414900080 | Bushing Ø12xØ14x8 | 29 | | | Winch Product Sticker** |
| 14 | 1 | A94141500 | Assy housing Winch 40 Support W40 | 30 | 1 | S415060002 | Disconnect Rod W40 |
| | 2 | S414890080 | Bushing Ø9xØ11x7 | | | | |
| | 1 | S4130900A7 | Bushing Ø22xØ25x8.5 | | | | |
| 15 | 6 | M0635103 | Socket head screw M6x16 UNI5931 | | | | |
| 16 | 1 | S413150082 | Washer Ø62xØ80x1.5 | | | | |
| 17 | 2 | A74136000 | Bearing Ø56xØ68x24 | | | | |

*Available with service kit; see website www.harken.com

**Winch product sticker



Radial Winch 40.2 STCCC EL

CCC = All-Chrome bronze

| Pos. | Q.ty | Code | Description | Pos. | Q.ty | Code | Description |
|------|------|------------|--------------------------------------|------|------|-------------|---|
| 1 | 1 | A96633800 | Assy Base Winch 40 EL/HY Base W40 | 18 | 1 | A94149800 | Assy Central Shaft W40 EL/HY Central Shaft Pred. W40 |
| | 1 | S413350080 | Roller Ø6x19 | | 1 | S413880002 | Washer Ø17.2xØ32x1.5 |
| | 1 | S4130900A7 | Bushing Ø22xØ25x8.5 | 19 | | | Winch Serial Number Sticker |
| | 1 | S413960085 | Bushing Ø9xØ11x12 | 20 | 1 | S4129400A0 | Stripper arm support |
| | 1 | S413330085 | Bushing Ø12xØ14x11 | 21 | 1 | S681050043 | Drum CCC W40 |
| 2 | 1 | S413020004 | Gear Z12 | 22 | 1 | S281680097 | Red line |
| 3 | 1 | S413030004 | Pawls Carrier Ø8xN2 | 23 | 1 | A96811900 | Assy Jaws Winch 35/40 CCC Lower Jaw W35/40 CCC |
| 4 | 4 | S000080003 | Pawl Ø8* | | 1 | S413610080W | Upper Jaw W35/40 RAL9003 |
| 5 | 4 | S000380001 | Pawl Spring Ø8* | | 4 | S385970001 | Peeler W20 - 40 RAL9003 SPRING |
| 6 | 1 | S412830041 | Gear Z23 | 24 | 4 | M0601803 | Screw UNI EN ISO 1207 - M6x35 - A4 |
| 7 | 1 | S413000004 | Pin Ø9x55 | 25 | 1 | S414200019 | Stripper Arm W35/40 |
| 8 | 1 | S279090002 | Washer Ø36xØ9,5x1 | 26 | 3 | M6007103 | Screw M6x50 UNI6107 |
| 9 | 1 | S412970004 | Gear Z20 | 27 | 1 | A94149300 | Assy Socket W35-80 EL/HY Socket Handle W20/80 |
| 10 | 1 | S412850041 | Pinion Z13 | | 1 | S414940085 | Washer Ø25xØ15x4 |
| 11 | 1 | S413120002 | Washer Ø22.5xØ45x1 | | 1 | S414930003 | Nut Screw for Disconnect Rod |
| 12 | 1 | S413070004 | Pin Ø9xØ12x32.5 | | 1 | M0679797 | O ring RC 2025 series |
| 13 | 1 | A94130500 | Assy Gear Z20 Gear Z20 | 28 | 1 | A76811200 | Cover W40 CCC |
| | 2 | S414900080 | Bushing Ø12xØ14x8 | 29 | | | Winch Product Sticker** |
| 14 | 1 | A94141500 | Assy Housing Winch 40 Support W40 | 30 | 1 | S415060002 | Disconnect Rod W40 |
| | 2 | S414890080 | Bushing Ø9xØ11x7 | | | | |
| | 1 | S4130900A7 | Bushing Ø22xØ25x8.5 | | | | |
| 15 | 6 | M0635103 | Socket head screw M6x16 UNI5931 | | | | |
| 16 | 1 | S413150082 | Washer Ø62xØ80x1.5 | | | | |
| 17 | 2 | A74136000 | Bearing Ø56xØ68x24 | | | | |


*Available with service kit; see website www.harken.com

**Winch product sticker




Horizontal electric motor 12V/24V


TOP VIEW




* Motor installed in right-hand configuration.



** Motor installed in left-hand configuration.

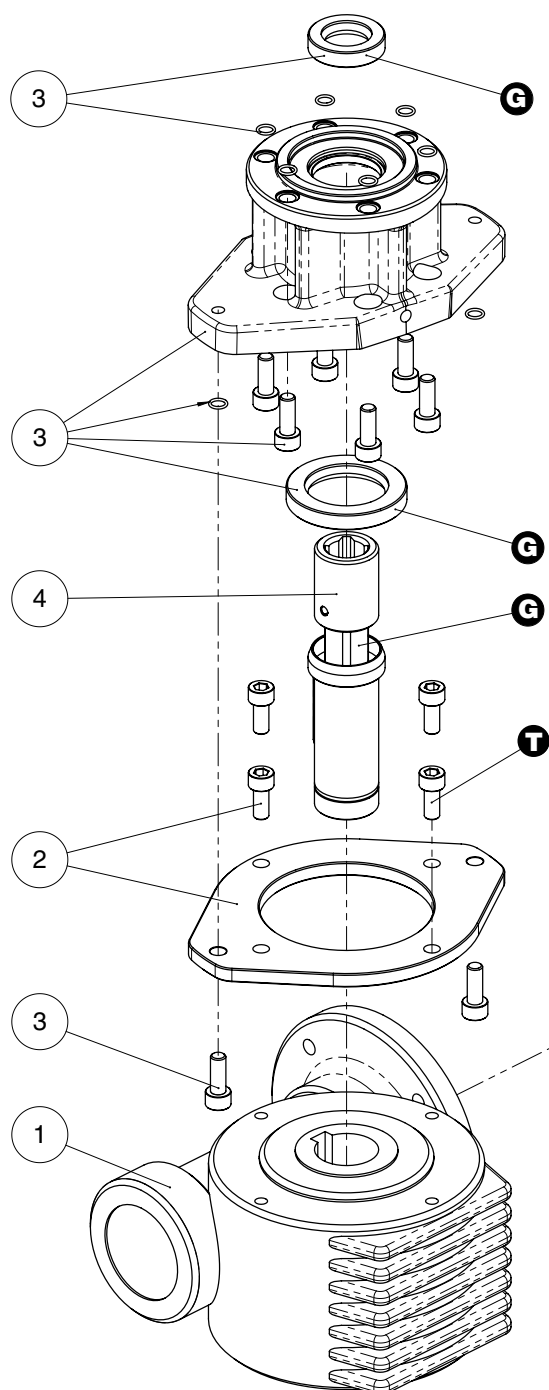

| Pos. | Q.ty | Code | Description |
|------|------|------------|---|
| 1 | 1 | A93127900 | KIT Gear Reduction 1/24 |
| | 1 | A94194900 | KIT LM Gear Reduction 1/24 |
| 2 | 1 | A94149200 | KIT Assy Electric Motor Flange |
| | 1 | A94149200L | KIT Assy Electric Motor Flange Left |
| | 4 | M0606803 | Electric Motor Flange Screw M6x14 UNI 5931 |
| 3 | 1 | A94149500 | KIT EL HO Motor Flange |
| | 8 | S415360003 | Horizontal Motorgear Flange Screw M6x16 UNI EN ISO 5931:2003 precote coating |
| | 8 | M601560097 | O-Ring Seal ORM 0055-10 (Ø5,5 x Ø1) |
| | 1 | M6007297 | Lip seal Ø17xØ30x7 |
| | 1 | M0612097 | Sealer Ø30xØ47x7 |
| 4 | 1 | A94161600 | KIT EL HO Motor Clutch |
| | | | Shaft Motorgear HO |
| | | | Shaft GearMotor HO |
| | | | Hub GearMotor |
| | 1 | M0601402 | Dowel UNI EN ISO 8752:2000-Ø4x24 |
| | 1 | M6020097 | O-ring 19.1x1.6 |
| | 1 | S418620001 | Disconnect spring |
| 5 | 1 | A96015400 | KIT EL Motor 12V 0,7kW |
| | 1 | A96015700 | KIT EL Motor 24V 0,9kW |
| | | | Electric Motor |
| | | | Polarity motor sticker |
| | | | Screw stud M6x26 |
| | | | Washer Ø6 |
| | 1 | M6014206 | Nut M6 UNI5588 Key DIN 6885 5x5x15 |

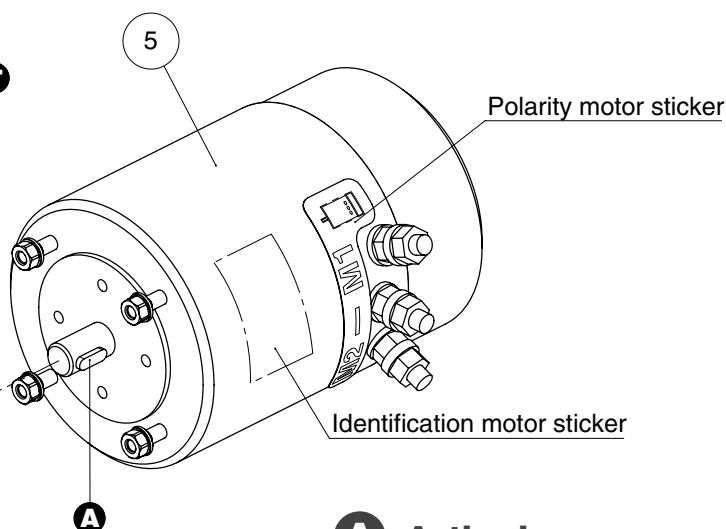

- A** Anti-seize
- G** Harken® Grease
- T** Axial Threadlocker