


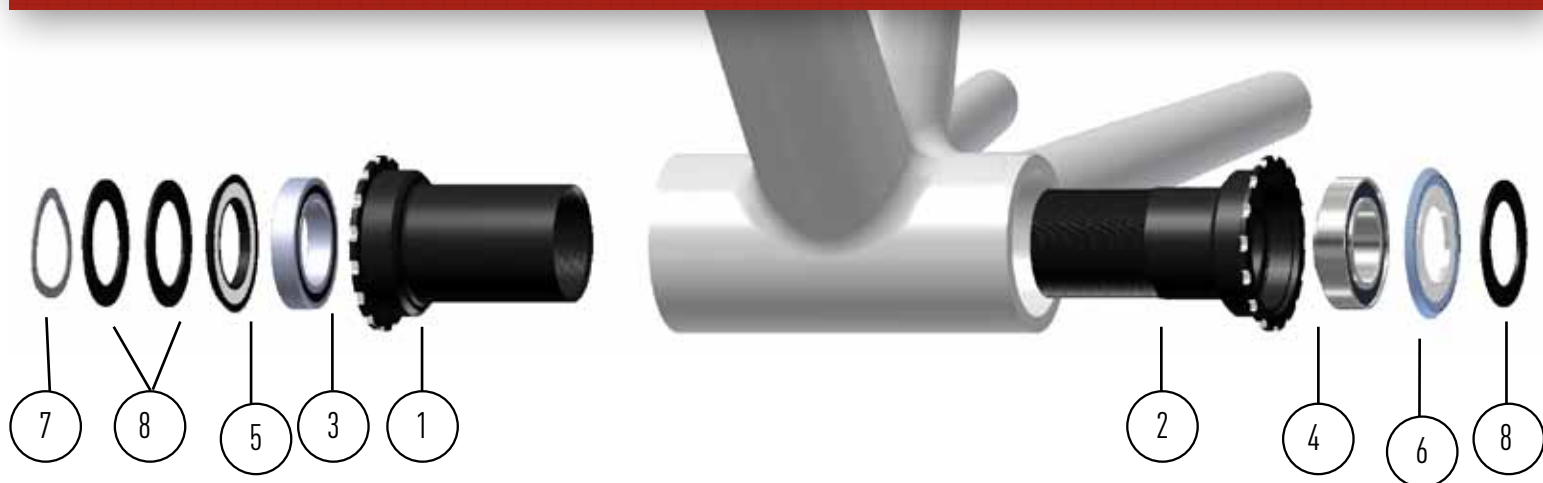

BB86-FAT for SRAM PART LIST

Item #	Part #	Description	QTY Included
1	BB86FATSIDEA	RIGHT BB86-FAT CUP	1
2	BB86FATSIDEB	LEFT BB86-FAT CUP - SRAM	1
3	<u>SB-24X37ACZ</u>	24X37X7 ANGULAR CONTACT SEALED BEARING	1 
4	<u>SB-22X37X8Z</u>	GXP 22X37X8 2RS SEALED BEARING	1
5	<u>24MMSEAL</u>	24MM OUTER SILICONE SEAL	1
6	<u>BB86-GXPSEAL</u>	22X39 GXP OUTER SILICONE SEAL	1
7	<u>BB-WAVEWASH-GXP</u>	24MM ID WAVE WASHER	1
8	<u>BB-24MM-0.5Z</u>	0.5MM SHIM FOR 24MM BB SPINDLE	2
	<u>BB-24MM-1.0Z</u>	1MM SHIM FOR 24MM BB SPINDLE	2

Recommended Tools:

Part #	Description	QTY Needed	
<u>PRESS-4</u>	INSTALLATION PRESS	1	
<u>BB86-OB-24</u>	BB86 BOTTOM BRACKET CUP DRIFT	2	
<u>WRENCH-BB48-39</u>	BOTTOM BRACKET CUP WRENCH	1	




IMPORTANT:

- Read instructions completely before beginning installation.
- DO NOT use any brand bearing retaining compounds or epoxies during installation, use of which will void any warranty.

Thoroughly clean the bottom bracket shell. Do not install bottom bracket dry. Identify the material that your frame's bottom bracket shell is made of. Use the correct compound for your BB shell material!

- Steel or Alloy BB shells - High Quality Grease
- Carbon BB Shell - 100% Pure PTFE (Teflon) Grease
- Titanium BB Shell - Anti-Seize Compound

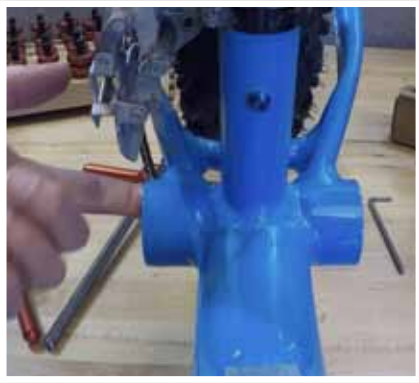

1. Thoroughly clean the bottom bracket shell. Do Not install cups dry. Apply a thin layer of high quality grease, PTFE or anti-seize compound to inside surface of the shell.

- Steel and Aluminum BB Shells - Grease
- Carbon BB Shell - PTFE (Teflon)
- Titanium BB Shell - Anti-Seize Compound



2. Apply a thin layer of high quality grease, PTFE or anti-seize compound to BB cup surface.

- Steel and Aluminum BB Shells - Grease
- Carbon BB Shell - PTFE (Teflon)
- Titanium BB Shell - Anti-Seize Compound



3. Insert drive side cup into frame.



4. Install drive side cup using PRESS-4 with BB86-QB-24 drifts. Fully tighten until cup is flush with the frame.



5. Apply grease to threads. **Do not use thread locking compound, PTFE or anti-seize on the threads.**




6. Insert non-drive side cup into frame by hand until threads begin to engage. Pay careful attention to not cross-thread cups.

Apply a thin layer of grease, PTFE or anti-seize compound to non-drive side cup outer surface.



7. Using 16 notch wrench (48.5mm), fully tighten cup. Approximate torque 35-50Nm.

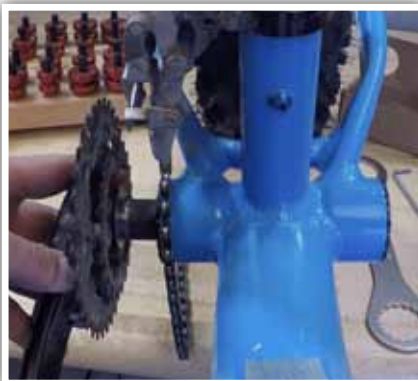

6. Install right crank arm, making sure outer dust seal is installed. Use crank spacers as needed to take up any play. Remove spacers as necessary if binding occurs. If crankset does not have a pre-load adjuster, insert a wave washer between the outer dust seal and the crank arm.



9. Make sure outer dust seal is in place before installing left crank arm.



10. Install left crank arm, tighten crank to manufacturer specifications.

Final Adjustments:

Check for play in the crank. If the crank moves side-to-side through the bottom bracket, remove the left crank arm and add spacers as needed between the outer dust seal and the left crank arm.

NOTE: Angular contact bearings require slightly more preload to ensure that all balls are contacting the inner races properly. For proper preload of angular contact bearings, check that the wave washer is almost completely compressed. Add/remove crank spindle spacers as needed to compress the wave washer when the left crank arm is installed and tightened to manufacturer specifications.

NOTE: Due to the wide variety of frame manufacturers, Wheels Manufacturing cannot guarantee compatibility with all frames. Please consult with your specific frame manufacturer before installation. Wheels Manufacturing is not responsible for damage done to your frame as a result of installation or use of this product.

IMPORTANT: Wheels Mfg Limited Warranty

Wheels Mfg PressFit components, excluding Enduro bearings are warranted for a period of 2 years. Enduro warrants its 24x37 angular contact bearings and 24x37 ceramic bearings for a period of 1 year to be free of defects in workmanship or materials. Excessive exposure to environmental elements or improper installation or removal voids warranty. Do not wash the bottom bracket area with high-pressure jets of water. Do not remove or install bearings in or out of cups with a hammer! Do not install bearings in cups by pressing on inner bearing race, bearing damage will result. Failure to use proper installation and removal tools will damage bearings and greatly reduce bearing life.