# Owner's Manual Parts Manual

READ THIS MANUAL CAREFULLY IT CONTAINS IMPORTANT SAFETY INFORMATION

JUNOIR SPORT



# FOR OFF-ROAD USE ONLY

This vehicle is designed and manufactured for off-road use only. USA only:

It does not conform to Federal Motor Vehicle Safety Standards, and in regards to operation on public streets, roads, or highways is illegal.

# Hammerhead Off-Road Warranty Policy Limited Warranty for Dune Buggies Only

Should warranty service be required on your unit during the warranty period, please contact your nearest authorized dealer for repairs.

#### IMPORTANT!

### ALL UNITS MUST BE REGISTERED <u>WITHIN 14 DAYS</u> OF PURCHASE OR WARRANTY IS VOID.

To register your product a copy of the Warranty Registration Card, Buyer Safety Agreement, and sales receipt must be forwarded to Hammerhead Off-Road. Your dealer, with your assistance, will complete and forward these items to Hammerhead Off-Road. A copy of the Warranty Registration Card and Buyer Safety Agreement is attached. It is your responsibility to confirm with your dealer within 14 days of purchase that your product has been registered. If you are unable to confirm with your dealer within 14 days of purchase that your product has been registered please contact Hammerhead Off-Road within 14 days of purchase or your warranty will be void.

### **GENERAL WARRANTY POLICY**

Labor Warranty is covered for the first 90 days (THREE MONTHS) from the end consumer's date of purchase. Most parts covered under your warranty, except for the frame and engine, are covered for 30 or 90 days. Not all parts are covered. Contact your dealer for details or questions about a specific part. Warranty Parts are covered according to the schedule below from the end consumer's date of purchase. All warranty paperwork must be received within 14 days of repair.

### WARRANTY PARTS COVERAGE

Warranty starts from the date of purchase by end consumer:

FRAME: ENGINE: CARBURETOR: MUFFLER: A-ARM, SPINDLES, AXLES: ELECTRONICS: BATTERY: SPEAKERS: SPEEDOMETER: TIRES & WHEELS: FENDERS: BRAKES:	1 year 180 days 90 days 90 days 90 days 30 days 30 days 30 days 30 days 30 days 30 days

### WHAT PARTS ARE NOT COVERED?

**GENERAL EXCLUSION:** The warranty does not cover consumable and normal wear and tear items such as, but not limited to, throttle cables, brake cables, chains, bikini tops, fasteners, air filters, brake pads, tires, oil changes, and/or problems occurring due to a lack of scheduled maintenance or consumer abuse. Modification to the vehicle, including the use of performance parts or non-original parts, will void the warranty in its entirety, unless express written approval stating that the warranty will not be voided is obtained from Hammerhead. Defective parts are

subject to recall by Hammerhead Off-Road upon failure and are required to be held by the dealer for 30 days from the time of the initial repair date.

The warranty does not cover damage or faults caused by misuse, negligence, alterations, accidents or any abnormal use including the use of non genuine parts, renting or leasing, competition or racing. This warranty does not cover loss of use of the unit or loss of time, or inconvenience.

**NOTICE**: All warranties are voided if the vehicle has been altered for use in racing or competition, rented, used under abnormal conditions, or subject to abuse, misuse, neglect or improper maintenance. Hammerhead Off-Road is not liable for any damage claim or liability claim, personal or otherwise resulting from operation of the vehicle in any way. All warranty parts will be shipped using UPS or Fed Ex ground ONLY. If the warranty part needs to shipped 2<sup>nd</sup> day air or shipped overnight, the ordering dealership will be responsible for all shipping fees.

**NOTICE**: Hammerhead Off-Road reserves the right to change product specifications, designs, and standard equipment without notice and without incurring obligation. These vehicles are not designed or manufactured for racing or use on rental tracks, public streets, public roads, highways, paved surfaces, or right-of-ways. Always wear an approved helmet and eye protection when riding. Always secure loose clothing and long hair. Always utilize seatbelts. Please read the operators manual before usage and go over the Buyer Safety Agreement.

### FAQ's:

1. FOR WHAT REASONS CAN MY WARRANTY CLAIM BE DISPUTED OR DENIED?

Warranty can be denied because of an out of warranty date, the unit was not a Hammerhead Off-Road unit or the Warranty Registration Card was not submitted to Hammerhead Off-Road within 14 days of purchase. The warranty does not apply to any part, which in opinion of seller was defective because of improper maintenance, improper assembly, alterations, abuse, negligence, or accident. The warranty does not cover loss of use of the seller vehicle, loss of time, inconvenience, or any other consequential damage which includes, but is not limited to, loss or damage to person or property or any expense of returning any damaged units to the seller, distributor, or its authorized dealer. Also, see above.

2. Does Hammerhead Off-Road offer an extended warranty?

No, Hammerhead Off-Road does not offer any type of extended warranty.

3. IS MY KART STILL UNDER WARRANTY IF I HAVE OWNED IT FOR 1 YEAR BUT PUT ONLY 6 HOURS OF DRIVING TIME ON IT?

Warranty is base on the exact date of purchase, not based on how many hours it has been used.

# **Hammerhead Off-Road Warranty Registration Form**

### **Registration Terms & Conditions:**

In order to activate the warranty, please follow the instructions below:

- 1) Make a copy of the Bill of Sale
- 2) Make a copy of Pre-Delivery Checklist
- 3) Make a copy of Buyer-Safety Agreement
- 4) Fill out warranty card and send with all above documents to:

### **Hammerhead Off-Road**

Attn: Warranty Registration 1200 Lakeside Parkway Ste. 325 Flower Mound, TX 75028

Or, Fax to 214-513-1738

Or, ON-LINE at www.hammerheadoffroad.com under dealer's only section

Hammerhead Off-Road Warranty Registration Card		
(Must be sent in with a copy of sales receipt and Buyers Safety Agreement)		
VIN#	Model:	
Dealer Name:		
Dealer Address:		
City:	State: Zip:	
Customer Name:		
Customer Address:		
Customer City:	State:	
Customer Phone:	Email:	
Date of Purchase:		
I Certify that all information provided is true and correct to the best of my knowledge. I understand the exceptions and limitations of the warranty coverage.		
Customer Signature:	Date:	

# Hammerhead Buyers Safety Agreement (1/2)

-	Always read the owner's manual carefully before riding and follow the operating procedures described in the owner's manual.
-	Pay close attention to all warnings contained in the manual and on all labels.
-	These vehicles are designed for riders of ages 5 through 8 for 50cc, 9 through 15 for 80cc, 16 and older for 150cc, 18 and older for 250cc, 400cc, 500cc.
-	Both the parent and the child must fully understand everything in the owners manual before riding.
-	Always wear a helmet, face shield, boots, gloves, and protective clothing while riding.
-	Beginners should receive training from a certified instructor.
-	It is illegal to ride this vehicle on public roads or highways.
-	Do not allow your child to ride without supervision.
-	Do not ride under the influence of drugs or alcohol. They can affect your judgment and slow your reaction time.
-	Always maintain a safe distance between your vehicle and vehicles around you.
-	Never ride this vehicle unless it has been properly adjusted and maintained.
-	Never run the engine in closed areas. The exhaust gas contains poisonous carbon monoxide.
-	Do not touch any part of the engine, muffler, or the exhaust system during or immediately after operation of the vehicle.
-	Always check for obstacles before operating in a new area.
-	It is highly recommended that this vehicle should not be driven at night or during dark periods
- Alw	Never attempt to operate over large obstacles, such as large rocks, or fallen trees.

Always be careful when skidding or	sliding. On extremely slippery surfaces such as n order to reduce the chance of skidding or sliding	
Never do wheelies, jumps or any stu	unts.	
	wing water. Remember that wet brakes may your brakes after leaving the water. If necessary, ion dry out the linings.	
•	tires specified in this manual. Always maintain	
proper tire pressure as described in this m	anual.	
to the vehicle, including the use of perfo	uld be made by a qualified mechanic. Modification rmance parts or non-original parts, will void the tten approval stating that the warranty will not be	
	nother vehicle, be sure that it is kept upright and position. Otherwise, fuel may leak out of the	
Always follow the break-in-period as described in the owner's manual. Not following the break-in period will void the engine warranty.		
Always clean the air filter as describ of the air filter will void the engine w	ped in the owner's manual. Improper maintenance varranty.	
injury or death. By initialing each item on the understanding of these points, and I acl	ed or irresponsible operation can cause serious above checklist, I have indicated my complete knowledge my responsibilities regarding the ts on this checklist to anyone besides myself r in the future.	
Dealer's Signature	Buyer's Signature	
Print Store Name	Print Buyer's Name	
Date	Date	

Model

**VIN Number** 

I, FOREWORD  2.A FEW WORDS ABOUT SAFETY  3.IMPORTANT SAFETY INFORMATION  4. SAFETY LABELS  5.ARE YOU READY TO DRIVE?  6.IS YOUR VEHICLE READY TO DRIVE?  7. SAFE DRIVING PREGUATIONS  8. REAY TO DVIVE  8. REAY TO DVIVE  9. SPECIFICATIONS  10. OPERATION  11. SERVICE INSTRUCTIONS  12. REPAIR  13. PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1. OYLINDER HEAD SYSTEM ASSY.  5. PIATONAND CONNECTING ROD SYSTEM ASSY  5. PIATONAND CONNECTING ROD SYSTEM ASSY  6. CAMBHAFT SYSTEM ASSY  7. PRECO IL STATER SYSTEM ASSY.  9. CAMBHAFT SYSTEM ASSY.  10. AIR CLEARER  11. MUFFLER SYSTEM ASSY.  9. CAMBHAFT SYSTEM ASSY.  10. AIR CLEARER  11. MUFFLER SYSTEM ASSY.  11. CLEARER  12. INTIMEFLER SYSTEM ASSY.  13. STEERING SHAFT ASSY.  14. CONTROL BOX ASSY  15. CONTROL BOX ASSY  16. CREAR HOUSING  17. STEERING SHAFTASSY.  18. SUSPENSION ARM ASSY.  19. CREAR HOUSING  20. CREAR HOUSING  21. CLUTCH ASSY.  22 WIRE HARNESS / ELECTRICAL/SEAT/ENGINE  23 WARNING STICKERS.  5. STATEMET STICKERS.	OWNER'S MANUAL	
2.A FEW WORDS ABOUT SAFETY 3.JIMPORTANT SAFETY INFORMATION 4.SAFETY LABELS 5.ARE YOU READY TO DRIVE? 6.JS YOUR VEHICLE READY TO DRIVE? 7.SAFE DRIVING PRECAUTIONS 8.REAYTO DVIVE 9.SPECIFICATIONS 10.OPERATION 11.SERVICE INSTRUCTIONS 11.SERVICE INSTRUCTIONS 12.REPAIR 13.PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1.OYLINDER HEAD SYSTEM ASSY. 2.CYLINDERBARREL 3.GRANKCADE COVER SYSTEM ASSY 4.GRANKCASE SYSTEM ASSY 5.PIATONAND CONNECT ING ROD SYSTEM ASSY 6.CAMSHAFT SYSTEM ASSY 7.RECOIL STARTER SYSTEMASSY. 5.PIATONAND CONNECT ING ROD SYSTEM ASSY 6.CAMSHAFT SYSTEM ASSY 7.RECOIL STARTER SYSTEMASSY. 5.PIATONAND SYSTEMASY. 5.PIATONAND SYSTEMASY. 5.PIATONAND SYSTEMASY. 5.PIATONAND SYSTEMASY	1 FOREWORD	Pa
3.IMPORTANT SAFETY INFORMATION 4. SARETY LABELS 5. ARE YOU READY TO DRIVE? 6.IS YOUR YEHICLE READY TO DRIVE? 7. SAFE DRIVING PRECAUTIONS 8. REAYTO DVIVE 9. SPECIFICATIONS 10. OPERATION 11. SERVICE INSTRUCTIONS 12. REPAIR 13. PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1.OYLINDER HEAD SYSTEM ASSY. 5. PLATONAND CONNECTING ROD SYSTEM ASSY 5. PLATONAND CONNECTING ROD SYSTEM ASSY 6. CAMBHAFT SYSTEM ASSY 7. RECOIL STATES SYSTEM ASSY. 9. CAMBHAFT SYSTEM		
4.SAFETY LABELS  5.ARE YOUR READY TO DRIVE?  6.IS YOUR WEHICLE READY TO DRIVE?  7.SAFE DRIVING PREGAUTIONS  8.P.D.I  9.SPECIFICATIONS  10.OPERATION  11.SERVICE INSTRUCTIONS  12.REPAIR  13.PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1.OYLINDER HEAD SYSTEM ASSY.  5.OYLINDERSARREL  9.ORANKGADE COVER SYSTEM ASSY  4.ORANKGASE SYSTEM ASSY  5.PIATONAND CONNECTING ROD SYSTEM ASSY  6.PIATONAND CONNECTING ROD SYSTEM ASSY  7.RECOIL STARTER SYSTEMASSY.  8.FAN COVER AND SYSTEM ASSY.  9.GAMSHAFT SYSTEMASSY.  9.GAMSHAFT SYSTEMASSY.  10.AIR CLEANER  1.I.MUFFLER SYSTEM ASSY.  12.  13.STEERING SHAFT ASSY.  14.CONTROL BYSTEM ASSY.  15.CONTROL BYSTEM ASSY.  16.REAME GROUP  17.STEERING SHAFTASSY.  17.STEERING SHAFTASSY.  18.SUSPENSION ARM ASSY.  19.REAR HOUSING  10. REAR HOUSING  10. REARNESS/ ELECTRICAL/SEAT/ENGINE		
5 ARE YOU READY TO DRIVE?  0.IS YOUR VEHICLE READY TO DRIVE?  7.SAFE DRIVING PREGAUTIONS  8.REAYTO DVIVE  9.SPECIFICATIONS  10.OPERATION  11.SERVICE INSTRUCTIONS  12.REPAIR  13.PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1.OYLINDER HEAD SYSTEM ASSY.  5.OYLINDERBARREL  9.CRAINCADE COVER SYSTEM ASSY  4.CRAINCADE COVER SYSTEM ASSY  5.PIATONAND CONNECTING ROD SYSTEM ASSY  6.CAMSHAFT SYSTEM ASSY  7.RECOIL STARTER SYSTEMASSY.  8.FAN COVER AND SYSTEM ASSY.  9.CAMSHAFT SYSTEM ASSY  9.CAMSHAFT SYSTEM ASSY  10.AIR CLEANER  11.MUFFLER SYSTEM ASSY.  12.  13.STEERING SHAFT ASSY.  14.CONTROL SYSTEM ASSY.  15.CONTROL SYSTEM ASSY.  16.REAME GROUP  17.STEERING SHAFT ASSY.  17.STEERING SHAFT ASSY.  17.TSTEERING SHAFT ASSY.  19.REAR HOUSING  10. REAR HOUSING  10. REAR HOUSING  10. REARNESS / LECTRICAL/SEAT/ENGINE		
8 JS YOUR VEHICLE READY TO DRIVE?  7.SAFE DRIVING PREGAUTIONS  8.REATTO DVIVE  8.RD.I  9.SPECIFICATIONS  10.OPERATION  11.SERVICE INSTRUCTIONS  12.REPAIR  13.PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1.OYLINDER HEAD SYSTEM ASSY.  2.OYLINDERBARREL  3.ORANKCADE COVER SYSTEM ASSY  4.ORANKCADE COVER SYSTEM ASSY  5.PIATONAND CONNECT ING ROD SYSTEM ASSY  6.CAMSHAFT SYSTEM ASSY  7.RECOIL STARTER SYSTEMASSY.  9.CAMSHAFT SYSTEM ASSY.  9.CAMSHAFT SYSTEM STAR SYSTEM ST		
7.SAFE DRIVING PRECAUTIONS—  8.REAYTO DVIVE  8.P.R.I   9.SPECIFICATIONS—  10.OPERATION—  11.SERVICE INSTRUCTIONS  11.SERVICE INSTRUCTIONS  12.REPAIR  13.PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1.CYLINDER HEAD SYSTEM ASSY.  2.CYLINDERBARREL  3.GRANKCADE COVER SYSTEM ASSY   FAMALICAN SYSTEM S		
8,REAYTO DVIVE  8,RD1  9,SPECIFICATIONS— 10,OPERATION  11,SERVICE INSTRUCTIONS  12,REPAIR  13,PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1,OYLINDER HEAD SYSTEM ASSY.  2,OYLINDERBARREL  3,CRANKGADE COVER SYSTEM ASSY  4,CRANKCASE SYSTEM ASSY  5,PIATONAND CONNECTING ROD SYSTEM ASSY  6,CAMSHAFT SYSTEM ASSY  7,RECOIL STARTER SYSTEMASSY.  9,CAMSHAFT SYSTEM ASSY.  10,AIR CLEANER  11,MUFFLER SYSTEM ASSY.  12, 13,STEERING SHAFT ASSY.  14,CONTROL SYSTEM ASSY  15,CONTROL BOX ASSY  16,CONTROL BOX ASSY  17,STEERING SHAFTASSY.  18,SUSPENSION ARM ASSY.  19,REAR HOUSING  10, REAR HOUSING  10, REAR HOUSING  11, CLUTCH ASSY.  12, III. 13,STEERING SHAFTASSY.  14,CONTROL BOX ASSY  15,CONTROL BOX ASSY  16,REAR HOUSING  17,STEERING SHAFTASSY.  18,SUSPENSION ARM ASSY.  19,REAR HOUSING  10, REAR HOUSING  11, CLUTCH ASSY.  22, WIRE HARNESS/ELECTRICAL/SEAT/ENGINE		
8.P.D.I  9.SPECIFICATIONS  10.OPERATION  11.SERVICE INSTRUCTIONS  12.REPAIR  13.PERIODICAL CHECK AND SERVICES   1.OYLINDER HEAD SYSTEM ASSY.  2.CYLINDERBARREL  3.GRANKOADE COVER SYSTEM ASSY  4.ORANKOASE SYSTEM ASSY  5.PIATONAND CONNECTING ROD SYSTEM ASSY  6.CAMSHAFT SYSTEM ASSY  7.FRECOIL STARTER SYSTEMASSY.  8.FAN COVER AND SYSTEM ASSY.  9.CAMSHAFT SYSTEM ASSY.  9.CAMSHAFT SYSTEM ASSY.  1.MUFFLER SYSTEM ASSY.  1.AUFFLER SYSTEM ASSY.		
8.SPECIFICATIONS  10.OPERATION  11.SERVICE INSTRUCTIONS  12.REPAIR  13.PERIODICAL CHECK AND SERVICES   PARTS MANUAL  1.CYLINDER HEAD SYSTEM ASSY.  2.CYLINDERBARREL  3.GRANKCADE COVER SYSTEM ASSY FOLIANT ASSY FOLIA		
10.OPERATION  11.SERVICE INSTRUCTIONS  12.REPAIR  13.PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1.OYLINDER HEAD SYSTEM ASSY.  2.CYLINDERBARREL  3.CRANKGADE COVER SYSTEM ASSY  4.CRANKGASE SYSTEM ASSY  5.PIATONAND CONNECTING ROD SYSTEM ASSY  6.CAMSHAFT SYSTEM ASSY  7.RECOIL STARTER SYSTEMASSY.  8.FAN COVER AND SYSTEM ASSY.  9.CAMSHAFT SYSTEM ASSY  9.CAMSHAFT SYSTEM ASSY.  9.CAMSHAFT SYSTEM ASSY.  9.CAMSHAFT SYSTEM ASSY.  9.CAMSHAFT SYSTEM ASSY.  6.CONTROL SYSTEM ASSY.  7.RECOIL SYSTEM ASSY.  9.CAMSHAFT ASSY.  9.CAMSHAFT SYSTEM ASSY.  9.CAMSHAFT SYSTEM ASSY.  9.CAMSHAFT ASSY.		
11.SERVICE INSTRUCTIONS  12.REPAIR  13.PERIODICAL CHECK AND SERVICES   PARTS MANUAL  1.CYLINDER HEAD SYSTEM ASSY. 2.CYLINDERBARREL 3.GRANKCADE COVER SYSTEM ASSY 5.PIATONAND CONNECTING ROD SYSTEM ASSY 6.CAMSHAFT SYSTEM ASSY 6.CAMSHAFT SYSTEM ASSY 7.RECOIL STARTER SYSTEMASSY 9.CAMSHAFT SYSTEM ASSY	9.SPECIFICATIONS	
12.REPAIR 13.PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1.CYLINDER HEAD SYSTEM ASSY. 2.CYLINDERBARREL 3.GRANKCADE CO VER SYSTEM ASSY 4.GRANKCASE SYSTEM ASSY 5.PIATONAND CONNECTING ROD SYSTEM ASSY 6.CAMSHAFT SYSTEM ASSY 7.RECO IL STARTER SYSTEMASSY. 8.FAN COVER AND SYSTEM ASSY. 9.CAMSHAFT SYS	10.0PERATION	
13. PERIODICAL CHECK AND SERVICES  PARTS MANUAL  1. CYLINDER HEAD SYSTEM ASSY. 2. CYLINDERBARREL 3. GRANKCADE COVER SYSTEM ASSY 4. CRANKCASE SYSTEM ASSY 5. PIATONAND CONNECTING ROD SYSTEM ASSY 6. CAMSHAFT SYSTEM ASSY 7. RECOIL STARTER SYSTEMASSY. 8. FAN COVER AND SYSTEM ASSY. 9. CAMSHAFT SYSTEM ASSY. 10. AIR CLEANER 11. MUFFLER SYSTEM ASSY. 2. 13. STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY. 4. CONTROL SYSTEM ASSY 5. CONTROL BOX ASSY 16. REAME GROUP 17. STEERING SHAFTASSY. 8. SUSPENSION ARM ASSY. 9. REAR HOUSING 10. CREAR HOUSING 10. CLUTCH ASSY.		
PARTS MANUAL  1.CYLINDER HEAD SYSTEM ASSY. 2.CYLINDERBARREL 3.GRANKCADE COVER SYSTEM ASSY		
1.CYLINDER HEAD SYSTEM ASSY.  2.CYLINDERBARREL  3.GRANKCADE COVER SYSTEM ASSY  4.CRANKCASE SYSTEM ASSY  5.PIATONAND CONNECTING ROD SYSTEM ASSY  6.CAMSHAFT SYSTEM ASSY  7.RECOIL STARTER SYSTEMASSY.  9.CAMSHAFT SYSTEM ASSY.  10.AIR CLEANER  11.MUFFLER SYSTEM ASSY.  12.  3.STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY.  14.CONTROL SYSTEM ASSY  15.CONTROL BOX ASSY  16.REAME GROUP  17.STEERING SHAFTASSY.  18.SUSPENSION ARM ASSY.  19.REAR HOUSING  20. REAR HOUSING  21. CLUTCH ASSY.	13. PERIODICAL CHECK AND SERVICES -	
1.CYLINDER HEAD SYSTEM ASSY.  2.CYLINDERBARREL  3.CRANKCADE COVER SYSTEM ASSY  4.CRANKCASE SYSTEM ASSY  5.PIATONAND CONNECTING ROD SYSTEM ASSY  6.CAMSHAFT SYSTEM ASSY  7.RECOIL STARTER SYSTEMASSY.  9.CAMSHAFT SYSTEM ASSY.  1.MUFFLER SYSTEM ASSY.  2. 3.STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY.  4.CONTROL SYSTEM ASSY  5.CONTROL BOX ASSY  6.REAME GROUP —  7.STEERING SHAFTASSY.  8.SUSPENSION ARM ASSY.  9.REAR HOUSING —  10. REAR HOUSING —  11. CLUTCH ASSY.  22.  23. STEERING SHAFTASSY.  14. CONTROL SYSTEM ASSY.  15. CONTROL BOX ASSY.  16. REAR HOUSING —  17. STEERING SHAFTASSY.  18. SUSPENSION ARM ASSY.  19. REAR HOUSING —  10. REAR HOUSING —  11. CLUTCH ASSY.		
1.CYLINDER HEAD SYSTEM ASSY.  2.CYLINDERBARREL  3.GRANKCADE COVER SYSTEM ASSY  4.CRANKCASE SYSTEM ASSY  5.PIATONAND CONNECTING ROD SYSTEM ASSY  6.CAMSHAFT SYSTEM ASSY  7.RECOIL STARTER SYSTEMASSY.  9.CAMSHAFT SYSTEM ASSY.  10.AIR CLEANER  11.MUFFLER SYSTEM ASSY.  2. 3.STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY.  4.CONTROL SYSTEM ASSY  5.CONTROL BOX ASSY  6.REAME GROUP  1.T.STEERING SHAFTASSY.  1. SUSPENSION ARM ASSY.  1. SUSPENSION ARM ASSY.  1. SUSPENSION ARM ASSY.  1. CLUTCH ASSY.  2. C. REAR HOUSING  2. C. CREAR HOUSING  2. C. CLUTCH ASSY.		
1.CYLINDER HEAD SYSTEM ASSY.  2.CYLINDERBARREL  3.CRANKCADE COVER SYSTEM ASSY	PARTS MANUAL	
2,CYLINDERBARREL  3,CRANKCADE COVER SYSTEM ASSY  4,CRANKCASE SYSTEM ASSY  5,PIATONAND CONNECTING ROD SYSTEM ASSY  6,CAMSHAFT SYSTEM ASSY  7,RECOIL STARTER SYSTEMASSY.  9,CAMSHAFT SYSTEM ASSY.  10,AIR CLEANER	1 CVI INDED HEAD SYSTEM ASSY	
3.CRANKCADE COVER SYSTEM ASSY  4.CRANKCASE SYSTEM ASSY  5.PIATONAND CONNECTING ROD SYSTEM ASSY  6.CAMSHAFT SYSTEM ASSY  7.RECOIL STARTER SYSTEMASSY.  9.CAMSHAFT SYSTEM ASSY.  9.CAMSHAFT SYSTEM ASSY.  1.MUFFLER SYSTEM ASSY.  2.  3.STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY.  4.CONTROL SYSTEM ASSY  5.CONTROL BOX ASSY  6.REAME GROUP  7.STEERING SHAFTASSY.  8.SUSPENSION ARM ASSY.  9.REAR HOUSING  1.CLUTCH ASSY.  2.  2.  3.  4.  5.  6. REAR HOUSING  6.  6. REAR HOUSING  7.  6.  6.  6. REAR HOUSING		
4.CRANKCASE SYSTEM ASSY  5.PIATONAND CONNECTING ROD SYSTEM ASSY  6.CAMSHAFT SYSTEM ASSY  7.RECOIL STARTER SYSTEMASSY.  9.CAMSHAFT SYSTEM ASSY.  1.MUFFLER SYSTEM ASSY.  2.  3.STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY.  4.CONTROL SYSTEM ASSY  5.CONTROL BOX ASSY  6.REAME GROUP  7.STEERING SHAFTASSY.  8.SUSPENSION ARM ASSY.  9.REAR HOUSING  1. CLUTCH ASSY.  1. CLUTCH ASSY.		
5,PIATONAND CONNECTING ROD SYSTEM ASSY  6,CAMSHAFT SYSTEM ASSY  7,RECOIL STARTER SYSTEMASSY.  8,FAN COVER AND SYSTEM ASSY.  9,CAMSHAFT SYSTEM ASSY.  1,MUFFLER SYSTEM ASSY.  2.  3,STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY.  4,CONTROL SYSTEM ASSY.  5,CONTROL BOX ASSY.  6,REAME GROUP.  7,STEERING SHAFTASSY.  8,SUSPENSION ARM ASSY.  9,REAR HOUSING.  1,CLUTCH ASSY.  12,UTCH ASSY.  12,UTCH ASSY.  12,UTCH ASSY.  13,DTEM ASSY.  14,COUTCH ASSY.  15,COUTCH ASSY.  16,CUTCH ASSY.  17,CUTCH ASSY.  18,UTCH ASSY.  19,REAR HOUSING.  11,CLUTCH ASSY.		
GCAMSHAFT SYSTEM ASSY  7RECOIL STARTER SYSTEMASSY.  8.FAN COVER AND SYSTEM ASSY.  9.CAMSHAFT SYSTEM ASSY.  1.MUFFLER SYSTEM ASSY.  2.  3.STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY.  4.CONTROL SYSTEM ASSY  5.CONTROL BOX ASSY  6.REAME GROUP  7.STEERING SHAFTASSY.  8.SUSPENSION ARM ASSY.  9.REAR HOUSING  1. CLUTCH ASSY.  2.  2.  2.  3.TEERING SHAFTASSY.  4.  4.  5.  6.  6.  7.  8.  8.  8.  8.  9.  9.  9.  9.  9.  9		
7.RECOIL STARTER SYSTEMASSY		
8,FAN GOVER AND SYSTEM ASSY. — — — — — — — — — — — — — — — — — — —		
9 CAMSHAFT SYSTEM ASSY  O,AIR CLEANER  1.MUFFLER SYSTEM ASSY.  2.  3.STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY.  4.CONTROL SYSTEM ASSY  5.CONTROL BOX ASSY  6.REAME GROUP  7.STEERING SHAFTASSY.  8.SUSPENSION ARM ASSY.  9.REAR HOUSING  1. CLUTCH ASSY.  1. CLUTCH ASSY.  1. CLUTCH ASSY.		
O,AIR CLEANER — — — — — — — — — — — — — — — — — — —		
1.MUFFLER SYSTEM ASSY		
2. 3.STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY		
3.STEERING SHAFT ASSY. FLYWHEEL SYSTEM ASSY	1.MUFFLER SYSTEM ASSY	
4.CONTROL SYSTEM ASSY		
6.REAME GROUP		
7.STEERING SHAFTASSY		
8.SUSPENSION ARM ASSY		
9.REAR HOUSING		
20 .REAR HOUSING		
21.CLUTCH ASSY		
22WIRE HARNESS/ELECTRICAL/SEAT/ENGINE		

# Forward

Thank you for purchasing our Kart. We hope you will enjoy it. Before you start to operate the Kart, please read through this Owner'S Manual carefully as it contains important safety and maintenance information. Failure to follow the warnings contained in this manual Can result in serious injuries, or death

Be sure to follow the recommended maintenance schedule and service your Kart accordingly. Preventive maintenance is extremely important to the longevity of your Kart.

Beginners should seek instructions from your dealer or qualified instructors before and during initial use of the Kart. It is also recommended to practice in a large open area and to familiarize yourself with operations of this Kart.

We hope you will have a pleasant experience with our products and thanks again for choosing our Kart.

# AFEW WORDS ABOLLT SAFETY

In order to keep everyone safe, you must take responsibility for the safe operation of your kart.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

It is not practical or possible to warn you about all hazards associated with operating or maintaining a kart. You must use your own good judgment.

You will find important safety information in a variety of forms, including:

Safety Labels On the kart.

Safety Messages – Preceded by a safety alert symbol / and one of two signal words: WARNING, or CAUTION.



These signal words mean:



Physical harm may result from failure to adhere to the instructions that are described within the WARNING labels.

Safety Headings — such as Important Safety Reminders or Important Safety Precautions.

Safety Section such as Kart Safety.

**Instructions** — how to use this kart correctly and safely.

This entire manual is filled with important safety information—please read it all carefully.

# IMPORTANT SAFETY INFORMATION

Your kart will provide you with many years of use and pleasure. Providing you take responsibility for your own safety and that of any one else using your kart or near to the kart when it is being used and understand the challenges you can meet while driving.

There is much that you can do to protect yourself while operating your kart. You will find many helpful recommendations throughout this manual. The following are a few that we consider to be the most important.

## Follow the Age Recommendation

The kart should not be driven by anyone under the age of 16.

## Always Wear a Helmet

It's a proven fact: helmets significantly reduce the number and severity of head injuries. Always wear an approved motorcycle helmet. We also recommend that you wear eye protection, sturdy boots, gloves, and other protective gear.

## Drive Off-Road Only

Your kart is designed and manufactured for off-road use only. The tires are not made for use on pavements, and the kart does not have turn signals and other features required for use on public roads. If you need to cross a paved or public road, get off and walk your kart across.

### Take Time to Learn & Practice

Even if you have driven other karts, take time to become familiar with how this kart works and handles. Practice in a safe area until you build your skills and get accustomed to this kart's size and weight.

Because many accidents involve inexperienced or untrained drivers, we urge all drivers to take a training course. Check with your dealer for more information on training courses.

### Be Alert for Off-Road Hazards

The terrain can present a variety of challenges when you drive off-road. Continually "read" the terrain for unexpected turns, drop-offs, rocks, ruts, and other hazards. Always keep your speed low enough to allow time to see and react to hazards.

# IMPORTANT SAFETY INFORMATION

## Drive within Your Limits

Pushing limits is another major cause of kart accidents. Never drive beyond your personal abilities or faster than conditions warrant. Remember that alcohol, drugs, fatigue, and inattention can significantly reduce your ability to make good judgments and drive safely.

## Don't Drink and drive

Alcohol and driving don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and drive, and don't let your friends drink and drive either.

# Do not operate this kart at night.

Dark vision can greatly reduce a driver's visibility and judgment. So driving at night is dangerous and can increase the possibility for an accident.

# Never run your kart indoors.

The exhaust from the engine contains a tasteless, odorless and poisonous gas called carbon monoxide.

# Keep away from moving parts of the kart

The operator of the kart should never place their hands or other parts of their body near any moving part of the kart. Failure to adhere to this warning will cause physical harm to your body.

# **Skidding or Sliding**

The terrain surface can be a major factor affecting turns. Skidding in a turn is more likely to occur on slippery surfaces such as snow, ice, mud and loose gravel. If you skid on ice, you may lose all directional control. To avoid skidding on slippery terrain, keep your speed low and drive carefully.

This section presents some of the most important information and recommendations to help you drive your Kart safely. Please take a few moments to read these labe ls.

The labels should be considered permanent parts of the Kart. If a label comes off or becomes hard to read, contact your dealer for warning label replacements





1 WARNING	CAUTION
Seat Belt Must Be Wom At All Times	THIS VEHICLE MANUFACTURED FOR OFF-ROAD USE ONLY. DO NOT OPERATE ON PUBLIC STREETS, ROADS OR HIGHWAYS.





# ARE YOU READY TO DRIVE?

Before each drive, you need to make sure that you and your kart are both ready to drive. To help get you prepared, this section discusses how to evaluate your driving readiness, what items you should check on your kart, and adjustments to make for your comfort, convenience, or safety.

Before you drive your kart for the first time, we urge you to:

- Read this owner's manual and the labels on your kart carefully.
- Make sure you understand all the safety messages.
- Know how to operate all the controls.

### Before each drive, be sure:

- You wear your seat belt at all times while driving your kart.
- You feel well and are in good physical and mental condition.
- You are wearing an approved motorcycle helmet (with chin strap tightened securely), eye
  protection, and other protective clothing.
- You don't have any alcohol or drugs in your system.

## Protective Apparel

For your safety, we strongly recommend that you always wear an D.O.T. approved motorcycle helmet, eye protection, boots, gloves, long pants, and long-sleeved shirt or jacket whenever you drive.

Although complete protection is not possible, wearing proper gear can reduce the chance of injury should you have an accident.

The following suggestions will help you choose the proper protective gear.

### Helmets and Eyes Protection

Your helmet is your most important piece of protective gear because it offers the best protection against head injuries. A helmet should fit your head comfortably and securely.

An open-face helmet offers some protection, but a full-face helmet offers more. Regardless of the style, look for a D.O.T. (Department of Transportation) sticker on any helmet you buy. Always wear a face shield or goggles to protect your eyes and help your vision.



Operating this kart without wearing an approved motorcycle helmet, eye protection, and protective clothing could increase your chances of head and/or eye injury, and the possibility of death in the event of a severe accident.

Always wear an approved motorcycle helmet that fits properly and wear eye protection (goggles or face shield), gloves, boots, long-sleeved shirt or jacket and long pants.

# Additional Driving Gear

In addition to a helmet and eye protection, we also recommend:

- Sturdy off-road motorcycle boots to help protect your feet, ankles, and lower legs.
- Off-road motorcycle gloves to help protect your hands.
- Driving pants with knee and hip pads, a driving jersey with padded elbows, and a lder protector.

## Driver Training

Developing your driving skills is an on-going process. Even if you have driven other karts, before take time to become familiar with how this kart works and handles. Practice driving the kart in a safe area to develop your skills. Do not drive on rough terrain until you get accustomed to the kart's controls, and feel comfortable with its size and weight.



Operating this kart without your seat belt could cause you to be thrown from the kart, causing serious injury or death.

## No Alcohol or Drugs

Alcohol, drugs and karts don't mix. Even a small amount of alcohol can impair your ability to operate a kart safely. Likewise, drugs-even if prescribed by a physician-can be dangerous while operating a kart. Consult your doctor to be sure it is safe to operate a vehicle after taking medication.

# **A WARNING**

Operating this kart after consuming alcohol or drugs can seriously affect your judgment, cause you to react more slowly, affect your balance and perception, and could result in serious injury or death.

Never consume alcohol or drugs before or while operating this kart.

# IS YOUR VEHICLE READY TO DRIVE?

Before each drive, it is important to inspect your kart and make sure any problems you find are corrected. A pre-drive inspection is a must, not only for safety, but because having a breakdown, or even a flat tire, can be a major inconvenience.

If your kart has overturned or has been involved in a collision, do not drive it until your kart has been inspected by your dealer. There may be damage or other problems that you can not see.



Improperly maintaining this kart or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always perform a pre-drive inspection before every drive and correct any problems.

# SAFE DRIVING PRECAUTIONS

## Off-Road Use Only

Your kart and its tires are designed and manufactured for off-road use only, not for use on paved surfaces. Driving on paved surfaces can affect the kart handling and control.



Operating this kart on paved surfaces may seriously affect handling and control of the kart, and may cause the vehicle to go out of control.

Never operate the kart on any paved surfaces, including sidewalks, driveways, parks lots and streets.

When driving off-road, also remember to always obey local off-road driving laws and regulations. Obtain permission to drive on private property. Avoid posted areas and obey "no trespassing" signs.

You should never drive your kart on public streets, roads or highways, even if they are not paved. Drivers of street vehicles may have difficulty seeing and avoiding you, which could lead to a collision.



Operating this kart on public streats, roads or highways could cause a collision with another vehicle.

Never operate this kart on any public streets, roads or highways, whether they are dirt, gravel or paved surfaces.

### Keep Hands and Feet on Controls

When driving your kart, always keep both hands on the steering wheel and both feet on the foot controls. It is important to maintain your balance and to control the kart. Removing hands or feet away from the controls can reduce your ability to react and control, the kart.



Removing your hands from the steering wheel or feet from the foot controls during operation can reduce your ability to control the kart or could cause you to lose your balance and fall off the kart.

Always keep both hands on the steering wheel and both feet on the foot controls of your kart during operation.

## Control Speed

Driving at excessive speed increases the chances of an accident. In choosing an appropriate speed, you need to consider the capability of your kart, the terrain, visibility and other operating conditions, plus your own skill and experience.



Operating this kart at excessive speeds increases your chances of losing control of the kart, which can result in an accident.

Always drive at a speed that is appropriate for your kart, the terrain, visibility and other operating conditions, and your experience.

# Use Kart on Unfamiliar or Rough Terrain

Before driving in a new area, always check the terrain thoroughly. Don't drive fast on unfamiliar terrain or when visibility is limited (it's sometimes difficult to see obstructions like hidden rocks, bumps, or holes in time to react).

# **⚠ WARNING**

Failure to use extra care when operating this kart on unfamiliar terrain could result in the kart overturning or going out of control.

Go slowly and be extra careful when operating on unfamiliar terrain. Always be alert to changing terrain conditions when operating the kart.

Never drive past the limit of visibility. Maintain a safe distance between your kart and other off-road vehicles. Always exercise caution and use extra care on rough, slippery and loose terrain.

# **A WARNING**

Fallure to use extra care when operating on excessively rough, slippery or loose terrain could cause loss of traction or vehicle control, which could res in an accident, including an overturn.

Do not operate on excessively rough, slippery or loose terrain until you have learned and practiced the skills necessary to control the kart on such errain.

Always be especially cautious on these kinds of terrain.

### Do Not Perform Stunts

You should always operate your kart in a safe and reasonable manner. When driving, always keep all four wheels on the ground.




Attempting wheelies, jumps, and other stunts increases the chance of an accident, including an overturn.

Never attempt atunts, such as wheelles or jumps. Don't try to show off.

# P. D. I.

- a. Install RR. Shocks and tighten the nuts.
- b. Install Ball Head, Tie Rod, tighten the Castle Nut and insert the cotter Pin.
- c. Install Dust Seals, align the Ball Head Bolt, Knuckle Support to the square hole on the Lower A-Arm.
- d. Install Flange Nut and tighten it (> 88.9 foot lbs)
- e. Install Front Tires and tighten the nuts.
- f. Install Rear Tires, tighten the nuts, insert cotter Pin and put on the Rubber Cover.
- g. Raise the C.B.C custom bar cage as what picture shows
- h. Install C.B.C custom bar cage RR., put on R-Washer.
- i. Install Head-Rest.
- j. Check all nuts and bolts, wiring, cables, fuel line, switches and tire pressure.
- k. Fill battery with Acid and charge, check and fill the engine with the recommended oil.
- Fill fuel tank with Unleaded Gasoline, and turn on the ignition switch to start the engine.

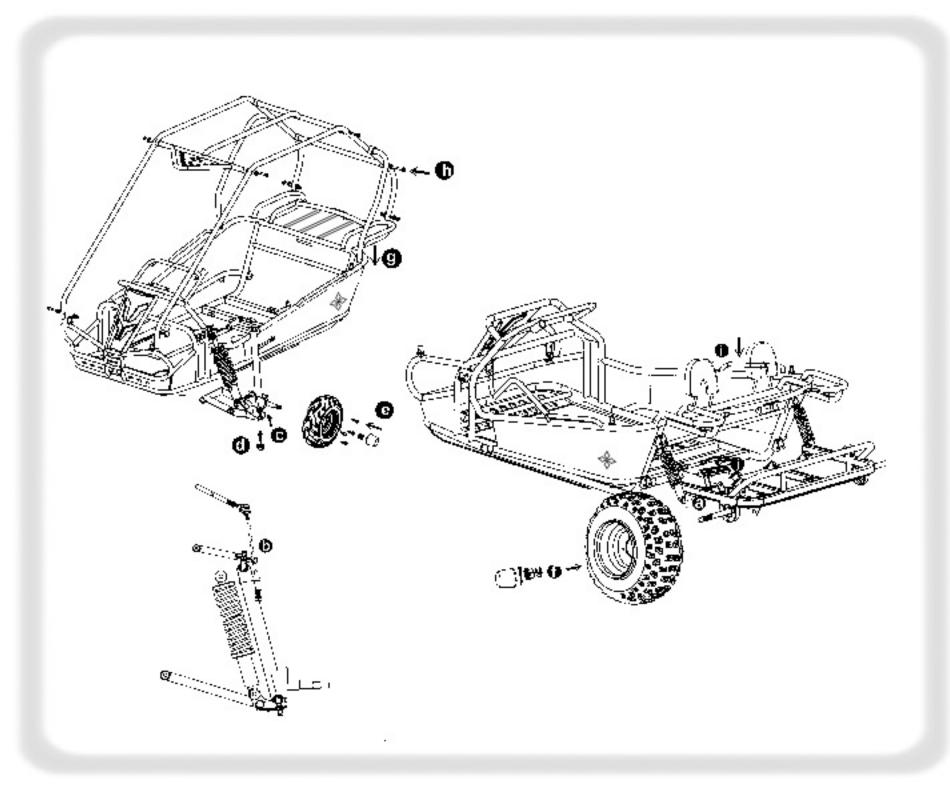

# IS YOUR VEHICLE READY TO DRIVE?

DIMENSIONS	
Overall Length	1700 mm)
Overall Width	36 in.(1100mm)
Overall Height	<b>43 in.( 1300 mm)</b>
Wheelbase	<b>41.7 in. (</b> 1230 mm)
Front Track	32 in.( 930 mm)
Rear Track	<b>28 in.(</b> 850 mm)
Ground Clearance	3.5 in.( 70 mm)
ENGINE	
TypeSingl	e, Forced air-cooled.4-Stroke
Engine capacity	168 <b>сс</b>
Bore x StrOke	
Displacement	168 cm <sup>3</sup>
Corrected compression ratio	8.5 <b>:1</b>
Carburetor	RX
Output Power	5.5HPAAT 3600RPM
Maximum Torque	8.0ft-1bs At 2500RPM
Starting	- Electric/Pull start backup
Ignition	C.D.I
Lubrication	Force&SPlash
Transmission	Automatic(C.V.T system)
Spark Plug	NGK:BPR6ES
Plug gap	
Fuel Type	Rq90
Lubricate oil	SG15W/40
CAPACITIES	
Maximum load	DoUble Seats/ 400 1bs
Fuel tank	3L
Engine oil	
Starting	<5s
Battery	12V 9 Ah
F1188	·10A

Brake Track	<7m@10miles/h
Top speed	25 miles/h(or limited as customers require)
CHASSIS	
Rear brake	Disc brake
Front tire	16 × 6-8
Rear tire	16 × 7-8
Front Suspension	Independent Dual A-Arm
Rear Suspension	Swing Arm/Double Oil Damped Shock
Restraint System	Dual 4 -point Harness
TIRE PRESSURE	
Front	15kPa 0.15kg/cm22.2psi
Rear	20kPa 0.20kg/cm2 2.9psi
WEIGHT	
Net Weight	150Kg
PACKING DIMENSIONS	
	1700 <b>mm</b> ×1100 <b>mm</b> ×660 <b>mm</b>
	150Kg
	175Kg
	56 pcs/1 × 40'HQ

# A. Operation controls

**WARNING** - Do not attempt to start or operate the engine until completely familiar with the location and use of each control necessary to operate this vehicle. The operator must know how to stop this machine before starting and driving it.

### a. Throttle

The right foot pedal is the throttle that controls the kart speed. As the engine speed increases above idle, the clutch automatically engages and moves the vehicle forward. To disengage the clutch at any time, allow the throttle to return to the idle position. (See Fig. 1)

# **NOTICE**

Each time prior to starting the engine, check the throttle assembly to ensure that when the pedal is pushed all the way forward the assembly is working smoothly and returns to idle when released. Do not operate if pedal or engine throttle linkage fail to return to idle. If unable to correct the problem through lubrication, adjustment or replacement of worn parts, contact your dealer for assistance.

### b. Brake

The brake is the left foot pedal (See Fig.1). Applying pressure to the pedal draws the brake caliper around the brake disc at the rear wheel and slows slostops the kart.

### c. Start engine

Insert the key into key-switch, turn the key clockwise, release the key when the engine starts. The engine will warm up within 5 minutes and the engine choke will close automatically and operate at the normal RPM (Warning: Don't crank starter more than 5 seconds at one time).

## d. Engine stop button

Important-stop button test.

Before driving this vehicle, test the Engine

HORN BUTTON
HORN B

Stop Button to ensure that it is operating properly. With the engine running, push and hold the Engine Stop Button for two seconds for the engine to shut down.


# **B. Pre-Drive Inspection**



Perform this pre-drive inspection everyday before driving the vehicle. If not performed, serious damage to the vehicle or personal injury may result.

- a. Check the engine oil level is between the bottom of the dipstick and the "0" mark. Check for leaks. Add oil if required.
- **b**. Check the Fuel Level. Add fuel as necessary and do not overfill. Check for leaks. Ensure the fuel filler cap is securely fastened.
- c. Check the Brakes. Depress the left brake pedal several times, and check for adequate brake pedal freeplay. Make sure there is no brake fluid leakage.
- **d**. Check the tires. Check their condition for damage or excessive wear and pressure. The pressure on the front and rear tires is 15 and 20kPa respectively.
- e. Check the Drive Chain. Check its condition and tension. Lubricate if necessary.
- f. Check the Throttle Cable. Check for smooth operation. Ensure throttle "snaps" back to idle when released and moves smoothly without sticking.
- g. Check the Engine Stop Button. While the engine is running press and hold the engine stop button for 2 seconds. Make sure the engine stops.
- h. Check all Nuts, Bolts, and Fasteners. Check the wheels to see that all axle nuts and lug nuts are tightened properly. Check and tighten as necessary all other nuts, bolts and fasteners.
- i. Check the Brush Guard. Ensure all C.B.C. bars are in place before operating the kart.
- j. Check the Lights. Check the headlights, brake light and tail light are all working.
- k. Check the Steering. Check that the steering wheel moves freely in both directions but without any unusual looseness.
- Check all Cable Housings. Check these for wear and the fitting for any looseness.
- m. Check the underbody and exhaust system. Remove all dirt, vegetation and mud and check for any damage due to impact with rocks or unever terrain.
- n. Check the Air Cleaner Housing Drain Tube. Check the deposits in the drain tube. If necessary, check the tube and air cleaner housing.
- o. Check Leaks and Loose Parts. Walk around your kart and look for anything that appears unusual, such as a leak or loose cable.
- p. Check the Parking Brake. Make sure the kart does not move forward or backward when the parking brake is applied.

# Component locations

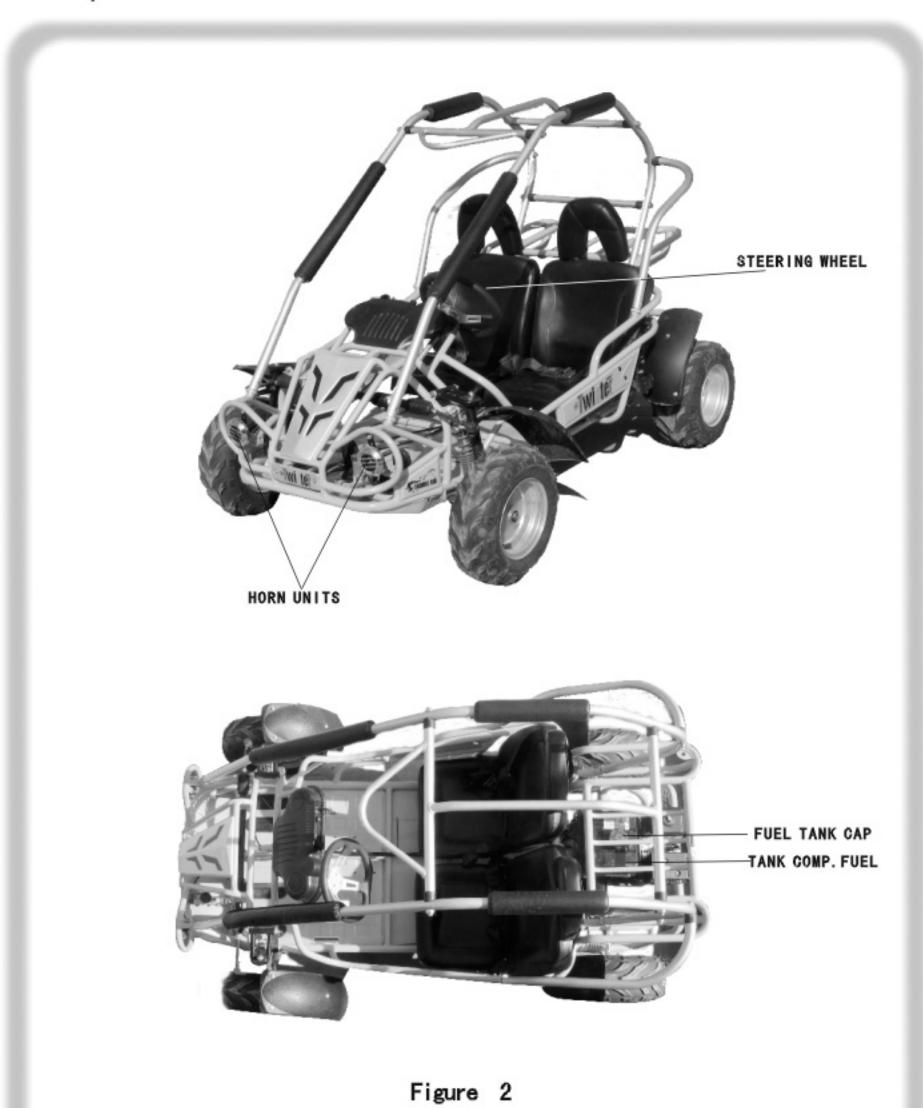

15

# C. Passengers

The vehicle is designed for two people only. The combined maximum weight of the driver and the passenger should not exceed 180kg or 400lbs.

# D. Seat Adjustment

The seat should be securely fastened in the position which gives the operator best control of the foot pedals, steering wheel, and the remote stop button.

- a. Pull the seat adjustment handle upward to disengage the seat slide.
- b. Move the seat to the desired position.
- c. Be sure that the seat adjustment handle snaps back into place and that seat is locked into position.

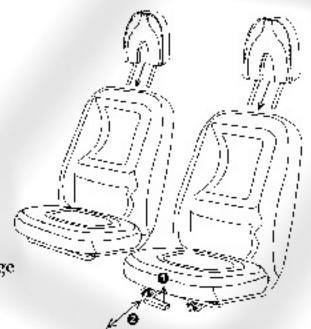


Figure 3



Before attempting to adjust the seat, ensure that engine is stopped.

## A WARNING

Never operate this kart when the seat is not securely in place, to do so could result in personal injury or loss of life.

# F. Starting and Operating Instructions

- a. Before starting the engine, the driver must be seated properly in the kart with the seat belt on.
- **b**. Practice in the kart in an open space at the beginning to learn how to start, turn and stop the vehicle.
- c. Drive slowly until you are familiar with the operation of the kart.
- d. The turning radius of this kart is small and agile, so the centrifugal force is very high when turning at high speed. Slow down to a more controllable speed when turning

over. The driver should keep their heels on the ramp of the main board when turning. (See Fig.5) Keeping their leg on the foot pedal, the driver can feel that the kart is stable and won't roll over.



Figure 5

# SERVICE INSTRUCTIONS

# A. Engine Lubrication

You must change the oil in the crankcase after the first 5 hours of operating of your new engine (See Fig. 6) and after every 10 hours of use thereafter. This will insure proper lubrication of the internal parts and prevent costly repairs due to excessive wear.



- a. Remove the drain plug located on the right rear side of engine. Tip the kart backwards slightly by blocking up the front end and drain the oil into suitable container.
  - b. Remove and clean the oil filter.
- c. Replace drain plug and tighten securely. Place the kart in a level position.
- d. Refill the crankcase (approximately 1-1/4 pint) to the top of the filler neck with SAE 10W40 oil.
- c. Check the oil level before each use of the kart or after each 10 hours of operation. Add oil when necessary to keep the level between the bottom of the dipstick and the "0" mark. Do not mix various grades of oil.

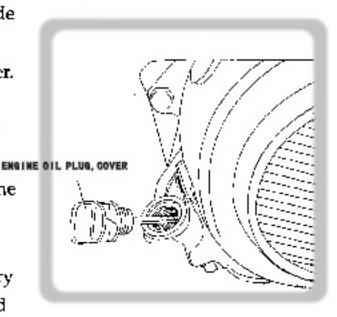


Figure 6

# B. Spark Plug

- a. Remove the spark plug and inspect it each time you change the oil (Use a spark plug wrench). The electrodes should be kept clean and free of carbon. The presence of carbon or excess oil will greatly reduce engine performance. If possible, check the spark plug gap (area between electrodes) using a wire feeler gauge. This specification is 32-35 gap or 0.5-0.6mm.
- b. Before installing the spark plug coat the threads lightly with graphite grease if possible, to ensure easy removal next time the spark plug needs inspection.
- c. It is advisable to replace the spark plug at least once
   a year to ensure easy starting and good engine performance.

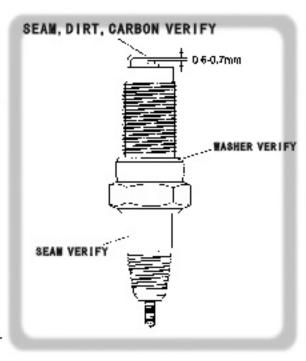


Figure 7

# C. Cleaning Instructions

Keep your kart clean. With a clean rag, wipe off all dirt and oil from around the controls. Wipe off any spilled fuel and oil. Keep the engine clean of foreign objects, and be sure to check that the air intake fan is free of debris for proper cooling.

# ADJUSTING THE THROTTLE AND BRAKE CABLES

- a. Warm up the engine (5-10min)
- b. Tighten the air screw gently. Backout 2-3/8 turns counter clockwise.
- c. Connect the tachometer, adjust the throttle to limit the idle speed. The standard value is 1400RPM.
- **d**. Turn the air screw counter clockwise solwly and observe the RPM of the engine, stop adjusting as the RPM reaches the top speed
- e. Adjust the screw and adjust the idle speed to an ideal value.
- f. Recheck and readjust the idle speed if necessary.

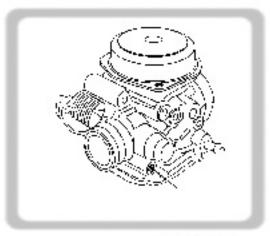


Figure 8

# D. Cleaning Instructions

Keep your kart clean. With a clean rag, wipe off all dirt and oil from around the controls. Wipe off any spilled fuel and oil. Keep the engine clean of foreign objects, and be sure to check that the air intake fan is free of debris for proper cooling.

# E. Buggy Lubrication

Lubricate the vehicle every 90 days of use. Lubrication should be done more often, if the kart is used everyday.

# F. Chain Lubrication

To increase chain life, it should be lubricated with a spray on type chain lubricant.





## FRAME GROUP

# G. Buggy Lubrication

Lubricate the vehicle every 90 days of use. Lubrication should be done more often, if the kart is used everyday.

# H. Adjustment of Front And Rear Shock

There are five adjustable positions on each shock.

The default position is in the middle set by

manufacturer (See Fig. 9)

Use a round nut wrench as you adjust the shock, the tension of shock spring will increase as you screw to left, decrease as you screw to right. Adjust according to the weight of the riders.

# I. Storage Instruction

In the event your kart is not to be operated for a period in excess of 30 days or at the end of each driving season prepare for storage as follows:

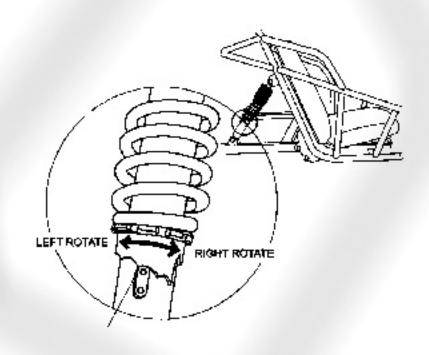


Figure 9

- a. Drain fuel tank and carburetor by allowing engine to run out of fuel, and use a fuel stabilizer.
- b. Lubricate engine cylinder by removing the air cleaner, then spray engine fogging oil through the carburetor until the motor dies.
- c. Do not save or store gasoline over winter. Using old gasoline, which has deteriorated from storage, will make the engine difficult to start and affect engine performance.



Do not drain fuel while engine is hot. Be sure to move the kart outside before draining fuel.

# △ Front Wheel Replacement


to not disassemble the castle nuts when you replace the front wheels. is only necessary to remove the 4 nuts to remove the wheel. (See Fig. 10) ghten the nuts after replacing the wheels.



Figure 10

# B. Rear Wheel Replacement

Do not disassemble the castle nuts when you replace the rear wheels and hub assembly. Remove the cotter pin and then 24mm nut. Then slide off the wheel and hub assembly. It is only necessary to remove the 4 nuts to remove the wheel.

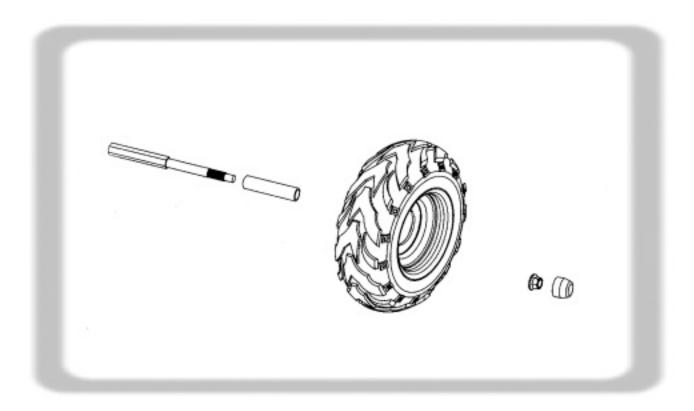

### Geason Enterprises, LLC dba Geason Powersports Emission Control System Warranty Statement

### YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board, the U.S. Environmental Protection Agency, and **Geason Enterprises**, **LLC dba Geason Powersports** (hereinafter "**Geason Powersports**") are pleased to explain the emission control system warranty on your 2011 Off-Road ATV. New off-road motor vehicles must be designed, built and equipped to meet U.S. EPA Federal and California anti-smog standards. Geason Powersports must warrant the emission control system on your vehicle for 5,000 km, 500 hours of engine operation, or at least 30 months, whichever comes first, provided that there has been no abuse, neglect or improper maintenance of your vehicle. This ATV was designed to meet the emission standards for 10,000 km, 1,000 hours of engine operation, or five years, whichever comes first.

Your emission control system may include parts such as the carburetor or fuel injection system, the ignition system, catalytic converter and engine computer, if it is equipped. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, Geason Powersports will repair your vehicle at no cost to you, including diagnosis, parts and labor.

If an emission-related part on your vehicle is defective, the part will be repaired or replaced by Geason Powersports. This is your emission control system DEFECTS WARRANTY.

**NOTICE!** Use of any Geason Powersports vehicle in any type of competitive event completely and absolutely voids this and all other warranties offered by Geason Powersports.

### OWNER'S WARRANTY RESPONSIBILITIES

As the vehicle owner, you are responsible for the performance of the required maintenance listed in your owner's manual. Geason Powersports recommend that you retain all receipts covering maintenance on your vehicle, but Geason Powersports cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

You are responsible for presenting your vehicle to the Geason Powersports dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

As the vehicle owner, you should be aware that Geason Powersports may deny your warranty coverage if your vehicle or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

If you use your vehicle in any type of competitive event, this warranty is immediately and completely void.

If you have any questions regarding your warranty rights and responsibilities, you should contact Geason Enterprises, LLC dba Geason Powersports, 1200 Flower Mound Parkway #325, Flower Mound, TX 75028, Phone: 214-513-1700, the U.S. Environmental Protection Agency, 2000 Traverwood Avenue, Ann Arbor, MI 48105 or, (for California registered off-road vehicles only) the California Air Resources Board at 9528 Telstar Avenue, El Monte, CA 91731.



### Geason Enterprises, LLC dba Geason Powersports Limited Warranty on Emission Control System

### YOUR WARRANTY RIGHTS AND OBLIGATIONS

Geason Enterprises, LLC dba Geason Powersports (hereinafter "Geason Powersports") warrants that each new 2011 and later Geason Powersports off-road vehicle:

- A. is designed, built and equipped so as to conform at the time of initial retail purchase with all applicable regulations of the United States Environmental Protection Agency, and the California Air Resources Board: and
- B. is free from defects in material and workmanship which cause such vehicle to fail to conform to applicable regulations of the United States Environmental Protection Agency or the California Air Resources Board for the periods specified above.
- I. Coverage. Warranty defects shall be remedied during customary business hours at any authorized Geason Powersports dealer located within the United States of America in compliance with the Clean Air Act and applicable regulations of the United States Environmental Protection Agency and the California Air Resources Board. Any part or parts replaced under this warranty shall become the property of Geason Powersports.
- II. Limitations This Emission Control System Warranty shall not cover any of the following:
  - **A.** Repair or replacement as a result of
    - (1) accident,
    - (2) misuse,
    - (3) repairs improperly performed or replacements improperly installed,
    - (4) use of replacement parts or accessories not conforming to specifications set forth by Geason Powersports, which adversely affect performance and/or
    - (5) use in competitive racing or related events.
  - **B.** Inspections, replacement of parts and other services and adjustments required for required maintenance.
  - **C.** Any vehicle equipped with an odometer or hour meter on which the odometer mileage or hour meter reading has been changed so that actual mileage cannot be readily determined.

### III. Limited Liability

A. The liability of Geason Powersports under this Emission Control System Warranty is limited solely to the remedying of defects in material or workmanship by an authorized Geason Powersports dealer at its place of business during customary business hours. This warranty does not cover inconvenience or loss of use of the vehicle or transportation of the vehicle to or from the Geason Powersports. Geason Powersports shall not be liable for any other expenses, loss or damage, whether direct, indidental, consequential or exemplary arising in connection with the sale or use of or inability to use the Geason



### Geason Enterprises, LLC dba Geason Powersports Limited Warranty on Emission Control System

- Powersports vehicle for any purpose. Some states do not allow the exclusion or limitation of any incidental or consequential damages, so the above limitations may not apply to you.
- B. No express emission control system warranty is given by Geason Powersports, except as specifically set forth herein. Any emission control system warranty implied by law, including any warranty of mechanability or fitness for a particular purpose, is limited to the express emission control system warranty terms stated in this warranty. The foregoing statements of warranty are exclusive and in lieu of all other remedies. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- C. No dealer is authorized to modify this Limited Emission Control System Warranty issued by Geason Powersports.
- **IV. LEGAL RIGHTS**. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
- V. This warranty is in addition to the Geason Powersports limited vehicle warranty.
- VI. ADDITIONAL INFORMATION. Any replacement part that is equivalent in performance and durability may be used in the performance of any maintenance or repairs. However, Geason Powersports are not liable for these parts. The owner is responsible for the performance of all required maintenance. Such maintenance may be performed at a service establishment or by any individual. The warranty period begins on the date the ATV is delivered to an ultimate purchaser.

Geason Enterprises, LLC dba Geason Powersports 1200 Lakeside Parkway #325 Flower Mound, TX 75028 Phone: 214-513-1700

Fax: 214-513-1711

