



Users manual

ENG



Dear Customer,

Congratulations on your purchase of this product. Like all products from , this product has also been developed on the basis the latest technology and produced using reliable and modern electrical components.

Please take a few minutes before starting operation of the appliance and read the following operating instructions.

Many thanks.



TABLE OF CONTENTS

Safety tips	2
Installation	3
Fit glass panels	3
Glass panel assembly guide	4
Operation	5
Storing food	5
Turn on	5
Temperature setting and control	5
How to see the set point	5
How to change the set point	5
Manual defrost	6
Cleaning, care & maintenance	6
Routine maintenance	6
Special maintenance	6
Troubleshooting	7
Circuit diagram	7
Technical data	8
Guarantee	8

SAFETY TIPS



Important: For your safety read the manual carefully before installing or using this product. Save this manual for future reference.

Position on a flat, stable surface.

A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.

Consult Local and National Standards to comply with the following:

1. Health and Safety at Work Legislation.
2. Fire Precautions.
3. IEE Wiring Regulations.
4. Building Regulations.
5. The appliance is intended for commercial use.
6. DO NOT use the appliance outside.
7. DO NOT attempt to service the item yourself.
8. DO NOT use damaged appliances. If you are in any doubt, consult service agent.
9. DO NOT use electrical appliances inside the appliance (e.g. heaters, ice-cream makers etc.), unless they are of the type recommended by the manufacturer.
10. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
11. DO NOT use mechanical device or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
12. DO NOT damage the refrigerant circuit.
13. DO NOT stand or support yourself on the appliance or glass panel.
14. DO NOT allow oil or fat to come into contact with the plastic components. Clean immediately if contact occurs.
15. DO NOT place combustible, explosive or volatile articles, corrosive acid or alkali, or liquids into the unit.
16. DO NOT use this appliance to store medical supplies.
17. DO NOT use jet/pressure washers to clean the appliance.
18. DO NOT allow children to play with the packaging, and destroy plastic bags safely.

SAFETY TIPS

19. Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance.
20. Always switch off and disconnect the power supply to the unit before cleaning.
21. **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with the appliance.
24. For indoor use only. Not suitable for installation in an area where a water jet could be used. Must not be cleaned by a water jet.
25. To guarantee safe operation, ensure that the appliance is set up and connected as described in the instruction manual.
26. Any repairs and work on the appliance should only be carried out by the customer service department.
27. **Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.**

INSTALLATION

- **Remove the appliance from the packaging. Make sure that all protective plastic film and coatings are thoroughly removed from all surfaces.** To prevent injury or damage to the unit, the appliance should be unpacked and set up by two people.
- Maintain a distance of 20cm (7 inches) between the unit and walls or other objects for ventilation. Increase this distance if the obstacle is a heat source.
- **Level the appliance by adjusting the screw feet. It should be placed on a level solid floor or base to reduce the vibration and noise.**
- The temperature in the place where the showcase is located must be between 10 and 32°C (Climatic Class 4). Avoid locating it in direct sunlight or near heat source such as an oven or a radiator.
- Please make sure the appliance is properly ventilated.
- Power supply and voltage at the operating point must comply with the details on the rating label. The plug must be accessible after installation.
- Correctly connect and disconnect the plug. When inserting the plug ensure it is fully inserted. When pulling out the plug grip the plug body. Never pull the supply cord directly.
- If the showcase is to be shut down for long period, switch it off and disconnect the plug from socket outlet. Clean the appliance and leave the lid open to prevent odor.
- Important! For your personal safety, this appliance must be properly grounded. This appliance is equipped with a cord having a grounding (earthing) wire with a grounding (earthed) plug. The plug must be inserted into an outlet that is properly grounded and installed. **Consult a qualified electrician or service center if you do not completely understand the grounding instructions. If doubt exists as to whether the appliance is properly grounded, have a qualified electrician check the circuit to make sure the outlet is properly grounded.**
- **If the cable does not reach the nearest socket, either rearrange your store layout or ask a qualified electrician to fix a new socket.**
- If power is cut off, wait for at least 3 minutes before restart the unit to avoid damaging the compressor.

Fit Glass Panels




ATTENTION: RISK OF BREAKAGE OF THE GLASS PANEL

- note: Ensure the hole in the collar for the grub screw faces inwards.
- note: Ensure the screw hole furthest from the edge of the panel goes to the back of the appliance.
- note: Ensure the soft end of the grub screw is the end making contact with the glass.
- note: Ensure the short end of the bolt assembly is on the outside of the panels.
- note: The glass panel must not be used as shelf.


- Unpack the wooden/carton box carefully; it's recommended to do this work with two people.
- Screw the collars to the rim of the appliance.
- Slot the two side panels into the collars, with the holes in the glass at the top.
- Screw a grub screw into each collar to secure the panels.
- Slot the rear panel into the collars, with the holes in the glass at the top.
- Screw a grub screw into each collar to secure the panel.
- Slot the plastic bushes into each of the holes.
- Screw the brackets to the inside of each panel using the bolt assemblies.
- Place the top panel onto the brackets, ensuring all holes line up.
- Insert the bush and attach the top panel to the brackets with the bolt assemblies.

INSTALLATION

Glass Panel Assembly Guide

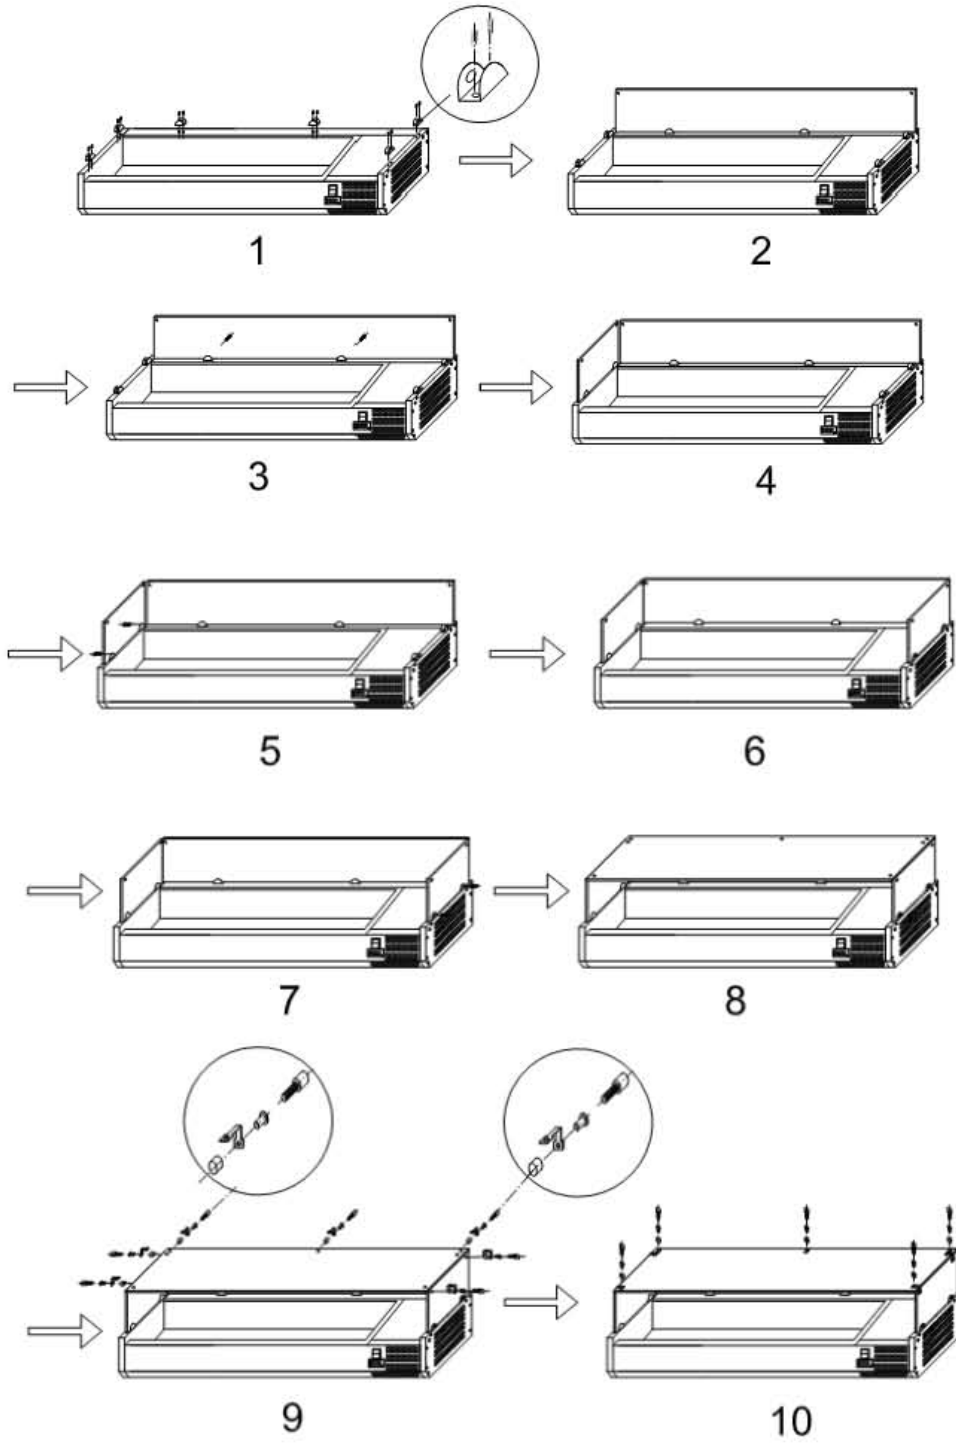

INSTALLATION

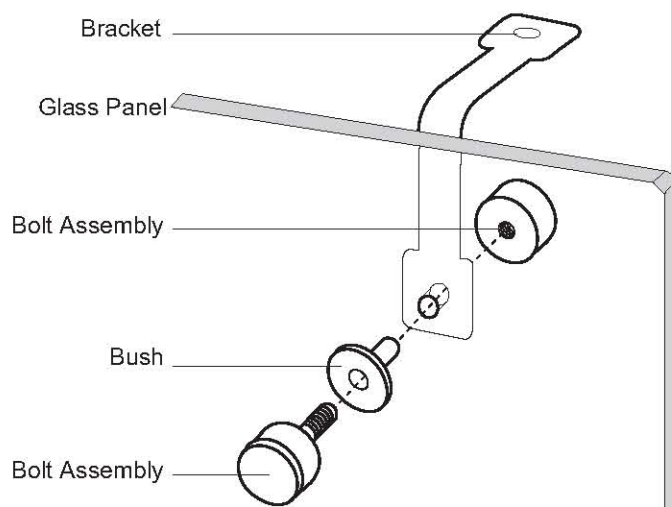

OPERATION

Storing Food

To get the best results from your appliance, follow these instructions:


- Only store foodstuffs in the appliance when it has reached the correct operating temperature.
- Ensure GN container bays are full at all times, even if the GN containers are unused or empty.
- **Empty bays will greatly reduce efficiency of the appliance.**

Turn On

- Ensure the power switch is set to [O] and turn on at the socket.
- Switch on the Power [I]. The current temperature within the appliance is displayed.
- The ❄️ on the control panel will flash for 3 min for anti-short cycle delay between the motor compressor stop and the following restart.

Temperature setting and control

The front panel of the thermostat

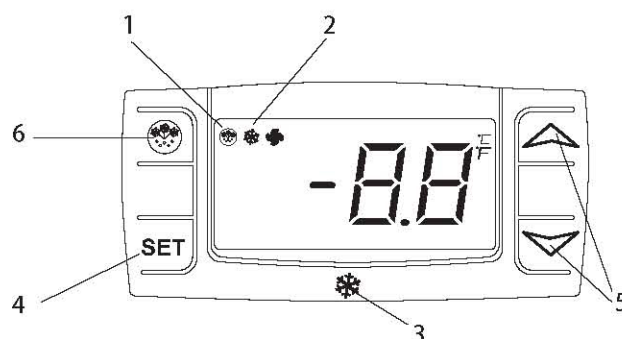

1. Defrosting light
2. Compressor operation light
3. Digital thermostat
4. Programming key
5. **Temperature modification keys**
6. Manual defrost

How to see the set point

- Push and immediately release the SET key, the set point will be shown;
- Push and immediately release the SET key or wait about 5s to return to normal visualisation.

How to change the set point

- Push the SET key for more than 2 seconds to change the set point value;
- The value of the set point will be displayed and the "°C" starts blinking;
- To change the set value push the UP or DOWN arrows within 10s.
- To memorise the new set point value push the SET key again or waits 10s.


OPERATION

Manual Defrost

The appliance will automatically run a defrost cycle every 12 hours.

note: The cycle starts from the time the appliance is initially powered up.

To manually defrost the appliance:

- Press and hold the DEFROST  button for 5 seconds
- The defrost cycle will start immediately and the Defrost LED illuminates. The defrost will last 20 minutes.

note: Starting a manual defrost also resets the automatic defrost timer. The next automatic defrost will start 12 hours after the manual defrost has finished.

CLEANING, CARE & MAINTENANCE

Routine Maintenance

Switch off and disconnect from the power supply before cleaning.

- Clean the enclosure and interior of the appliance as often as possible.
- Wipe the unit with moist cloth. Never allow the switch, control panel, cable or plug to get wet.
- Do not use abrasive cleaning agents. These can leave harmful residues. Use only mild soapy water.
- Ensure that no cleaning water penetrates into the electrical components.
- Must not be cleaned by a water jet.
- Always wipe dry after cleaning with soft cloth.
- Take care when cleaning the rear of the appliance.
- **An agent or qualified technician must carry out repairs if required.**
- If the appliance is to be left inactive for long periods, unplug the appliance after having turned the switch to OFF position, empty the refrigerating compartment and clean thoroughly.

Special Maintenance

The instructions given in the following paragraph are for SKILLED PERSON.

Periodic Operations


- Periodically clean the condenser using suitable tools (vacuum cleaner or soft brushes)
- Check that the electrical connections are not loose.
- Check that the thermostat and the sensor are in proper working order.
- **Recommend that an agent or qualified technician clean the condenser.**

TROUBLESHOOTING

If your appliance develops a fault, please check the following table.

f fault	Probable Cause	Action
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call your agent or qualified technician
	Fuse in the plug has blown	Replace the fuse (GB)
	Power supply	Check power supply
	Internal wiring fault	Call your agent or qualified technician
The appliance turns on, but the temperature is too high/ low	Too much ice on the evaporator	Defrost the appliance
	Condenser blocked with dust	Call your agent or qualified technician
	Appliance is located near a heat source or air flow to the condenser is being interrupted	Move the refrigerator to a more suitable location
	Ambient temperature is too high	Increase ventilation or move appliance to a cooler position
	Unsuitable foodstuffs are being stored in the appliance	Remove any excessive hot foodstuffs or blockages to the fan
	Appliance is overloaded	Reduce the amount of food stored in the appliance
The appliance is unusually loud	Loose nut/screw	Check and tighten all nuts and screws
	The appliance has not been installed in a level or stable position	Check installation position and change if necessary

CIRCUIT DIAGRAM

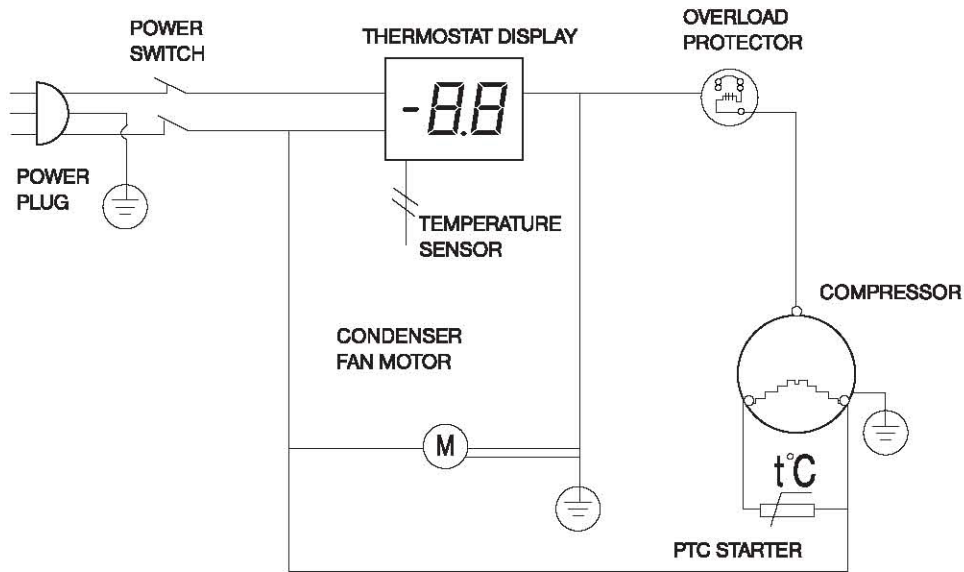

TECHNICAL DATA

Rated power input	160W	120W	160W	120W
Rated current	1.3A	0.9A	1.3A	0.9A
Power Consumption	1.5kWh/24h / 1.1kWh/24h		1.2kWh/24h / 0.9kWh/24h	
Refrigerant	R290(20g)		R290(18g)	
Climatic classification	4 (10°C -32°C)			
Rated frequency	50Hz			
Rated voltage	220-240V~			
Temperature	2-10°C			
Foaming agent	CP/IP			
Gross/net weight	65/53kg		57/45kg	
Electric Shock Protection Class	I			
Noise	56dB(A)			



CAUTION: RISK OF FIRE AND EXPLOSION WITH FLAM MABLE REFRIGERANT R600a.



Environmental Protection

Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres (if available).

GUARANTEE

A statutory guarantee applies for this product.
Claims must be submitted immediately after their determination.

The right to guarantee claims expires upon any intervention of the purchaser or third parties. Damages caused by wrong treatment or **operation, by false placement or storage, improper connection or installation, as well as force or other external influences are not covered by this guarantee.** We recommend careful reading of the operating instructions as it contains important information.

The purchaser must prove the right to guarantee claims by presentation of the purchase receipt.

note:

1. **In case this product does not function correctly, please firstly check if there are other reasons, e.g. interruption of the power supply, or incorrect handling are the cause.**
2. Please note that the following documents need to be submitted together with your faulty product:
 - Purchase receipt
 - Model description/Type/Brand
 - Describe the fault and problem as detailed as possible

In the case of a claim for guarantee or defects, please contact the seller personally.