


# PANTHER SERIES

Push plate with integrated  
900 MHz or 433 MHz wireless  
transmitter

(US version)



## DESCRIPTION

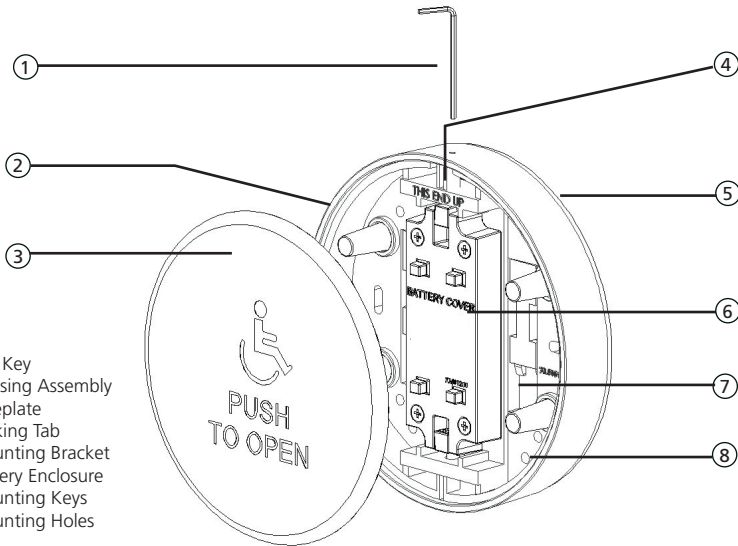


1. Hex Key
2. Housing Assembly
3. Faceplate
4. Locking Tab
5. Mounting Bracket
6. Battery Enclosure
7. Mounting Keys
8. Mounting Holes



**6 INCH ROUND, 900 MHz:**  
10EMR61-900 - logo & text  
10EMR6-900 - text only  
10EMR6L-900 - logo only

**6 INCH ROUND, 433 MHz:**  
10EMR61 - logo & text  
10EMR6 - text only  
10EMR6L - logo only

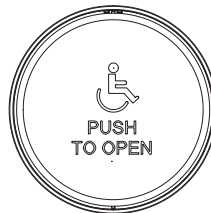

**4.75 INCH ROUND, 900 MHz:**  
10EMR4751-900 - logo & text  
10EMR475-900 - text only  
10EMR475L-900 - logo only

**4.75 INCH ROUND, 433 MHz:**  
10EMR4751 - logo & text  
10EMR475 - text only  
10EMR475L - logo only




**4.75 INCH SQUARE, 900 MHz:**  
10EMS4751-900 - logo & text  
10EMS475-900 - text only  
10EMS475L-900 - logo only

**4.75 INCH SQUARE, 433 MHz:**  
10EMS4751 - logo & text  
10EMS475 - text only  
10EMS475L - logo only




- The device should not be used for purposes other than its intended use. All other uses cannot be guaranteed by the manufacturer of the sensor.
- The installer of the door system is responsible for carrying out a risk assessment and installing the sensor and the door system in compliance with applicable national and international regulations and standards on door safety.
- The manufacturer of the sensor cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor.


## INSTALLATION

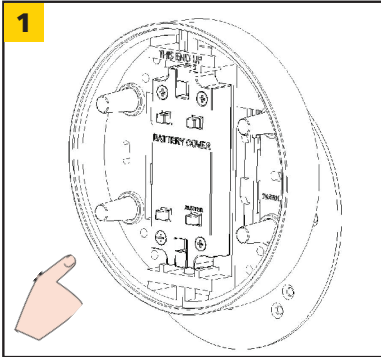


Remove Housing Assembly from Mounting Bracket by pressing in on locking tab and sliding up.

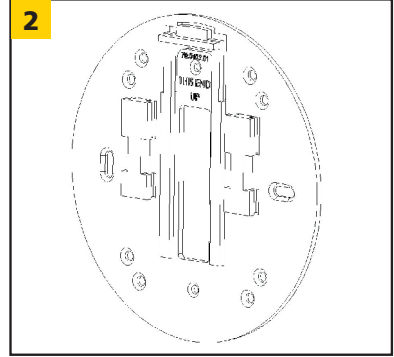

Install Mounting Bracket using at least two (2) #8 countersunk head screws. Any mounting holes may be used. Observe "THIS END UP".

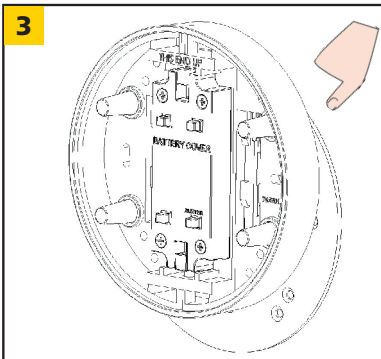

Align Housing Assembly onto Mounting Keys and slide down until Locking Tab engages. To remove, press Locking Tab and slide up.

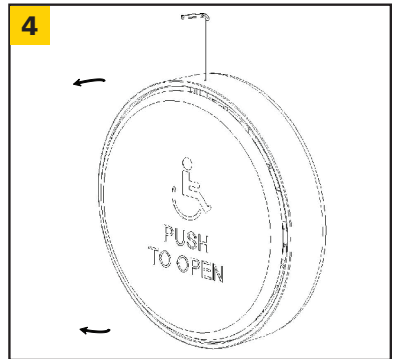


Insert Faceplate into Housing Assembly and use Hex Key to engage spring clips on the top and bottom of Housing Assembly. To remove, use Hex Key to disengage spring clips.

### NOTES:

1. For added security, additional screws may be installed through Housing Assembly and Mounting Bracket during Step 2.
2. Ensure spring clips "click" during Faceplate installation. It may be necessary to rotate Faceplate for proper alignment.

## SETUP

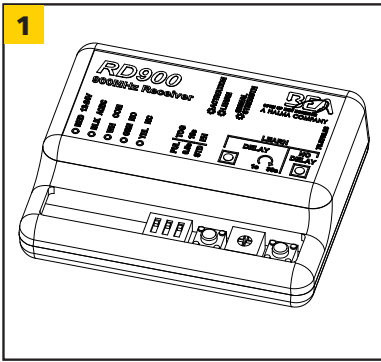


To program the wireless receiver (sold separately), please refer to the appropriate User's Guide:

- 900 MHz - 75.5786
- 433 MHz - 75.5092
- 433 MHz EH - 75.5659

**900 MHz Panther series must use a 900 MHz receiver and 433 MHz Panther series must use a 433 MHz receiver.**

## BATTERY REPLACEMENT

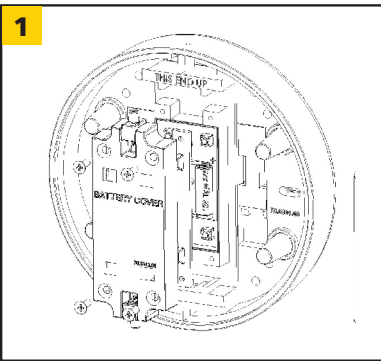

Remove four (4) screws on Battery Enclosure.

- 900 MHz versions - two (2) CR2032
- 433 MHz versions - one (1) 12V Type A23

**DO NOT OVER TIGHTEN SCREWS DURING REASSEMBLY. THIS MAY CAUSE CONSTANT TRANSMITTER ACTIVATION.**

## TROUBLESHOOTING

No activation	Receiver not programmed	Setup transmitter
	Receiver improperly wired	Verify power and activation connection
	Dead battery	Replace battery
Constant activation	Battery Housing screws too tight	Loosen Battery Housing screws
	Connected to door control with NC (yellow) wire	Use NO (green) wire instead
	Receiver set to Toggle Mode	Set receiver to Pulse Mode

# TECHNICAL SPECIFICATIONS

Dimensions	6" ROUND - 6.33" diameter, 1.45" depth 4.75" ROUND - 5.12" diameter, 1.42" depth 4.75" SQUARE - 5.12" height, 5.12" width, 1.42" depth
Weight	6" ROUND - 1.2 lbs 4.75" ROUND - 1.14 lbs 4.75" SQUARE - 1.04 lbs
Material	FACEPLATE - stainless steel HOUSING - ABS plastic
Transmitter Frequency	433 MHz or 900 MHz
Power	900 MHz versions - two (2) CR2032 433 MHz versions - one (1) 12V Type A23
Mounting	Surface mount only
Certification	FCC, IC
Temperature	14 °F - 131 °F (-10 °C - 55 °C)
Enclosure Rating	NEMA 4

Specifications are subject to change without prior notice.  
All values measured in specific conditions.

## FCC / IC

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Changes or modifications not expressly approved by BEA Incorporated could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC ID: 2ABWS-10TD900PTRI	IC: 4680-10TD900PTRI	MODEL: 10EMR61-900	MODEL: 10EMR4751-900	MODEL: 10EMS4751-900
		MODEL: 10EMR6-900	MODEL: 10EMR475-900	MODEL: 10EMS475-900
		MODEL: 10EMR6L-900	MODEL: 10EMR475L-900	MODEL: 10EMS475L-900
FCC ID: 2ABWS-10TD433PTRII	IC: 4680-10TD433PTRII	MODEL: 10EMR61	MODEL: 10EMR4751	MODEL: 10EMS4751
		MODEL: 10EMR6	MODEL: 10EMR475	MODEL: 10EMS475
		MODEL: 10EMR6L	MODEL: 10EMR475L	MODEL: 10EMS475L

### BEA, INC. INSTALLATION/SERVICE COMPLIANCE EXPECTATIONS

BEA, Inc., the sensor manufacturer, cannot be held responsible for incorrect installations or incorrect adjustments of the sensor/device; therefore, BEA, Inc. does not guarantee any use of the sensor/device outside of its intended purpose.

BEA, Inc. strongly recommends that installation and service technicians be AAADM-certified for pedestrian doors, IDA-certified for doors/gates, and factory-trained for the type of door/gate system.

Installers and service personnel are responsible for executing a risk assessment following each installation/service performed, ensuring that the sensor/device system performance is compliant with local, national, and international regulations, codes, and standards.

Once installation or service work is complete, a safety inspection of the door/gate shall be performed per the door/gate manufacturer's recommendations and/or per AAADM/ANSI/DASMA guidelines (where applicable) for best industry practices. Safety inspections must be performed during each service call. Examples of these safety inspections can be found on an AAADM safety information sheet (e.g.,

