

USWater
systems.com

US Water Systems Interceptor Pre-Filter


320-USP-IN-10 | 320-USP-IN-20



INTERCEPTOR

Table of Contents

Unpacking and Inspection	3
Safety Guide	3
System Dimensions	4
Filter Specifications and Operation	5
Benefits	5
Features	5
Specifications	5
Pre-Treatment Guidelines	5
Filter Installation Instructions	6
Maintenance	6
Where to Install	6
Installation	7
Filter Startup Instructions	12
Filter Cartridge Replacement Instructions	13
Warranty	16

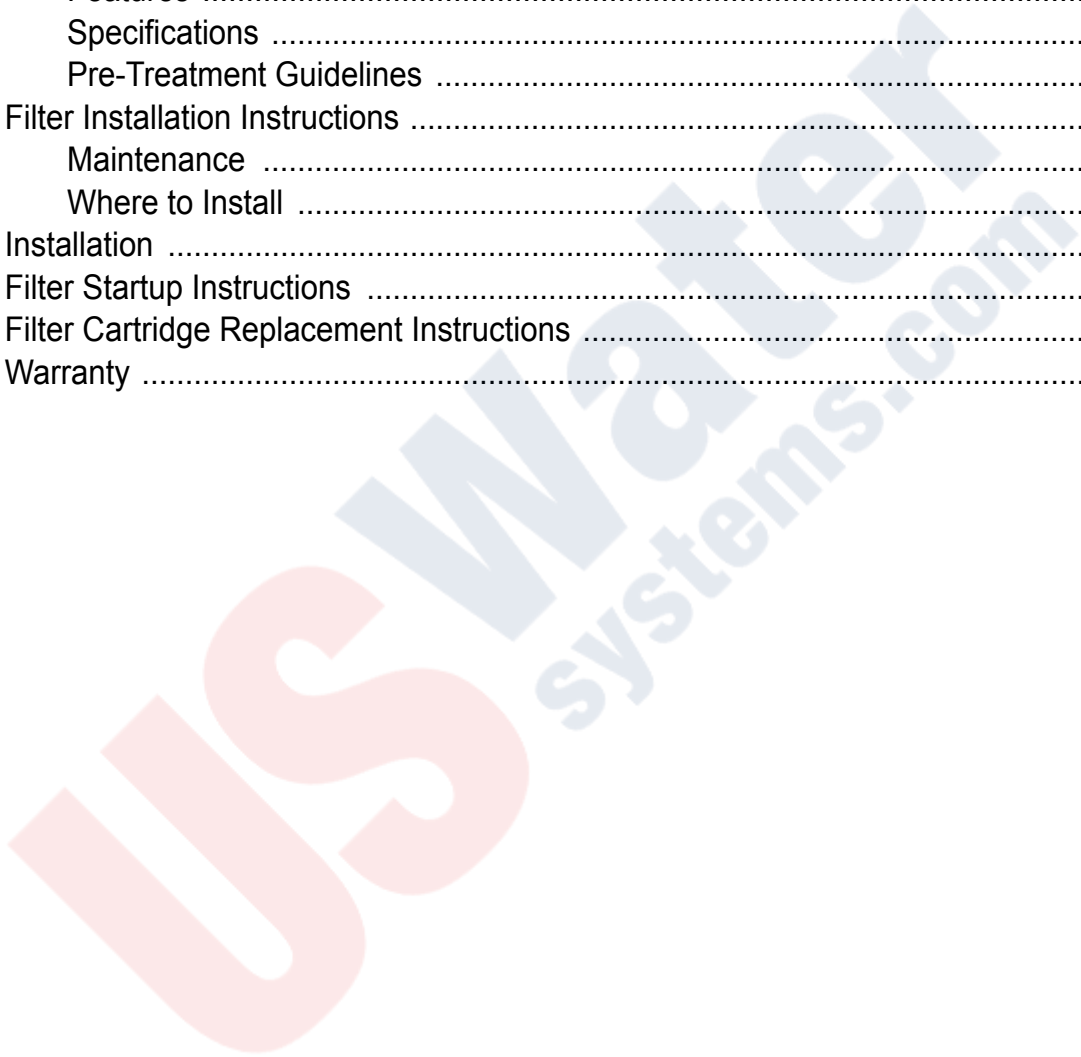


Unpacking and Inspection

Be sure to check the entire unit for any shipping damage or lost parts. Also note damage to the shipping cartons. Contact US Water Systems at 1-800-608-8792 to report any shipping damage within **24 hours of delivery**. Claims made after 24 hours may not be honored. Small parts, needed to install the unit, will be in a parts bag. To avoid loss of the small parts, keep them in the parts bag until you are ready to use them.

Safety Guide

- Check and comply with your provincial / state and local codes. You must follow these guidelines
- Use care when handling the system. Do not turn upside down, drop, drag, or set on sharp protrusions
- **WARNING:** This system does not remove biological contaminants. US Water Systems recommends that bacteria levels be checked periodically to ensure there is no bacteria present. Coliform and E.coli most importantly.

System Dimensions

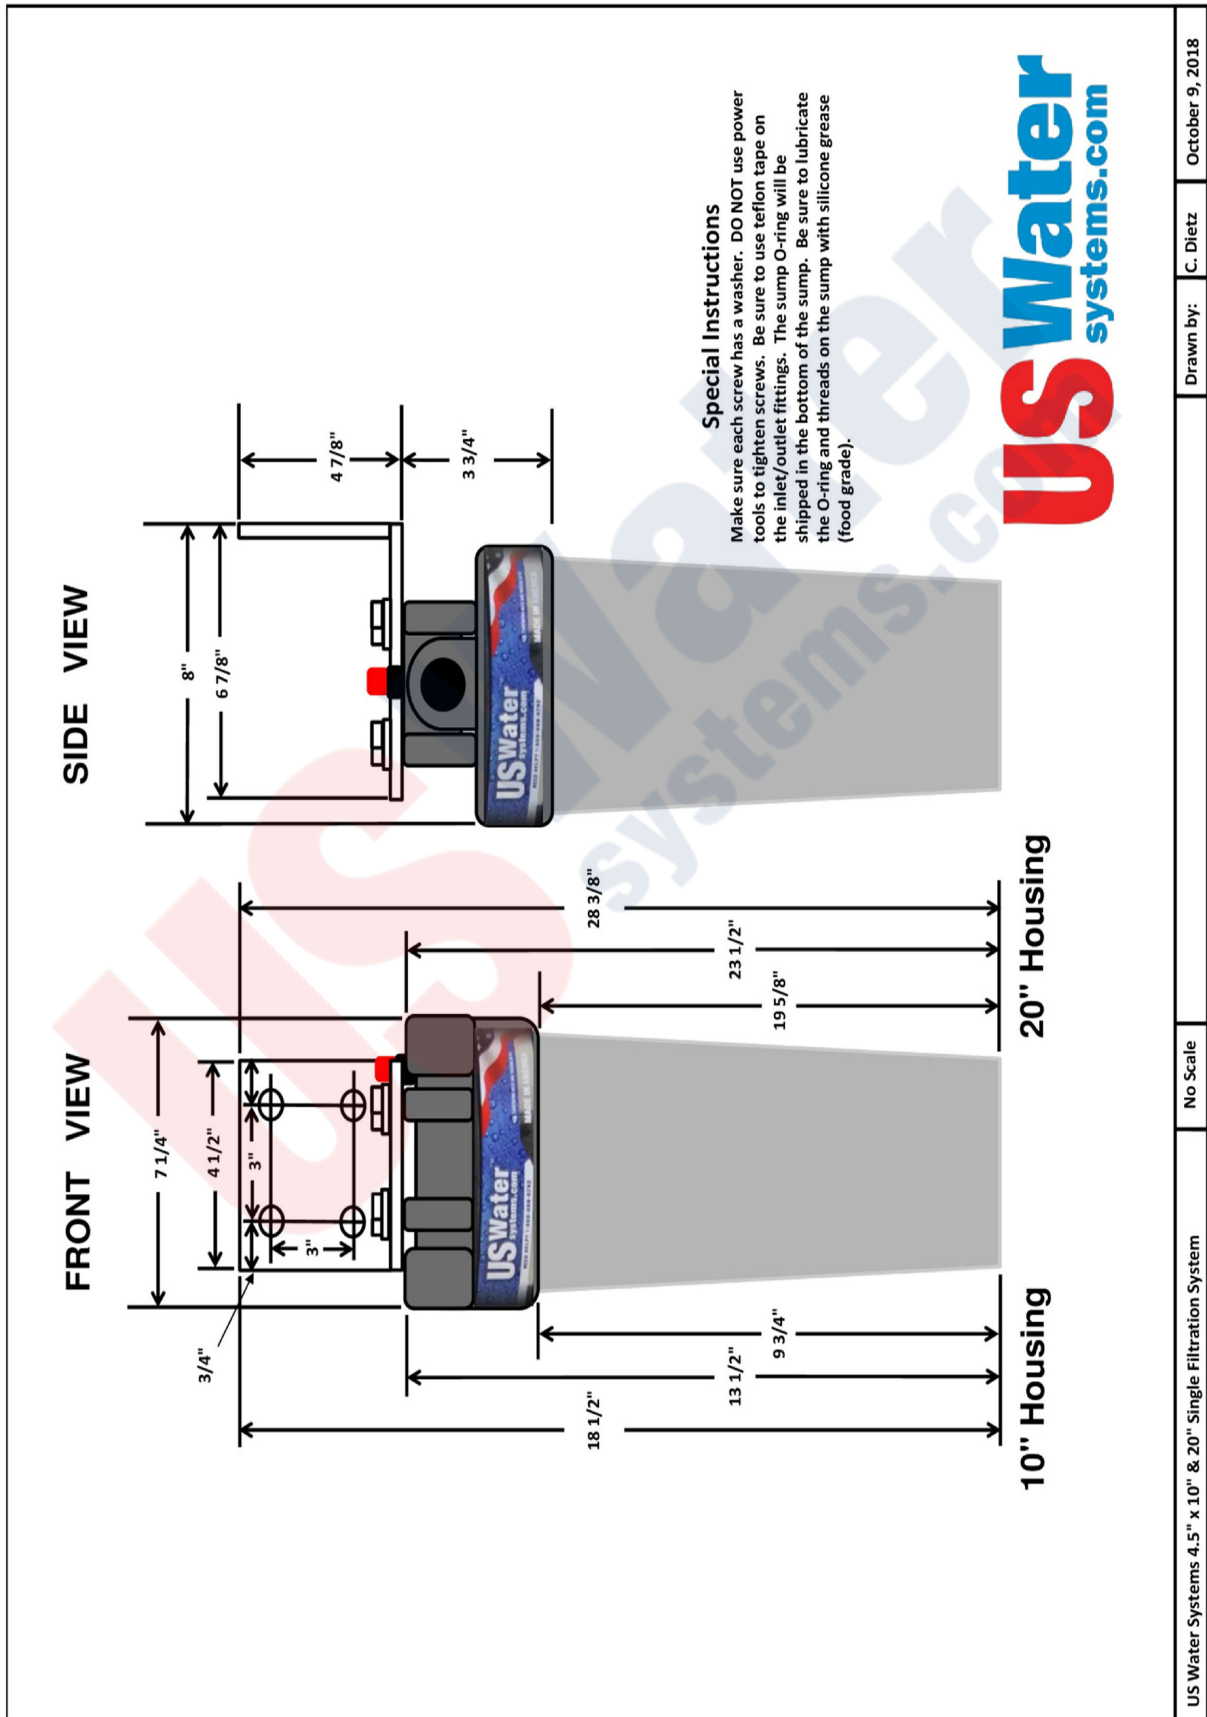

Filter Specifications and Operation

Benefits

- **Interceptor Seal** - It has a positive "o-ring seal" unlike traditional "flat top" filters.
- **Interceptor Media** - Has a 5 micron outer filter layer (which can be washed off if sediment is accumulated). Inside the filter is another layer of pleated material manufactured of Nano Alumina Fibers that have a Zeta potential of 51 millivolts. Many contaminants are actually "magnetically" removed from the water supply and "secured" in the Charged Filter
- **Interceptor Contaminant Removal** - Removes sand, sediment, silt, silica, lead, 99% of cysts, 99.9% of bacteria, and reduces Chromium 6
- **NSF Certified** - Conforms to NSF/ANSI 42 and 61 as well as USP Class VI

Features

- Cartridge has a double O-ring Posi-Seal for a positive barrier
- System conforms to NSF/ANSI 61
- Low pressure drop - typically < 3 PSID (clean)

Specifications

	4.5" x 10"	4.5" x 20"
Inlet / Outlet Connection	3/4" FNPT	1" FNPT
Peak Flow	12 GPM	25 GPM
Maximum Pressure	90 PSI	90 PSI
Temperature Range	40°F - 100°F	40°F - 100°F

Pre-Treatment Guidelines

Turbidity	< 3 NTU
pH	5 - 9.5
Iron	< 0.3 PPM
Manganese	< .05 PPM

Filter Installation Instructions

Maintenance

The Interceptor filter should be changed annually or sooner depending on the water usage or water conditions.

This systems performance is dependent upon incoming water quality and factors such as iron, sulfur, manganese, sediment and other particulates. These need to be addressed ahead of the US Water Interceptor Pre-Filter. Life expectancy of the filter varies with the water supply but many users experience filter change intervals in excess of a year when coupled with proper pre-treatment.

Where to Install

The Interceptor Pre-filter should be installed as one of the last pieces of equipment in the line of treatment in the US Water system. Water feeds with iron and other precipitants may cause premature failure. If there are known extreme contaminant levels, those contaminants should be removed first. For installation questions please call 1-800-698-8792.

WARNING! The filter system should not be installed in direct sunlight. The heat and UV light may cause the material to disfigure. **Make sure the system is sheltered from the sun.**

WARNING! *If extreme contaminant levels are present in the feed water, iron removal and sediment control should be installed prior to the Interceptor.*

Installation


1. Install the Interceptor System in the desired location in the water treatment system. Typically this will be the first component in the line of treatment. The cap is marked "IN" and "OUT" on the top of the housing.
2. Mount the housing to the bracket using the supplied screws, orienting the housing to match the applications desired flow direction.



3. Install threaded nipples or other threaded fittings in the housing. Be sure to use Teflon tape on the fittings. Tighten them with channel locks. If flex pipes with rubber gaskets are used, there is no need to Teflon tape the outer fittings. If a normal plumbing fitting is used, then be sure to Teflon tape the outer fitting.




4. Mount the filter to the wall using the necessary fasteners for the wall type. Mark the hole locations on the wall using a marker or pencil while holding the filter housing level. If this is to be mounted to a studded wall, a mounting board can be used. A shelf board or plywood can be mounted to the studs then the filter housing can be screwed to the plywood or shelf board. (Plywood pictured below)

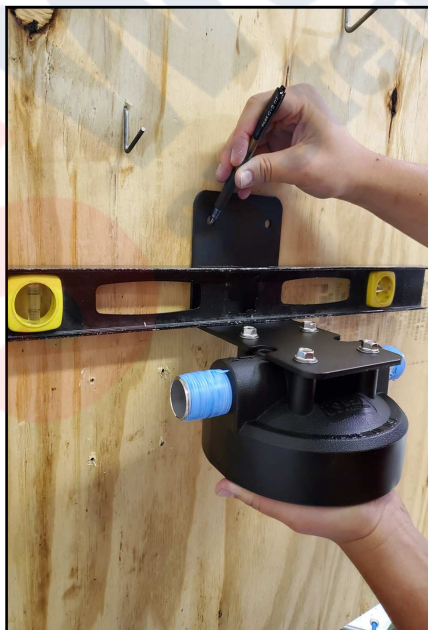

5. Shut off the water and release the water pressure at the lowest sink or spigot. Cut the pipe and connect it to the filter. Connect the inlet plumbing to the inlet on the filter housing. Tighten with channel locks.



6. Connect the outlet plumbing to the outlet on the filter housing. Tighten with channel locks.

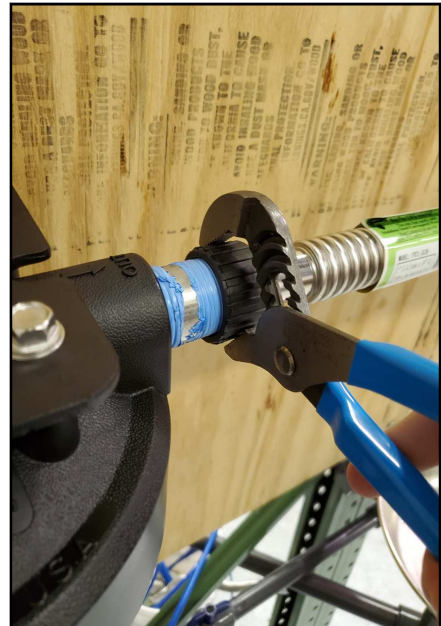

NOTE: If pipe fittings are used, be sure to use Teflon tape on the threads prior to installing the fitting on the filter housing. If copper pipe and fittings are being used, make sure all solder joints within 12-15' of the filter housing are completed and the pipe is cool, prior to connecting it to the housing fittings.

7. Remove the sump from the filter housing and install the filter. A very small amount of silicone grease or water can be used to lubricate the O-rings on the filter. The filter housing cap has a coupling that will accept the o-ringed nipple on top of the filter. Install the filter so the nipple on the top is fully seated in the filter housing cap.



8. Lubricate the O-ring on the filter housing sump and install it. Tighten the filter sump hand tight. That should be adequate. Do not use abrasive tools to tighten the housing or damage may occur.



Filter Startup Instructions

1. Open a faucet or spigot down stream of the filter. Slowly open the water shutoff valve and let the filter fill. Air will be pushed out of the filter through the open spigot or faucet downstream. Once there is no air coming out of the faucet or spigot, turn the water supply on fully and shut the faucet or spigot.
2. Check for leaks. If there are no leaks, the filter is installed and ready for service.

US Water
systems.com

Filter Cartridge Replacement Instructions

1. Shut off the water supply
2. Open the faucet or spigot closest to the filter housing and allow all the water to empty from the plumbing systems

WARNING! If the pressure is not released, the filter sump will be very difficult to get loose. It is imperative that the water pressure is released prior to attempting to remove the filter sump.

3. Remove the sump by spinning it clockwise until the sump is completely removed.



4. Remove the old filter and discard.



5. Lubricate the O-rings and install the new filter in the filter housing cap.



6. Lubricate the O-Ring for the sump and the sump threads with food grade silicone grease.



7. Install the filter sump in the filter cap by turning it counter-clockwise until it is hand tight.



NOTE: The housing should spin tight fairly easily. If not, add more lubrication to the sump threads. This will aid with removing the sump when the filter needs to be replaced again.

8. Turn on the water supply and open a spigot downstream of the filter to release the air.
9. Once the air has been released, fully open the supply valve and close the faucet or spigot.
10. Check the housing for leaks and repair as necessary.

Warranty

For the lifetime of the original purchaser, at the original residential place of installation of this Water Conditioning System, US WATER SYSTEMS, INC. warrants the following:

LIFETIME COVERAGE: Filter Housing -

We warrant that for life from the date of purchase, we will replace the filter housing at no charge to you except for transportation and standard labor charges. Damages due to environmental issues or improper installation are not covered.

GENERAL PROVISIONS This warranty does not apply to any commercial or industrial installations or to any part of the water conditioner which has been subjected to misuse, neglect, alteration or accident; or to any damage caused by fire, flood, freezing, Acts of God, or any other casualty, or if the original serial numbers have been removed.

These warranties are in lieu of all other warranties expressed, or implied, and we do not authorize any person to assume for us any other obligation on the sale of this water conditioner. No responsibility is assumed for delays or failure to meet these

warranties caused by strike, government regulations or other circumstances beyond the control of **US WATER SYSTEMS, INC.**

To obtain warranty service, call or write: **US WATER SYSTEMS, INC. 1209 Country Club Road Indianapolis, IN 46234 (800) 608-USWA.**

ANY IMPLIED WARRANTIES OF FITNESS OR MERCHANTABILITY ARE LIMITED TO THE TERMS OF THIS EXPRESSED WARRANTY AND THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THOSE HEREIN. **US WATER** SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitations of incidental or consequential damages so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

THIS WARRANTY MAY BE TRANSFERRED TO A SUBSEQUENT OWNER WITH WRITTEN APPROVAL OF **US WATER** AND PAYMENT OF STANDARD TRANSFER FEE.