


# Akaki One-Handed Joy-Con Adapter

## User Guide


Akaki Kuumeri

version 1.0

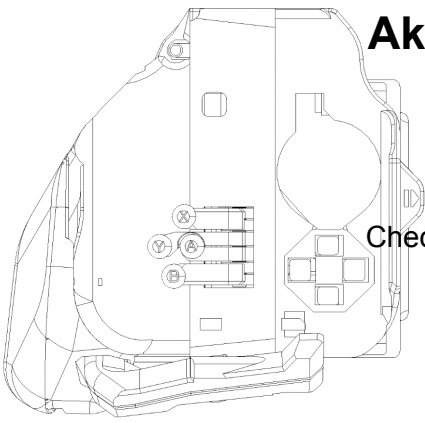

Check the Etsy product page  
for updates

A Youtube video about the  
device.

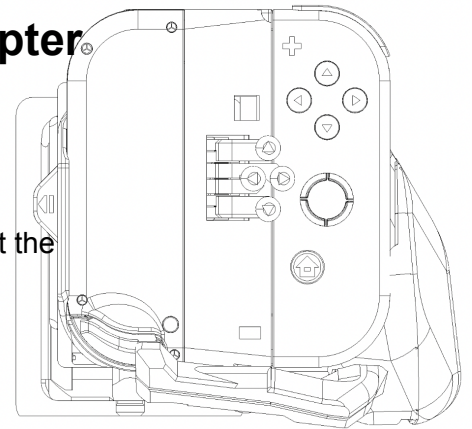

<https://www.etsy.com/listing/1280533644/one-handed-switch-joy-con-adapter>

<https://www.youtube.com/watch?v=IPrjEzyDCMQ>

### How to use

Rest the adapter's roller pad on a surface, or your lap, and move the controller up, down, left, and right to move the second thumbstick. Push on the button extensions to access the second Joy-Con's buttons.


Push the whole device downwards firmly to push in on the second thumbstick.

### Inserting the Joy-Cons

To insert your dominant hand's Joy-Con, slide it onto the rail on the adapter.

Inserting the second Joy-Con is a bit tricky.








First, insert the Joy-Con so that the rail goes into its slot on the adapter. (top drawings)

Squeeze the butt of the Joy-Con near the screw, and the area marked  on the rear of the adapter, and the Joy-Con will slip into place. (middle drawings)

### Removing the Joy-Cons

To remove your dominant hand's Joy-Con, push on the small eject button on the rear of the adapter, and slide the Joy-Con off.

To remove the second Joy-Con, squeeze between the corner of the Joy-Con and the Eject tab on the adapter. (bottom drawing)

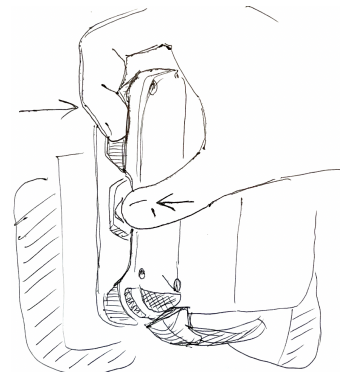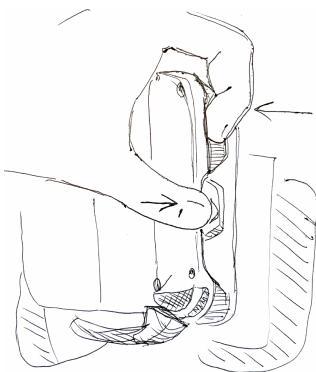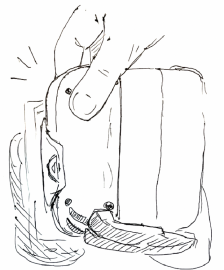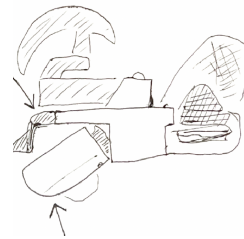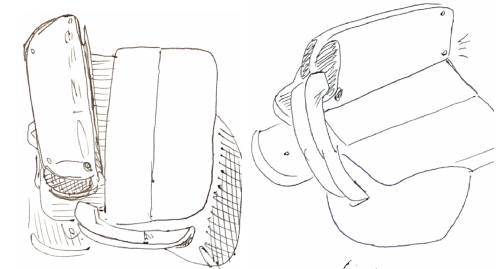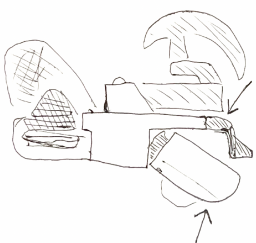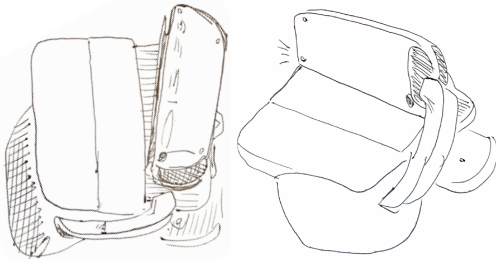

## Hand strap

Feed the hand strap through the hole in the handle.

## Leg strap

To clip on the leg strap, start from the rear, and then clip in the front.

When removing the leg strap, in order not to put too much force on the flexible mechanism, please don't pull on the main body of the device. Instead, pry the leg strap and the roller pad apart to undo the connection.

## ⚠ Caution

The flexible mechanism that transmits the motions of the roller pad to the thumbstick is made of plastic, please handle it carefully. Do not force it beyond its end of travel.

It is best to store the device with the roller pad in the neutral position if possible. You can use the included stick lock (the piece that says Remove) if you plan to store it for a long time, or when carrying the device.




## Notes

The anti-slip sheet in the rolled pad is replaceable. Lift this clip inside the roller to unlock the sheet, and clip it back down to lock a new sheet in place.

(It might be easier to perform this by first removing the roller pad from the rest of the device. To remove the roller pad, push its shaft out through this hole)

If you find the shoulder button extensions don't push on the shoulder buttons correctly, try turning the screw at the button extension's arm half a turn in or out. It is used to tune their motion.

You can change the button mapping in your Switch settings. Depending on the game, you may find it more comfortable to map A, B, X, or Y to the shoulder buttons, for example. Try swapping the left and right sticks' functions to see which way is more intuitive for you.

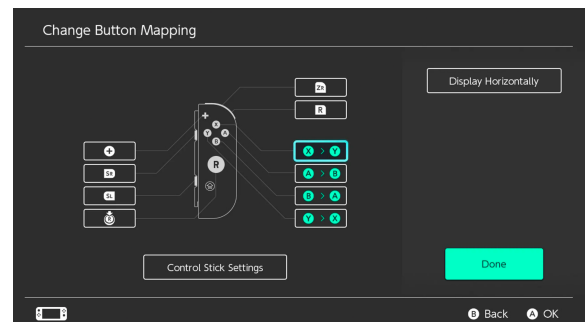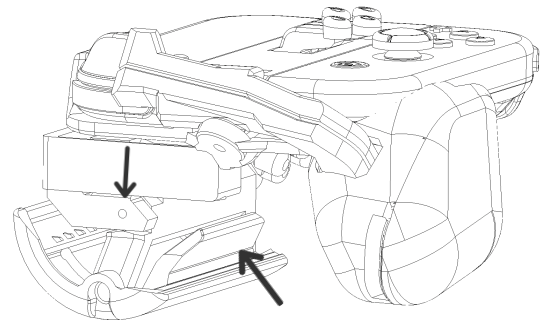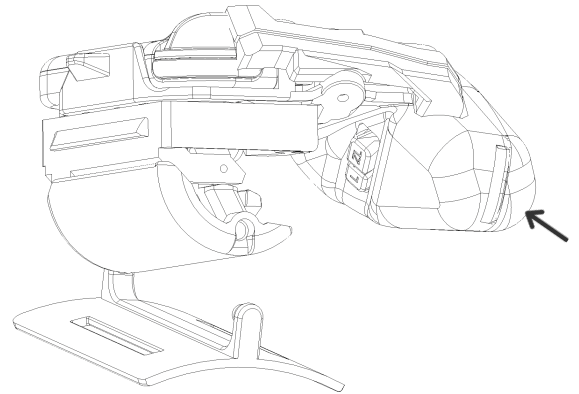

Please contact me on Etsy if you have questions or comments.