



CE RoHS




At the end of its serviceable life, this product should not be treated as household general waste. It should be handed over to the applicable collection point for the recycling of electrical equipment, or returned to the supplier for disposal.

*All values shown in this manual are only examples. Actual figures will vary depending on your consumption.

E2

WIRELESS ELECTRICITY MONITOR

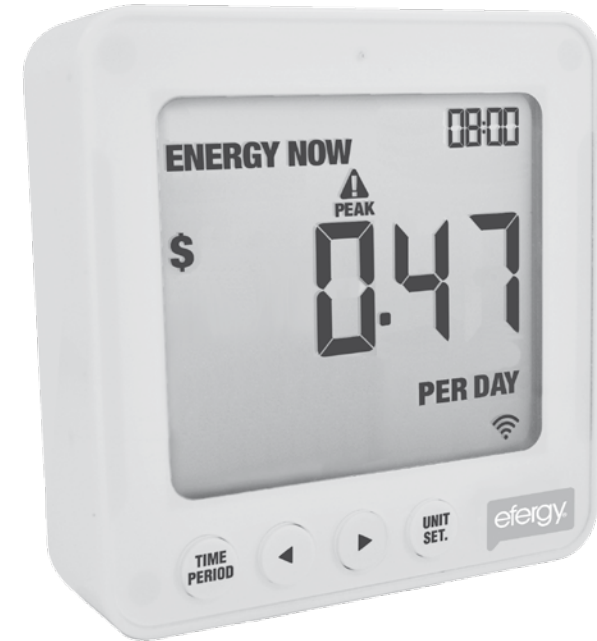

INSTRUCTION MANUAL



CONTENTS

INTRODUCTION	2
SAFETY	3
IN THE BOX	5
HARDWARE INSTALLATION	
Prior to Installation	6
Mounting Individual or Multiple Circuits	7
Installing the Mini CT Sensor	9
MONITOR SETUP	
Linking the Transmitter and Monitor	11
Setting the Time and Date	12
Setup Instructions	13
Dual / Multiple Tariff Mode	15
How To Change Functions	17
How To Change Modes	18
FAQS	20
TECHNICAL INFORMATION	21
INSTALLATION NOTES	22

INTRODUCTION



Energy metering and monitoring are at the heart of energy management, understanding when and where your energy is consumed is key to saving money.

The **e2** wireless electricity monitor shows the amount of energy that a household is consuming at the time the display is read. The display can also give the user a reading showing usage in financial terms. You can walk around the home with your monitor device, switching appliances on and off, to see the difference that each one makes. With a few small changes in your consumption behaviour the **e2** can help you reduce your energy costs.

Ask George

If you have any questions about using your **e2 efergy** monitor or if you'd like further advice on monitoring electricity at home, please feel free to contact us, or visit the website for up to date information, downloads and frequently asked questions.

Email your questions to:
info.aus@efergy.com

Email your technical questions to:
askgeorge@efergy.com

We aim to answer all your emails within 48 hours.

Efergy Customer Service:
(+61) 1300 799 851

www.efergy.net.au



IMPORTANT SAFETY INFORMATION



It is important that you take some simple precautions before using this product. Incorrect use or poor safety practices can result in injury or fatality. Whenever possible, turn off the main breaker, outside your home feeding power to your electric panel.

When installing the e2 monitor you should find that everything is straight-forward. However, there are a number of important health and safety issues which you need to be aware of:

- Mini CT sensor clip fits onto the internal live feed cable inside the electricity meter, which delivers the live supply to your home.
- **Do not touch any metallic connections during the installation of the mini CT sensors. Do not carry out this installation if under the influence of alcohol or drugs.**
- Remember the device is not intrusive and does not require rewiring; no wires or cables need to be cut, removed or modified to perform this installation. If you notice anything unusual about the electricity supply such as loose wires, exposed cabling, burn marks, holes in the insulating materials or damage to the electric wires in the service panel or where the mini CT sensors are to be attached, stop immediately and report the findings to your supply company.
- **efergy** energy monitoring systems are considered **plug and play** devices that meet all regulatory requirements for installation in Australia.
- In Australia the live cable can only be accessed by qualified electricians.
- Do not force or bend the cables at any point during installation. If you are worried or have any concerns about the installation, please contact a qualified electrician immediately.

- The user does not need to remove the sensor throughout the working life of the unit. Battery changes are performed on the transmitter and on the display. There are no batteries to change in the sensor.
- Even with the main breaker in the off position, the connection lugs where the main wires terminate at the main breaker may still be live with potentially lethal voltage. Stay clear of these connections during the installation of the mini CT sensor, see page 9.
- The mini CT sensor itself is insulated so do not be concerned if it slides down the main wire to the breaker after being secured around the insulated wire. A plastic tie wrap (with 5cm of the tie not cut off) secured to the main wire under the desired location for the sensor may be used to keep the sensor from sliding down the wire.
- Millions of these systems have been installed world wide without incident but please follow safe work practices as outlined during the installation.

IN THE BOX

Your **e2** pack contains the following elements:

- 1 x Mini CT Sensor
- 1 x Waterproof Transmitter
- 1 x **e2** Wireless Energy Monitor

You will need to attach the sensor to the live feed cable which connects the meter to the monitor. Any power you use in your home will pass through this cable. The clip on sensor acts as a CT sensor, and relays the amount of current being drawn in the home to the transmitter. From there it is sent wirelessly to the energy monitor, which shows how much power is being consumed.

You can upload your energy data from your **e2** monitor onto your PC/Mac using **elink** software.

It also includes:

- 1 x USB Cable
- 1 x **elink** Software CD
- 1 x **elink** Software Guide
- 1 x Instruction Manual

Mini CT Sensor



Waterproof Transmitter



Wireless Energy Monitor



time period
backward
forward
unit set

HARDWARE INSTALLATION



PRIOR TO INSTALLATION

The **efergy e2** is installed by clipping the mini CT sensors around the feed wires of your electric panel. In Australia the standard residential voltage is 240V.

Note - For a 240V panel (typical residential electric panel) power is measured using one mini CT sensor. For different voltages, please change during the **Monitor Setup** stage (see page 13).

Installation for Three Phase Panels

The **e2** is installed by clipping the mini CT sensors around the feed wires of your electric panel. In the case of a commercial or industrial three phase panel or service, you must use three mini CT sensors to measure all three phases. Simply order an additional two mini CT sensors from your dealer. Identify the three power wires providing service to your electric panel. Open and place one sensor around each of the three main feed wires.

Installing Transmitter for Three Phase

Plug the three mini CT sensor cables into the transmitter. Mount the transmitter on the wall next to the electric panel. This will make it easier to replace the batteries. Readings for a three phase system may not be accurate depending on connection and loading system.

HARDWARE INSTALLATION

MOUNTING INDIVIDUAL OR MULTIPLE CIRCUITS



Locate Your Electrical Panel

Locate your electricity meter and determine its type. You can normally find this on an outside wall, in the garage, basement or utility room. If you live in a flat, it can often be found outside your front door, in the communal stair case, or in the basement. Ensure there is enough of accessible cable coming from the bottom of your electricity meter.

Modern office blocks and apartments may have safety panels to protect wires entering the meter. It is recommended that professional electricians be contacted where this is the case.

Find the Main Feed Wires for Your Home

You should find four cables exiting the meter (see both Fig. 1 and Fig. 2). The feed cable (cable 4) is the live cable exiting from the meter to the fuse box. Connect the mini CT sensor to cable 4. Some installations will have cable 1 and cable 2 covered or partially covered to prevent any tampering with the supply (see Fig. 2). In this case you will still attach the sensor to cable 4.

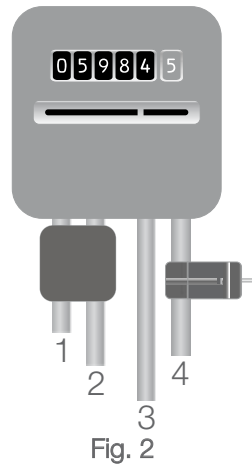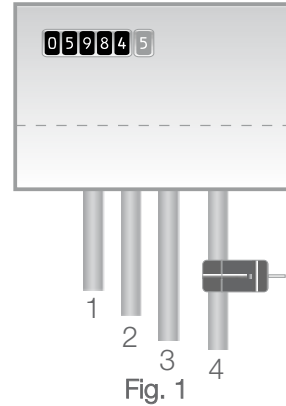

HARDWARE INSTALLATION




Dual Tariff Meters

Dual Tariff meters (shown in Fig. 3) will often have an auxiliary cable running between cable 3 and cable 4. Auxiliary cables will be smaller in diameter than the feed cables, and will run into an adjoining metering device.

Newer installations will normally have two cables exiting from the bottom of the meter. One is the earth cable, the other the live feed cable. The mini CT sensor should be clipped around the live feed cable (this is normally brown coloured).

If you have a three phase supply, or economy 7 meter, then you may require additional sensors. These can be simply plugged into the additional sockets at the base of the transmitter. Please contact your supplier for additional sensors.

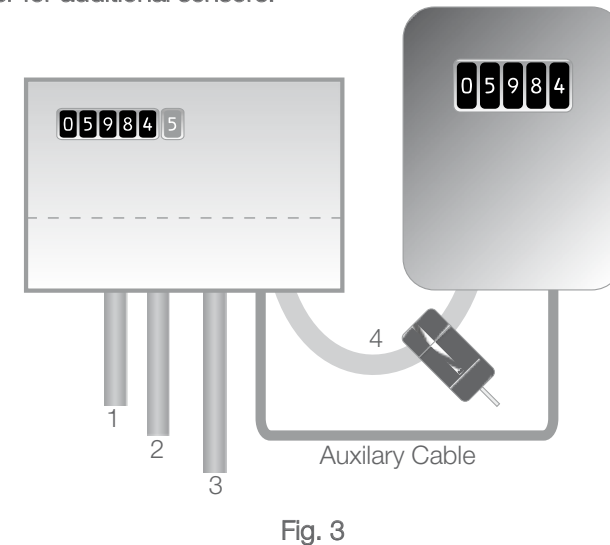

HARDWARE INSTALLATION

INSTALLING THE MINI CT SENSOR

The sensor needs to be fitted to the live feed cable. Sensors are suitable for cables up to 12mm in diameter. You should not force the cable to fit. The sensor should fit loosely around the cable and there should be no packing used.

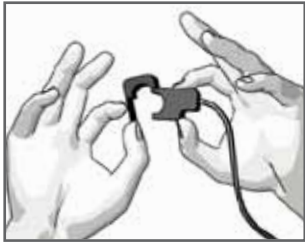


Fig. 4

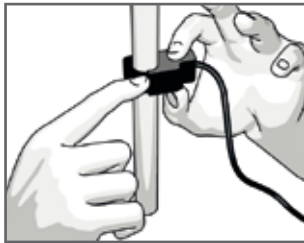


Fig. 5

1. Pull the release clip to open the mini CT sensor (Fig. 4)
2. Select the correct feed cable, and then place the sensor around it
3. Push the clasp to close around the feed cable securely (Fig. 5)

Remove a standard 1cm knock out from the meter box. Feed the mini CT sensor lead from inside the box out through the raw knock out hole. Open and place the mini CT sensor around the live feed cable 4 (Fig.5).

Mounting the Transmitter

Insert the jack on the end of the mini CT sensor wire into any of the three input sockets on the waterproof transmitter. The mini CT sensor acts as a current sensor and relays the current being drawn into the home to the waterproof transmitter. Mount the waterproof transmitter on the wall next to or above the meter box. This will make it easier to replace the batteries (although the batteries will last for a long time). If the panel is in a finished area, you may mount the transmitter inside the meter box. This may reduce transmission distance. Replace the panel cover(s) when finished installing the mini CT sensors.

HARDWARE INSTALLATION

INSTALLING THE MINI CT SENSOR

Note - Keep your fingers well away from the metal lugs where the main service wires attach to the breaker, unless you are able to turn off the inbound power from your utility source outside. Wiring configurations and types of main panels will vary greatly.

Note - If the cables in your meter box are too big for the mini CT sensor you can order XL CT sensors at www.efergy.com or from your local dealer.

IMPORTANT - Always make safety your first priority, see the relevant **Important Safety Information** (page 3). Under no circumstances should you try to attach the sensor if there is any damage to the meter box cables. No cables need to be cut. Do not cut any cables.

If in doubt, contact an electrician or other qualified person to assist you with the installation of the mini CT sensor.

MONITOR SETUP


LINKING THE TRANSMITTER AND MONITOR

Step 1 - Ensure three AA batteries are inserted in the transmitter and three AAA batteries are inserted in the wireless energy monitor. Observe polarity when installing batteries.

Step 2 - Push the **link** button on the reverse of the monitor for two seconds. The transmission signal symbol will flash for one minute.

Step 3 - While the transmission signal in the display flashes push the **link** button on the front of the transmitter and wait until the transmission signal symbol becomes solid.

Note - The default value for the transmission frequency is six seconds. This means the transmitter is sending information every six seconds. You can change the frequency from 6s (red flashing light) to 12s (orange flashing light) and to 18s (green light) by pushing and holding the transmitter button.

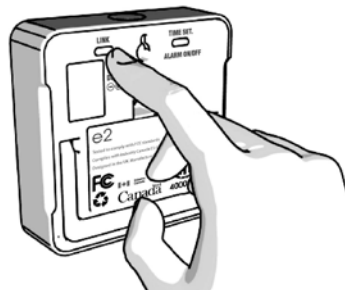

Monitor **link** button




Transmitter **link** button

If the **link** is completed you will clearly see the transmission signal



Transmission Signal

If the **link** is not completed you will see dashes on the display

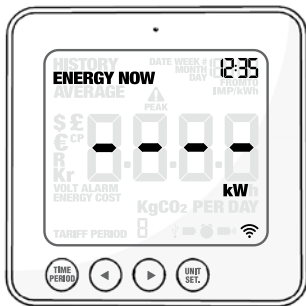

MONITOR SETUP

SETTING THE TIME AND DATE

The **e2** monitor needs to know the time and date in order to provide you with the correct information. Set the time and date as follows:

Step 1

On the reverse of the display you will find the **time set** button. Press and hold for two seconds. Time set up will flash in the display.


Step 2

Set the hour to the correct time by using **backward** and **forward** buttons. Press **unit set** button once to save the hours. Repeat for minutes, using the **unit set** button to confirm.

Step 3

Set the date by using the **backward** and **forward** buttons. Press **unit set** button to confirm and move to month set up. Repeat the process to set the year. Once the correct time and date have been set, push **unit set** button to save and exit.

efergy®

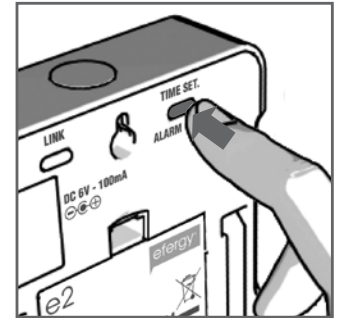

Hold for 2 seconds



press **unit set** button to exit

MONITOR SETUP

SETUP INSTRUCTIONS

IMPORTANT - Throughout the setup process, push the **time period** button at any time, your settings will be saved & you will exit the function setting mode.

The **efergy** monitor needs to know the unit cost per kWh charged by your electricity supplier, along with voltage and alarm settings. The following steps will move through each of these settings for a single tariff period (alternatively see page 15 for **Dual / Multiple Tariff Mode**).

Press and hold down the **unit set** button for two seconds, this will enable you to enter the setting mode.

Note - Twenty seconds of inactivity in setting mode will return the unit to normal display mode without saving changes.

Step 1 - Voltage


Press and hold **unit set** button for two seconds. Default voltage is set at 240V. Use **backward** and **forward** buttons to change the voltage. Press **unit set** button to save your setting and move into currency selection setting.



hold for 2 seconds

Step 2 - Currency Selection

Select the currency using **backward** and **forward** buttons. Default currency will be \$. Push **unit set** button to confirm and to move onto tariff selection set up.

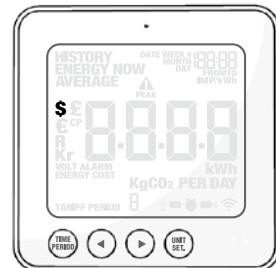

MONITOR SETUP

Step 3 - Single Tariff Set Up

On release you will see the symbol **tariff period 1** will be highlighted. If you are charged one single tariff push **unit set** button to confirm. If you have dual tariff rate, please see the following page.

Step 4 - Electricity Cost



Default cost is set at 0.130 \$/kWh. This is the average price per kWh electricity that suppliers charge. Use the **backward** and **forward** buttons to set the cost per kWh. Press **unit set** button to save your setting and to move onto carbon emission ratio setting.

Step 5 - Carbon Emissions Ratio

Now set your carbon emissions ratio. This value can be increased or decreased using **backward** and **forward**. Press the **unit set** button to store the value. The Australian average is 1.0 kg. CO₂/kWh, this is the default value. Press **unit set** button to save your setting and move on to alarm setting.

Step 6 - Alarm

The default **alarm** is set at 5.00kW. If the alarm function is switched on, and you are using more than 5.00kW, the alarm will sound. This value can be increased or decreased using **forward** and **backward** buttons. Press **unit set** button to store the value and exit the **function** mode. To activate and deactivate the alarm at any time press the alarm on/off button on the back of the unit.

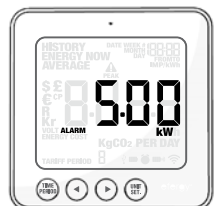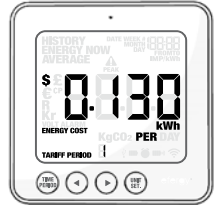


MONITOR SETUP

DUAL / MULTIPLE TARIFF MODE


If you have a dual or multiple tariff rate meter you may want to setup the dual tariff function.

Step 1 - Activation Of Dual/Multiple Tariff

Press and hold **unit set** button for two seconds. On release you will see the voltage setting flash. Press **unit set** button twice and you will move onto the tariff selection setting. Now you will see the symbol TARIFF 1 flash. Press **backward** or **forward** buttons to select dual or multiple tariff set up (you can select up to four tariffs). Push **unit set** button to confirm. Now you have to set START and END time periods for each tariff.

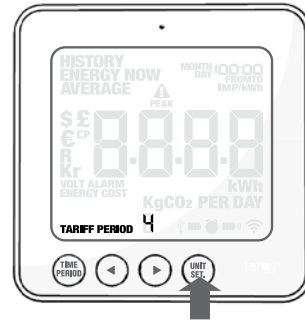

hold for 2 seconds

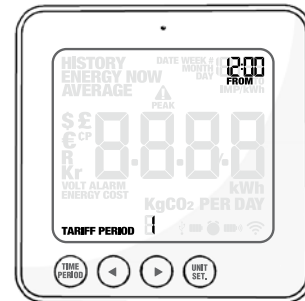

Step 2 - Set Start & End Time For Tariff 1

Set the start time for TARIFF 1 first using **backward** or **forward** buttons. Set the hours and press **unit set** button to save and move to minute set up. Set minutes using **backward** or **forward** buttons and pushing **unit set** button to confirm. Repeat the process for other tariffs if you have multiple tariff settings. You will always set one period of settings less than the number of tariffs you have selected as the remaining period will be saved automatically.

MONITOR SETUP



Step 3 - Set Tariff 1 Rate

Use **forward** and **backward** buttons to input the cost per kWh. Press **unit set** button to save your setting. Tariff 2 set up will flash.

Step 4 - Set Tariff 2 Rate

Use **backward** and **forward** buttons to input the cost per kWh. Press **unit set** button to save your setting.


Step 5 - Set Tariff 3 & 4 Rate

Use **backward** and **forward** buttons to input the cost per kWh. Press **unit set** button to save your setting. Repeat the process for Tariff 4.

Example - If you are on a tariff which starts at 1:00am and finishes at 8am, set start time at 01:00 and end time at 08:00. Push the **unit set** button to confirm. Select and set the cost per kWh you pay for each tariff, for night and day time rates respectively.



hold for 2 seconds

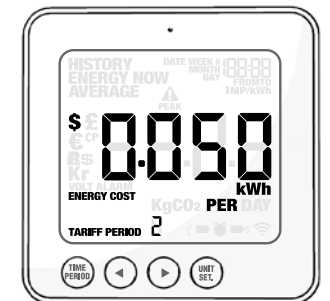

 When in ENERGY NOW mode, this symbol appears when the most expensive tariff is in use.

MONITOR SETUP

HOW TO CHANGE FUNCTIONS

Step 1 - Function

Press the top **function** button to change the information displayed from **ENERGY NOW** to **AVERAGE** and to **HISTORY**.

Step 2 - Energy Now

The **efergy e2** monitor shows instant power (kW), estimated electricity costs per day and carbon emissions per day.


Step 3 - Average

The information shown is the average calculated since the monitor was switched on for the first time. It shows daily, weekly and monthly average consumption in kWh, \$ and kg.CO2.

Step 4 - History

In this mode the monitor shows consumption of the last 7 days, last 7 weeks and last 24 months in kWh, \$ and kg.CO2. Press **time period** button to switch between day, week and month.

Note - Hourly data is stored in the **e2** for 240 days. This can be viewed when the data is transferred onto your computer using the **elink** software.

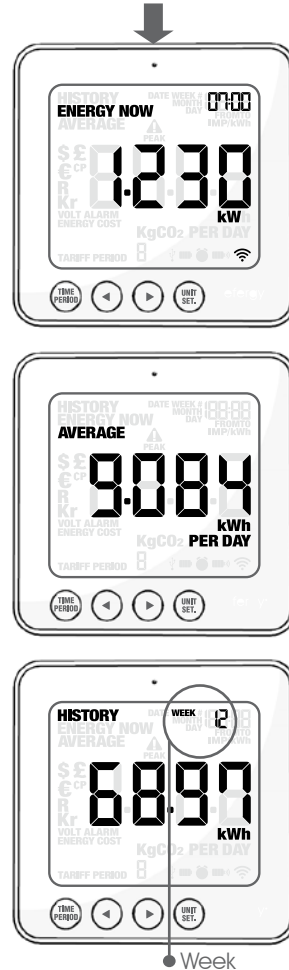

MONITOR SETUP

HOW TO CHANGE MODES

Step 1 - Mode

Press **unit set** button to change the unit displayed.

Step 2 - Power

Shows the power of your whole house at any instant, in kW.

Step 3 - Energy

During the **AVERAGE** and **HISTORY** modes the display shows energy consumption, in kWh.

Step 4 - Cost Per Day

Estimates the electricity cost of your home at that current moment in time, in \$/day.

Step 5 - Carbon Emissions

Estimates the indirect carbon footprint for electricity consumption at that current moment in time, in kg.CO2/day.




MONITOR SETUP

HOW TO CHANGE MODES CONTINUED

Step 6 - Time Period Button

Press **time period** button to change from daily, to weekly and to monthly data during AVERAGE or HISTORY mode. During HISTORY mode the **backward** and **forward** buttons are used to scroll between date, weeks and months.

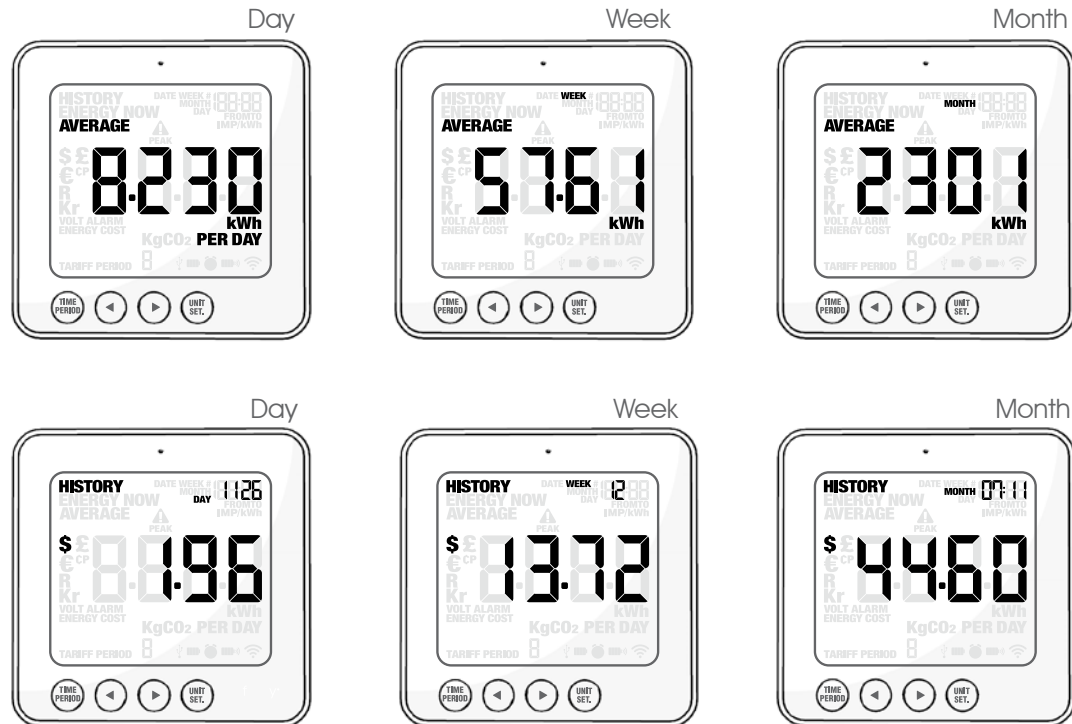

FAQS



If I remove the batteries will I lose the information on the monitor?

The monitor has an internal memory, so if you need to change or remove the batteries the information stored on the monitor will not be lost.

How do I reset the monitor (clear the data and start again)?

Press **time period** and **unit set** buttons simultaneously and hold for two seconds CLR will be displayed on the screen.

How far does the device transmit?

Transmitters work up to around 40/70m within the home. The 433.5MHz range is well suited for home use. This can cover three floors, and also well suited to buildings where electricity meters are outside the main building.

I have dashes (- - -) showing on the monitor. What does this mean?

Move the monitor closer to the transmitter and press the **link** button. If the dashes remain on the monitor this would indicate the transmitter and receiver are not communicating. Please contact **efergy** Customer Service to help locate the problem.

Backlight appears to work sometimes, and not other times. Is my display broken?

No. The backlight is on a timer to save battery life. The monitor should work at darker periods of the day, when any buttons are pressed. The LED backlight will be activated from 18:00 to 6:00 hours.

For more information about the **elite** go to www.efergy.net.au

Contact **efergy** customer service phoneline on (+61) 1300799851

TECHNICAL INFORMATION

Model Name	efergy e2
Frequency	433.5MHz
Transmission Time	6, 12 or 18 Sec
Transmission Range	40 - 70m
Sensor Voltage Range	110 - 400V
Measuring Current	50mA - 95A

INSTALLATION NOTES



Date	_____
Location Installed	_____
Installed By	_____
Number of CTs	_____
Voltage Set Point	_____
Tariff Settings	_____