

EVAKOOL

DOWN UNDER DZ


Aussie made for Aussie conditions



FEATURES



MULTI-FUNCTION LIDS

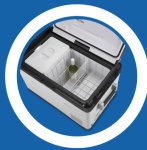

DUAL ZONE FLEXIBILITY



SMART CONTROLS + APP



SECURE LOADING



POWERFUL COOLING



EASY LIFT



evakool.com.au

sales@evakool.com

1300 385 665



DOWN UNDER DZ

Aussie made for Aussie conditions



SECOP



L: 786mm

W: 448mm

H: 410mm

50L Down Under DU250-DZ-BLK



CAPACITY

Zone 1: 16L
Zone 2: 34L
Total: 50L

VOLTAGE

DC: 12/24 Volts
AC: 240 Volts via an adapter
(included)

COMPRESSOR

SECOP PBC 2.0

POWER CONSUMPTION

1.8 A/hr (Average hourly draw over 24 hours at 32°C. One zone at 2°C, one zone at -16°C)

TEMPERATURE RANGE

-18°C to +10°C



SECOP



L: 786mm

W: 448mm

H: 485mm

65L Down Under DU265-DZ-BLK



CAPACITY

Zone 1: 25L
Zone 2: 40L
Total: 65L

VOLTAGE

DC: 12/24 Volts
AC: 240 Volts via an adapter
(included)

COMPRESSOR

SECOP PBC 2.0

POWER CONSUMPTION

1.9 A/hr (Average hourly draw over 24 hours at 32°C. One zone at 2°C, one zone at -16°C)

TEMPERATURE RANGE

-18°C to +10°C



SECOP



L: 967mm

W: 530mm

H: 413mm

80L Down Under DU280-DZ-BLK



CAPACITY

Zone 1: 33L
Zone 2: 47L
Total: 80L

VOLTAGE

DC: 12/24 Volts
AC: 240 Volts via an adapter
(included)

COMPRESSOR

SECOP PBC 2.5

POWER CONSUMPTION

2.0 A/hr (Average hourly draw over 24 hours at 32°C. One zone at 2°C, one zone at -16°C)

TEMPERATURE RANGE

-18°C to +10°C



SECOP



L: 967mm

W: 530mm

H: 468mm

95L Down Under DU295-DZ-BLK



CAPACITY

Zone 1: 40L
Zone 2: 55L
Total: 95L

VOLTAGE

DC: 12/24 Volts
AC: 240 Volts via an adapter
(included)

COMPRESSOR

SECOP PBC 2.5

POWER CONSUMPTION

2.2 A/hr (Average hourly draw over 24 hours at 32°C. One zone at 2°C, one zone at -16°C)

TEMPERATURE RANGE

-18°C to +10°C

Please read operating manual carefully before using your unit.

Please keep manual in a safe place.

If lost you can find a digital copy at Evakool.com.au or contact Evakool on 1300 385 665 (1300 EVKOOL).

Contents

1	Safety Instructions	4
2	Notes on Using the Product	4
3	Operation	5
4	LED Control Panel.....	6
5	Refrigerator Settings Recommendations	9
6	Lid Configuration	11
7	Error Codes	12
8	Troubleshooting	13
9	Preventative Maintenance & Care	15
10	App Instructions.....	16
11	Product Data	20
12	Down Under II Accessories	21
13	Product Drawings	22
14	Warranty Statement.....	24

What's in the Box:

- 1 x Fridge
- 1 x 1.8m Anderson to Anderson style 12V plug
- 1 x 12V to 240V adaptor
- 3 x Baskets

Key Product Features

- Made in Australia
- World renowned Secop compressor
- Superior roll bond evaporator design
- True dual zone technology - set 2 temperatures
- Turn zones on/off independently



1 Safety Instructions

- Warning: Do not touch exposed cables.
- Warning: Do not use fridge if you suspect any connections could be wet.
- When using the fridge in a vehicle, please ensure the circuit being used is fused at the battery or power source at the recommended size.
- Any installation of DC power systems should be handled by a qualified professional.
- Make sure the source voltage is correct. The technical data label (page 20) has the voltage data.
- Do not place any electrical devices inside the refrigerator as moisture could harm these devices.

2. Notes On Using The Product

- Your refrigerator requires good ventilation, especially around the vents of the refrigerator; allow a gap of at least 200mm around the vents.
- Avoid humidity: humidity inside the appliance can form frost and impair cooling. Do not allow frost to build up.
- Never clean the appliance using a hose and never submerge the unit in any liquid.
- Avoid placing your refrigerator near a heat source. This helps the refrigerator to work more efficiently and keep the contents cool.
- Place the refrigerator on a flat surface and away from any edges. When using the fridge in a vehicle, please use a fastening device to secure it.
- This product is not designed for marine purposes and warranty may become void if corrosion or rust is caused by sea salt.


3. Operation

- **Power:** The refrigerator can be powered by a multi-voltage system utilising either 12/24 Volts or with the included 240V adaptor. The electronic module controls the compressor and has the added function of a three stage battery protection. When the input voltage drops below the minimum, the compressor will cut out; when the voltage comes back up to the cut-in value, the compressor will restart automatically.
- **Battery Protection:** The SECOP compressor requires approximately 11.0 Volts (12 Volt System) or 23.0 Volts (24V System) to operate. If the voltage drops below this the fridge will stop running.
- **Cable Specification:** The DC cables must have a suitable cross-section for their length (measured from the battery to the unit), according to this table:


Cable Thickness (Area)		12V Max Cable Length		24V Max Cable Length	
(mm ²)	AWG	(m)	(ft)	(m)	(ft)
2.5	13	2.5	8	5	16
4	11	4	13	8	26
6	9	6	20	12	39
10	7	10	33	20	66

4. LED Control Panel

LED Control Panel

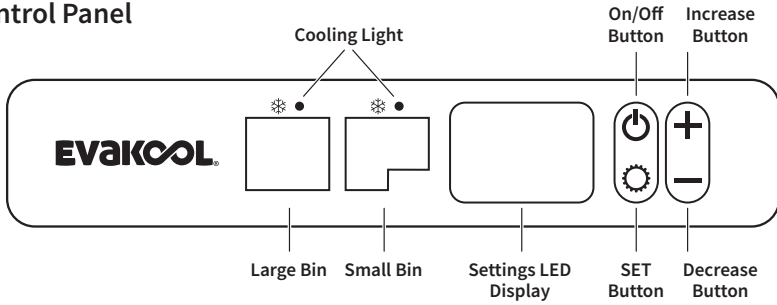

Display

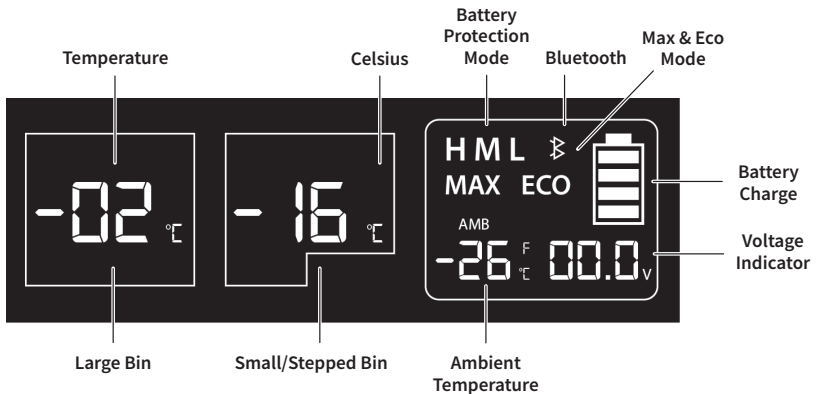

4.1 Display Panel Definitions

Large & Small Bins: Wondering which display indicates the temperature for each bin? The outline of the display indicates this, the large bin is represented by a full square, and the small bin is represented by an L shape/stepped bin shape.

Snowflakes: These indicate which bin is currently cycled on (cooling). This fridge has one compressor, meaning it will only cool one bin at a time. This is an automated process within the fridge and cannot be altered within the settings.

AMB/Ambient Temperature: This indicates the ambient temperature inside the motor compartment of the fridge.

Bluetooth: The bluetooth symbol will turn on and make an audible beep when you have successfully connected to the app. This symbol will not be illuminated unless you have successfully connected. There is no setting within the fridge that turns the bluetooth on or off.

Voltage Indicator: When running your fridge on 12V this indicates the voltage at the fridge (not at your battery). The voltage indicator on the fridge will typically be different to the reading at the battery. This is because there can be voltage drop present between your fridge and battery. This can be to do with the length and quality of your power cord, and also be influenced by the health/life of your battery. When the fridge cycles on, the voltage will typically drop and then increase again when the fridge cycles off. This feature is useful for identifying any fridge errors (such as an E1).


When running your fridge on the supplied EvaPower 240V adaptor the voltage indicator will read approximately 14.5V, as this is the rated output of the 240V adaptor.

Battery Charge: When running the fridge on 12V, this icon will indicate how much battery charge you have left. Just like the voltage indicator reading, the battery charge reading will typically drop when the fridge cycles on, and will increase again when the fridge cycles off. If you notice the battery symbol on your fridge getting low, we recommend checking your battery voltage and putting it on charge if possible to prevent any power issues to your fridge.



When running your fridge on 240V the battery charge will indicate it's full.

4.2 Display Panel Settings

To turn on/off the refrigerator:

- Hold the  button for three seconds.
- The fridge will make an audible beep and turn on.

Setting the temperature:


- To set the large bin press the  button once.
- To set the small/stepped bin press the  button twice.
- Once the selected room is flashing use the **+** or **-** buttons to select the desired temperature. Temperature recommendations can be found on page 9.
- Once the desired temperature is selected, it will flash several times, and after a few seconds the temperature will automatically set.

Did you know?


Just like your fridge at home, all EvaKool fridge freezers will cycle on and off. This means you will hear the fridge turn on (cycle on) and commence cooling, then once it gets down to the set temperature, it will cycle off again. Subsequently, the temperature displayed on the fridge will fluctuate by a couple of degrees from the set temperature. The temperature shown is only an indication of the temperature inside the fridge. It is also typical to hear gurgling sounds during this process too.

There is no cause for concern, your fridge at home runs the exact same and means your fridge is running in a healthy state!

Setting the Max & Eco Mode:

- Press the  button three times.
- Use the **+** or **-** buttons to select the desired mode. You can find recommendations on page 9.
- Once the desired setting is selected, it will flash several times, and after a few seconds it will automatically set.

Setting the Battery Protection Mode:

- Press the  button four times.
- Use the **+** or **-** buttons to select the desired battery protection mode. You can find recommendations on page 10.
- Once the desired setting is selected, it will flash several times, and after a few seconds it will automatically set.

Turning one compartment on/off:

If you only require cooling for a small amount of product, you can switch off either side and run just one bin/compartment.

- To turn off the large bin press the **+** button for 3 seconds.
- To turn on the large bin press the **+** button again for 3 seconds.
- To turn off the small bin press the **-** button for 3 seconds.
- To turn on the small bin press the **-** button again for 3 seconds.

5. Refrigerator Setting Recommendations

To ensure maximum performance from your Down Under Series II Fridge/Freezer please follow these recommendations.

Temperature Settings

This fridge can be run as a fridge/fridge, fridge/freezer or freezer/freezer, meaning either compartment can be run as a fridge or freezer. See recommendations below:

Fridge: 2°C

Freezer: -16°C

Down Under II 65L - Single or Dual Zone Settings

The Down Under II 65L Fridge Freezer has the capability to be run as a single or dual zone fridge or freezer. See recommendations below:

Single Zone operation:

- Remove the internal divider, this can be stored in the lid.
- Set the temperature:
 - To run a fridge: have both bins running at 2°C. To save battery power you can turn off the small bin and just run one side.
 - To run a freezer: have both bins running at -16°C.



Dual Zone operation:

Leave the divider in place and set a separate fridge and freezer temperature.

Max or Eco Mode Settings

This setting controls the compressor speed. Max mode is typically used to quickly pull the fridge down to temperature or to assist in high ambient temperatures, whereas Eco mode will assist with conserving battery power and can be used in low ambient temperatures. See recommendations below:

Eco: Recommended for ambient temperatures of 30°C or less.

Max: Recommended for ambient temperatures of 30°C or less.

Battery Protection Mode Settings

The fridge is equipped with a multi-level battery monitor that protects your vehicle battery against excessive discharging when the fridge is connected to the on-board 12V/24V supply. If the refrigerator is operated when the vehicle's ignition is switched off, the fridge switches off automatically as soon as the supply voltage falls below a set level. The fridge will switch back on once the battery has been recharged to the restart voltage level. See recommendations below:

Battery Protection Mode	L	M	H
Switch-off voltage at 12V	10.1V	10.5V	11.1V
Restart voltage at 12V	10.9V	11.4V	12.4V
Switch-off voltage at 24V	21.5V	22.3V	24.3V
Restart voltage at 24V	22.7V	23.7V	25.7V

When the power to the refrigerator is supplied by the starter battery of a car, select battery mode "H". In every other instance, EvaKool recommends using the "L" / low setting. This is safe for your auxiliary battery and will maximise how long your fridge can run off your battery on a single charge. Keep in mind, best 12V practice is to keep your battery as charged as possible to maximise its lifespan. If you wish to operate the fridge from an AC power supply, set the battery mode to "L".

Helpful Hints

- *Pre-chill your fridge before use, this can be done the night before you leave for your trip on 240V to save on battery power. This will allow your fridge to achieve the desired temperature quicker.*
- *Clean your fridge regularly by following the cleaning and maintenance guide on page 15. This will avoid ice forming of the cooling plates and ensure the condenser is free from dust and lint for optimum performance.*
- *Do not store any electrical equipment inside the fridge after use.*
- *Leave the fridge lid left ajar after use to prevent mold.*
- *Use the included baskets to ensure air circulates freely around the cabinet.*
- *Ensure the vents are not obstructed to allow maximum airflow.*
- *Refrain from unnecessary opening of the unit.*

6. Lid Configuration

This series features a bi-directional and completely removable lid for ease of access. Please follow these steps to change the lid configuration.

1. To open left or right, press the latch inwards to release the lid.
2. To completely remove the lid, press both latches on either side of the fridge inwards simultaneously to release the lid.
3. The lid can be placed back onto the fridge from either side.



7. Error Codes

Code	Reason / Solution
E1	<p>Low Voltage</p> <ul style="list-style-type: none"> • Please check the source voltage to ensure it is above the cut out. Try lowering the voltage cut out setting to LOW (refer to page 8). • The vehicle cabling may be inadequate/unsuitable, please refer to cable specifications table for correct cable thickness (page 5). • Try on a different power source.
E2	<p>Fan Issue</p> <ul style="list-style-type: none"> • Fan is drawing too many Amps (Over 1 Amp). <p>- Contact EvaKool</p>
E3	<p>Compressor Start Issues</p> <ul style="list-style-type: none"> • Unplug for 10 minutes. • Try on a different power source. • Possible compressor module fault. <p>- Contact EvaKool</p>
E4	<p>The Compressor Speed is Too Low</p> <ul style="list-style-type: none"> • Unplug for 10 minutes. • Move unit to a lower ambient temperature. • Clean vents / ensure clear air flow over compressor. • Reduce product load inside unit.
E5	<p>Ambient Temperature Too High</p> <ul style="list-style-type: none"> • Move unit to a lower ambient temperature. • Clean vents / ensure clear air flow. • Fan fault. <p>- Contact EvaKool</p>
E6	<p>Thermistor is Unplugged</p> <p>- Contact EvaKool</p> <p>Thermistor is Short Circuited</p> <p>- Contact EvaKool</p>

8. Troubleshooting

The appliance is not turning on

- Check the power supply.
- Check whether the plug and the socket have a good connection.
- If you have purchased an additional 12V adaptor with a cigarette end, check whether the fuse requires replacing. This is located inside the cigarette end of the 12V adaptor. Follow the 'Replacing the fuse plug' section at the bottom of page 13 if you require a new fuse.
- Check whether the appliance has been turned on (refer to page 7).
- Check the circuit breaker, this is located to the left of the motor cover. If the circuit breaker button has popped out, press it back in.

The food inside is frozen

- The set temperature is too low.

Bad performance in refrigeration

- The temperature setting is inappropriate.
- The lid is unlocked/or open.
- The lid seal is broken.
- Problems arising from poor ventilation.
- There is too much food inside the refrigerator.
- There is too much warm product inside the refrigerator.
- There is a heat source near the unit.

Hear the sound of water from inside the unit

- This is normal, due to the flow of the refrigerant.

Unusual noise when refrigerator is working

- The refrigerator is not placed on a level surface.
- Some part has come loose inside the refrigeration compartment (see a service agent).

Replacing the fuse plug (12/24V)

NOTE: An Anderson to cigarette adaptor is not included with this product and can be purchased separately via our website.

- You can purchase a fuse from any automotive or electrical retailer near you. The required replacement part is a 15 Amp glass fuse.
- Pull off the adaptor sleeve on the plug.

- Unscrew the screw from the upper half of the housing.
- Carefully raise the upper half of the housing from the lower half.
- Take out the contact pin.
- Replace the defective fuse with a new one that has the same rating (15A, 250V).
- Re-assemble the plug in the reverse order.

Replacing the light

- If you require a new LED light please contact Evakool on 1300 385 665.
- The LED light is located internally on the outer left and right hand sides.
- Disconnect the power supply.
- Carefully pry out the plastic light cover with a pointed and flat tool.
- Unscrew the LED mounting screws.
- Pull out the LED.
- Replace them with a new LED.
- Fit the screws in with a screwdriver.
- Press the transparent part of the lamp back into the housing.
- Connect the power supply to the fridge.

If none of the above solves your issue please contact Evakool on 1300 385 665 or warranty@evakool.com.au for details of your closest Evakool service centre.

9. Preventative Maintenance & Care: Metal & Injection Moulded Products

To ensure a long life and reliable operation of your metal and injection moulded fridge/freezer we recommend following our preventative maintenance and care guide.

Cabinet Care

- The cabinet should be cleaned after every use by wiping both the interior and exterior with a damp cloth, using a mild non-abrasive detergent, and dry thoroughly. The painted metal surfaces can be polished with a car polish and a soft cloth.
**To protect the cabinet from the harsh conditions a protective cover can be purchased from EvaKool's online store (<http://www.evakool.com.au/>) or selected retail outlets.*
- **Do not use** scourers, harsh cleaning products, solvents, or oil as this will degrade the plastic and can cause damage to painted surfaces.
- **Do not** leave the cabinet in direct sunlight as this may cause discolouration in the plastic and painted surfaces. Please note: plastic components in all EvaKool fridge/freezers are UV stabilised.

Defrosting

- After use, defrost ice off evaporator; switch off unit and disconnect from power source. Leave the lids open to naturally melt the ice. Once the ice has melted, ensure the unit is completely dry by draining any residue and wiping down with a towel.
- Always make sure the cabinet is completely dry and the lid left ajar when put in storage. This will ensure no corrosion, mold or odor will form inside the cabinet.
- **Do not** store electrical devices such as the 12 volt adaptor inside the refrigerator.
- **Do not** use a sharp object to remove ice. If damage is caused by a sharp object than the warranty of the unit will become void.

Refrigerator Maintenance

- As your EvaKool fridge is a portable appliance it is subjected to a variety of different operating conditions. Every 12 months of use, a general inspection and maintenance should be carried out. We recommend the inspection to be carried out by an approved EvaKool agent. Our service agents can be found via our website <https://www.evakool.com.au/stores?type=2>.


Marine Use

- We do not recommend the use of our fridges in a marine environment, as salt can cause corrosion in electronics and metal components. If unit failure is found to be caused by corrosion, warranty will be void.


10. App Instructions

The following instructions will assist you with downloading and using the EvaKool Down Under Series II App. This app is suitable for Down Under Series II 95L, 80L & 65L only. Please note that the app is a bonus feature and is not needed for the fridge to function.


Step 1: Download the app from the Apple App Store or the Google Play Store. Once downloaded, enter the app by clicking its icon on the home screen.

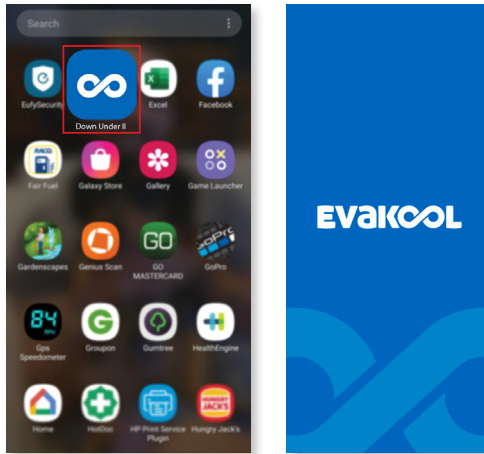


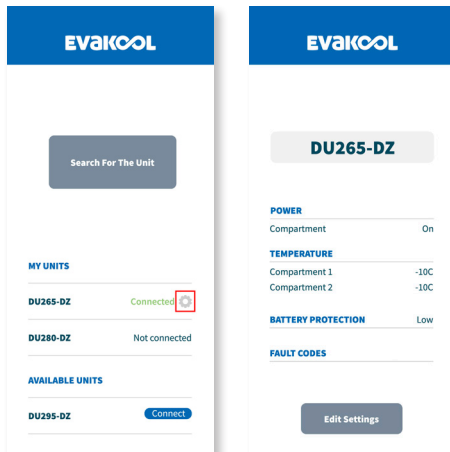
Step 2: To connect to the fridge press the 'Search for the unit' button. While the app is searching, you will stay on the 'Searching' page.

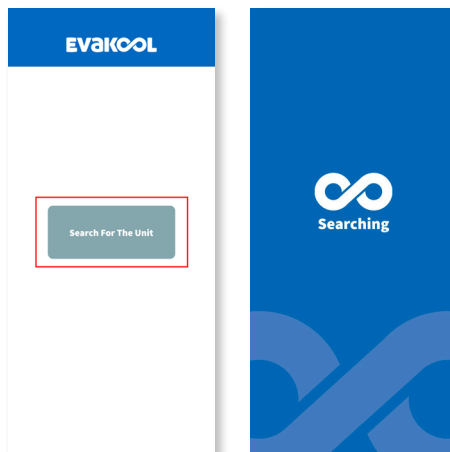


Step 3: Once the app has found the fridge, click 'Connect' to connect to the fridge. Once you have successfully connected, you will hear an audible beep from the fridge, the bluetooth light on the fridge will turn on, and the app will say 'Pairing Successful'. When you are ready to proceed click 'Okay'.

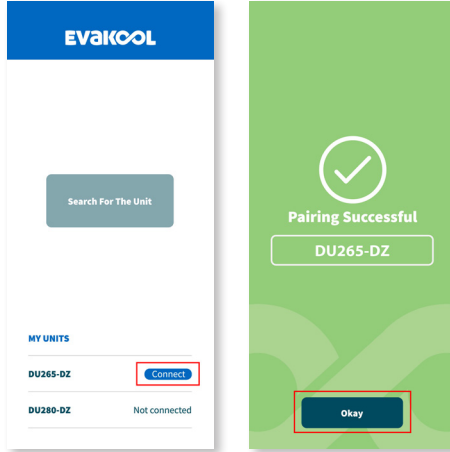


Step 4: Under 'My Units', press the  button to enter the fridge settings of the selected fridge. You will now see the setting page which will display all the current fridge settings.



Step 5: To edit the fridge settings press ‘Edit Settings’. There are three fridge settings that you can changed; On/Off, Temperature & Battery Protection Mode. Once you have chosen the desired settings press ‘Save Settings’.

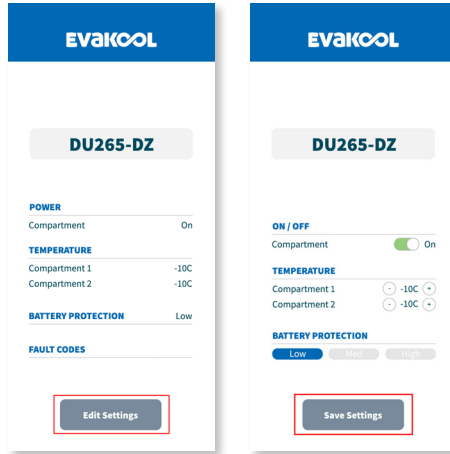


Step 6: If you experience a fault code, simply press the red button next to ‘Fault Codes’. You’ll be taken to a page that will indicate what the fault is and how to proceed.

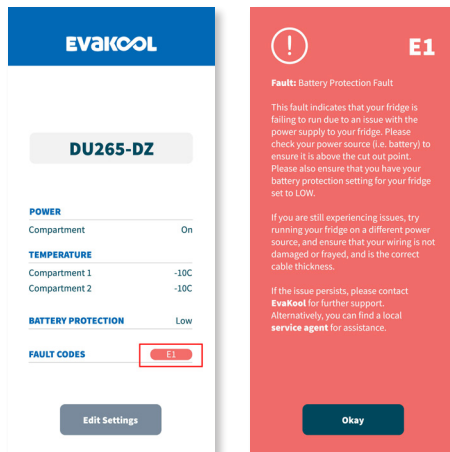

Step 7: If you are using more than one Down Under Series II fridge and you are currently in the settings for Fridge 1 but want to change the settings of Fridge 2, simply exit and restart the app. This will take you back to the home screen, where you can select which fridge you want to connect to.

Two users cannot connect at the same time. Please disconnect app if wanting to use app on a different device.

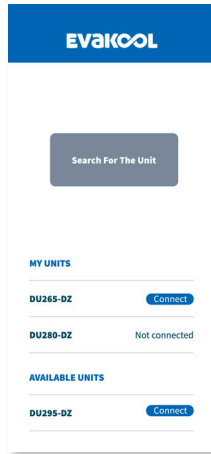

11. Product Data


SPECIFICATIONS			
Model No.	DU265-DZ	DU280-DZ	DU295-DZ
Basic Data			
Ambient Temperature Rating	43°C		
Temperature Range	+10°C to -18°C		
Gross Capacity	65	80	95
Power Supply	DC 12/24V		
Insulation Thickness	50mm		
Refrigerating System			
Compressor	SECOP PCB 2.5		
Refrigerant Type	R134a		
Refrigerant Charge	55g	60g	70g
Packing Information			
Net Weight	32kg	35kg	35kg
Product Dimension (LxWxH)	787x448x485mm	967x530x415mm	967x530x470mm

12. Down Under Series II Accessories

Accessories:



Down Under Series II
Insulated Protective Cover

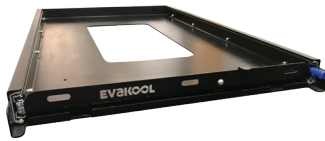

Large Heavy Duty Fridge Slide
to suit 80L & 95L
Small Heavy Duty Fridge Slide
to suit 65L




Infinity Drinkware
Range
Water Bottle, Tumbler,
Can Cooler



EvaPower Heavy Duty
Tie Down Straps





EvaPower Watt Meter

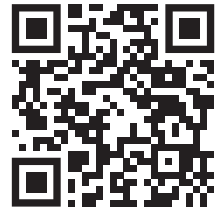



Shop via our website
by scanning the QR
code or by visiting
www.evakool.com.au

13. Product Drawings


DU265

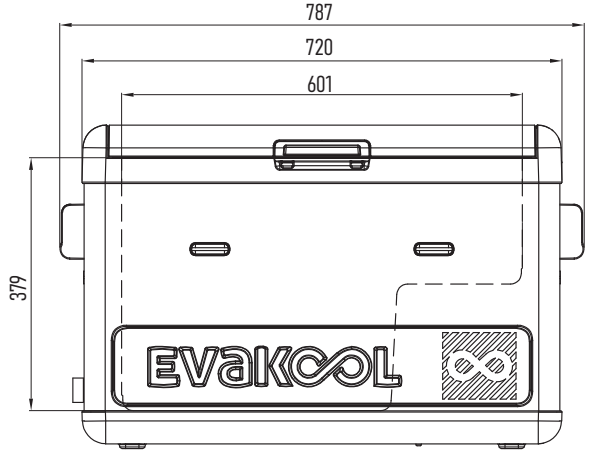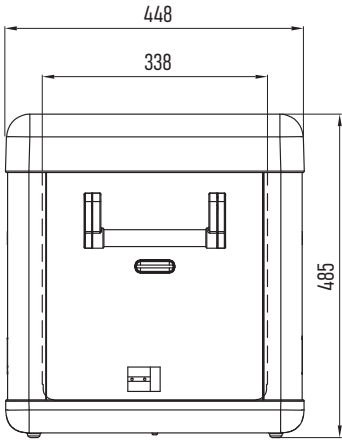

DU280

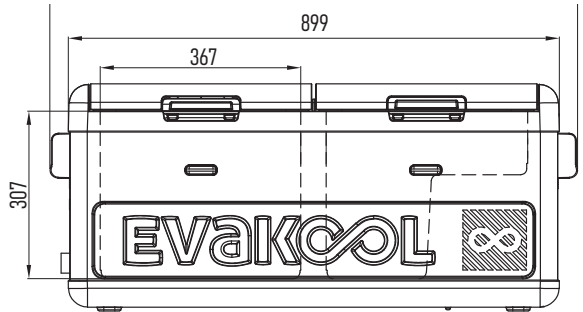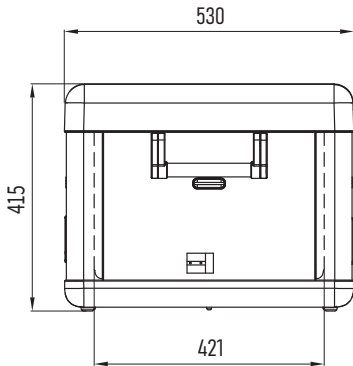

DU295

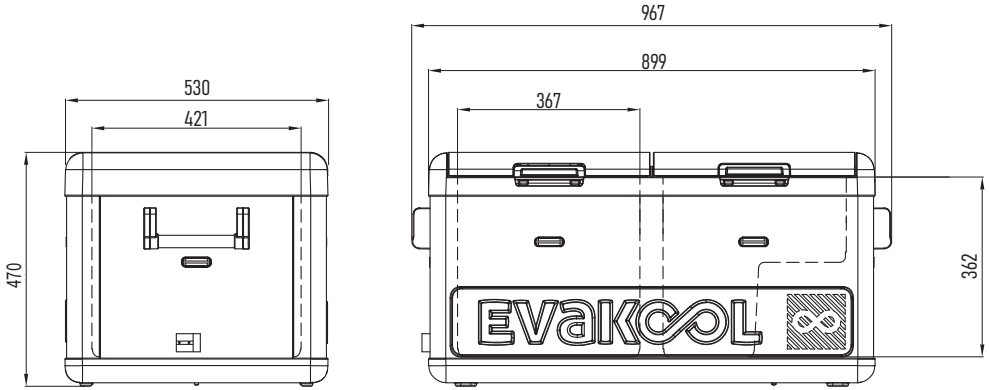

14. Warranty Statement/Terms & Conditions

Nexberg Pty Ltd trading as EvaKool undertakes to the original purchaser that this product is sold free of defect in materials and/or workmanship under normal use for a period of **3 years**. Subject to the following:

- The warranty period commences from the date of purchase by the original purchaser from an authorised EvaKool dealer.
- The Secop compressor in this unit carries a **5 year** warranty under normal use.
- EvaKool will honour this warranty on presentation of proof of purchase of the unit to EvaKool or its approved service agent. The service agent will be requested to provide EvaKool with a photocopy of the proof prior to warranty being honoured.
- EvaKool will not be held responsible for any costs incurred in making a warranty claim.
- Please telephone 1300 385 665 for the name of an authorised service agent or refer to list provided on website (<https://www.evakool.com.au/stores?type=2>). It is the purchaser's responsibility to freight the unit to and from the service agent.
- EvaKool will not be held responsible for any damage or loss suffered or cost incurred whilst fridge is in transit.
- Warranty repairs may only be carried out by an authorised service agent. EvaKool will not reimburse repair claims carried out by unauthorised service agents. Any unauthorised tampering with any part of the unit will automatically void the warranty.
- Service agents may charge a fee for viewing or testing the unit. This is not covered by EvaKool or this warranty and is payable at the service point unless authorised by EvaKool.
- Any EvaKool authorised service agent in Australia will be able to carry out the service of your unit. If a repair needs to be undertaken and is covered in terms of this warranty a warranty authorisation number must be obtained prior to commencement of any work.
- This warranty does not extend to any products acquired for the purposes of re-supply, to be used up or transformed in a production or manufacture process or in repairing other goods.
- This fridge is intended for recreational use only. If used for commercial use, a 12 month warranty applies.
- To the extent permitted by law, this warranty does not extend to any claim for damages that you or any other person may have for any loss (including without limitation consequential damages or loss of profit) or damage howsoever caused.
- **EvaKool will not accept a warranty claim if:**
 1. Modifications have been carried out to the unit without EvaKool's written authority.
 2. Damage to or failure of the unit has been caused in EvaKool's opinion by incorrect, extreme or unreasonable use.
 3. Damage to or failure of the unit has been caused in EvaKool's opinion by misuse, neglect, accident, impact or similar cause. Refer to the preventative maintenance guidelines.
- EvaKool has total discretion of the variation of the warranty terms.
- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
- The above warranty conditions are in addition to any other rights and/or remedies as per the applicable law.
- Failure to follow the guidelines/recommendations in this manual may void the warranty.
- This warranty cannot be varied by others.

Please retain your receipt or proof of purchase for warranty purposes. You can register your warranty online at www.evakool.com.au under contact us and register product warranty.

EVAKOOL®

CHILLED FOR GOOD TIMES

For your nearest stockist contact Evakool

T: 1300 385 665 (1300 EVKOOL)

E: sales@evakool.com

evakool.com.au

For Service and Warranty support contact Evakool

T: 1300 385 665 (EVKOOL)

E: warranty@evakool.com