

Assembly Instructions

Marlboro Swingbed




Thank you for choosing **A&L Furniture Co.**We hope that this piece brings you many years of enjoyment!

For help with assembling your furniture, or if you have missing hardware, please email us at help@aandlfurniture.com or call us at 866-896-5747




STEP 1

Hold the back against the seat. (See photo 1.) Insert a $4\frac{3}{4}$ " bolt through the predrilled holes in the back of the upright pieces on the back. (See photo 2.) Screw them into the seat and tighten with the Allen wrench. Do not fully tighten until the arms are attached.

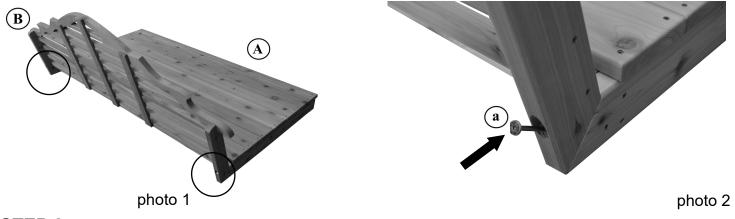


STEP 2

Attach the arms to the seat and back. (See photo 3.) Insert three $2\frac{3}{4}$ " bolts through the predrilled holes in the arms. (See photo 4 & 5.) Screw into the seat and back. Tighten with the Allen wrench.

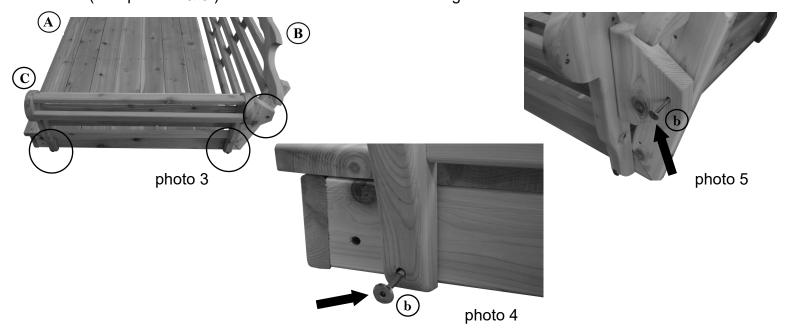

STEP 3

Insert the eyebolts through the predrilled holes in front of the arms on the seat (see photo 6) and above the arms in the back (see photo 7). Now put a washer on each eyebolt and then screw a hex nut onto the eyebolt. (See photo 8.) To do this to the front eyebolts you will have to get someone to lift the front of the seat up for you. Now attach one chain to each eyebolt. (See photo 9.) Use your ½" wrench or socket to tighten the hex nuts on the eyebolts until the opening in the "eye" pulls in against the wood, making it impossible for the chain to slip off. (If you are using ropes, the hex nuts can be fully tightened right away.)

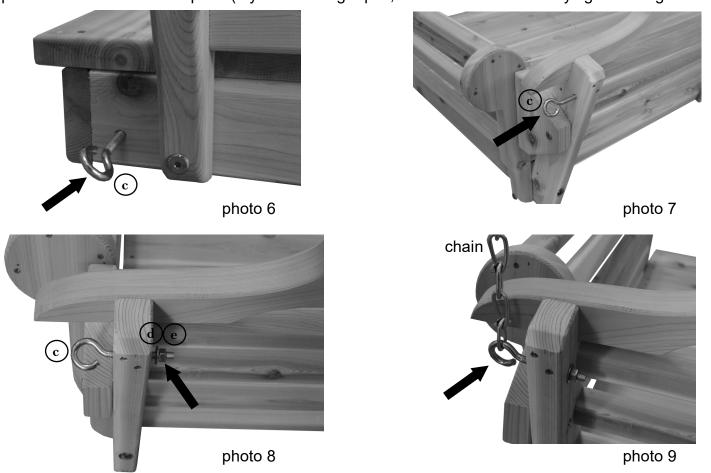

For swingbeds with ropes, put the end of the rope through the eyebolt and make a knot as shown below. Now you are ready to hang the swingbed. Attach the rings on the top end of the ropes to your hooks on the ceiling. (Note: If you are hanging your swingbed on a porch, the swingbed can be hung from 2 points at the ceiling. If the ceiling joists are strong enough. If you are using a pergola, it needs to hang from 4 points.) The ropes have some adjustment. If you ordered the correct size rope kit, you should be able to raise or lower the swingbed to the correct height. To lower the swingbed, push the first loop further up the rope and then hold the top loop (just below the ring) and pull the rope up through that loop. To raise the swingbed, pull the loops the opposite way. The ropes will need to be adjusted to different lengths for the front and back of the swingbed. If the swingbed hangs crooked, adjust the ropes until it hangs straight.

How to make a knot at the eyebolt.





