



Assembly Instructions

Porch Swing



*Thank you for choosing **A&L Furniture Co.***

We hope that this piece brings you many years of enjoyment!

For help with assembling your furniture,
or if you have missing hardware, please email us at
help@aandlfurniture.com or call us at 866-896-5747

PARTS (included)

(A) Swing Seat (1)

(B) Back Rest (1)

(C) Left Arm (1)

(D) Right Arm (1)



TOOLS NEEDED

1/2" Wrench or Socket

HARDWARE (included)

1/4" x 4 3/4" Bolts (2) (a)

1/4" x 2 3/4" Bolts (2) (b)

1/4" x 2" Bolts (2) (c)

5/16" x 4" Eyebolts (4) (d)


Flat Washers (4) (e)

5/16" Hex Nuts (4) (f)

Allen Wrench (1) (g)



Swing Chain (2) (h)

or Rope (4)

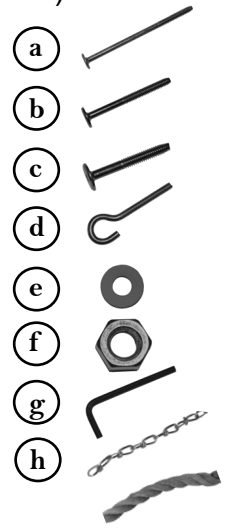



STEP 1

Attach back rest to the swing seat. (See photo 1.) Insert 4 3/4" bolts through the predrilled holes in the back rest and screw them into the metal inserts in the swing seat. (See photo 2.) **Do not fully tighten before Step 2.**

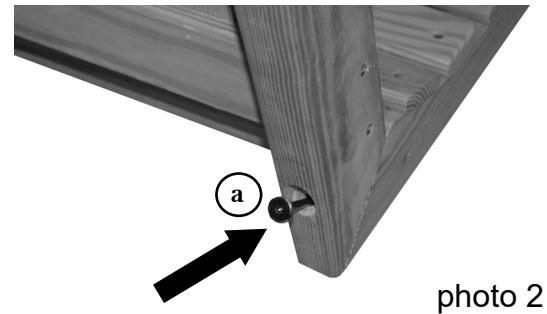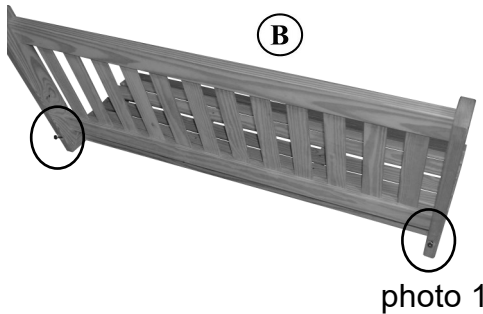


STEP 2

Attach the arms using 2 3/4" bolts to the seat and 2" bolts to the back. (See photos 3 and 4.) Once everything is attached and all the bolts are started you can tighten everything using the Allen wrench.

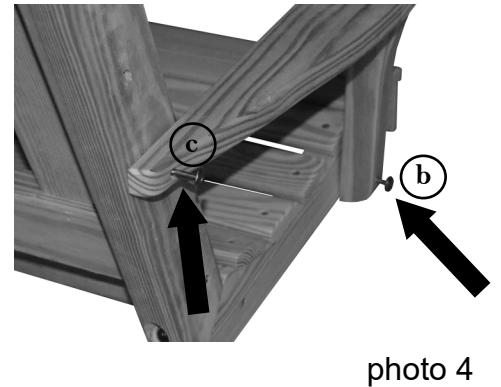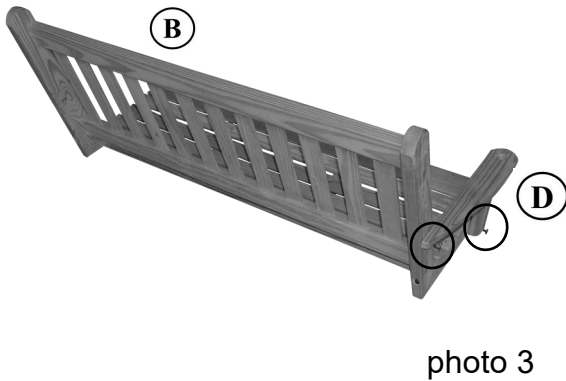

STEP 3

Now you need to put one eyebolt in the back rest and one in the seat on each end of the swing. (See photo 5 & 6.)

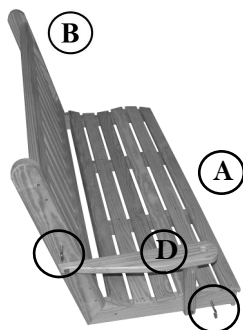

STEP 4

The holes for the eyebolts are not pre-threaded; you will need to use washers and nuts as shown (photo 7). Hook the chain onto the eyebolts (photo 7). The short part of the “V” in the chain (photo 8) goes to the back rest; the longer part goes down through the arm (photo 9) to the seat. Once you have the chain properly hooked on the eyebolts you need to tighten the nuts on the eyebolt using ½” wrench or socket. Tighten until the open end of the eyebolts pull in against the wood making it impossible for the chain to slip off.



photo 7

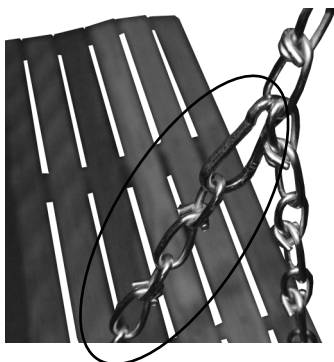


photo 8

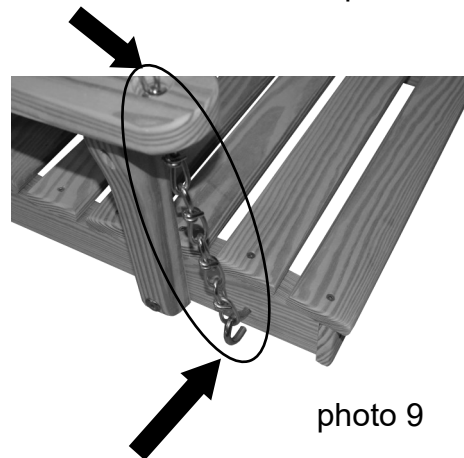


photo 9

If you bought rope instead of chain with your swing see Step 5 and 6 below on how to attach.

STEP 5

Attach the rope to the swing. Take a rope, put the end through the hole in the armrest, & through the eyebolt below the arm. Pull on through the eyebolt & make a knot in the end of the rope. (See photos below.) Attach another rope to the eyebolt in the back assembly the same way then repeat on other side. The swing is now ready to hang. Hook the rings on hooks at the ceiling or if you purchased comfort springs hook the rings on one end of the springs and hook the other end of the springs to the ceiling. The two ropes on one side of the swing can hook on the same hook for hanging.

STEP 6

You will now need to adjust the ropes until the swing is at the desired height. The ropes are all fully adjustable. To lower the swing push the bottom loops on the end of the rope further up the rope then hold the top loops with one hand & pull the end of the rope up through the loops. To raise the swing pull the rope through the loops in the opposite direction. The ropes attached to the front of the swing will need to be adjusted to a different length than the ropes attached to the back. If the swing hangs crooked adjust the ropes accordingly until it hangs properly.

How to make a knot:

