

CONTENTS

1.Specifications	1
2.Package List	2
3.Safety Instructions	
3.1 Usage	2
3.2 Personal Precautions	3
3.3 Disposal Guide	4
4.Product Features	
4.1 Product Details	5
4.2 LCD Screen Introduction	5
5.Product Operating Instructions	
5.1 Power & Function On/Off	6
5.2 Recharge Methods & Recharge Time	7
5.3 Battery Capacity Expansion	8
5.4 Use of LED Flashlight	8
6.FAQs	9
7.Troubleshooting	11
8.Storage & Maintenance	11
9.Warranty	12
10.Contact Us	13

1.Specifications

General Info

Product Name	Jump 1800 Power Station
Net Weight	17.5KG(38.5 lbs)
Dimensions	360*270*280mm (14.2*10.6*12 inch)
Certification	FCC, RoHS, UN38.3, CE

Battery Info

Capacity	1548Wh
Battery Type	LiFePO4
Cycle Life	3000 cycles to 80%

Output Ports

AC (x3)	1800W in total(Peak 3600W), 110V~60Hz, Pure Sine Wave
USB-A (x3)	5V=2.4A, 12W Max per port
USB-A QC 3.0 (x1)	5V=3A, 9V=2A, 12V=1.5A, 18W Max
USB-C (x2)	5V=3A, 9V=3A, 12V=3A, 15V=3A, 20V=3A, 20V=5A, 100W Max per port
DC5521 (x2)	12V=10A, 120W Max in total
Car Charger (x1)	12V=10A, 120W Max in total


Input Ports

DC5521 (x2)	DC12-60V (400W Max in total)
-------------	------------------------------


Environment Operating Temperature

Operating Temperature	-20°C~55°C (-4°F to 131°F)
Charging Temperature	0°C~55°C (32°F to 131°F)


2.Package List

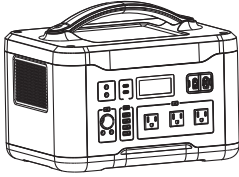


Jump 1800 Power Station



Car Charger Cable

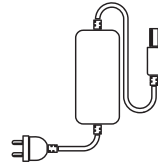


AC Charger & Charging Cable



USB-C to USB-C Cable



USB-A to USB-C Cable



User Manual

No.	Item	Qty.	Specification
1	Jump 1800 Power Station	1	110V/1800W
2	AC Charger & Charging Cable	1	36.5V/9A, 330W Max
3	USB-C to USB-C Cable	1	/
4	USB-A to USB-C Cable	1	/
5	Car Charger Cable	1	Cigarette lighter to DC5521
6	User Manual	1	English version

Please kindly check all accessories are complete. If any parts missing, please feel free to contact us at service.us@vtoman.com.

3.Safety Instructions

3.1 Usage

When using this product, basic precautions should always be followed, including the following:

- 1.Read all the instructions before using the product.
- 2.To reduce the risk of injury, close supervision is necessary when the product is used near children.

3. Do not put fingers or hands into the product.
4. Use of an attachment not recommended or sold by power pack manufacturer may result in a risk of fire, electric shock, or injury to persons.
5. To reduce risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the power pack.
6. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
7. Do not operate the power pack with a damaged cord or plug, or a damaged output cable.
8. Do not disassemble the power pack, take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
9. To reduce the risk of electric shock, unplug the power pack from the outlet before attempting any instructed servicing.

3.2 Personal Precautions

1. Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
2. Wear complete eye protection and clothing protection. Avoid touching eyes while working near battery.
3. If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with running cold water for at least 10 minutes and get medical attention immediately.
4. NEVER smoke or allow a spark or flame in vicinity of battery or engine.
5. Be extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause explosion.
6. When charging the internal battery, work in a well ventilated area and do not restrict ventilation in any way.
7. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.


- Liquid ejected from the battery may cause irritation or burns.
8. Do not expose a power pack to fire or excessive temperature. Exposure to fire or temperature above 265°F(130°C) may cause explosion.
 9. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

3.3 Disposal Guide


1. If conditions permit, make sure that the battery is fully discharged before disposing it in a designated battery recycling bin. The product contains batteries with potentially dangerous chemicals, so it is strictly prohibited to dispose of it in ordinary trash cans. For more details, please follow the local laws and regulations on battery recycling and disposal.
2. If the battery cannot be fully discharged due to a product failure, please do not dispose of the battery directly in the battery recycling box. In such case, you should contact a professional battery recycling company for further processing.
3. Please dispose of over-discharged batteries that cannot be recharged.

4. Product Features

4.1 Product Details

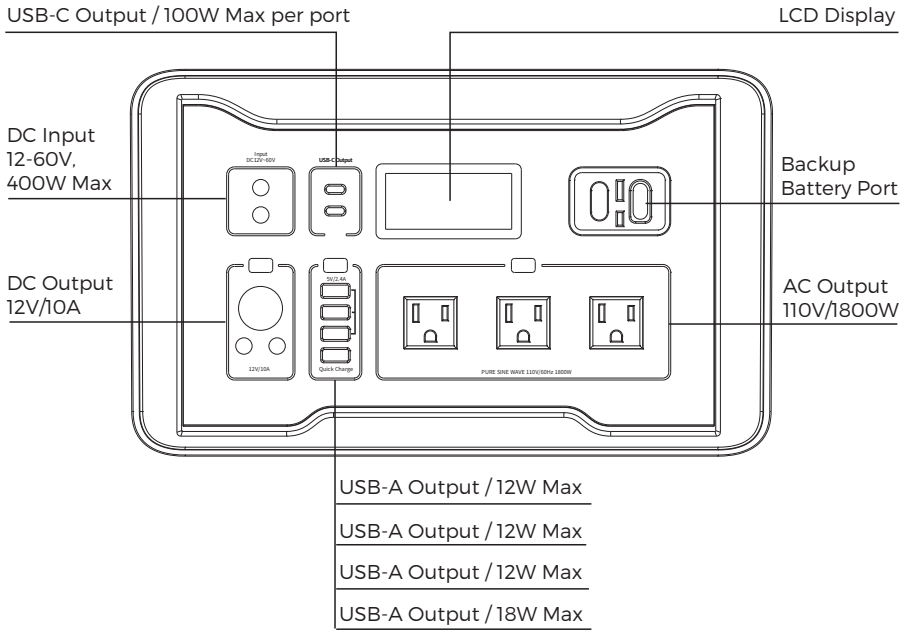

4.2 LCD Screen Introduction

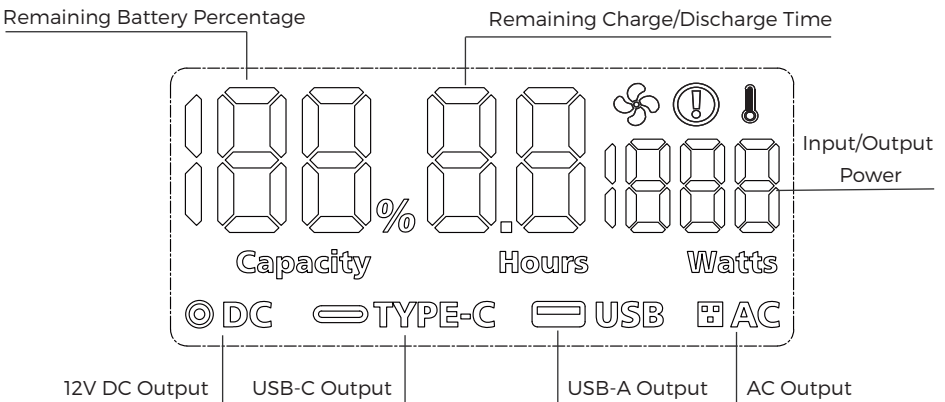

5.Product Operating Instructions

5.1 Power & Function On/Off

1.Power On: Short press any button to power on the product and enter the standby state, the LCD Screen will light up and the battery level indicator icon will display.

2.Power Off: Turn off all outputs manually, then the product enters the standby state and will shut down after 30 minutes.

3.AC Output On/Off: Short press the AC Button to use the AC output; Short press the AC Button again to turn if off.

4.DC Output On/Off: Short press the DC Button to use the 12V DC output; Short press the DC Button again to turn if off.

5.USB-A & USB-C On/Off: Short press the USB Button to use the USB-A & USB-C output; Short press the USB Button again to turn if off.

Warm Tips:




1.Auto Shut-off Feature: When any output switch of the battery is turned on, the battery will maintain continuous output for 6 hours. After 6 hours, the battery starts to detect the load current and lasts for 2 hours. There are three situations as follows:

- 1) If no load is detected within 2 hours, the battery will automatically shut down;
- 2) When the load is detected within 2 hours, the battery will continue to output;
- 3) If it is detected that the load is turned on and then turned off within 2 hours, the load detection will be restarted for 2 hours after the load is turned off.

2.V-Beyond Technology: It allows you to run devices over 1800 watts but no more than 3600 watts on Jump 1800 power station. It would lower the output voltage to bring the power back down without tripping the overload protection, so that yo can continue to run those devices. It's suitable for resistive loads such as lights, space heaters, toasters, ovens, and coffee makers, etc. But please note that it's NOT suitable for complex electronics such as computers, TVs, refrigerators, etc.

5.2 Recharge Methods & Recharge Time


1.Recharge Time

 Wall Charger	 Car Charger	 400W Solar Panel
4 Hours	9-13 Hours	4-8 Hours

Warm Tips: Before use, please plug your Jump 1800 power station into the wall until it is fully charged.


2.Recharge by Wall Charger

You can use the wall charger that comes in the package to recharge the Jump 1800 power station. The recharging time is about 4 hours.

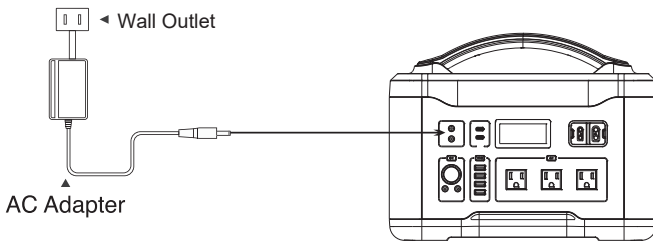


3.Recharge by Car Charger

You can recharge the Jump 1800 power station through the DC Input Port with a car charger. Jump 1800 supports 12V car chargers, and the recharging time is about 9-13 hours.

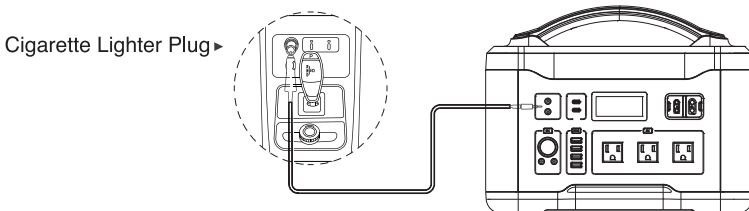

4.Recharge by Solar Panel


You can connect a Vtoman VS400 400W Solar Panel to recharge Jump 1800 power station, the recharge time is about 4-8 hours (depending on sunlight intensity).

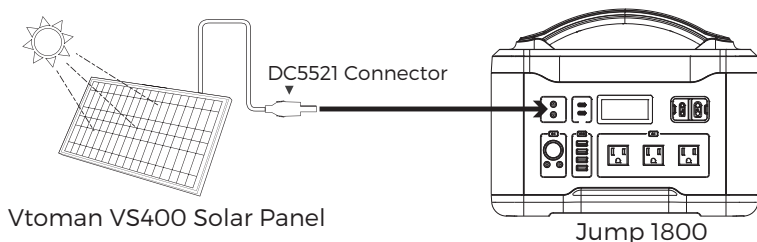


If connecting with your own solar panel, please make sure the working voltage of the solar panel is between 12-60V to recharge properly.

5.3 Battery Capacity Expansion

Vtoman Jump 1800 Portable Power Station can expand its battery capacity from 1548Wh to 3096Wh with Jump 1500 Extra Battery(Sold separately), so that it can power your devices for a longer time.

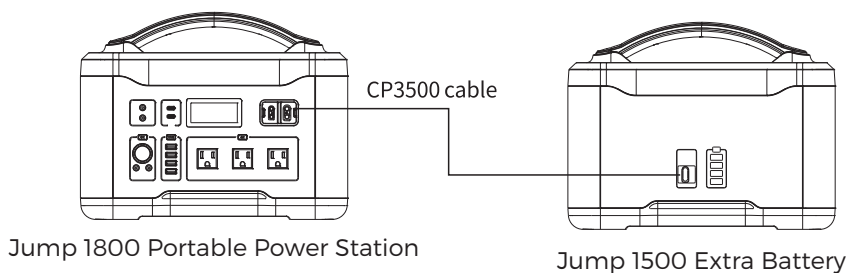

To expand the battery capacity, you just need to connect the Jump 1800 Portable Power Station to the Jump 1500 Extra Battery with a CP3500 cable.



The CP3500 cable will get hot during work, please DO NOT touch the CP3500 cable in avoid of scalding!

5.4 Use of LED Flashlight

The Jump 1800 Power Station features a LED flashlight with 5 mode. Please follow the instructions below to enter different modes:

(1)Weak Light Mode: Short press the LED button on the power station to turn on the light, it enters the weak light mode;

(2)Medium Light Mode: Press the LED button twice to enter medium light mode;

(3)Strong Light Mode: Press the LED button three times to enter strong light mode;

(4)Strobe Mode: Press the LED button four times to enter strobe mode;

(5)SOS Mode: Press the LED button five times to enter SOS mode. Press the LED button again to turn the light off.

6.FAQs

1. What devices can the Jump 1800 power?

With 1800W rated power and 3600W peak power, Jump 1800 can normally power devices with rated power no more than 1800W. Besides, with Vtoman's V-Beyond Technology, Jump 1800 can run resistive loads over 1800 watts but no more than 3600 watts such as lights, space heaters, toasters, ovens, and coffee makers, etc.

2.How to know the working time for my device?

Working time= $1548\text{Wh} \times 0.85$ / operating power of your device.

3.How long can Jump 1800 charge my devices?

The charging time is shown on the product's LCD Screen, which can be used to estimate the charging time of most appliances with stable power usage.

4.Can the Jump 1800 be charged while using?

Yes, Jump 1800 supports pass-through charging. You can recharge the power station while charging your device.

5.Can the Jump 1800 be used as a UPS?

No, the Jump 1800 can't be used as UPS, because you need to press the button manually to turn on the AC/DC/USB output, it cannot turn on automatically.

6.Are the DC output ports regulated 12V?

Yes, 2 DC5521 output ports and 1 cigarette lighter are regulated 12V voltage, the specifications are 12V/10A, the maximum output power is 120W in total (single port is 120W Max; 3 ports are also 120W Max in total).

7.What kind of solar panel does Jump 1800 support?

To charge Jump 1800 properly, the solar panels need to meet the following requirements:

1)The working voltage of solar panel is between 12V-60V;

2)The solar panel has a DC5521 adapter(or converted into a DC5521 connector). For example, some solar panels come with MC4 interface, then you just need to use an MC4 to DC5521 adapter cable to convert.

Warm Tip: It's recommended to use our Vtoman VS400 400W solar panel to recharge Jump 1800 power station for better charging experience.

8. Does Jump 1800 has MPPT feature?

Yes, all Vtoman power stations are built-in MPPT feature. You don't need to use an extra MPPT controller to connect the Jump 1800 power station with your solar panel.

7.Troubleshooting

Problem	Cause	Solution
No output power	Your device is not connected to the power station well.	Connect your device to the power station well.
	Output switch is not turned on.	Turn on the output switch manually.
	Battery is low.	Recharge the power station fully before use.
Output breaks down during use	Your device's operating power is too low, causing the product turns off automatically.	Please turn on the power again.
Product cannot charge	Charger is not well connected to the power station or wall outlet .	Please make sure all connections are well.
	Connection is well, but the charger indicator is off. Charger is broken.	Please contact with Vtoman customer service.

8.Storage & Maintenance

- 1.Before storing, please turn off the product first, and then store it in a dry, ventilated place at room temperature, away from water, heat, and other metal objects.
- 2.For long-term storage, please discharge the battery to about 60%-80% before storing, and recharge it every 2 to 3 months to extend its battery life.
- 3.When using the battery every day, it is recommended to charge the battery to about 90% when charging, and leave about 10% when discharging.

4. Please use or store the product in an environment temperature between 68°F to 86°F. For safety, please do not store the product in an environment temperature higher than 113°F or lower than 14°F for a long time.

5. To clean the product, please gently wipe it with a dry, soft, clean cloth or paper towel.

9. Warranty

Note: We only provide the warranty for the consumer who purchased our products through Amazon or Vtoman website.

VTOMAN warrants to the original consumer that Vtoman products will be free from defects in workmanship and materials under normal use during the applicable warranty period as determined in the "Warranty Period" section below, subject to the "Exclusions" clause below.

Warranty Period

The warranty period of the VTOMAN portable power station is 24 months. Consumers need to provide a sales receipt for the first purchase or other reasonable documentary proof to determine the start date of the warranty period. Under normal circumstances, the warranty period is calculated from the date of purchase by the original consumer.

Exchange

If VTOMAN products cannot be operated due to defects in workmanship or materials during the applicable warranty period, Vtoman will provide free replacement, and VTOMAN will bear the freight. In addition, the replacement product will bear the remaining warranty period of the original product.

Refund

VTOMAN provides a 30-day money-back guarantee for products purchased directly from VTOMAN. If you are not satisfied for any reason, just let us know within 30 days. Once we receive the product and confirm its validity, we will refund the full amount. Please check before returning: (1) You purchased the product directly from VTOMAN ; (2) You contact Vtoman and start the return process within 30 days of the original delivery date; (3) The product is returned in its original packaging, including all materials, in a new or as-new state.

Exclusions

VTOMAN's warranty does not apply to:

1. Misuse, abuse, modification, accidental damage, or use for any other purpose other than those authorized in the current product information of VTOMAN;
2. Attempt to repair by anyone outside the authorized organization;
3. Appearance damage due to using;
4. Non-original consumer purchasers;
5. The VTOMAN warranty does not apply to battery cells.

Contact Us

If you have any questions during using Vtoman products, please feel free to contact with us at service.us@vtoman.com.



華佳商事 株式会社

CE FC RoHS



MADE IN CHINA