

LYNGDORF AUDIO MP-60 2.1

OWNER'S MANUAL

TABLE OF CONTENTS

Compliance	7
WEEE	7
FCC	7
Introduction	8
Pre-Installation	9
Unpacking the Product	9
Inventory	9
Operating Voltage	9
Ventilation Requirements	9
Home Automation System Integration	10
IP Control	10
Preparing for Mounting in a Rack	10
Rear Panel	11
Remote Control	12
How to Pair Remote Control in RF Mode	13
Switching Remote Between RF and IR Mode	13
Getting Started (details in following chapters)	14
Installation via Installer Menu	14
Installation via Web Interface	14
Home Screen	16
Setup	18
Source Setup	18
Add / Edit Source	18
Source name	18
Lipsync offset (ms)	18
Volume offset (dB)	18
Audio input	18

Default postprocessing	19
Default voicing	19
Video input	19
Trigger out	19
Preset vTuner station	19
Arrange Sources	19
Delete Source	19
Speakers and Room	19
Speaker setup	20
Channel Designation	21
Subwoofers:	21
Low level speakers:	21
Speakers designated according to Dolby ATMOS and DTS:X specifications:	21
Speakers designated according to AURO 3D specifications:	21
LFE Channel cut-off	22
Dialog boxes for speaker options	23
Speaker Size and Bass Cutoff Frequency	24
Gain	24
Amplifier Delay	25
Natural Roll-Off	25
Bi-Amping	25
Dolby Enabled Speakers	25
Subwoofer options	26
Left and Right Sub	26
LFE and Transducer Sub	27
Gain	27
Amplifier Delay	27
Verify Speakers	27
Adjust Sub	27
Channel Gain	28

RoomPerfect™	28
Global filter	28
Focus position	28
How to Set Up RoomPerfect™	28
Initial setup	28
How to measure distances to speakers and subwoofers	28
When measuring distances to in-room subwoofers:	29
When measuring distances to in-wall subwoofers:	29
RoomPerfect™ Preparations	29
Placing the Microphone in the Focus Position	30
Volume Setting	30
Measuring the Focus Position	30
Measuring Random Room Positions	30
Room Measurements Above 90% RoomKnowledge	32
Calculation of Focus and Global Filters	32
System Configuration	32
General Setup	32
Power management	32
Default volume settings	32
Set startup volume	32
HDMI CEC settings	32
Display timeout	33
Password protection	33
Show bypass	33
Enable front IR sensor	33
Trigger Setup	33
Trigger In Setup	33
Trigger Out Setup	33
Network Setup	35
Connecting to MP-60 2.1 with a Network Cable	35

Set Up a Fixed IP Address in Windows 7	36
Set Up a Fixed IP Address in Windows Vista or Windows 10	37
Streaming Setup	37
Streaming Playback	37
AirPlay	37
Spotify Connect	37
UPnP	37
USB	38
vTuner	38
Video Setup	39
Video Output	39
Set the main video output of your device	39
Default Video source	40
HDMI Audio out	40
Video Input	40
Video Settings	40
Audio	41
HDMI Bandwidth	41
Zone B Setup	41
Audio Setup	41
Audio Processing	41
Voicing Setup	42
Exporting and Importing Voicings	42
Edit or delete voicing	43
Add new voicing	43
Replace all voicings from file	43
Creating Voicings	43
Manage Software	44
Download system log	44
Backup	44

Restore	45
Factory Reset	45
Update Software	45
Update from Remote Files	45
Update from Local Files	45
Via web interface:	45
Troubleshooting	46
RoomPerfect™	46
Error Messages	46
No microphone connected	46
Fault – No signal	46
Fault – Signal clipping	46
Fault – Low signal	46
Can't Turn On Via LAN or Control System	47
Retrieving and Sending an Error Log	47
3D Compatibility Not Detected	47
Remote Control Doesn't Work	47
Trademarks	48
Service Information	48

Compliance

WEEE

The European Parliament and the Council of the European Union have issued the Waste Electrical and Electronic Equipment Directive. The purpose of the Directive is to prevent waste of electrical and electronic equipment and to promote reuse, recycling, and other forms of waste recovery.

Lyngdorf products and the accessories packed with them are subject to the WEEE Directive.

Please dispose of any waste materials in accordance with your local recycling regulations.

Products and equipment which must be collected for reuse, recycling, and other forms of recovery are marked with the icon of the crossed-out waste receptacle.



FCC

Lyngdorf products and accessories comply with parts 15 and 68 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference received, including any interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Equipment marketed to a consumer must be capable of complying with the necessary regulations in the configuration in which the equipment is marketed.

Introduction

The MP-60 2.1 is an advanced Surround Sound, Preamplifier / Processor with full support of the latest Dolby® Atmos, DTS:X PRO and Auro-3D® surround sound formats. The processor can decode 16 discrete channels from the source and features 16 balanced XLR outputs for the discrete channels or additional subwoofer outputs. Whatever your setup is, the MP-60 2.1 will provide the optimal performance due to its bass-management and room correction system, RoomPerfect™.

Both Dolby, DTS and Auro provides modes for processing legacy surround formats or for upmixing the sound into all your speakers. This is referred to as POST PROCESSING, and it can be set on a Source or controlled from your remote control.

The MP-60 2.1 will support any setup from the simplest stereo setup to the most advanced 3D surround setup, and we have made great efforts for having a simple user interface, where all settings are displayed and arranged for easy installation.

Optional modules will allow for digital integration with the most advanced media sources and/or digital distribution of the output signals.

Please read through this manual for understanding the functions available – or as later reference. The latest version of this manual is available for download from www.lyngdorf.com

Enjoy!

Pre-Installation

Please read all material carefully prior to installation. If you need additional assistance, contact your Lyngdorf Audio representative or visit Lyngdorf.com.

Unpacking the Product

Carefully remove the unit and accessory kit from the carton and check for shipping damage. Contact the shipper and your Lyngdorf Audio representative immediately if the unit bears any sign of damage.

Note: Keep the shipping carton and all packing material for future use. If this unit is shipped for service without the original packing, damage could occur and void the warranty.

Inventory

Check the list below to ensure that all necessary product components have been delivered. Report all discrepancies to your Lyngdorf Audio representative immediately.

Owner's manual
Power cord
Remote
Microphone
Microphone stand
Microphone cable
Rack ears

Operating Voltage

Lyngdorf Audio products must be connected to the mains power system only. The MP-60 2.1 will automatically detect voltages between 100-240V.

Ventilation Requirements

The MP-60 2.1 does not have a built-in fan, nor does it require special measures to ensure proper heat dissipation. It should be placed according to these guidelines:

It should always have at least one inch / 25mm of free space on all sides.

It should be placed in an environment free of excessive heat.

In a rack system, the MP-60 2.1 should be placed at the bottom of the rack, still with at least one inch / 25mm free space on top and sides.

Home Automation System Integration

The MP-60 2.1 is compatible with home automation systems via the RS232 and network connector on the rear socket panel. The MP-60 2.1's IR and trigger connections can also be programmed for use in a home automation system.

IP Control

Connect the MP-60 2.1 to your local network and access the MP-60 2.1 by going to <http://mp60.local> in your browser.

Pressing the OK button on the remote and toggling through the information, you will see the IP address allocated to the MP-60 2.1.

Open a TCP connection on port 84 and use the same protocol as on the serial interface. Use Telnet, Putty, or a similar program to open the TCP connection.

If you do not know the IP address of the MP-60 2.1 on your local network, the MP-60 2.1 supports Apple's Bonjour Discovery service, which must be on the computer with which you wish to set up the MP-60 2.1. The software is built-in as part of the Apple OS X operating system (not iOS devices). For Windows operating systems, the software can be found at <http://www.apple.com/support/bonjour/>

Preparing for Mounting in a Rack

The MP-60 2.1 processor is equipped from the factory with feet for free-standing placement.

To install the MP-60 2.1 in a rack:

Turn the MP-60 2.1 upside-down and place it on a stable, even surface.

The screws used to fasten the rack brackets to the bottom of the MP-60 2.1 are in the holes designated for the brackets when the product leaves the factory.

Fasten the brackets for rack mounting to the MP-60 2.1.


If so required, the feet can be removed

Mount the MP-60 2.1 in a rack.

Note: A rack mount kit is available for achieving a cleaner 4U rack-size (item # 900008201)



Rear Panel

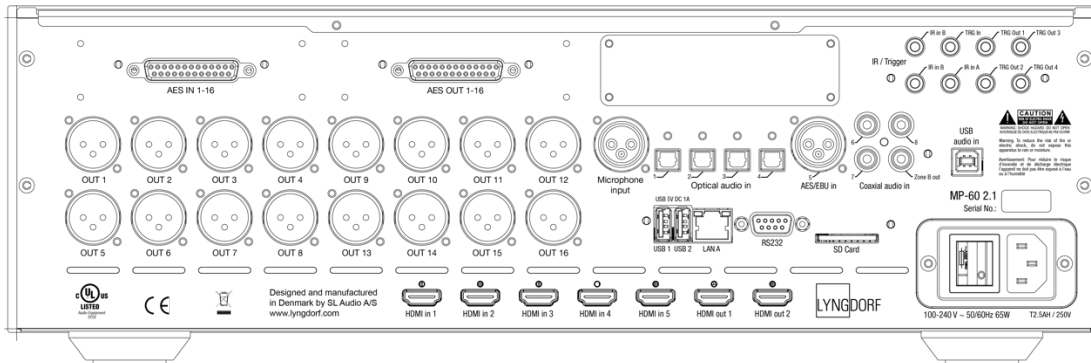

- On the back of the MP-60 2.1, you will find a range of inputs and outputs:
- 16 x XLR, Differential balanced audio outputs (configured for 7.1.4 plus 4 auxiliary)
 - 5 x HDMI inputs and 2 x HDMI outputs, eARC on HDMI OUT 1
 - 2 x USB A connectors, for music file playback, backup, software updating, etc.
 - 1 x Streaming USB B audio input
 - 1 x RJ45 Network connector (LAN/Ethernet)
 - 1 x Microphone input for the RoomPerfect™ room correction microphone
 - 1 x SD card slot for storing backup data
 - 3 x Inputs from external IR receivers (IR remote control)
 - 1 x Trigger input and 4 x trigger outputs
 - 1 x RS-232 connector for serial control of the unit
 - 1 x DB-25 16 channel DCI-compliant AES3 digital input (optional upgrade)
 - 1 x DB-25 16 channel DCI-compliant AES3 digital output (optional upgrade)
 - 1 x RJ45 16 channel AES67-compliant digital input/output (optional upgrade)
 - 4 x Optical, 1 x AES/EBU and 3 coaxial digital audio inputs
 - 1 x Coaxial digital audio output – stereo for Zone B

Notes:

HDMI 2.1 has a higher bandwidth and requires HDMI 2.1 8K compliant cables. Please check that the cable is HDMI certified with a “HDMI 2.1 Ultra High Speed” label. Using optical HDMI cables will require using a USB connection for power supply, as the HDMI connector provides max. 5V/50mA. Please check that the cable is HDMI certified.

Differential balanced output connection means PIN 1 is Shield/Ground, PIN2 holds audio signal and PIN 3 holds an inverted audio signal. If your power amplifier requires a single ended (RCA) connection, you must ensure that the PIN 3 is disconnected (lifted). PIN 3 in the MP-60 2.1 connector may not be connected to ground.

Remote Control

The MP-60 2.1 comes with a dedicated remote control, which can operate both with radio frequencies (RF) and infrared control (IR).

Setup	Access the installation menu.
Standby	Turn the MP-60 2.1 on and into standby.
Audio	Access the post-processing menu.
Trim	Access to miscellaneous audio adjustments.
Up/Down	Move up and down in menus. Browse available settings in a menu. Toggles between the available RoomPerfect™ filters.
Left/Right	Move left and right in menus. Toggle between neutral and the available voicings.
OK	Activate the info screen, indicating the status of the unit. Select a menu and store a selected setting.
Back	Return to the previous menu.
Menu	Access the user menu.
SRC	Access the source menu list.
Source +/-	Toggle between active sources.
Volume +/-	Turn volume up and down.
Mute	Mute and restore the sound.
Play/Pause	Play/pause the currently playing track in the media player.
Skip Forward / Skip Backwards	Skip in the current playlist in the media player.



How to Pair Remote Control in RF Mode

The MP-60 2.1 remote has both an IR and RF mode, and is by default set to IR.

To pair the RF remote control to the MP-60 2.1:

Turn on the MP-60 2.1.

Hold down Play/Pause and OK until the remote control's green LED flashes.

Release the buttons.

Point the remote control at the MP-60 2.1 and hold it within 30 cm / 1 foot of the front panel. When the green LED stops blinking, the remote is connected.

The remote is now RF paired to the MP-60 2.1.

To reset the pairing of the remote control, press Back and OK until the red LED flashes twice.

Switching Remote Between RF and IR Mode

To switch the remote from IR to RF mode, hold down OK and 2. The LED will flash green twice.

To switch the remote from RF to IR mode, hold down OK and 1. The LED will flash red twice.

If you press a button on the remote and the red LED at the top turns on, then you are in IR mode. If it turns green you are in RF mode.

Getting Started (details in following chapters)

Setting up the MP-60 2.1 surround sound processor requires either a network connection or a HDMI connection to a screen by following these steps:

Connect the speakers to the power amplifiers.

Connect all external equipment, audio & video, home automation system, mains power, etc. to the MP-60 2.1.

Switch on the MP-60 2.1 mains connector on the back and all connected equipment.

Turn on the MP-60 2.1.

Access the setup menu via the web interface or press Setup on the remote for having the Menu on the connected screen.

Go to “Speaker and Room” and set the parameters for your speakers.

Connect the amplifiers to the correct outputs now specified in the menu.

Select and click “Verify speakers” to check that speakers and amplifiers are correctly connected.

Adjust level(s) on your subwoofer(s) using the “Adjust Sub” feature in the menu.

Measure and enter the distances to all speakers.

Run the RoomPerfect™ Guided Setup.

Set up sources, audio preferences, stand-by state, Zone B, etc.

Save and make a backup of the calibration and settings.

Installation via Installer Menu

Connect a screen to the MP-60 2.1 using any of the video output sockets on the back. Access the menu system by pressing the Setup button on the remote control.

There are some differences between how the web interface and the Installer Menu. This manual describes how to set up via the installer Menu interface.

Installation via Web Interface

You will need a computer, and the MP-60 2.1 must be connected to a router of an existing network.

If you do not know the IP address of the MP-60 2.1 on your local network, the MP-60 2.1 supports Apple’s Bonjour Discovery service, which must be on the computer with which you wish to set up the MP-60 2.1. The software is included in the Apple MAC OS operating system (not iOS devices).

For Windows operating systems, the software can be found at

<http://www.apple.com/support/bonjour/>

Access the web menu by typing <http://mp60.local/> in your browser. Or

Press the OK button on the remote. Toggling through will display the IP address. Or

Download the Lyngdorf Remote application. Under “Settings”, find the MP-60 2.1 connected to the same network as the mobile device and select “Open Device in browser”.

Home Screen

The HOME screen refers to the daily operation as performed with the remote control and displays selected input and formats. This page shows information as to audio and video inputs and formats, and you can control the volume level or Mute the sound. These settings will be reset to default values, when the MP-60 2.1 is turned into stand-by mode.

On the HOME screen, you can switch between signal sources, change Voicings, select RoomPerfect™ focus points, activate Post Processing, Loudness and Lip-sync.

Post Processing allows you to choose between following tools:

Dolby Upmixer: Up-mixes all type of signals to use all existing speakers using Dolby's techniques.

Neural:X: Up-mixes all type of signals to use all existing speakers using DTS' techniques.

Auro-3D Auromatic: Decodes Auro 3D signals and up-mix all type of signals to use all existing speakers using Auro's techniques.

Auro-2D: Up-mixes stereo signals to use surround sound speakers using Auro's techniques.

Auro-Stereo: Downmix of multi-channel signals to stereo using Auro's techniques.

Auro-Native: Decoding of 2D Auro formats – other signals are passed through.


Legacy: Decoding object-based formats as in legacy Dolby or DTS original formats without the height channels.

Stereo: Downmixes multi-channel signals to stereo.

Party: Distributes a full-range signal to all left and right channels.

Loudness management turns on "Late Night" functions dedicated to the specific formats being decoded. These functions are managed individually in the setup menu: Audio Setup / Audio Processing.

Lip-sync settings will delay the sound processing in order to have correct synchronization with the screen images. With a general audio offset, you should adjust the lip-sync on the specific Source settings in the Setup menu.

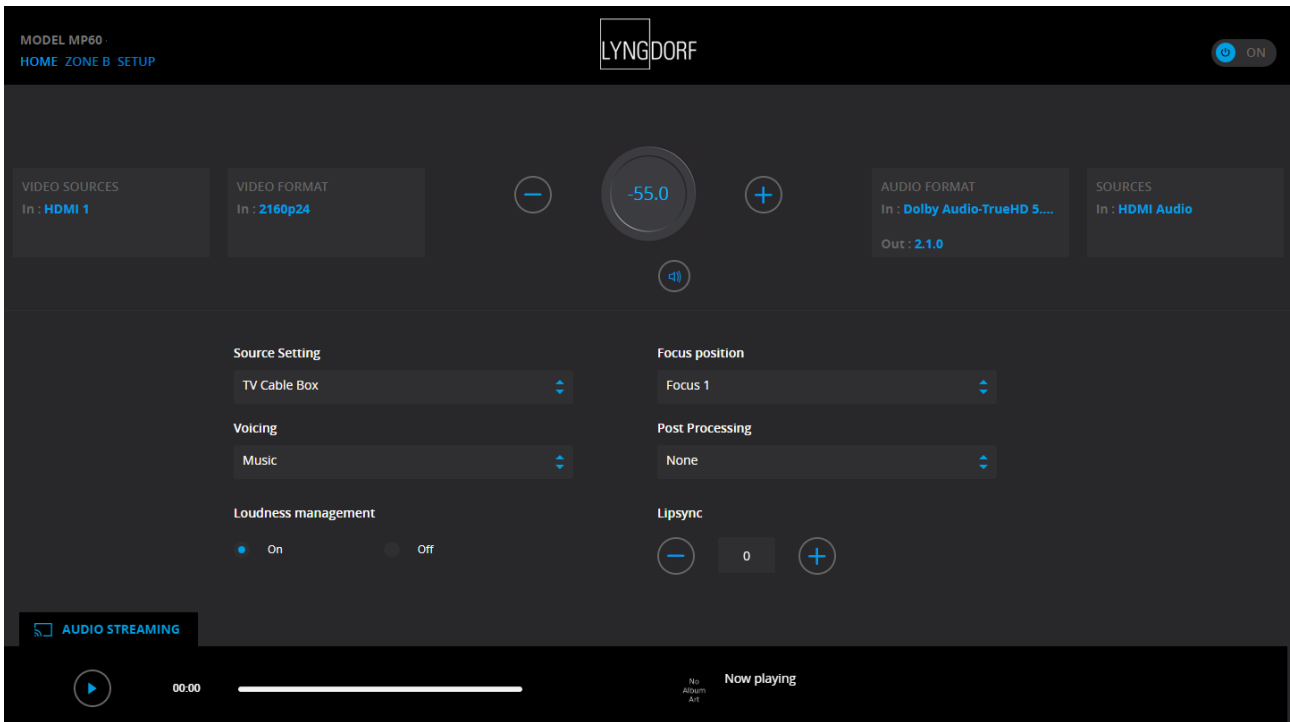


The interface for controlling the built-in media streamer is found in the bottom section of this page. For information as to the use of the interface see section for Streaming Setup.

Setup

The SETUP screen refers to all basic settings and option in the installation of the processor.

Source Setup

In the Source menu, you will find a list related to the input connectors. This register is though very flexible as a Source can be specified to use individual inputs for audio and video. This means that several sources can relate to the same input connectors and vary in relation to the content – like “Action Movie” and “Music Video” being identical in connections, but different in Post Processing settings, Voicing filter and trigger action.

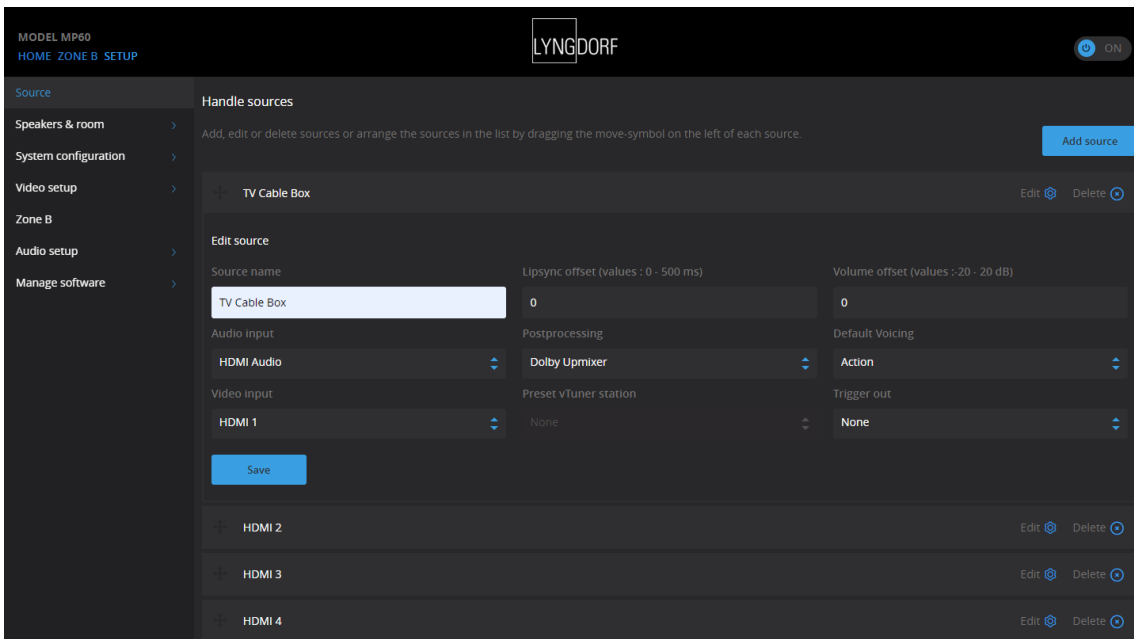

Add / Edit Source

Source name

Input your personal reference for the source.

Lipsync offset (ms)

Set delay time in milliseconds to ensure that the video and audio signals are played back simultaneously.

Volume offset (dB)

Enables you to match input levels from different sources.

Audio input

Select the audio input connector. If you want the audio input to match the video input from an HDMI source, select HDMI Audio. If you want to create a Source using the built-in radio player, you should choose Internal Player, which will activate the selection of Preset vTuner stations.

Default postprocessing

Select the postprocessing mode that you find most suitable for content on this Source.

Default voicing

Select the voicing that you find most suitable for content on this Source.

Video input

Select the input connection for this Source.

Trigger out

Choose which trigger output to activate when using this Source. The interface for controlling the triggers is found in the Trigger Setup under System Configuration.

Preset vTuner station

Selects stored presets of the vTuner Internet radio station. The interface for controlling the built-in media streamer with vTuner is found in the bottom section of the HOME page.

To save changes, you must click “Save” after making changes to each source. Do not go to the next input before saving changes.

Arrange Sources

Change the order through Screen Setup menu by:

Highlighting it.

Moving it out of the stack by pressing right on the remote.

Moving the source by pressing up/down.

Reinserting it by pressing left.

Change the order through website menu by:

Grabbing the  symbols with the mouse and moving this source to the desired position.

Delete Source

Delete an enabled source through Screen Setup by highlighting it and pressing right on the remote.

In the web menu, click the Delete button.

Speakers and Room


You need to configure the MP-60 2.1 according to your speaker setup, setting the sizes of the speakers, so that the Bass Management function can optimize the overall performance. In the setup page the connectors will be highlighted with information as to signal type.

The purpose of the speaker setup is to tell the system which speakers and subwoofers are available and how big the speakers are, which in turn reveals how much bass the speakers are capable of reproducing (Bass cut-off frequency). The bass for each speaker channel is directed to the optimal output.

References to “speakers” in this document are specific to satellite or full-range speakers and do not include subwoofers.

Speaker setup

As factory default the MP-60 2.1 is displaying a 7.1 speaker configuration as shown below:

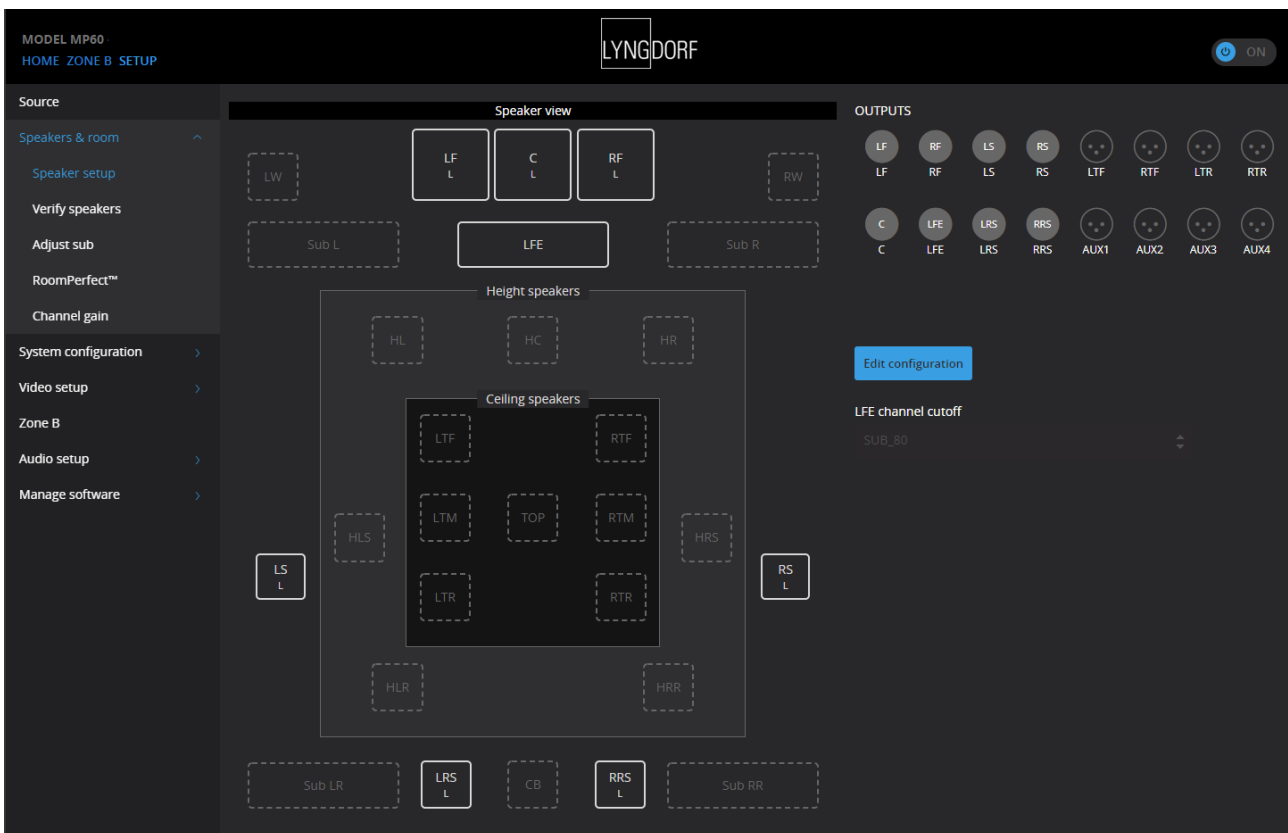

The setup page is an overview of the available speaker outputs.

In order to correct the setup, you click “Edit Configuration”, and by selecting each speaker or subwoofer, you can specify size/bass cut-off and level.

Always click “Save” for the corrected setup before choosing another menu.

Channel Designation

You should activate the speaker channels, which are in accordance with the DECODING FORMAT that you want to optimize – you should NOT focus on the actual position of the speaker. For example, the first surround speakers for a Dolby format are always LS and RS – also if they are positioned on the back wall. The available speaker positions are:

Designations Channel Description

Subwoofers:

LFE	Low Frequency Effects (Mono)
SUB L	Left Channel Subwoofer (Stereo / does not handle LFE, if LFE Subwoofer is activated)
SUB R	Right Channel Subwoofer (Stereo / does not handle LFE, if LFE Subwoofer is activated)
SUB RR	Right Rear Channel Subwoofer
SUB LR	Left Rear Channel Subwoofer

Low level speakers:

L	Left (Bi-amping available, if AUX outputs are available)
R	Right (Bi-amping available, if AUX outputs are available)
C	Center
LS	Left surround
RS	Right surround
LRS	Left rear surround (only available, if LS and RS are activated)
RRS	Right rear surround (only available, if LS and RS are activated)
CB	Center back

Speakers designated according to Dolby ATMOS and DTS:X specifications:

LW	Left wide
RW	Right wide
LTF	Left top front
RTF	Right top front
LTM	Left top middle (only available, if RTF and RTM are activated)
RTM	Right top middle
LTR	Left top rear
RTR	Right top rear

Speakers designated according to AURO 3D specifications:

HL	Height left
HR	Height right
HLS	Height left surround

HRS	Height right surround
HLR	Height left rear surround
HRR	Height right rear surround
HC	Height center
TOP	Top ceiling (aka Voice of God)

Note:


A single (mono) subwoofer must be set as LFE subwoofer – no matter where you position it in the room.

Sub Right and Sub Left are used in combination only, as they are used for a stereo setup. But you can activate both the LFE subwoofer and the Sub Right/Sub Left. This will direct the LFE signal to the dedicated subwoofer and direct the bass from the speaker channels to the Right and Left subwoofers.

LFE Channel cut-off

LFE (Low Frequencies Effects) is an individual audio channel for bass effects. The LFE channel cut-off will add a low-pass filter for the signal to this subwoofer. Apart from the standard settings you can create your custom cut-off setting.

The MP-60 2.1 can decode up to 16 channels (including the LFE, Low Frequencies Effects). The system will inform you if you try to activate more speakers than the MP-60 2.1 can process, or if you are trying to create a setup which cannot be handled due to the limitations set by Dolby, DTS or Auro. In that case, an error message will appear.

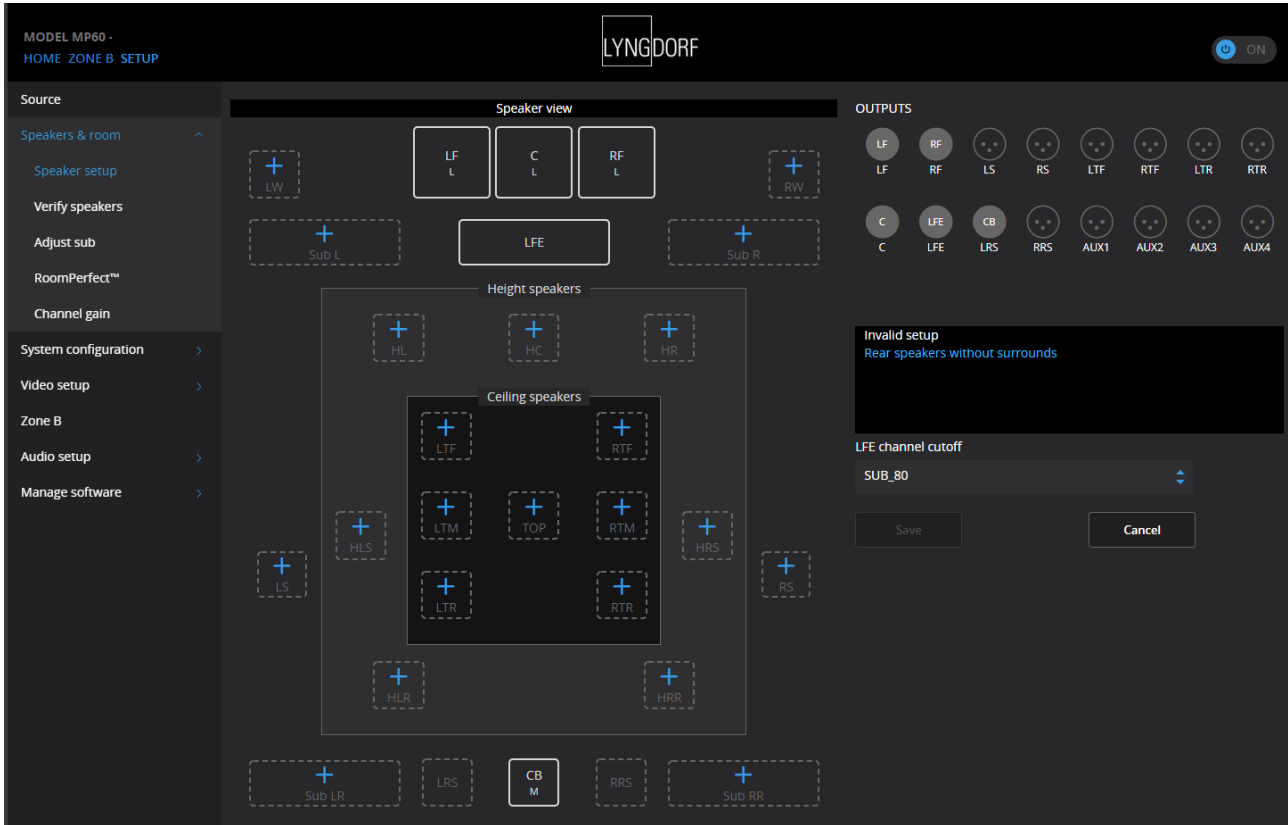

The errors could be:

Error trying to activate one or two rear surround speakers without any side surrounds.


The initial surround sound speakers must be a pair of side surround speakers (LS & RS) – no matter where you position them.

Error trying to activate top or height speakers without the lower level speakers.

If you only can position surround speakers in the ceiling, these must be designated as lower level surround speakers, as you are not creating a 3-dimensional sound field.

As a rule of thumb, don't make changes if you are not familiar with the consequences, and always make a backup before trying out other speaker setup options. When you change speaker sizes, LFE cut-off or any distance- or delay-related settings, you need to do a new RoomPerfect calibration, as the interaction between room and speakers are changed.

Dialog boxes for speaker options

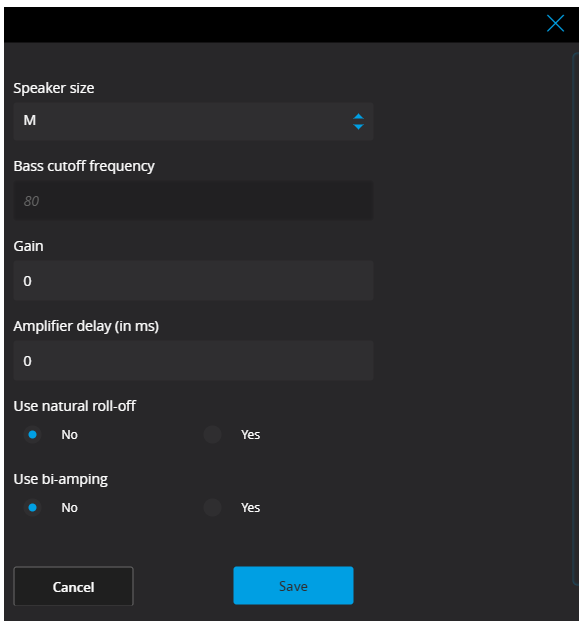

Speaker Size and Bass Cutoff Frequency

When selecting a speaker size, you set the bass-cut-off frequency. Signals below this frequency will then be redirected to another speaker or subwoofer(s) in the system. By selecting “Custom”, you can specify the cut-off frequency directly. Available selections for speaker size are:

None: The output is unused.

XXL: Plays full range signal, LFE if no subwoofer is connected, and redirected bass from other channels.

XL: Plays full-range signal.

L: The cutoff frequency is set to 40 Hz.

M: The cutoff frequency is set to 80 Hz.

S: The cutoff frequency is set to 100 Hz.

XS: The cutoff frequency is set to 120 Hz.

Custom: User-selectable cutoff frequency.

Which Cutoff Frequency Should You Choose?

When selecting a cutoff frequency for your speakers, you should select a frequency higher than the lowest frequency your speaker is able to play.

Gain

If a specific speaker channel is significantly lower in level compared to the other channels, you should decrease the gain on the highest channel to match the overall level of speaker output.

Increasing gain on a speaker channel might cause a speaker or subwoofer to distort at levels below 0 dB. Even levels ensure that the subsequent RoomPerfect™ calibration will run perfectly. Highest and lowest speaker levels are then within the microphone's optimal calibration levels.

Amplifier Delay

In case you pass this speaker through an amplifier or subwoofer with internal processing, you need to compensate for this by entering the relevant delay in milliseconds.

Note:

A simple D/A conversion will normally take around 0.5 ms, whereas a subwoofer with internal DSP processing (room correction) could delay the signal by 2 ms or more. The delay is the same if the DSP filters are activated or not. We recommend that you do not activate room correction software in the subwoofer, as this will stress the amplifier and driver of subwoofer.

Natural Roll-Off


If you activate "Natural Roll-Off", the speaker signal will not be affected by the "Bass Cut-Off" settings, but a copy of the bass signal will be directed to the subwoofer(s). This is particularly relevant if the frequency limitation of the speaker is close to the Bass Cut-Off frequency.

Bi-Amping

This setting is available for the Left and Right front speakers only (LF and RF). This will copy the signal to these speakers to a pair of free outputs (if available), allowing you to use two amplifier channels to power each of these speakers.


Dolby Enabled Speakers

This function is relevant for a setup where the front or side speakers are equipped with up-firing drivers to imitate ceiling-mounted speakers. Delay and gain can be set for these specific speaker channels. Dedicated speakers for this purpose will feature a cue filter to improve the sensation that this sound is coming from the ceiling.

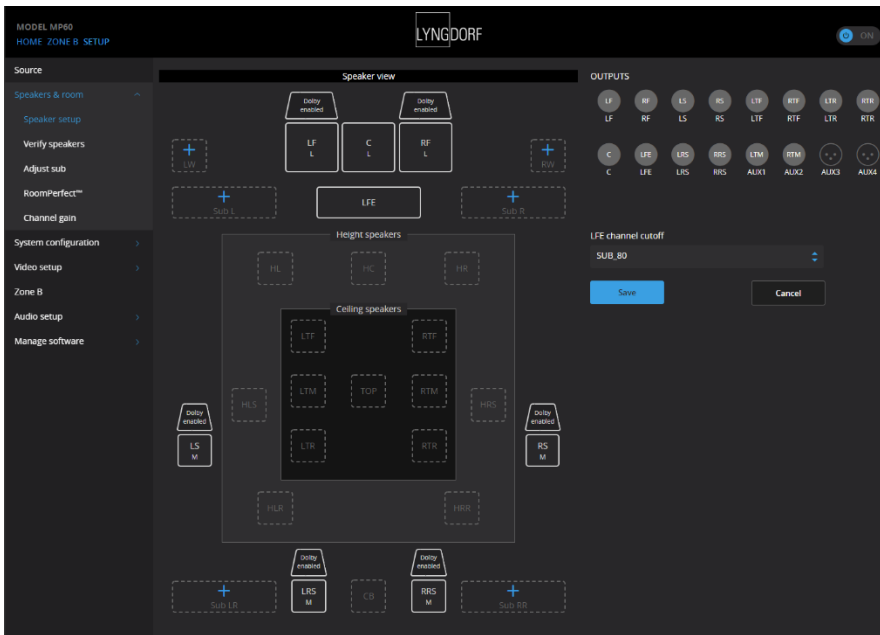


*To save changes, you must click “Save” after making changes to each source.
Do not go to the next speaker before saving changes.*

Subwoofer options

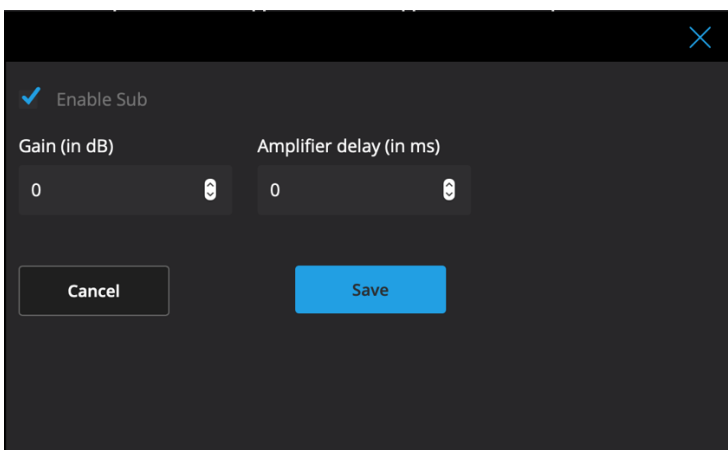

Left and Right Sub

Enable or disable a pair of stereo subwoofers at the front (Sub L, Sub R).
Enable or disable a pair of stereo subwoofers at the rear (Sub LR, Sub RR).

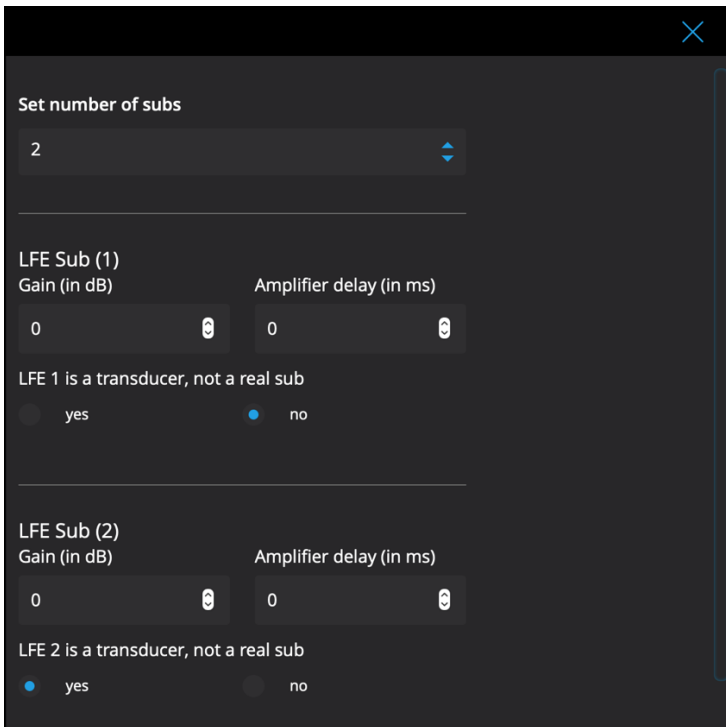

LFE and Transducer Sub

Set the number of LFE subwoofers (0 – 5)

Define LFE subwoofers as Transducer / Bass Shaker (Yes, No)

Gain

In a later process you will be guided through the level settings on your subwoofer. If the settings on the subwoofer does not allow for full correction, you can increase the level here to match the input sensitivity of your subwoofer.

Amplifier Delay

If your subwoofer features internal processing, you need to compensate for this by entering the relevant delay in milliseconds (ms).

Verify Speakers

This function will allow you to test if the amplifiers and speakers are connected correctly to the outputs of the MP-60 2.1. Follow the directions on the screen.

Adjust Sub

As the subwoofers are handling the bass information from multiple speaker channels, it is essential that the subwoofer(s) are aligned with each other and with the relevant speaker channels. Without alignment you risk having an inferior performance due to stress on the subwoofer's internal amplifier.

With one or more active subwoofer(s) connected to the MP-60 2.1, this menu will guide you into setting the volume level on each subwoofer's controls. Follow the instructions on the display to go through two steps:

Find the correct system volume to do the subwoofer adjustment (Adjustment sound from left speaker).

Find the optimal volume setting on your subwoofer (Adjustment sound from subwoofer).

Channel Gain

This menu will allow you as per your personal preferences to change the level of each speaker, in its relations to the decoded signal. This means that if you prefer that some surround speakers are higher in level with DOLBY decoded material only, you can adjust this without affecting the level of the speaker when decoding DTS or Auro-encoded materials. If you activate "Show RP Level", you will see how the RoomPerfect™ calibration has corrected each speaker channel.

RoomPerfect™

RoomPerfect™ is designed to analyze and correct for the negative effects that the listening room has on the speaker sound. See our website www.lyngdorf.com for more detailed information.

Global filter

The global filter improves sound quality across the whole room. When you are moving around a room, the global filter gives the best result.

Focus position

The focus filter improves the sound quality at a specific listening position. This makes the focus filter the best solution for optimal sound quality at a single listening position.

It is possible to add multiple focus positions. This must be done after performing the initial RoomPerfect™ calibration.

How to Set Up RoomPerfect™

Initial setup

Be sure to select the unit of measure, then enter the distances to the speakers and subwoofers.

How to measure distances to speakers and subwoofers

The best results are obtained by using a laser-equipped measuring device. Before starting, place the RoomPerfect™ microphone at listening height in the main listening position. For each channel, measure the straight-line distance through the air from the tip of the RoomPerfect™ microphone to the center of the tweeter unit in the loudspeaker in question. Do not measure distances at floor level, as these measurements will not give acoustically accurate results.

*When measuring distances to **in-room** subwoofers:*

If the subwoofer(s) is in the corner of the room, measure the distance to the corner of the room.

If the subwoofer(s) is up against the wall, measure the distance from the listening position to the back edge of the subwoofer.

If you have a stack of subwoofers taller than the listening position, measure the distance from the listening position to the back edge of the middle of the stack.

*When measuring distances to **in-wall** subwoofers:*

If the stack of subwoofers is taller than the listening position, measure the distance from the listening position to the dust cap of the middle of the stack of subwoofers.

If the subwoofers are lower than the listening position, measure the distance from the listening position to the top dust cap of the top subwoofer.

The RoomPerfect™ microphone is a very sensitive and finely calibrated device which must be treated with utmost care. If the microphone has been dropped on the floor, it may be damaged. If this is the case, obtain a new microphone from your Lyngdorf Audio representative before performing the system calibration.

RoomPerfect™ Preparations

Place the RoomPerfect™ calibration microphone on the stand. Be sure to fasten the screws properly so the microphone does not move during a measurement.


Plug the supplied microphone cable into the microphone.

Connect the microphone cable to the microphone terminal on the rear panel of your processor.

Each RoomPerfect™ microphone is calibrated within very small parameters and using a new microphone does not require adding any calibration file. The microphone does not work with traditional power supply, and it cannot be replaced by any other microphone design.

Placing the Microphone in the Focus Position

When you are prompted to place the microphone in the focus position, place the microphone, using the microphone stand, in your primary listening position. The height and the orientation of the microphone should correspond to your head's height and direction.

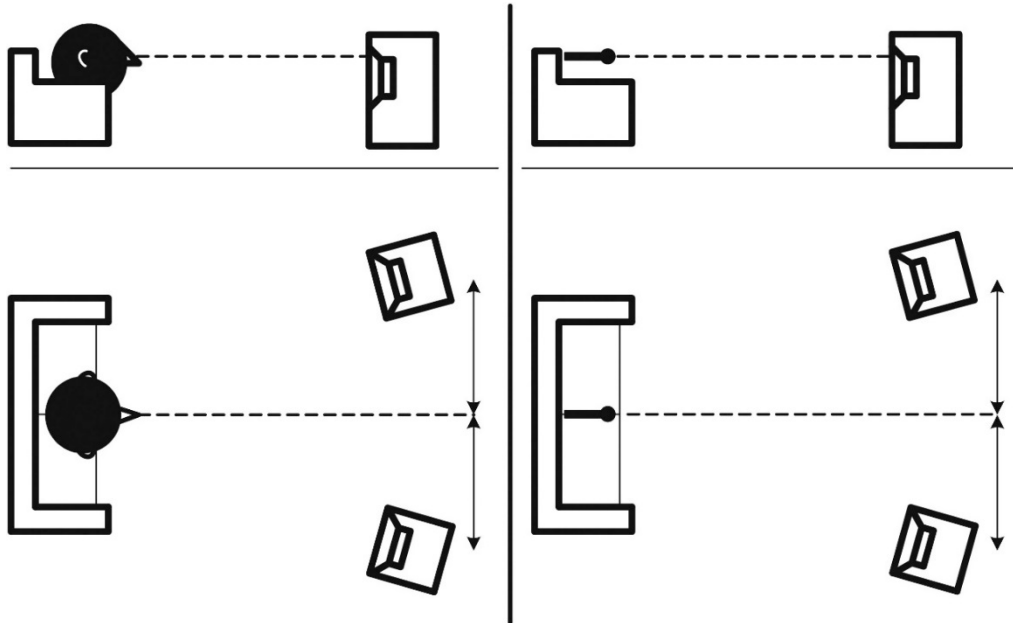

Volume Setting

Press Enter, and a test signal will be emitted from the left speaker. The system will give an estimated optimal volume for calibrating the system or will accept the current volume. Adjust the volume if required by the system and retry the measurement.

The calibration volume should not be so loud that it is inconvenient to you, or that it causes damage to your loudspeakers. If this is the case, set it to a lower and more appropriate level. A low volume can result in a longer calibration time or a measurement time-out. A low volume and long measurement will not affect the quality of the result.

Measuring the Focus Position

When the calibration volume has been set, RoomPerfect™ will send a range of tones to measure the focus position. If there is noise in the room, the measurement may take longer. This will not affect the quality of the result. See RoomPerfect™ troubleshooting if the measurement stops prematurely, and then retry the measurement.

Measuring Random Room Positions

When the focus position has been measured, the next step is to measure the acoustical properties of the room. It is important to perform well spaced measurements to get a comprehensive image of the acoustical properties of the room. See RoomPerfect™ troubleshooting if the measurement stops prematurely.


Keep taking measurements until RoomKnowledge reaches minimum 90%.

These are the rules of thumb when measuring the room:

The microphone should be in random and varying positions, heights, and orientations. Point it up/down/sideways, the more random positions the better.

The measurements should cover the entire room, not only your listening area.

Do not take measurements behind plants, furniture, etc.

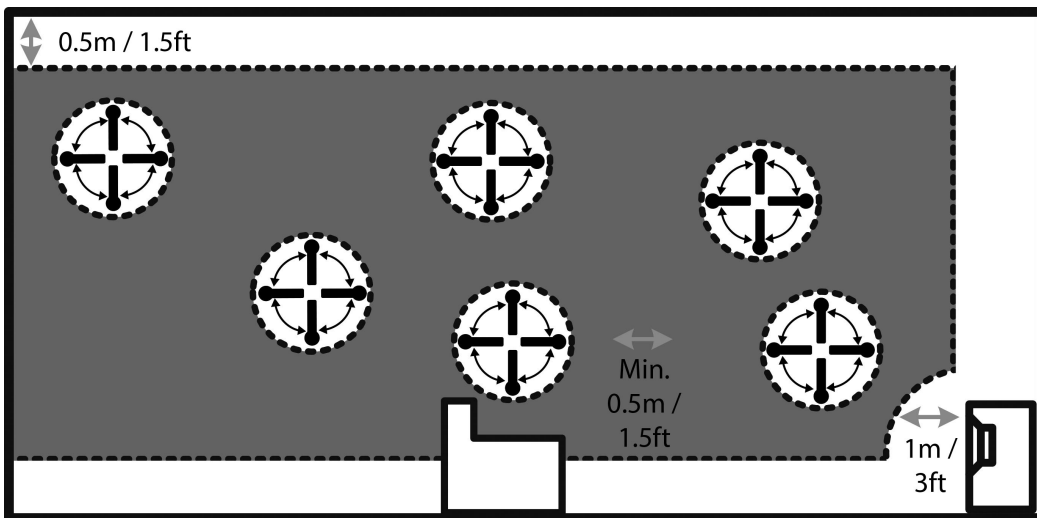


Side view of room

The microphone should not be closer than 0.5m/1.5ft from the floor, ceiling, and walls.

The microphone should be at least 1m/3ft from the front of the loudspeakers.

There should be at least 50cm/1.5ft between each measurement.

Do not take symmetrical measurements in the room.

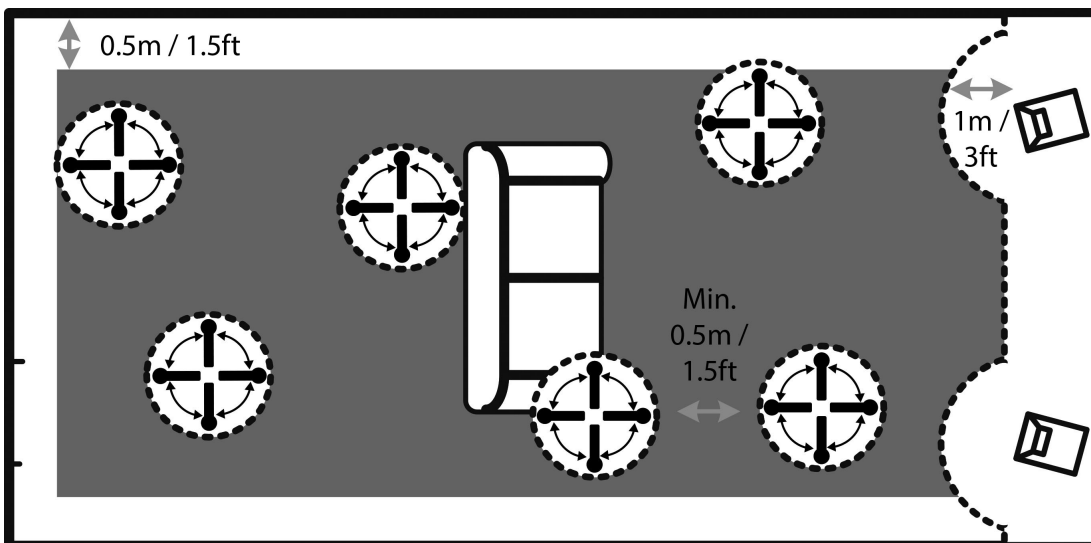

Top view of room

Room Measurements Above 90% RoomKnowledge

When RoomKnowledge has reached 90%, you can decide to add room measurements or do it later.

To fully optimize RoomPerfect™'s understanding of the room's acoustical properties, we recommend you keep doing measurements until the RoomKnowledge is above 95%. The higher the RoomKnowledge, the more accurate the room correction filters will be.

Calculation of Focus and Global Filters

When room measurements are complete, the system will calculate the focus and global filters automatically.

Note: We recommend that you ALWAYS make a backup of the MP-60 2.1 settings and calibration data after having performed a RoomPerfect™ calibration (see "Manage Software" in the Setup section).

System Configuration

General Setup

Power management

Choose the standby mode:

Deep sleep: The MP-60 2.1 can be turned on via remote control or the front on/off switch (Default)

Network Stand-by: The MP-60 2.1 can also be turned on via the web interface, the Remote app or a RS232-based control system.

Choose the delay before the processor automatically turns off, when no audio or video is processed. Setting it to "0" will disable the feature (always on).

Default volume settings

Set a max volume for the device (dB). This setting is a safety precaution.

Set startup volume

Use last volume: Sets the volume to be the same as when the MP-60 2.1 was turned off.

Use fixed volume: Sets the default volume at startup.

HDMI CEC settings

Set enable CEC and use ARC channel as audio input to Off or On.

Display timeout

Set seconds before turning off the display.

Password protection

Activate password protection for entering the setup menu from the remote control. The password is 7800.

Show bypass

Allow for RoomPerfect™ to be set to bypass mode for demonstration purpose.

Enable front IR sensor

Turn the MP-60 2.1's IR sensor Off or On. This function is useful if you are using a home automation system and other remotes are using the same IR codes as the MP-60 2.1 remote.

Trigger Setup

Trigger In Setup

Allows you to set up the system so that the MP-60 2.1 can be switched on by an external device. The MP-60 2.1 will turn on if a voltage above 1.5V is detected.

Trigger Out Setup

Allows you to set up the system so that the MP-60 2.1 can control the power state of other devices like amplifiers and curtains through a simple connection.

Off: No action.

Source: When the preset source for any zone is selected, it will trigger.

Use source setup menu to associate the trigger with a source.

Source A: When the preset source for Zone A/Main zone is selected, it will trigger.


Source B: When the preset source for Zone B is selected, it will trigger.

Power A: When Zone A / Main Zone is On, it will trigger.

Power B: When Zone B is On, it will trigger.

Power any: When any Zone is On, it will trigger.

You can set the trigger output to be on/off or as a pulse activation. You can select either a 5V or a 12V output. The Settings menu appears when a trigger system is activated on a source.

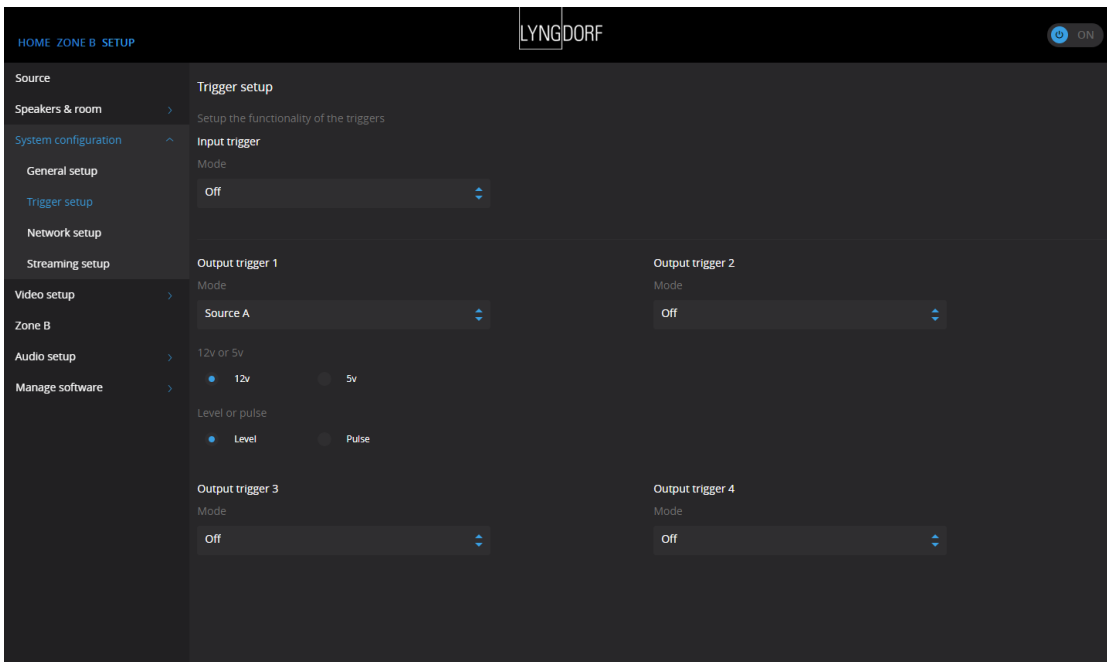


Network Setup

Connecting to MP-60 2.1 with a Network Cable

It is possible to get access to the MP-60 2.1's web interface via a direct cable connection between the MP-60 2.1 and a computer, or a connection via a hub or switch.

If you have a direct cable connection to a laptop (with no switch or router between the two) the network cable must be a crossover type. Furthermore, the Mode option in the Network Setup menu must be set to Manual IP. Finally, you must manually set an IP address on the computer you intend to use for setting up the MP-60 2.1.

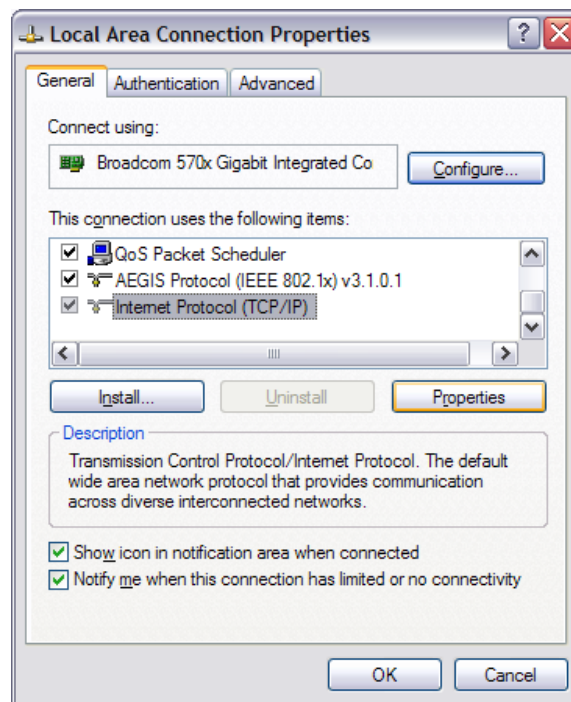

Set Up a Fixed IP Address in Windows 7

Click Start / Control Panel / Network Connections to find the network connection that represents your connection to the Internet. Most often, this is labeled simply Local Area Connection.

Right-click the connection and select "Properties".

Click "Internet Protocol (TCP/IP)" in the list (you may have to scroll down the list to find it).

Click "Properties".

Most default configurations will have both "Obtain an IP address" and "Obtain DNS server address automatically" selected by default.


Click Use the following IP address and enter the following:

IP address: 192.168.1.2

Subnet mask: 255.255.255.0

Default gateway: 192.168.1.1

Click "OK" to close the configuration windows. You should now be able to access the MP-60 2.1 via your Internet browser.

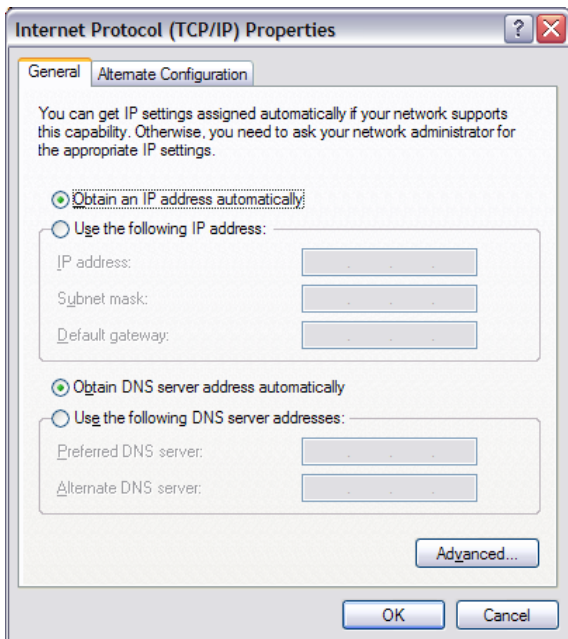

Set Up a Fixed IP Address in Windows Vista or Windows 10

In Windows Vista, click Start / Control Panel / Select Network and Internet / Network and Sharing Center.

In Windows 10, right-click Start, then select “Control Panel”.

Select “Network and Internet / Network and Sharing Center”.

Click “Manage Network Connections” in the list of tasks.

Right-click your local area connection and click “Properties”.

Select “Internet Protocol (TCP/IP)” from the list.

Click the “Properties” button.

Click “Use the Following IP address” and enter the following:

IP address: 192.168.1.2

Subnet mask: 255.255.255.0

Default gateway: 192.168.1.1

Click “OK” to close the configuration windows. You should now be able to access the MP-60 2.1 via your Internet browser.

Streaming Setup

The MP-60 2.1 can access music files on your local network or on a FAT32-formatted storage device connected to any of the USB A inputs, and you can stream music to the MP-60 2.1 from your mobile devices.

In this menu you can configure the basic setup of the music streaming:

“Streaming players can control volume”: Set to Off or On.

“Streaming players can change input source”: Set to Off or On.

“Streaming players can power on the device from standby mode”: Set to Off or On.

Streaming Playback

The setup of the streaming player itself is done in the interface positioned in the HOME section.

AirPlay

When the MP-60 2.1 is connected to your local network, it will automatically be available from your AirPlay-enabled devices.

Spotify Connect

When the MP-60 2.1 is connected to your local network, it will automatically be available from your Spotify Connect enabled devices (requires a Spotify Premium account).


UPnP

This function allows you to select and play music files in UPnP enabled libraries on your local network. The “..” button brings you up in the menu structure of your library.

You might have problems in accessing files as UPnP a set of protocols and not a defined standard. The implementation of UPnP is therefore not always fully functional for media playback.


USB

This function allows you to select and play music files on attached USB devices (FAT32 format). The “..” button brings you back up in the menu structure of your library. It opens when an USB device is detected in any of the inputs.

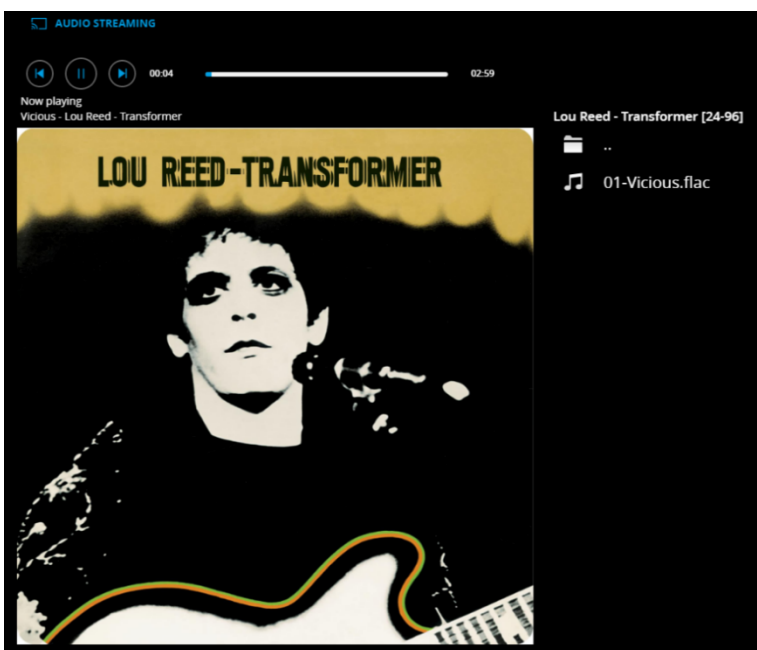

vTuner

This function allows you to access radio stations and podcasts around the world. You can search stations and podcasts through references to genre or geographical relation.

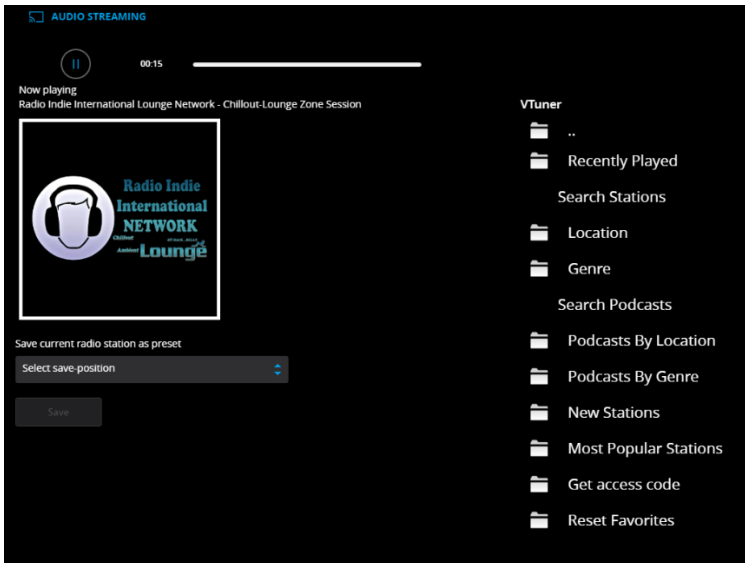

When a station or podcast is playing, you can assign it to one of the 4 “select save-position”. The saved stations can as presets be assigned to a SOURCE for direct selection, if you select “Internal Player” as “Audio input” (see SETUP/SOURCE menu).

Video Setup

The Video Setup menu allows you to register the video system settings for the MP-60 2.1’s video inputs and outputs, which in turn dictates which video formats can be shown on the screen when these inputs and outputs are activated.

With a single TV/Projector these settings are set automatically.

As a rule of thumb, don’t make changes if you are not familiar with the consequences, and always create a backup first!

Video Output

Use this menu to manage the default and preferred setting for all video outputs.

Set the main video output of your device

Here you select which of the HDMI output connectors is to be your output for the main setup. Other outputs can be set to “follow main” or be set individually to stream video from a specific HDMI input connector.

The MP-60 2.1 features eARC (Enhanced Audio Return Channel), which will allow the television to send a Dolby Atmos encoded audio track back through the HDMI cable coming from the MP-60 2.1. eARC will only function on the HDMI 1 output.

The MP-60 2.1 features an internal HDMI matrix, allowing control of all three HDMI outputs via a control system. This makes it possible to select individual audio and video information to be distributed to other monitors.

Default Video source

Here you can set the output to be “independent” of other outputs, “follow main” or fixed at a given HDMI input.

HDMI Audio out

Set this parameter to “Passthrough” to use the audio stream related to the respective video input. Alternatively, you can select the output for connecting audio through a HDMI cable to the Zone B.

Video Input

In this menu, you can change what is advertised to the sources on the HDMI inputs. This is essential, if you have more than one screen connected to the HDMI outputs. If the screens are not identical in terms of supported video features, one of the screens might go blank, as it cannot process the signal requested by the other television.

EDID (Extended Display Identification Data) is an embedded data file sent from the television(s) through the MP-60 2.1 to the sources. This communication of data differs from the communication between television and a source connected directly to the screen, why you cannot test the function of the MP-60 2.1 through connecting sources directly to the television. The television is the “master” of this communication, informing all sources what signal types it can receive.

The MP-60 2.1 acts as a HDMI Repeater and will correct the EDID information sent to the sources, if you have changed any of the settings.

Video Settings

For each video feature you can specify what to do when it is included in the EDID request to sources:

Never: Feature is not requested.

Always: Feature is always requested.

One: Feature is requested if one of the screens accepts it.

All: Feature is requested if all connected screens accept it.

The features controlled are:

Basic 3D: 3D video

HDR: High Dynamic Range (Static type, for example HDR+, HDR10)

Dolby Vision: High Dynamic Range (Dynamic type)

Deep Color: Bit depth for improved color reproduction

HLG: High Dynamic Range for streaming (Hybrid Log Gamma)

HDMI 2.0: Communication protocol (alternatively: HDMI 1.4)

Audio

Depending on the source type you can specify the optimal audio track type:

PCM or Bitstream, multichannel. Can be sent in stereo to Zone B only if played in main Zone.

PCM only, multichannel

PCM stereo only

PCM stereo up to 48 kHz only

HDMI Bandwidth

If the HDMI signal chain cannot support the full resolution due to cable length or connected components, you can limit the maximum bandwidth to 300 MHz or 150 MHz to avoid dropouts.

Zone B Setup

Zone B refers to an adjacent space, which is linked to the main setup. An example could be a bar area outside the listening area, where you want to play the stereo soundtrack of the cinema or select any of the other sources connected to the MP-60 2.1. In this menu you can adjust the default settings.

The Zone B audio output can be controlled by a control system, the web interface or the remote application – not the handheld remote. This output can output a digital, stereo audio signal, which you can use as input for a system in adjacent rooms. The MP-60 2.1 can decode one HDMI source only and selecting “Follow Main” will output a stereo downmix of the movie in the main room. The output does not hold any RoomPerfect™ filters.

Audio Setup

Audio Processing

This menu allows you to manage the audio processing presets for DTS, AURO and Dolby. These settings are required by DTS, AURO and Dolby and cannot be managed by us.

Dynamic Range Control functions in general with raising the level of quiet sounds and lowering the level of the loud sounds. This is also known as Night Mode, but it works differently in the various formats, why you can set it up for each format.

Dolby Center Spread is a dedicated Dolby function to spread (copy) the center channel dialogue into the left and right speakers to fit a very large screen.

Auro Strength sets the amount of generated signal sent to other channels in the postprocessing / up-mixing.

Auro Presets lets you select a channel configuration that best suits your speaker setup.

Voicing Setup

A voicing is an equalizer filter that can be activated to amplify or attenuate certain frequencies according to your personal preferences. For each Source you can dedicate a Voicing, meaning that you can emphasize bass on one input without sacrificing neutrality on others.

Exporting and Importing Voicings

It is now possible to download single voicings to a file and to add new voicings by uploading those files as well. This will make it possible to copy a voicing from one device to another. The file format is identical for all enabled Lyngdorf products, so if you have a voicing you like on your TDAI-3400 amplifier, it is possible to add that to your Lyngdorf multichannel processor or vice versa.

Note:

Single voicing files have the extension: single_voicing.xml and this may not be changed.

You can also download and upload an entire set of voicings. Again, these files will work throughout the devices which support this feature.


Note: Uploading a set of voicings with this feature will replace ALL voicings in the amplifier. Files with an entire set of voicings have the extension: voicings.xml and this may not be changed.

Edit or delete voicing

This dropdown list contains the voicings currently in the amplifier. Selecting a voicing in the list will allow you to delete or edit the selected voicing. This will open the voicing editor.

Add new voicing

To create a new voicing using the voicing editor, enter the name of your new voicing and click “Add”.

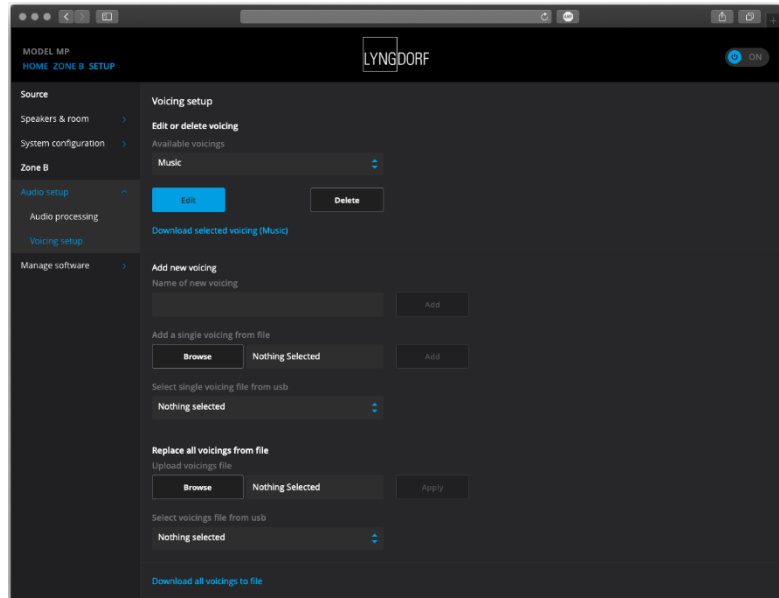

To add a voicing from a `.single_voicing.xml` file, browse for the file and then click “Add”.

Replace all voicings from file

This is the functionality to replace all voicings in the amplifier with a new set from a `.voicings.xml` file. Remember that this will overwrite all voicings currently in the amplifier. Click browse to find the `.voicings.xml` file you wish to upload and then press Apply to use it.

On the bottom of the page is a link to download the current set of voicings in the amplifier to a `.voicings.xml` file.

Through selecting any of the stored Voicings, you can see the details by selecting EDIT. You can also delete the stored Voicings and add new designs here.

Creating Voicings

A Voicing can combine up to eight filter sections. For each section, you can choose between certain filter designs, which then in combination will give you the total correction of the Voicing. For each Voicing you will see a green line showing the total correction as well a blue line showing the correction caused by the selected filter section. If there is only one active filter section, only the blue line is shown.

You can select between following filter designs:

Low Pass: Functions as a crossover filter reducing the signal above the frequency.

High Pass: Functions as a crossover filter reducing the signal below the frequency.

Low Shelf: Attenuates the lower frequencies to a specified level.

High Shelf: Attenuates the higher frequencies to a specified level.

Parametric: Attenuates a specific frequency.

All these filters can be with positive or negative gain – effectively reversing the effect of the filter.

You can adjust the Overall gain for each voicing in order to be able to switch between voicings without experience any change in perceived level.

In this example (Action Movie Voicing) you will see the combined effect of two filter sections:

Negative High Shelf from 120 Hz – creating a boost in the bass region.
Negative High Shelf from 8,000 Hz reducing the highest frequencies.
Overall gain set to +6 dB as compensation for the reduction in overall level experienced with the two filters.



Try experimenting by creating your own Voicings and test the functionality of the different filter sections.

Manage Software

From this main menu, you can access MP-60 2.1 software information, backup, restore, etc.

Download system log

Here you can download a syslog file to your PC or Mac. This file will hold information about decoders and software behavior. If a problem occurs, this file should be included in the correspondence with the manufacturer.

Backup

Make a complete system backup, including speaker setup and RoomPerfect™ measurements. You can back up to an USB flash drive or the SD card, if inserted. You can name the backup for easy identification if you want to be able to return to this setup after testing another speakers setup. This file can also be used to move the entire setup to another MP-60 2.1 processor – and it can be included in communications as to setup issues. When the backup is complete, the MP-60 2.1 will go into standby mode.

Restore

Restore the system from a backup file. Select the backup file and start the process. When the restoration is complete, the MP-60 2.1 will go into standby mode.

Factory Reset

Restore the system to the default factory settings.

Note: All user preference settings, system data, and RoomPerfect™ data are lost when the MP-60 2.1 is restored to the default settings. This is why you should create a backup if you want the option to restore the present setup later.

Update Software

Update from Remote Files

When connected to the Internet, the MP-60 2.1 will automatically identify new software updates from our server.

Select the file listed on the remote server list.

Click “Start Update” to upload the new software to the MP-60 2.1.

Update from Local Files

On the product page on www.lyngdorf.com you will be able to download the software file to update the processor.

Via web interface:

Click “Browse” to find a file stored on your computer.

Click “Start Update” to upload the new software to the MP-60 2.1.

Or:

Copy the software file to a FAT32-formatted USB flash drive.

Make sure you “eject” the USB flash drive correctly before removing it from your PC or Mac.

Insert the USB flash drive into the USB A connector on the MP-60 2.1.

Browse and select the file in the menu and click “Start Update”.

Note: System settings and RoomPerfect™ data remain intact during software updates.

Troubleshooting

RoomPerfect™

The calibration microphone is very sensitive and may pick up unwanted noise, including subsonic signals and background noise, which disturbs the measurements. If the signal is disturbed, it will take longer for the system to make a correct measurement.

A measurement that has been disturbed by noise but completed will always be correct; it is not necessary to redo it. If the measurement has stopped due to an error, one of the error messages below will be shown.

Error Messages

No microphone connected

No microphone or cable is registered, why the microphone connection is not working. Check that the microphone cable is connected to the microphone socket on the back panel. If the problem continues, test the microphone cable by connecting the microphone directly into the microphone socket and select Retry.

If the microphone is detected, replace the microphone cable and retry the measurement.

Fault – No signal

This error message can arise due to a signal classification of no sound. This happens if the sound volume has been muted or a cable is disconnected.

Check the sound volume.

Check all cable connections, including interconnects, speakers, amplifiers, etc.

Check the measuring signal volume.

If none of these measures solve the error, request a replacement microphone from Lyngdorf Audio.

Fault – Signal clipping

Either the incoming signal has been classified as too loud, resulting in clipping or distortion, or a loud noise in the immediate environment has corrupted the measurement results. If a loud noise has in fact occurred, such as the sound of a closing door, reduce noise levels inside and in the immediate vicinity of the room and repeat the measurement. If no loud noise has occurred, reduce the volume of the signal and repeat the measurement.

Fault – Low signal

This error message is displayed when the measurement has lasted more than 5 minutes for the low-frequency signal or more than 2 minutes for the high-frequency signal. This happens most often when using a low-level measuring signal compared to the background noise in the listening

environment, which results in prolonged measuring times. Raise the measuring signal volume or reduce the noise in the environment before continuing with the measurement.

If raising the volume does not eliminate the error message, the microphone or cable might be defective. Test the microphone cable by connecting the microphone directly into the microphone socket and select Retry.

Can't Turn On Via LAN or Control System

The MP-60 2.1 needs to be set to Network mode to be able to turn on via a control system. It will not turn on when in Deep Sleep. This is set up in System Configuration / General Setup/ Power Management

Retrieving and Sending an Error Log

The processor generates a log file, which contains information of all detections and actions made by the software. To retrieve an error log, you need to access the MP-60 2.1 via your web browser. Under "Manage Software" you can download a text file and email it to your Lyngdorf Audio representative.

3D Compatibility Not Detected

If the MP-60 2.1 isn't fully booted, a Blu-ray player will not be able to detect its 3D compatibility. Restart the player to fix the problem.

Remote Control Doesn't Work

The remote control is paired to the MP-60 2.1 at the factory; you need to pair it again only if you have a new MP-60 2.1 or remote.

To pair the RF remote control to a MP-60 2.1:

Turn on the MP-60 2.1.

On the remote, hold down the Play and OK buttons until the remote control's green LED flashes. Point the remote control at the MP-60 2.1 and hold it within 30 cm / 1 foot of the front panel; when the green LED stops blinking, the remote is connected via Zigbee.


The remote will be paired to the MP-60 2.1.

To switch the remote from RF to IR mode, hold down OK and 1. The LED will flash red twice.

To switch the remote back to RF mode, hold down OK and 2. The LED will flash green twice.

To reset the pairing of the remote control, press Back and OK until the red LED flashes twice.

Trademarks

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the  Symbol, & DTS and the Symbol together are registered trademarks, DTS:X, DTS:X Pro and the DTS:X and DTS:X Pro logos are trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

This product incorporates technology that is protected by U.S. patents and other intellectual property rights. Use of this technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Service Information

In order to obtain warranty service, you must contact your original dealer or alternatively the Lyngdorf Audio distributor of the region or country where you are located.

