



## User Guide

# Advanced Wireless Camera Nest Box (Solar Option CIB2Z50)

# Contents

<b>Section</b>	<b>Topic</b>	<b>Page</b>
1.	Introduction . . . . .	1
2.	Setting Up Your Equipment and System . . . . .	1
3.	Unpack and Familiarise Yourself With Your Nest Box . . . . .	2
4.	Setting Up Your Equipment for Operation. . . . .	3
4.1	Charge the Batteries . . . . .	3
4.2	Connect up the Nest Box and Electronic Battery Box . . . . .	3
4.3	Set up the Receiver and Connect to TV. . . . .	4
4.4	Fit Nest Box Outside . . . . .	5
5.	Miscellaneous. . . . .	7
5.1	Use of the Mode Control Switch. . . . .	7
5.2	Adjustment of Lighting System and Focus. . . . .	8
5.3	Audio Volume . . . . .	9
5.4	Transmission Range. . . . .	9
5.5	Cleaning the Nest Box. . . . .	10
5.6	Mains Power Supply for Nest Box . . . . .	10
6.	Specifications, Warranty etc. . . . .	11
7.	Care for the Environment . . . . .	11
8.	Accessories for your Nest Box . . . . .	12

## 1. Introduction

Thank you for purchasing one of the Nestbox Company's family of products. We hope you will enjoy many years of viewing nesting birds with this nest box.


## 2. Setting Up Your Equipment and System

The Advanced Wireless Camera Nest Box (Solar Option) consists of 3 main components:

1. Nest Box with Camera
2. Electronic Battery Box
3. Solar Panel
4. Receiver

As well as this, it includes everything necessary to connect the parts of the system together, to power sources, and to your computer or TV.

It is easy to put the system together by following these step by step instructions.

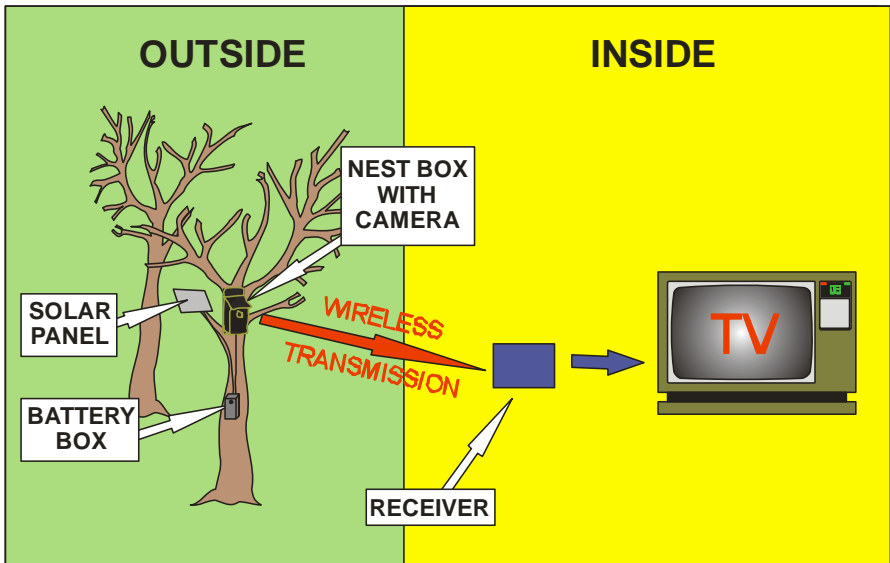

### 3. Unpack and Familiarise Yourself With Your Nest Box

As well as this User Guide, you should have the following parts:



**Nest Box with Camera**, including electronic control system and cable to connect to Battery Box.



**Electronic Battery Box**, including mode switch and battery holders.



**Mains power supply for Battery Box** (Internal Use Only). This provides an optional alternative to running the system on batteries.



**Receiver, with Antenna, mains Power Supply and Video/Audio Lead** to connect between the Receiver and TV.



**Set of Rechargeable Batteries**



**Solar Panel** with fixing kit



## 4. Setting Up Your Equipment for Operation

### 4.1 Charge the Batteries

Using a mains battery charger, fully charge all 8 rechargeable batteries. These are high capacity batteries, and depending on your battery charger, this may take 24 to 48 hours, or in some cases longer.

Most customers will need to charge the batteries from time to time from the mains, so it may be useful to use a fast charger to minimize the time the batteries are out of the box.

Fit all the 8 charged batteries into the battery holders inside the Battery Box (with polarity as shown on the holders).

### 4.2 Connect up the Nest Box and Electronic Battery Box

Open the nest box by removing the peg from the roof, tilting out the top of the removable side panel, and then lifting the panel away.




Plug one end of the black cable into the black socket on the circuit board. You may find it helpful to slide the circuit board out slightly to do this.

Ensure that the camera is pointing towards the base of the nest box, and then replace the side panel, running the cable through the small gap at the top back corner of the panel.

Open the front of the Electronic Battery Box.

Connect the other end of the cable coming from the Nest Box to the socket on the circuit board attached to the front of the Battery Box.

Connect the white connector at the end of the cable coming from the solar panel to either of the two matching connectors on the circuit board.

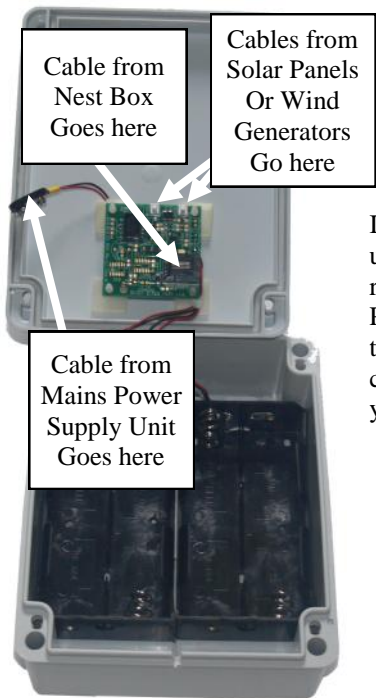

Line up the cables to leave the Battery Box through the cable slot in the bottom of the box.

If you choose at any time to power the system using the mains power supply, you should remove the batteries, and disconnect the Solar Panel. Then connect the PP3 connector on the mains power supply to the mating PP3 connector in the Battery Box marked with a yellow sleeve. .



### 4.3 Set up the Receiver and Connect to TV

Screw the Antenna onto one end of the Receiver. Adjust the angle of the Antenna so that it is approxi-

mately vertical. The receiver can be mounted vertically using the screw holes provided, or rested in a horizontal position.



Fit the Receiver Mains Power Supply (it has a cylindrical plug) to the Receiver (DC 9-12V) and plug it into the Mains. Switch the power on. The red indicator light will show it is on.

Fit one end of the Receiver Video/Audio Lead to the Receiver, connecting one colour to “VIDEO OUT” and the other colour to “AUDIO OUT”.

Fit the other end of the Receiver Video/Audio Lead to the direct input video and audio connectors of your TV. Connect the colour you connected to “VIDEO OUT” on the Receiver to Video In on the TV, and the colour you connected to “AUDIO OUT” on the Receiver to the Audio In socket on the TV.

As an alternative, you may prefer to connect this cable to the Video/Audio connectors on a video recorder or VCR.

If you only have a SCART input socket for your TV or recorder, you can fit the cable through an appropriate adaptor (see our accessories range).

The cable (and the signal it carries) is not suitable for direct connection to your TV aerial or antenna socket.

Turn the TV on, and switch it to the direct video/audio input.

Move the switch on the Battery Box to the CONT position. Set the Channel Switch on the Receiver to the channel number indicated by the label on the back of the camera. You should see the base of the Nest Box on your TV screen, and hear through the TV if you tap the box. If you didn't notice which channel it was set to, simply move the switch in turn to each of the 4 channels until you see the picture.

Make any final adjustments to the camera angle..

Before leaving the factory, the camera focus has been adjusted to a little above the floor of the nest box. You can adjust the camera focus by turning the lens turret. The camera is a very delicate part of the system so please do this gently, and be very careful not to touch a finger on the lens.

#### **4.4 Fit Nest Box Outside**

You are now ready to set up the nest box, battery box and solar panel in position outside.

First find a promising location. Nest Boxes are normally fitted (with the lid uppermost) to a tree or wall, about 2 to 4 metres high from the ground. However, depending on the situation, it is generally OK to fit the box higher. For further advice on siting nest boxes, you may find it helpful to check with the Royal Society for the Protection of Birds or the British Trust for Ornithology.

It is generally best to place the box so it does not get sun all day or too much

wind and rain. This means that you could face it to the North East or South East. The Nest Box should be fitted in a position where it is close enough to the Receiver so that you get a good picture. Although the nominal range is 100 metres, the actual range depends on a number of factors, particularly including obstacles close to and in between the Nest Box and the Receiver, such as walls and trees. If you are in any doubt as to the position, it may be better to fix the Nest Box temporarily until you have checked the reception.



The Nest Box is designed to be fitted in most situations with just 1 screw or nail, using the concealed keyhole in the back of the box. Fit the screw into the tree or wall first, and then offer up the box onto the screw so that the screw head goes through the lower part of the keyhole. Then slide the box down so that the box is securely fitted. The keyhole is positioned opposite the entrance hole into the box so that it is easy to see through for fitting, and the screw can be tightened once the box is fitted. If you wish to secure the box with a second nail or screw, a hole in the base/back of the box has also been provided, although in most situations this will not be needed.

Thin rope, cord, string or wire can also be used to fit the box. To do so, pass a loop of string etc through the keyhole, and attach it to a small twig, nail etc. Position this horizontally at the top of the keyhole. Tie the cord round the tree.



Position the box away from other trees, bushes, branches etc which may make it



easier for predators. Try to provide a clear flight path into the entrance hole. It is recommended that you do not place it near to a bird table or other place where you feed the birds, because the constant traffic of birds will deter nesting.

Run the black cable down the tree or wall, to the Battery Box, which should be fitted in a convenient location for changing batteries and reaching the control switch.

The Battery Box can be mounted onto a wall or tree etc using just 1 nail or screw through the mounting bracket at the rear of the Battery Box. If preferred, it can alternatively be mounted using up to 4 screws through the concealed mounting holes which are visible when the front of the box is removed.

Fit the solar panel in the sunniest location you can, angled to face the sun as far as possible. You don't require direct sunlight to charge the batteries but it helps. For fixing the panel, you will either have been supplied with a metal bracket, or large re-usable cable ties to go through the holes drilled in the sides of the panel.



## **5. Miscellaneous**

### **5.1 Use of the Mode Control Switch**

The switch on the front of the Battery Box has 3 positions:

#### **“STD” Standard**

We recommend you normally run the box on this setting. In this mode, the movement detection system monitors the inside of the nest box for movement of the birds. If movement is not detected for a prolonged period, the nest box electronics will be partially shut down to save battery power. When movement is detected again, the system will switch back on and transmit pictures and sound to the receiver.

Whilst partially shut down, neither video nor audio is transmitted from the box. Your TV will either show a still picture or “snow”, depending on which TV you have and the precise instant when the shut down occurred. You will lose sound, so may wish to press “mute” when this occurs.

Please remember that because the electronics are designed to work with live birds, the detection system is not 100% accurate. The movement sensor system may sometimes be triggered by insects or air movement, and sometimes will not trigger when there is movement. To avoid “jitter”, it is designed to wait a few seconds each time it switches before it will switch again.

This setting is designed to give a long battery life, depending on how much movement there is in the box.

#### **Central Position, “OFF”**

This position provides power to the electronics, but switches off the lighting, microphone, camera and transmitter. It hardly takes any power, so the batteries should last a very long time in this position.

#### **“CONT”, Continuous**

This setting puts all the systems within the box on continuously, and will take the most power out of the batteries.

This is suitable when you want to be sure that your picture is not interrupted when there is no movement, perhaps because you are recording a video.

Naturally, this setting will require more power from the batteries, and is more

likely to take more power out of the batteries than the solar panel is putting in. If the batteries run out, simply take them out of the battery box and charge them separately using the mains charger. You can also run the nestbox using the mains or single use batteries.

## 5.2 Adjustment of Lighting System and Focus

Before leaving the factory, the camera focus has been adjusted to a little above the floor of the nest box. You can adjust the camera focus by turning the lens turret. The camera is a very delicate part of the system so please do this gently, and be very careful not to touch a finger on the lens.

The lighting system has 3 “states” or modes of operation, and whenever it is switched on, it will always be operating in one of these 3 states.

State 1: High level: when bright external or natural light reaches the camera, the internal lights are switched off.

State 2: Daylight: whenever the lighting system is switched on, and the camera needs some additional light to provide a good picture, and the external light is bright enough to indicate it is daytime, a supplementary white light is switched on.

State 3: Night time: whenever the lighting system is switched on, and the external light is dim enough to indicate it is night time, a supplementary infra red light is switched on. This is invisible to human and bird eyes, so does not disturb the birds’ natural rhythms. Although the camera continues to give a colour picture, this form of illumination means that the TV picture looks as if it consists of shades of grey.

The point at which the lighting system switches from state 2 to 3 has been factory set to correspond to an average dawn/dusk. However, if your box is in a particularly open, or shady location, or for some other reason if you wish you can change this setting as follows:

1. Choose a time when the light level outside is the level at which you want the system to switch.
2. Start with the system in the “OFF” state.
3. Turn it to “CONT”, and then immediately back to “OFF”.
4. The system should now be in “set” mode and the white light inside the box should flash on and off 6 times to show it is waiting for you to set the switching point. If you don’t get 6 flashes, try from step 2 again.
5. Wait until after the 6 flashes, check that the light level is the level at which you want it to switch every morning and evening, and then switch back to “CONT”.

6. Leave the system in this state for at least 30 seconds.
7. It will now have saved this setting until you set it again.
8. You can now switch off or on as normal.

The point at which the lighting system switches from state 1 to 2 has also been factory set to correspond to the correct light level for the camera. If your box is in a particularly bright situation, you can change this setting as follows:

1. Choose a time when the light level outside is the level at which you want the system to switch.
2. Start with the system in the “OFF” state.
3. Turn it to “STD”, and then immediately back to “OFF”.
4. The system should now be in “set” mode and the white light inside the box should flash on and off 3 times to show it is waiting for you to set the switching point. If you don’t get 3 flashes, try from step 2 again.
5. Wait until after the 3 flashes, check that the light level is the level at which you want it to switch, and then switch back to “STD”.
6. Leave the system in this state for at least 30 seconds.
7. It will now have saved this setting until you set it again.
8. You can now switch off or on as normal.

If you accidentally switch the system into “Set” mode, and at any point you get either 3 or 6 flashes, disconnect the nest box from the battery box by pulling the plug out of the socket in the Battery Box. This will avoid resetting the switching points.

### **5.3 Audio Volume**

The audio system is fitted with an Automatic Gain Control (AGC) which increases the amplification when the microphone is picking up little sound, and decreases it when it picks up more noise. In quiet situations, this results in high gain, and can result in what sounds like a loud hum.

We suggest you set the volume on your TV or PC to a level where in quiet conditions, any background noise or hum is barely audible, and is not intrusive. When the birds take up residence, and start making a noise, the AGC will ensure that you hear their sounds well above the level of the background noise.

### **5.4 Transmission Range**

The Transmitter and Receiver have a nominal range of 100 metres.

The actual distance achieved will vary depending on atmospheric conditions, the position and type of nearby obstacles (such as walls, trees, or metal objects) and the state of the batteries.

Moving the Receiver just a few centimetres can sometimes make a big difference to the strength of the signal, so to obtain the best reception, we suggest you move the Receiver around to find the best location by trial and error.

## **5.5 Cleaning the Nest Box**

Once a year, after the nesting season has finished and all the birds have left the nest, we recommend that you clean out the Nest Box and dispose of all nesting material and unhatched eggs etc. Under UK legislation, you can only remove unhatched eggs between August and January, and then must dispose of them.

To do this, remove the circuit board and carefully clean it with a soft cloth or brush, being especially careful with the camera lens and electronics.

Take out any nesting material and throw it away, and wash out the box with boiling water. With the side panel removed, leave it for a day or two to dry out, before refitting the circuit board, and putting the Box back in position.

The Battery Box will also benefit from an annual clean, and it will be worth using a small brush to remove any insects or debris from the box, electronics and battery holders.

## **5.6 Mains Power Supply for Nest Box**

The system is designed to be used on battery power, but if it is convenient, you may prefer to use mains power.

The mains power supply which is included is designed for interior use only. It is intended to be connected to an internal socket on a fused 13A electricity supply. **IT IS DANGEROUS TO FIT IT OUTSIDE OR IN A DAMP ATMOSPHERE.** The cable (which operates at low voltage) is safe to use outside. If you need to extend this cable, this can be done with the “Mains to Battery Extension Cable”, product A35.

To use mains power instead of batteries, remove the batteries and disconnect the Solar Panel from the circuit board. Fit the PP3 connector at the end of the lead from the mains power supply unit to the mating connector marked yellow on a short wire from the circuit board.

The nest box can also be operated with single use batteries.

The battery box has a connector for fitting a second solar panel or a wind generator, either of which will increase the energy collected and reduce the chance of the rechargeable batteries running down.

## **6. Specifications, Warranty etc**

The specifications of the product described and the contents of this User Guide are subject to change without notice, as part of our continuous improvement process.

Whilst every care has been taken in the preparation of this document, we realise that it will still be possible to improve it. If you find any errors, omissions or points which are not clear, or have any suggestions for improving it, please let us know by email at [mail@nestbox.co.uk](mailto:mail@nestbox.co.uk). We will endeavour to deal with any problem to your satisfaction, and learn from it for future versions.

The contents of this document may not be reproduced in whole or in part except for your personal use.

The Nestbox Company Limited warrants all its products against defects in materials and manufacture for 6 months from the date of purchase. If a defect is discovered, The Nestbox Company will repair or replace the product (at its option) free of charge, provided it is returned to the address in this User Guide at the customer's expense.

The Nestbox Company Limited is not able to accept any responsibility for any loss, damage, or loss of data suffered by any customer or third party as a result of use, misuse or malfunction of the product or this User Guide. In particular, whilst the product has been extensively tested, we are unable to warrant that is error free.

If you have a further technical or user question relating to the product, please email it to us at [mail@nestbox.co.uk](mailto:mail@nestbox.co.uk).

From time to time, we provide customers with product updates. Please check the web site for details.

## **7. Care for the Environment**

As you might expect, The Nestbox Company cares deeply about the Environment. We have adopted an Environmental Policy designed to demonstrate our commitment to operating our business in harmony with the natural and man made environments. If you wish to see the full policy, it is available to read on our web site.

Our products are developed to be economical with natural resources, both in manufacture and use. We comply with the relevant laws and regulations, in-

cluding those relating to the Restriction of Hazardous Substances (known as RoHS) and Waste Electronic and Electrical Equipment (WEEE).

The wood used in our products comes from responsibly managed forests, as part of our commitment to the Forest Stewardship Council.

When you have finished using this product, please dispose of it responsibly.

Please separate it from other household waste or recycling, and use a local facility for waste electrical and electronic equipment.



This User Guide is printed on recycled paper.

## **8. Accessories for your Nest Box**

Our comprehensive range of accessories is designed to enable customers to make the best use of their purchase. Why not accessorise your equipment to extend its capabilities and make it do exactly what you want? The following examples of our accessories may be of interest:

### **Connection to PC/Laptop**

This small converter allows you to feed pictures from your camera straight into your computer. No need to install any hardware inside the computer.

### **Solar Panel**

A second solar panel will increase the charging effect and reduce the chance of running out of battery power.

You can find the full range of

accessories on our web site, [www.nestbox.co.uk](http://www.nestbox.co.uk),

or just scan the QR code here:





**Did you know we produce an extensive range of nesting boxes for birds and small mammals, and feeders and insect boxes?**

**We also make a wide variety of Camera Nest Boxes, and Wildlife Cameras and Accessories?**

**Some of our products:**

**Nature Watching Camera**

A sophisticated remote video camera for watching wildlife. Use it wired or wireless, day or night.

**Wireless Camera Nest Box**

A full function Wireless Camera Nest Box, but with simpler electronics. Small translucent window gives colour pictures in daylight , while infra red lights give pictures at night. Mains or battery operation

**To order, or for more details of all our products:**

Visit us at [www.nestbox.co.uk](http://www.nestbox.co.uk),

Email us at [mail@nestbox.co.uk](mailto:mail@nestbox.co.uk)

Telephone us at +44 (0) 1675 442299



Or scan the QR code :

The Nestbox Company Limited  
Eastcote House  
Barston Lane  
Eastcote  
Solihull  
West Midlands  
B92 0HS UK

Telephone: +44 (0) 1675 442299  
Fax: +44 (0) 1675 442421  
Web site: [www.nestbox.co.uk](http://www.nestbox.co.uk)  
Email: [mail@nestbox.co.uk](mailto:mail@nestbox.co.uk)



This publication, our products and our designs are  
© Copyright 2015 The Nestbox Company Limited.  
Certain of our products are protected by UK Patent 2420242



All our products are tested  
for compliance with the  
relevant directives, and carry  
the CE Mark

WEEE Producer Registration Number WEE/HA3702UR

Battery Producer Registration Number BPRN03345