
HONDA PIONEER 500

Winch Mount


PART # 101215

Hardware Kit: HK-317, HK-031


- 1. Place winch plate over bumper as shown in Figure 3. Loosely secure to the bumper tubes using the bolt plates, 2.5" bolts and nuts. *Figure 2 shows the different bolting locations*.
- 2. Install U-bolts as shown in Figure 4 and tighten all hardware. *Be sure to tighten U-bolts first.*

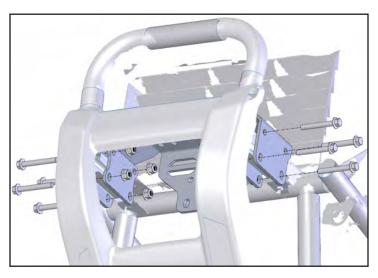

"Figure 3 Mount and Bolt Plate Install"

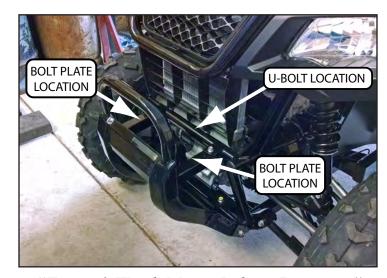

"Figure 2 Winch Mount Bolting Locations"

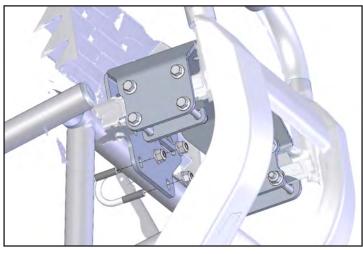


"Figure 4 U-bolt Install"


- 3. Determining which winch you have, see Figure 5.
- 4. Install your roller fairlead to your fairlead plate as shown in Figure 6, using the hardware supplied with your winch.
- 5. Install your winch and fairlead plate assembly to the mount plate as shown in Figure 7, using the hardware provided with your winch and the bolt pattern determined in step 3.



- 6. Tighten down all bolts.
- 7. Use your winch manual and the wiring instructions on page 3 and wire accordingly.

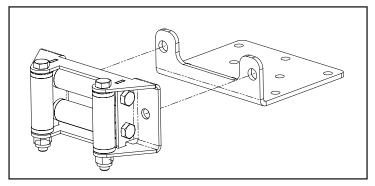


"Figure 6 Winch and Roller Fairlead Install"

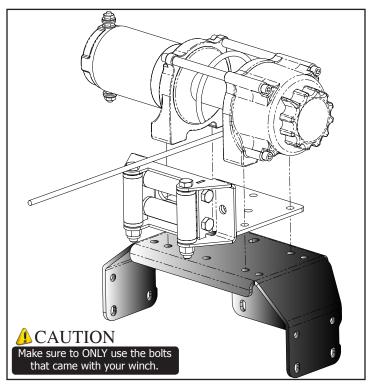


"Figure 7 Winch and Roller Fairlead Install"


Standard 4 Hole Winch Pattern (4.875" x 3")

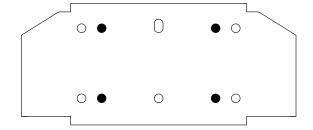

Wide 4 Hole Winch Pattern (6.6" x 3")

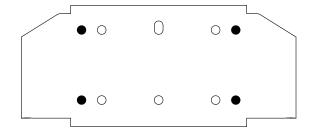

Standard 2 Hole Winch Pattern

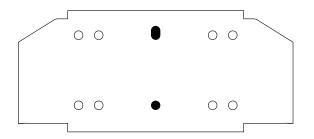

"Figure 5 Winch Bolt Pattern"



"Figure 8 Winch and Mount Installed"

WIRING INFORMATION


- 1. For contactor location please see "Figure 9". Install the contactor in a location of your choosing under the hood. There is no specific location on this machine.
- 2. Using the ALTERNATE WINCH WIRING DIAGRAM (AWWD) (Figure 12, pg4) as a guide for steps 2-5, attach the BLACK wire to the Blue Post on the winch and the RED wire to the Yellow Post on the winch.
- 3. Route the wires up to the contactor and connect the **BLACK** wire to the Blue Post on the contactor and **RED** wire to the Yellow Post on the contactor per AWWD.
- Route the Blue and Yellow wires back to the battery. Connect the YELLOW POS(+) wire to the Red post on the contactor and the BLUE NEG(-) wire to the Black post on the contactor per AWWD.
- 5. Attach the YELLOW POS(+) wire to the battery as shown in <u>Figures 10</u> and <u>12</u>. Then, attach the BLUE NEG(-) wire to the ground post as shown in <u>Figures 10 and 12</u> per AWWD.
- 6. Find a location that suits your purposes for the mini-rocker switch and hand remote.
- Mini-Rocker Switch Hardware kit. This allows you to mount your usual handle bar mounted switch to almost any desired location.
 - a. Remove handlebar mount hardware from the switch.
 - b. Locate desired mounting location
 - c. Mark and drill two switch holes through dash using switch housing as a template
 - d. Drill a 3rd hole for the switch wiring.
 - e. Assemble per Figure 11.
- 8. Wire the red ignition wire from the controller to a keyed wire. Typically you can find this on the ignition switch.



"Figure 9" Contactor Location



"Figure 10" Battery Location (Battery is located under the rear passenger fender.)

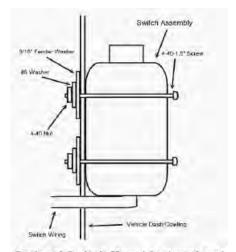

Optional Switch Mount Instructions*

"Figure 11" Mini Rocker Mounting

ALTERNATE WINCH WIRING DIAGRAM "AWWD" * For use with ATV/UTV applications where contactor cannot be located close to vechicle battery. (NEG(-) * Run shortest wires, usually red & (POS(+)) black from contactor to winch; run longest wires, usually blue & yellow from contactor to battery. BATTERY A CAUTION A These two posts must be wired to the battery! CONTACTOR TO WINCH (-) TO BATTERY (-) (BLUE POST) (BLACK POST) **BLACK WIRE** TO BATTERY (+) TO WINCH (+) (RED POST) (YELLOW POST) A CAUTION A WIRE WINCH NEGATIVE (BLACK WIRE) TO --> BLUE CONTACTOR POST FAILURE TO FOLLOW WIRING DIRECTIONS * WIRE WINCH POSITIVE (RED WIRE) TO --> YELLOW CONTACTOR POST

"Figure 12" Alternate Wiring Diagram





• WIRE BATTERY NEGATIVE (BLUE WIRE) TO --> BLACK CONTACTOR POST

· WIRE BATTERY POSITIVE (YELLOW WIRE) TO --> RED CONTACTOR POST

AS SHOWN MAY RESULT IN DAMAGE TO

YOUR WIRING SYSTEM OR EQUIPMENT.