






user manual

SAFETY RULES

-  Do not connect the device to loads exceeding the permitted values.
-  Connect only in accordance with the diagram presented in the manual. Improper connections may be dangerous, it can damage the controller, and loss of the warranty.
-  DANGER! Risk of electric shock! Even with the device turned off, the outputs may be live. All assembly work should be ALWAYS performed with the disconnected power circuit.
-  The installation of the device to a power mains that does not meet the quality requirements defined by EN 50081-1, EN 50082-1, UL508, EN 60950, will result in the loss of the warranty.


CONNECTION DIAGRAM

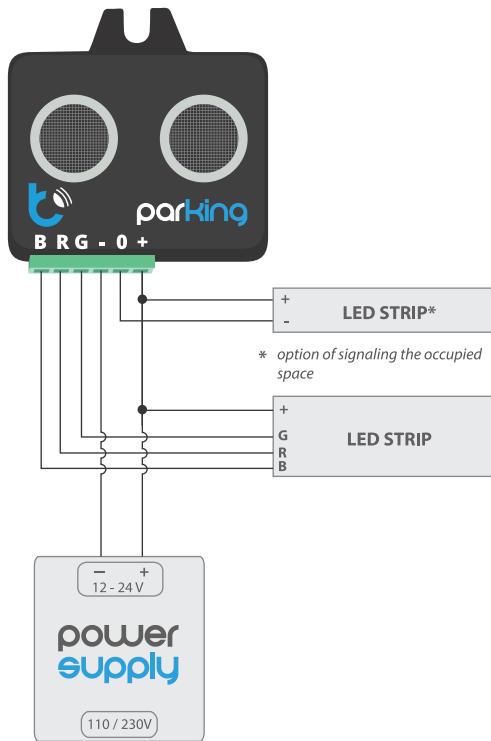

1 INSTALLATION

- Before installing the sensor, disconnect the voltage in the supplied circuit. Remember that all assembly work should be carried out with the power supply disconnected.
- The sensor should be mounted in a place protected from adverse environmental conditions. It is advisable that the device is mounted in a stable and stationary position.

- Mount the device vertically at the height of the farthest part of the car (usually a bumper or license plate) as in the drawing below, so that the connector is at the bottom.

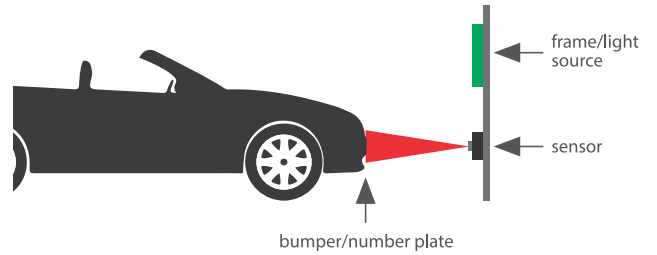

- Connect the LED strips and power supply to the device according to the diagram.
- Optionally, connect the LED lamp indicating the occupancy of the parking space. When the vehicle is within range of the sensor, the lamp will remain on continuously.

2 FIRST START-UP

- Connect the power supply. Bring your hand or paper closer to the ParkingSensor sensor, the color of the light should change with the detector:

green color	you can move forward safely
blue color	you are close to the obstacle
red colour	stop the vehicle
pulsing red color	stop the vehicle immediately!


- the time of the color illumination (red / blue / green) is 10 seconds, while the optional LED lighting shines during the entire period of occupancy of the parking space.

3 MOVEMENT OF THE VIRTUAL WALL

- the range of the color changes are established in relation to the virtual wall. By default, the virtual wall is at a physical distance of 2 cm from the sensor. It can be adjusted in the physical range 2 cm..250 cm of the sensor by performing the following steps: (0.78 " to 98.43")
 1. place a flat object (for example, a piece of cardboard) in front of the sensor at the desired distance, such as a virtual wall;
 2. connect the power supply; wait 5 seconds; disconnect the power supply;
 3. connect the power supply; wait 10 seconds; disconnect the power supply;
 4. connect the power supply; wait 15 seconds; disconnect the power supply;
 5. connect the power supply; wait until the LED strip turn on white and then turn off, which means that the configuration has been saved; check if the virtual wall works as expected.



MOVEMENT OF THE VIRTUAL WALL

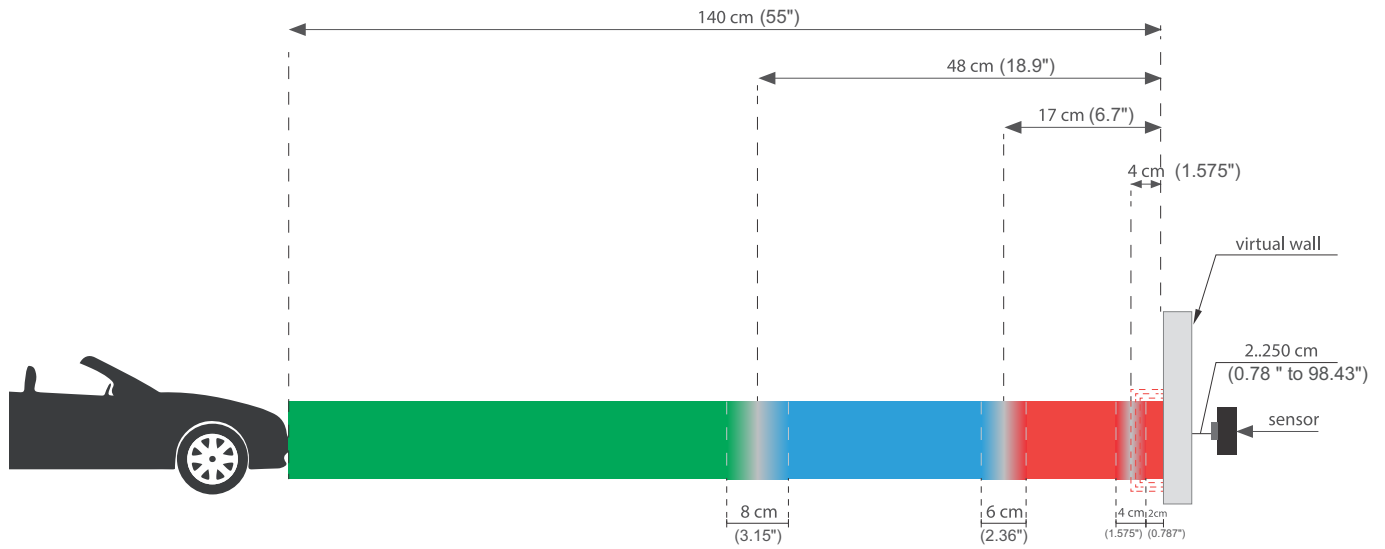

TECHNICAL SPECIFICATIONS

supply voltage	7 – 24V DC
maximum current	8 A
energy consumption	< 1 W
dimensions	50 x 40 x 25 mm 1.97" x 1.58" x 0.98" with connector: 50 x 50 x 25 mm 1.97" x 1.97" x 0.98"
number of PWM channels	3 (RGB)
type of output	open collector, 250mA
sensor	ultrasonic, distance sensor
protection level	IP20
controller operating temperature	from -10 to + 40°C
calibration of notified distance	yes
housing	made of polyurethane composition not containing halogens, self-extinguishing for thermal class B (130 °C) 266°F
additional output	output on the presence detector

DISTRIBUTED BY

Wired4Signs USA, LLC
7669 Clinton Highway
Powell, TN 37849
USA

Email: info@w4susa.com
Phone: +1 (865) 339-4956

DISTRIBUTED BY



made in europe



proudly made by
blebox