

---

Reserved for future use



---

**deli** 得力

---

Electronic password series products  
**USER'S MANUAL**

**USER'S MANUAL**

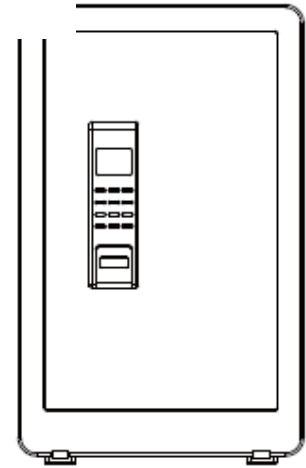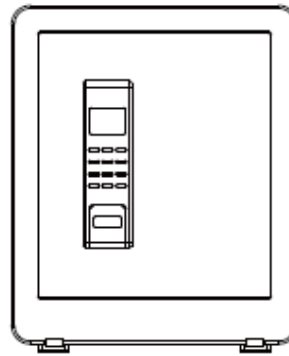

- 
- Simple to Operate
  - Easy to Use
  - Safe and Reliable
- 

Welcome to use our series products of safes (cabinets) and safe deposit boxes. Please read the instruction manual carefully before use, and operate correctly according to the instructions.

## Contents

1. Product Unpacking.....	01
2. Product Schematic.....	02
3. First Use.....	03
4. Battery Installation.....	03
5. Password Setting .....	03
6. Fingerprint Setting.....	04
7. Deleting Fingerprint.....	04
8. Door Opening Operation.....	05
9. Hidden Code Function.....	06
10. Deleting Incorrect Password.....	06
11. Voice Switch.....	06
12. Alarm Function.....	07
13. Battery Replacement.....	07
14. Emergency Opening.....	08
15. Precautions for Use .....	08
16. Common Faults and Troubleshooting.....	09

## DELI GROUP


### 1. Product Unpacking

Check that product appearance is intact after unpacking the box and checking all accessories. Please contact the dealer if anything is broken or missing.


Instruction manual\*1




Door lock keys\*2

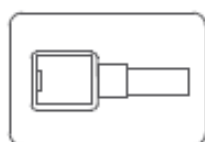


Emergency keys\*2

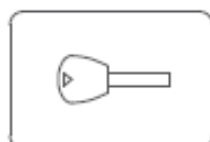

Expansion bolt\*2

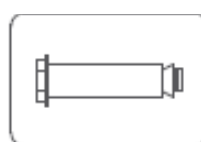

External battery compartment\*1

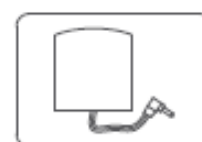

Internal door keys\*2




5# battery\*4



Remark: For products without internal door products inside the box, There is no internal door keys attached.

## 2. Product Schematic

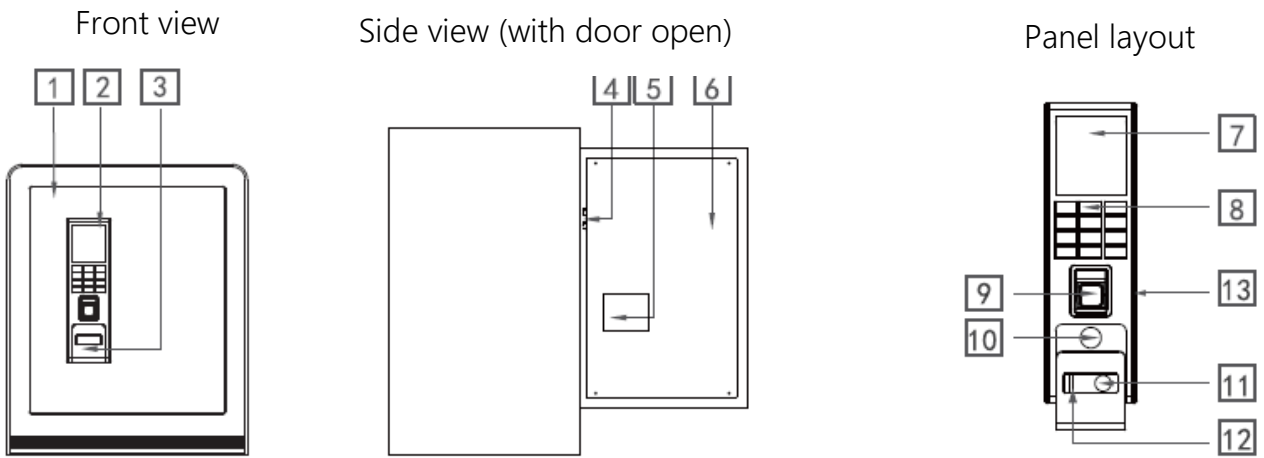

Serial number	1	2	3	4	5	6	7
Name	Box	Electronic Panel	Door lock slide cover	Reset key/Fingerprint changing key	Internal battery compartment	Backside cover	Display screen
Serial number	8	9	10	11	12	13	
Name	Keys	Fingerprint reader	Door lock	Emergency lock	Emergency lock flip cover	External power supply socket	

### 3. First Use

- 1) Push the door lock slide cover down to the limited position and press the emergency lock flip cover;
- 2) Insert one of the door lock key and one of the emergency key into the corresponding key hole respectively, turn the emergency key clockwise, then turn the door lock key clockwise to open the door.  
(Turn the door lock key clockwise to open the door for the products without a handle)

### 4. Battery Installation (alkaline battery is required)

- 1) Put the four 5# batteries into the internal battery compartment located on the backside of the door according to the correct polarity. A "beep" will sound after the power is supplied; The voice prompts "Hello, welcome to use", and the display shows "HELLO" at the same time;
- 2) Press the key "#" to wake up and enter the factory password "12345678";
- 3) Press the key "#" to confirm, and the display shows "OPEN". Please turn the handle clockwise within 6 seconds to open the door.

### 5. Password Setting

The factory password of this product is "12345678". Please reset your personal password before use to ensure safety.

- 1) Enter any fingerprint directly or press the key "#" to wake up the panel, enter the factory password "12345678" and confirm it by pressing the key "#", and the display shows "OPEN" and the voice prompts "successful verification, please open the door";
- 2) Press the "Reset key" within 25 seconds after the "OPEN" disappears, and the display shows "Add" and the voice prompts "please enter a new password";

- 3) Enter a password of 1-6 digits, press the key "#" to confirm, the display shows "Into", voice prompts "New password entered successfully" and the new password is set;  
Tip: Verify the new password to confirm that it is correct after the password is set.

### 6. Fingerprint Setting

No fingerprint is registered in this product when leaving the factory. Please add fingerprints before use to ensure safety.

- 1) Enter any fingerprint directly or press the key "#" to wake up the panel, enter the factory password "12345678" and confirm it by pressing the key "#", and the display shows "OPEN" and the voice prompts "successful verification, please open the door";
  - 2) Press the "Fingerprint changing" key within 25 seconds after the "OPEN" disappears, and the display shows "Add"; and press your finger on the fingerprint reader until the voice prompts "Fingerprint registered successfully". The display shows "Into" at the same time, indicating that the fingerprint registration is successful.
    - ※ The door can be opened by using any fingerprint before fingerprint registration.
    - ※ A total of 100 fingerprints can be registered.
    - ※ The voice prompts "verification failed" if the fingerprint registration is not successful, please re-register according to the above requirements.
- Tip: Verify the new fingerprint to confirm that it is correct after the fingerprint is set.

### 7. Deleting Fingerprint

- 1) Enter the correct fingerprint directly or press the key "#" to wake up the panel, enter the correct password and confirm it by pressing the key "#"; the display shows "OPEN", and the voice prompts "successful verification, please open the door".

## DELI GROUP

2) Press and hold the "Fingerprint changing" key for 3-5 seconds within 25 seconds after the "OPEN" disappears, the voice prompts "Fingerprints are cleared successfully; please enter a new fingerprint in time", the display shows "Fn-CLE", and all registered fingerprints are cleared at this time.

※ The door can be opened by using any fingerprint after the registered fingerprints are cleared.

### 8. Door Opening Operation

※ Open the door by using password

1. Press the key "#" to wake up the panel, display the cursor "-----", the voice prompts "please enter the password", enter a specific password of 1-8 digits and press the "#" key to confirm;
2. After the verification is successful, "OPEN" will be displayed, the buzzer will long beep once, and the voice will broadcast "verification is successful, please open the door".

※ Open the door by using fingerprint

1. Put your finger on the window of the fingerprint reader, the fingerprint lamp will turn on, please wait for the green light to go off before you can remove your finger after the system completes the comparison and issues a prompt;
2. After the verification is successful, "OPEN" will be displayed, the buzzer will long beep once, and the voice will broadcast "verification is successful, please open the door". You can turn the main lock key and handle to open the door.

※ Open the door by using both the fingerprint and password

- 1) The system defaults to open the door by using any verification way of password or fingerprint. If the combined verification mode "password + fingerprint" is required to be used, you must press the "Password changing" key for more than 3 seconds within 25 seconds after the door is opened successfully; the voice prompts "the combined verification mode is enabled", the display shows "tYPE1", and the double verification ("password + fingerprint" is enabled at this time.

2) You need to enter the correct password or fingerprint before using this function, and then use another verification mode to open the door. You can turn the main lock key and handle to open the door.

3) If you want to turn off this function when this mode is turned on, you must press the "Password changing" key for more than 3 seconds within 25 seconds after the door is opened successfully; the voice prompts "the combined verification mode is closed", the display shows "tYPE2", and the combined verification mode is closed at this time.

Note: The combined verification mode is automatically turned off and needs to be turned on again after replacing the battery,

## 9. Hidden Code Function

1) When the panel wakes up, press the key "\*" first, the display only shows "o" instead of digits when entering the password;

2) The digit display is automatically restored after the safe is opened.

## 10. Deleting Incorrect Password

If a wrong password is entered when entering the password, you can delete it by pressing the key "\*". Press the key "\*" once to delete a digit.

## 11. Voice Switch

Press the key "#" to wake up the panel. You can turn on or off the voice prompt by pressing the key "#" again at this time.

00

## 12. Alarm Function

※ Wrong password and wrong fingerprint alarm

1) When the fingerprint verification is wrong, the display shows "ERROR", the buzzer beeps twice, and the voice prompts "verification failed, please re-verify";

2) The alarm will continue for 20 seconds after the fingerprint verification fails for five times;

3) When the password verification fails, the display shows "ERROR", the buzzer shortly beeps twice, and the voice prompts "verification failed, please re-verify";

4) The alarm will continue for 20 seconds after the password verification fails for three times;

※ Vibration alarm

1) Press the key "\*" in the standby state, the voice prompts "vibration alarm enabled", the display shows "ALOn" and the vibration alarm mode is turned on at this time. The vibration alarm is automatically turned off after the door is opened normally;

2) Enter the correct password or fingerprint during the alarm to stop the alarm, and it automatically turns off the vibration alarm at the same time.

## 13. Battery Replacement

When the battery power is low, after the door is successfully opened, the buzzer will shortly beep 10 times, the voice prompts "low power, please replace the batteries in time", and the display shows "LobAt". It indicates that the battery power is low. Please replace the batteries in time. (It is recommended that you use 5# alkaline batteries)


## 14. Emergency Opening

1. Please provide power by using the external battery compartment when the batteries are depleted and the operation cannot be made. Insert the plug of the external battery compartment into the power supply socket located on the side of the panel, and enter the correct password to open the door ;
2. Please use the emergency key to open the door when the electronic system fails or the password is forgotten. The way to open the door is the same as the first use.

## 15. Precautions for Use

1. Do not put the user's manual, door lock keys, emergency keys and external battery compartment in the box; they should be stored in other safe place;
2. The batteries should be taken out to prevent the leakage of liquid from damaging the electronic system if the product is left unused for a long time ;
3. Always fix the cabinet to a solid concrete wall for safety ;
4. Do not store too much cash and valuables when unattended or without a remote alarm device.

Installation  
layout

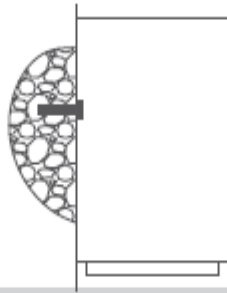

## 16. Common Faults and Troubleshooting

Symptoms	Causes	Troubleshooting
No any response when pressing the number keys to enter the password/pressing the green light fingerprint head	The batteries are depleted	Use the external battery compartment or the emergency key to open the electronic code lock and replace the batteries
	Battery polarity reversed	Insert the batteries properly
	Circuit board failure	Please contact the maintenance department
The emergency key cannot be inserted in or removed	There are foreign objects in the key hole	Remove foreign objects in the key hole
	The key is not turned to the limit	Please reinsert in the correct way
The door cannot be opened when the electronic code lock has been opened/the fingerprint lock has been opened	The handle is not turned to the limit	Please turn the handle to the limit
	Turn the handle for more than 7 seconds, the electronic lock has been reset	Enter the password again and turn the handle to the limit within 6 seconds
The alarm does not sound	The batteries are depleted	Please replace the batteries
	Battery polarity reversed	Insert the batteries in the correct way



Product Warranty Card

This page is cut off along the dotted line and kept by the dealer

Commodity Information	Commodity Name		Factory Date		
	Commodity Model		Production Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Seller Name			Contact	
	Address			Phone	
	Sales Date			Invoice No.	
Maintenance Record	Fault Description	Maintenance Result	Customer Signature	Maintenance Person Signature	Date

Product Code \_\_\_\_\_

\_\_\_\_\_

No. \_\_\_\_\_

**DELI GROUP CO., LTD.**  
 Add: Deli Industrial Park, Ninghai,  
 Zhejiang  
 Service Hotline: 400-185-0555  
 Http://www.nbdeli.com  
 MADE IN CHINA



Version: 1.0  
 Date: May of 2018

---

## Product Warranty Card

---

Dear users:

Thank you for purchasing our products. In order to ensure the interests of users, all users who purchase our products can contact the local dealer or special maintenance station by the proof of invoice and warranty card if the product fails due to quality problems.

Warranty notice:

1. If the product fails under normal use within one year from the date of purchase by the user, our company will provide free repair, parts replacement and other services according to the failure situation;

2. This warranty card and purchase invoice are the proofs that our company provide after-sales service to customers. Please fill out the following form on this card, and it will be valid only after the dealer affixes the official seal;

3. In one of the following cases, free repair service is not provided, and it will be charged for maintenance:

(1) The the validity period of the warranty has expired;

(2) Damage caused by improper use, maintenance or storage not in accordance with the requirements of the product instruction manual;

(3) Product failure or damage caused by force majeure;

(4) Wear parts or accessories.

This card comes together with the product, and one card for one machine. In order to ensure that you have full right to the free repair service provided by our company, please keep this card properly, and you can not get another copy if you lose it.

Purchase Date: \_\_\_\_ (mm/dd/yyyy)